



## ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before beginning the assembly, check to see that all parts are enclosed.

### PART LIST

- 1 base
- 5 castors
- 1 gas lift
- 1 gas lift cover with collar
- 1 seat

Insert castors into base. Pull gas lift cover over the gas lift and connect the lift with the base.

Locate the seat on the gas lift. Gas lift allows the adjustment of the seat height.

## MAINTENANCE

Inspection - Inspect chair at least every six months, to make sure all knobs, bolts and screws are tight.