

ROCKING CAMPING CHAIR

INSTRUCTION MANUAL

IMPORTANT: Please read this manual carefully before assembly of this product. Keep for future reference.


SAFETY

- **⚠ CAUTION:** Children should not attempt to set up or use without adult supervision. Not intended for children 12 years of age or younger.
- Do not sit in chair until chair is fully expanded.
- Chair holds a maximum weight of 300 lbs / 136 kg. Exceeding this limit may damage the chair and may cause personal injury.
- Do not place or use this chair on unlevel ground. Care should be taken to avoid tipping the chair while seated.

ASSEMBLY INSTRUCTIONS


IMPORTANT NOTES BEFORE ASSEMBLY:

- Unfold with care. Watch that fingers are out of harm's way to ensure hands and fingers are not pinched.

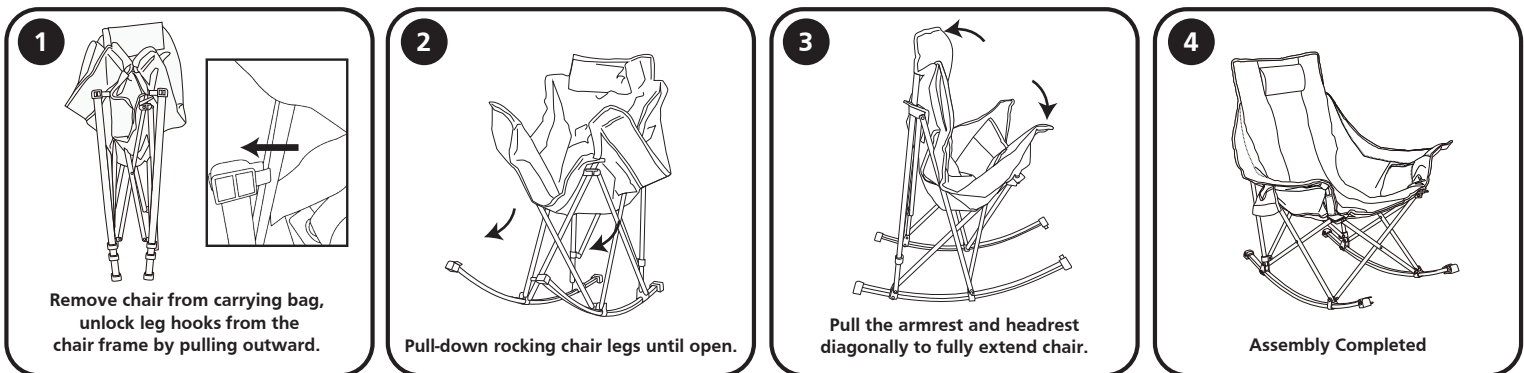

TO OPEN CHAIR:

- **Unfold with care:** remove chair from carrying bag, unlock leg hooks from the frame by pulling outward, pull-down rocking chair legs until open, pull the armrest and headrest diagonally to fully extend chair.

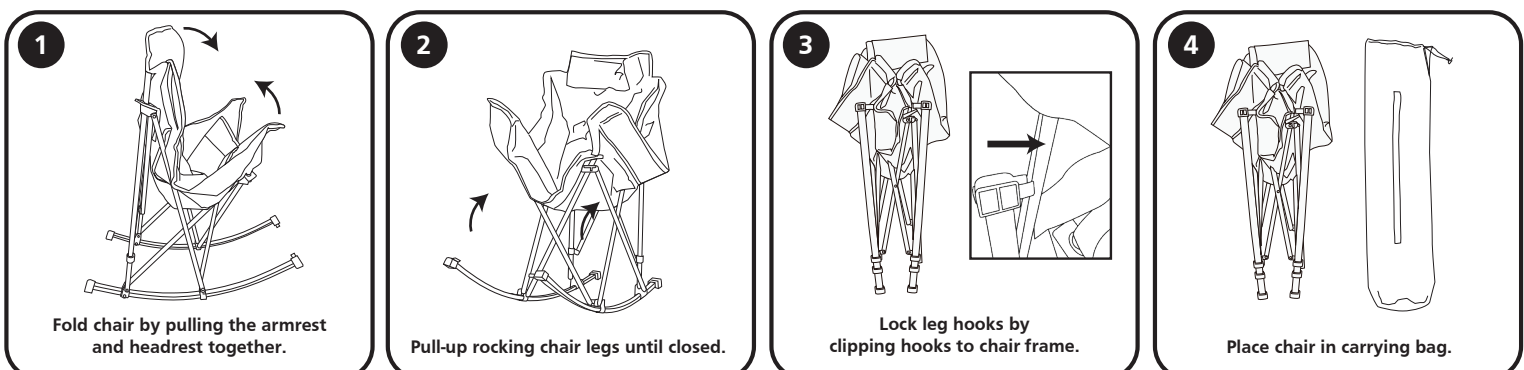

TO FOLD CHAIR:

- **Fold with care.** Repeat steps in reverse order: Fold chair by pulling the armrest and headrest together, pull-up rocking chair legs until closed, lock leg hooks by clipping hooks to chair frame, place chair in carrying bag.

MADE IN CHINA