 


Owner Manual

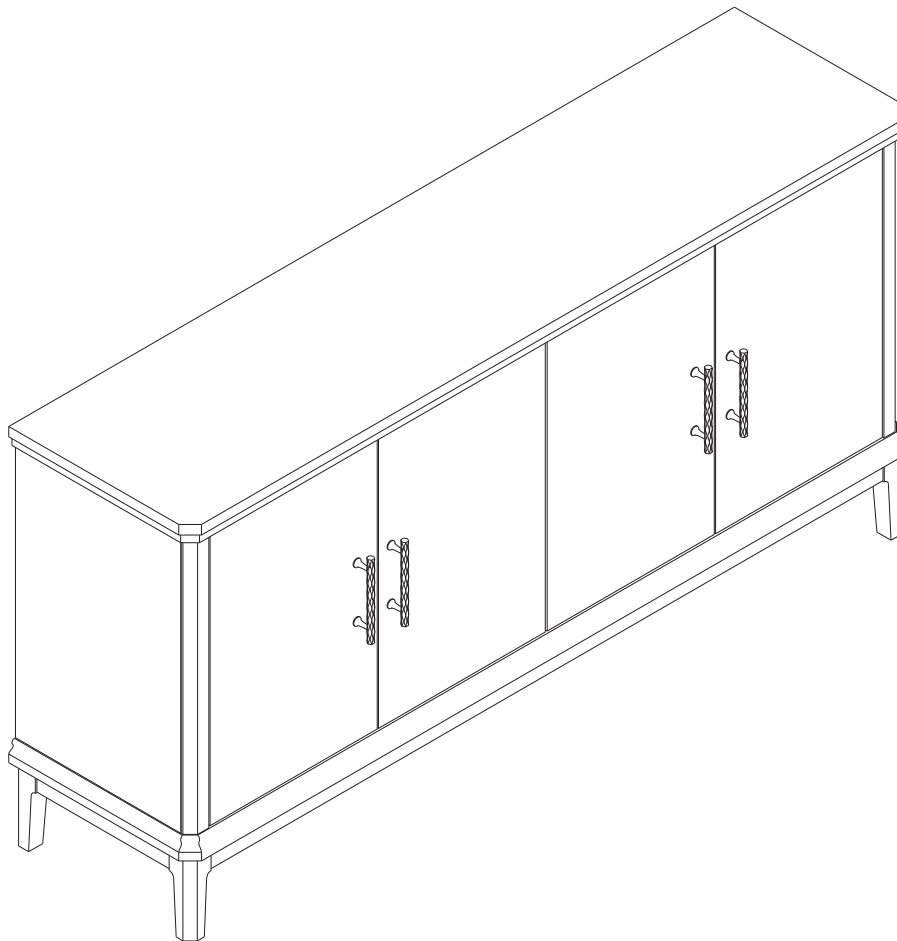

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.

 
Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :

This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS

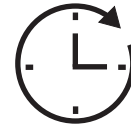

Installation:
30 minutes.



Two Person



Before You Start

Please follow the steps below:

-  Unbox the package and check if all parts and accessories are complete.
-  If you find something missing, stop assembly and contact your supplier immediately.
-  Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.
-  NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty

 
- ⚠ We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.
- ⚠ Are you having difficulty with assembly? Missing parts?
- ⚠ For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all the parts in the box and start the installation.

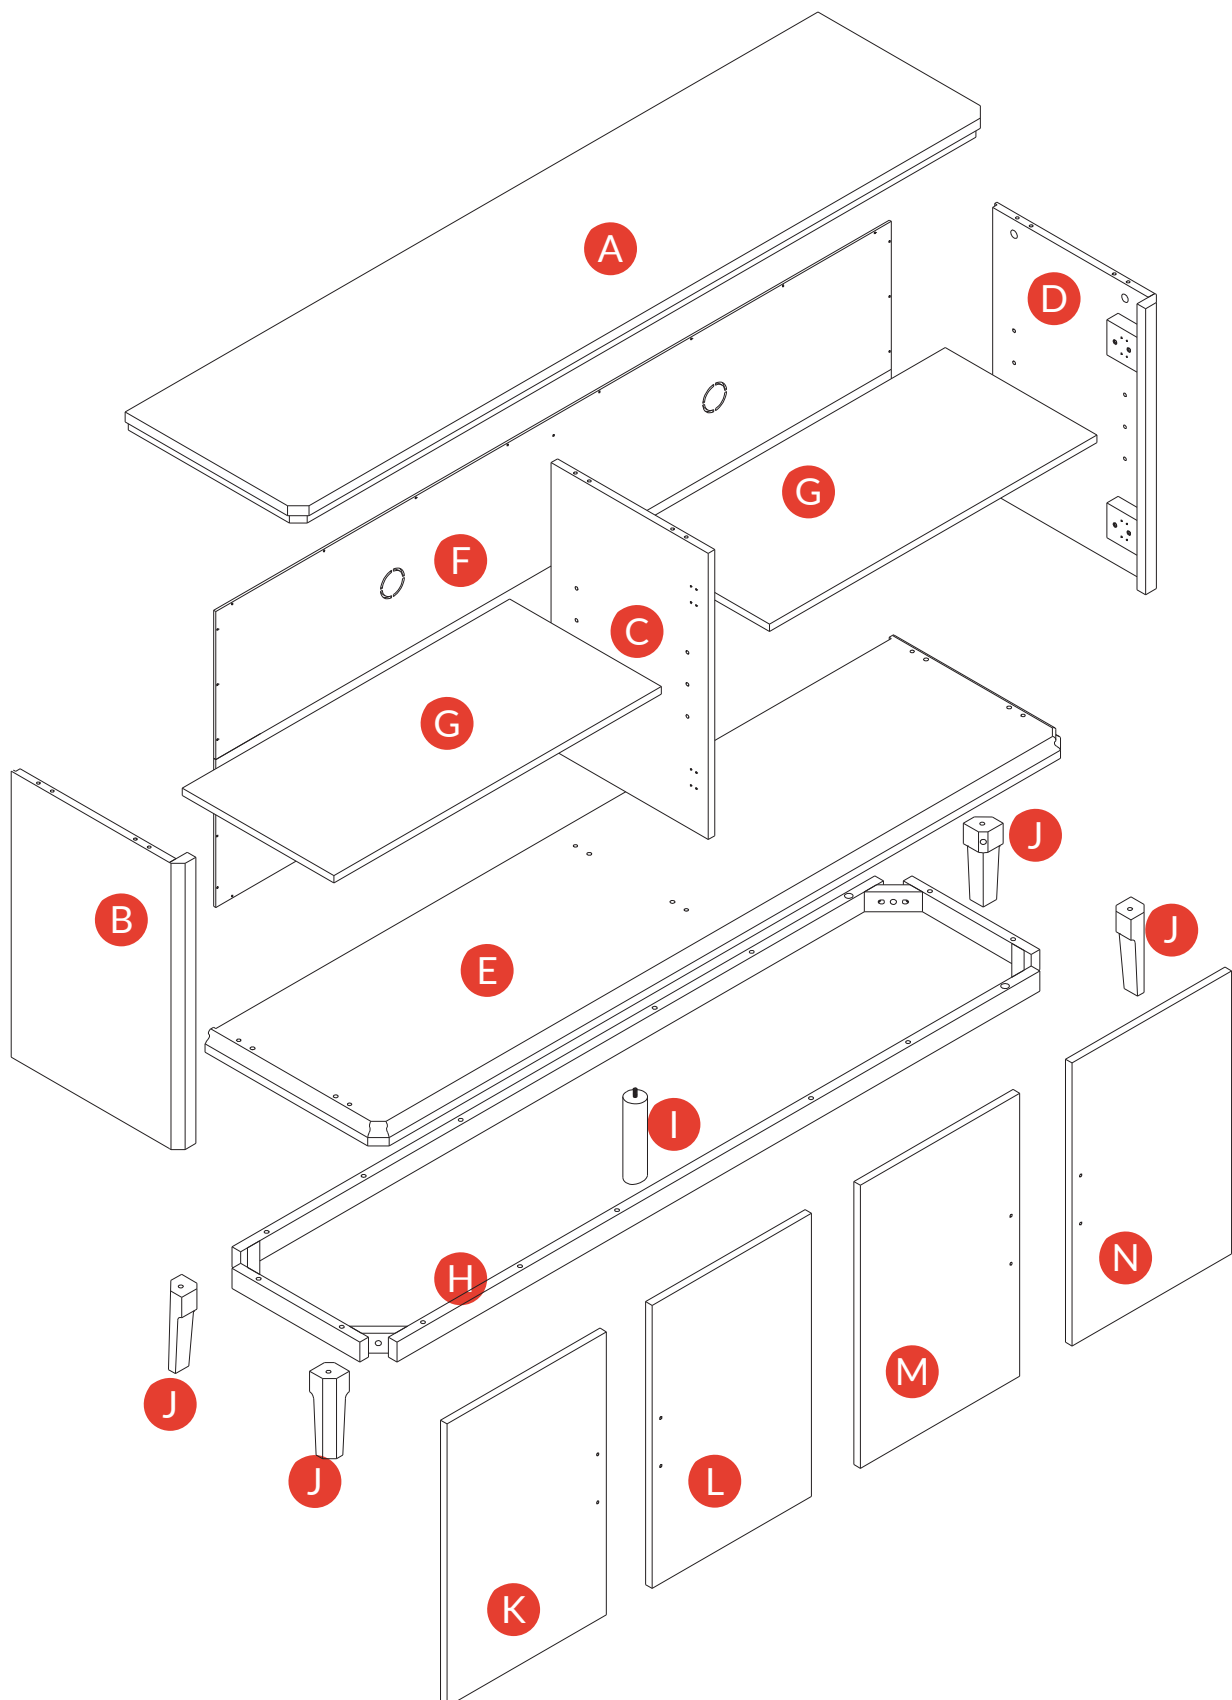


Parts List

 A x1

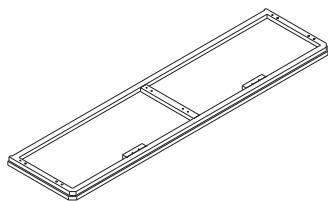


Panel

 B x1




Left panel

 C x1




neutral board

 D x1




Right side panel

 E x1

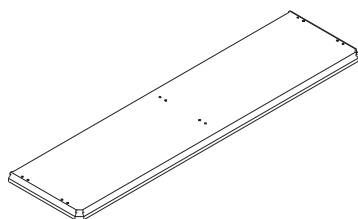


baseplate

 F x1

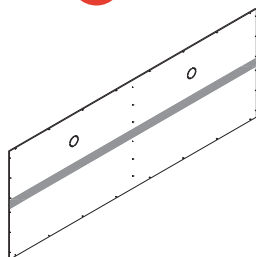


back panel

 G x2

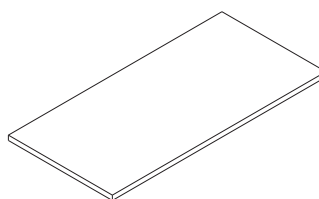

Shelf

 H x1

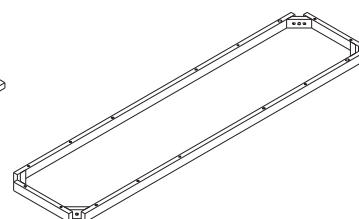

Bottom frame

I x1



 
Mid leg

J x4




Legs

K x1




Door

 L x1




Door

 M x1



Door

 
N x1



Door


Hardware List

 1 x4

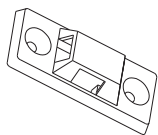


Anti-tip component

 2 x4




Self-tapping screw
D4x20

 3 x2

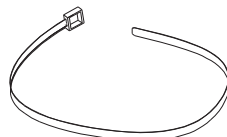


Hardware pack

 4 x4




Expansion pipe
L30mm

 5 x4




Self-tapping screw
D4*40

 6 x1

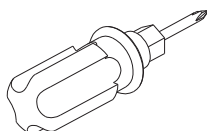

Screwdriver

 7 x6+1

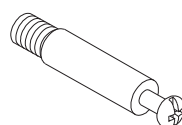

three in one
M6x35mm

8 x6+1



 
eccentric wheel

9 x20+2



tree top
Ø8*30

10 x4

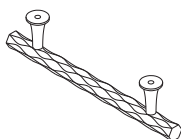


Hold hands

11 x8+1




Pull screw
M4*18

 12 x4




Middle bend door hinge
Ø35 nn

 13 x4




Large bend hinge
Ø35 nn

 14 x48+4




Self-tapping screw
D4*16mm

 15 x8




Layer board support

 16 x2

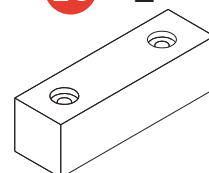


Door stopper

 17 x34+3



Self-tapping screw
D3*16mm

 18 x4




Self-tapping screw
D4*30mm

19 x6+2




Huamei Patch

 20 x1

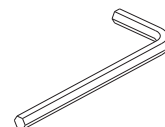


Hex wrench
M4

 21 x4+1




Gasket

 22 x12

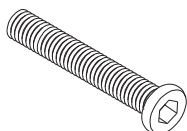


Screw rod
M6x30mm

 23 x4

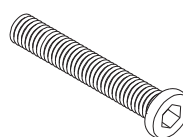

Screw rod
M6x45mm

 24 x6




Straight repair screws
Ø6.3x40mm

ASSEMBLY INSTRUCTIONS

Step 01

Insert the 3-in-1 (7) into the corresponding hole of panel (A) and tighten it with screwdriver (6). Pass the self-tapping screw (18) through the wooden block (16) into the corresponding hole of panel (A) and tighten it with screwdriver (6).


7	 x 6	M6x35	6	 x 1	Screwdriver
18	 x 4	M4x30mm	16	 x 2	Door stopper

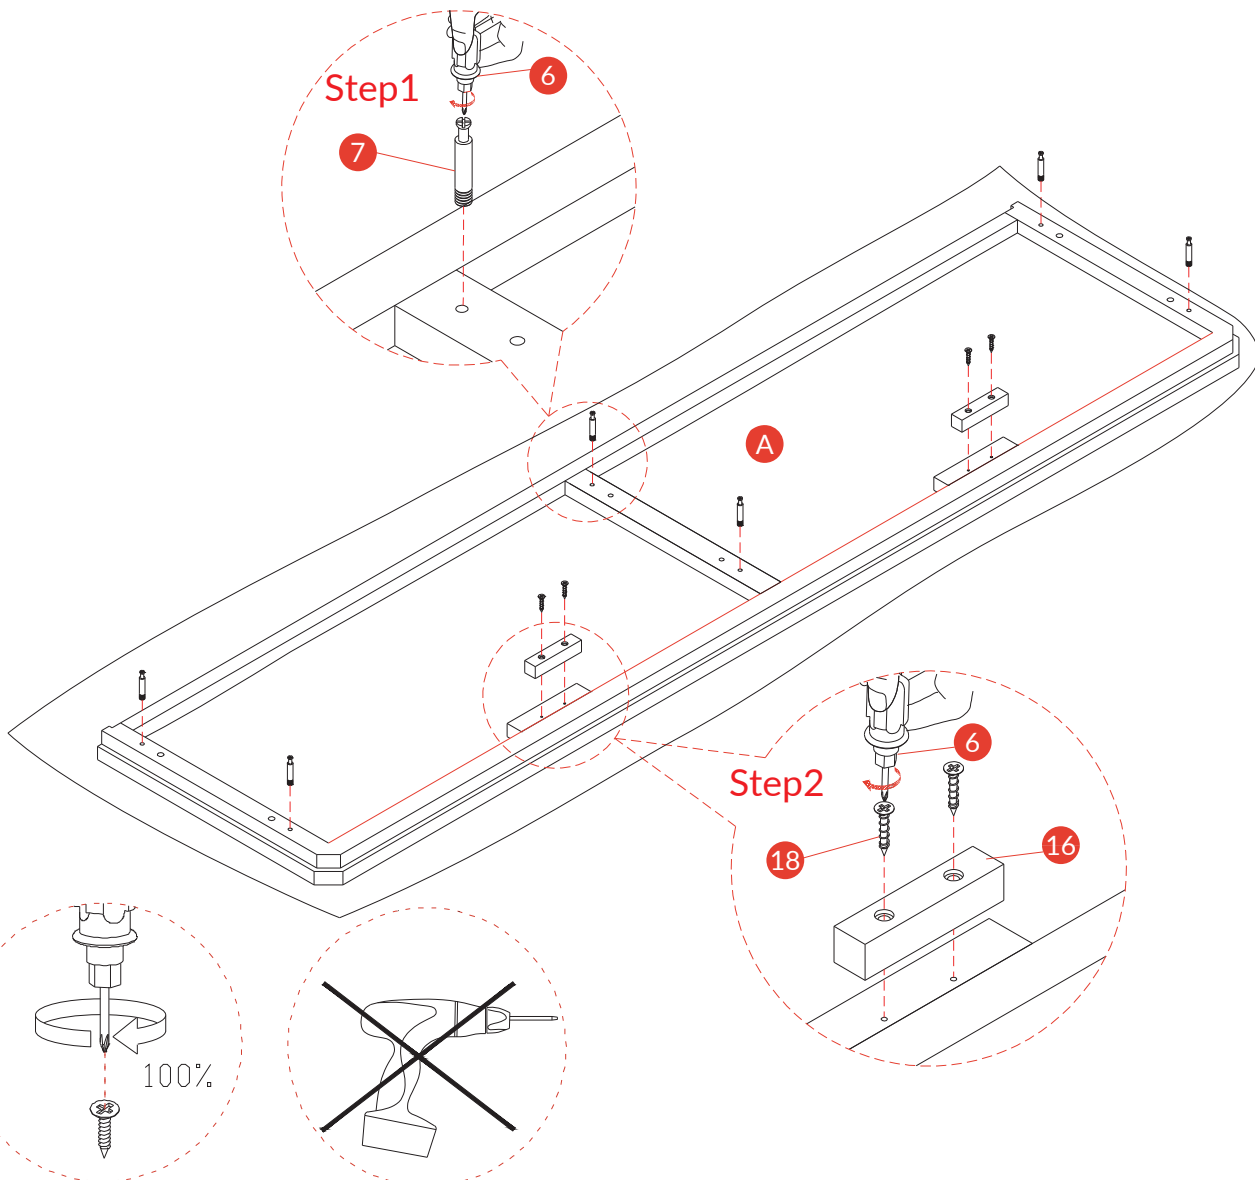 

Step 02

Insert tree top (9) into the corresponding hole on panel (A), and insert the eccentric wheel (8) into the corresponding hole on side panels (B/C/D). Tighten with screwdriver (6). Cover the eccentric wheel with Huaei Patch (19).


9	 x 6	Ø8x30mm	19	 x 6	Huaei Patch
8	 x 6	eccentric wheel	6	 x 1	Screwdriver

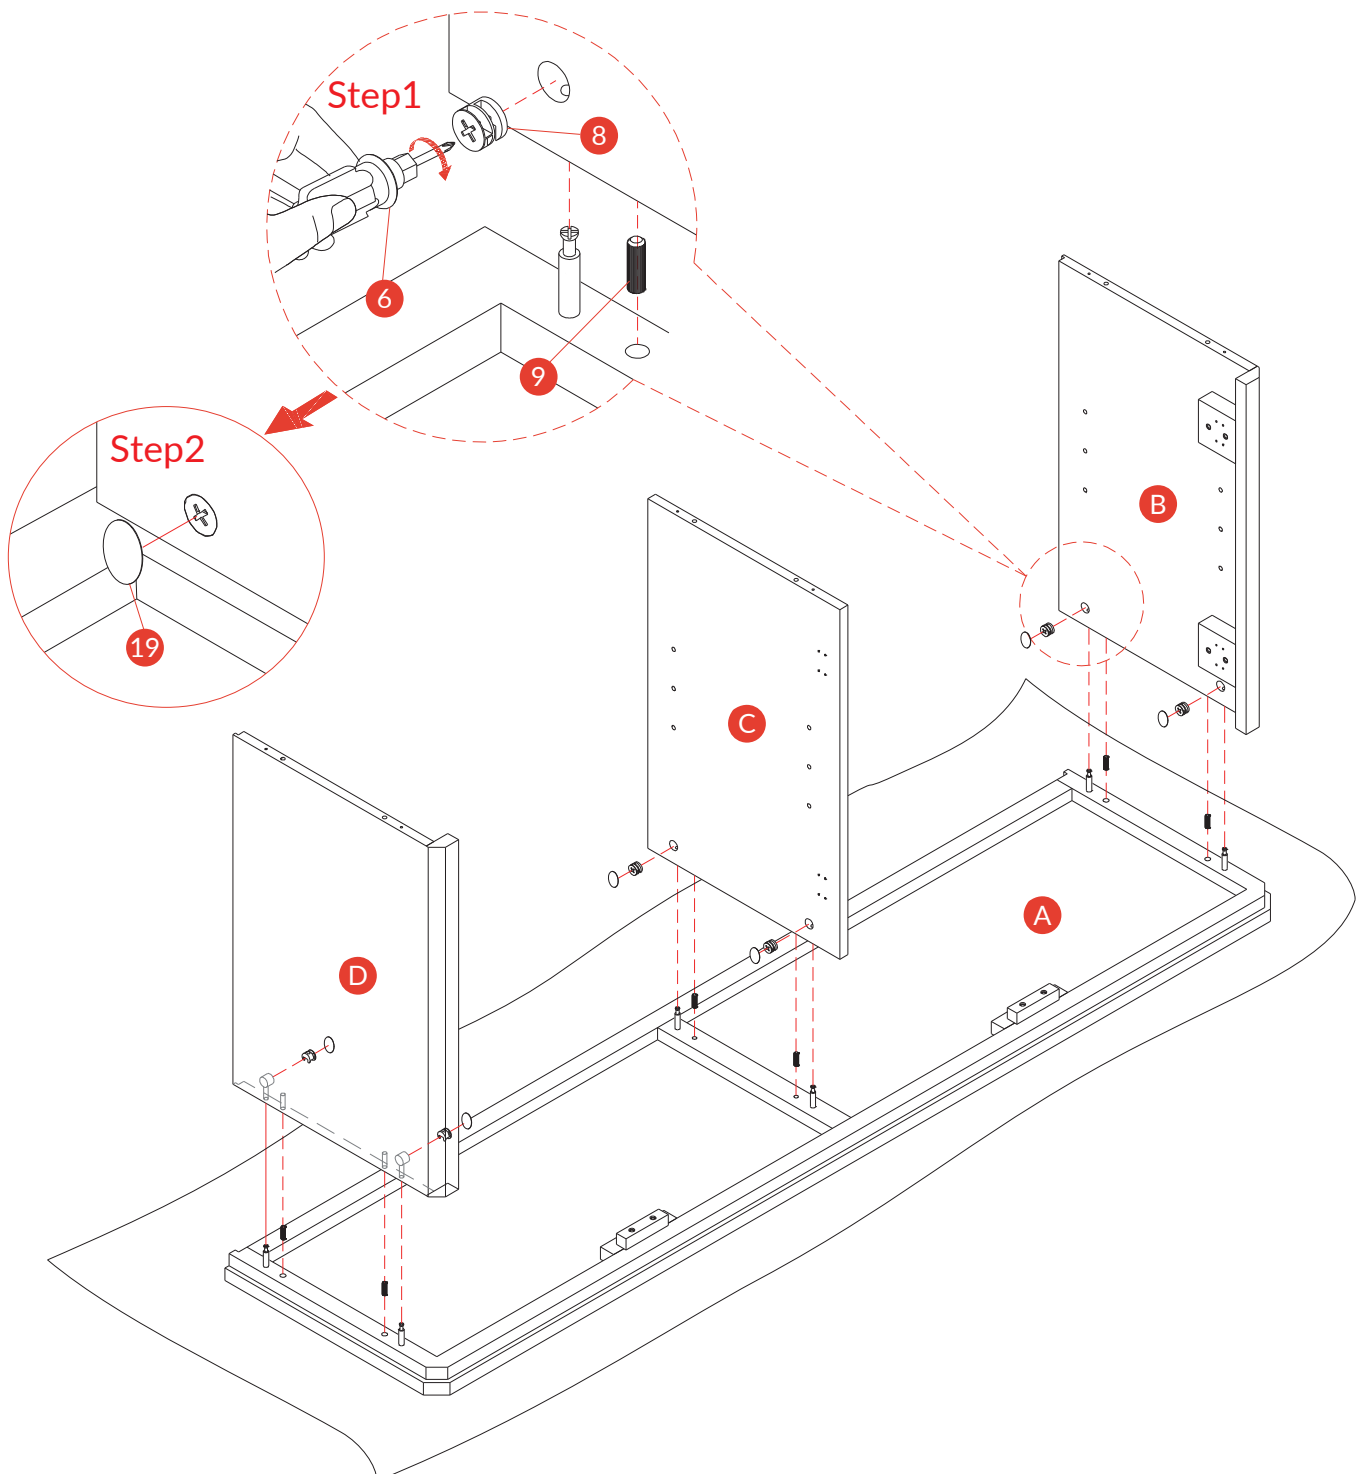 

Step 03

Insert tree top (9) into the corresponding holes of panel (B/C/D) and attach base plate (E). Pass screw (24) through base plate (E) and insert it into the corresponding holes of side panel (B/C/D), then use wrench (20) to tighten.


9	 x 6	Ø8x30mm	20	 x 1	M4
24	 x 6	Ø6.3x40mm			

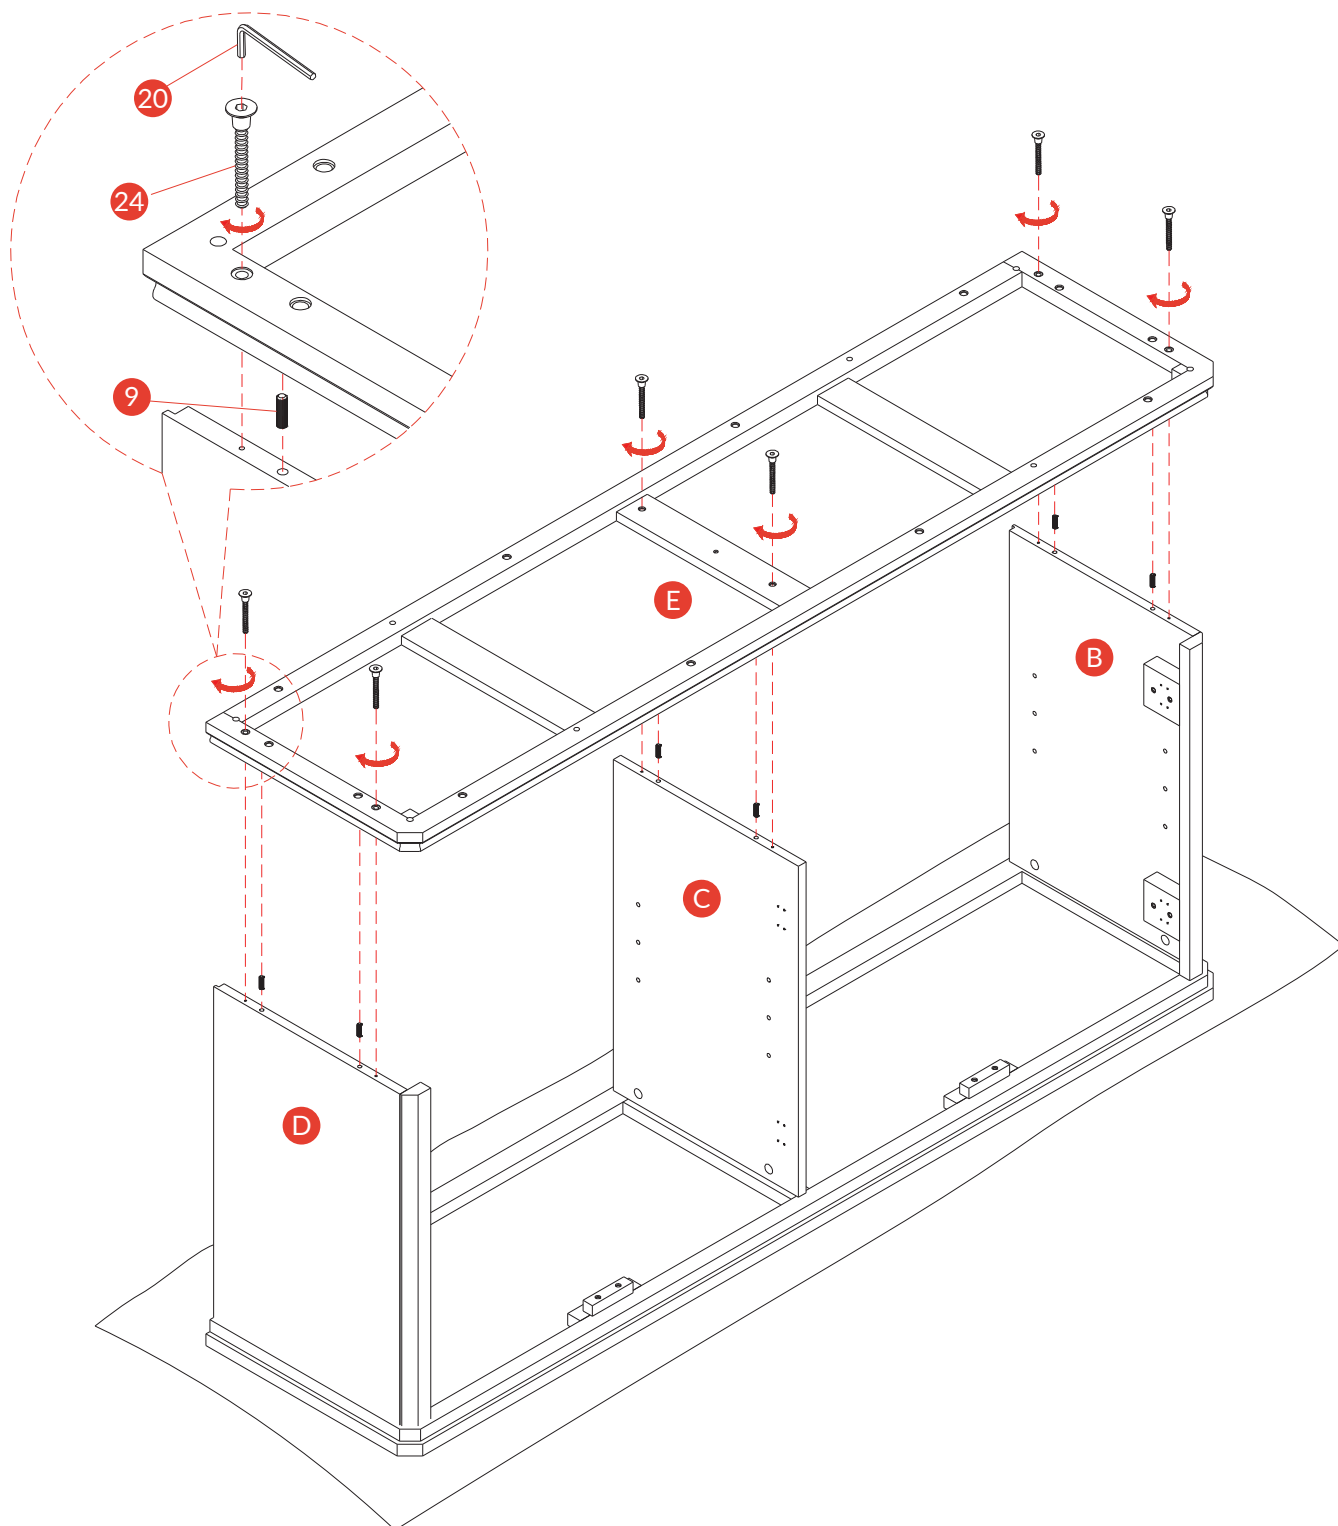 

Step 04

Install the tree top (9) into base plate (E), and install the leg frame (H) into the corresponding holes. Pass the screw (22) through the leg frame (H) and into the corresponding hole on base plate (E), and tighten it with wrench (20).


9	 x 4	Ø8x30mm	22	 x 12	M6x30mm
20	 x 1	M4			

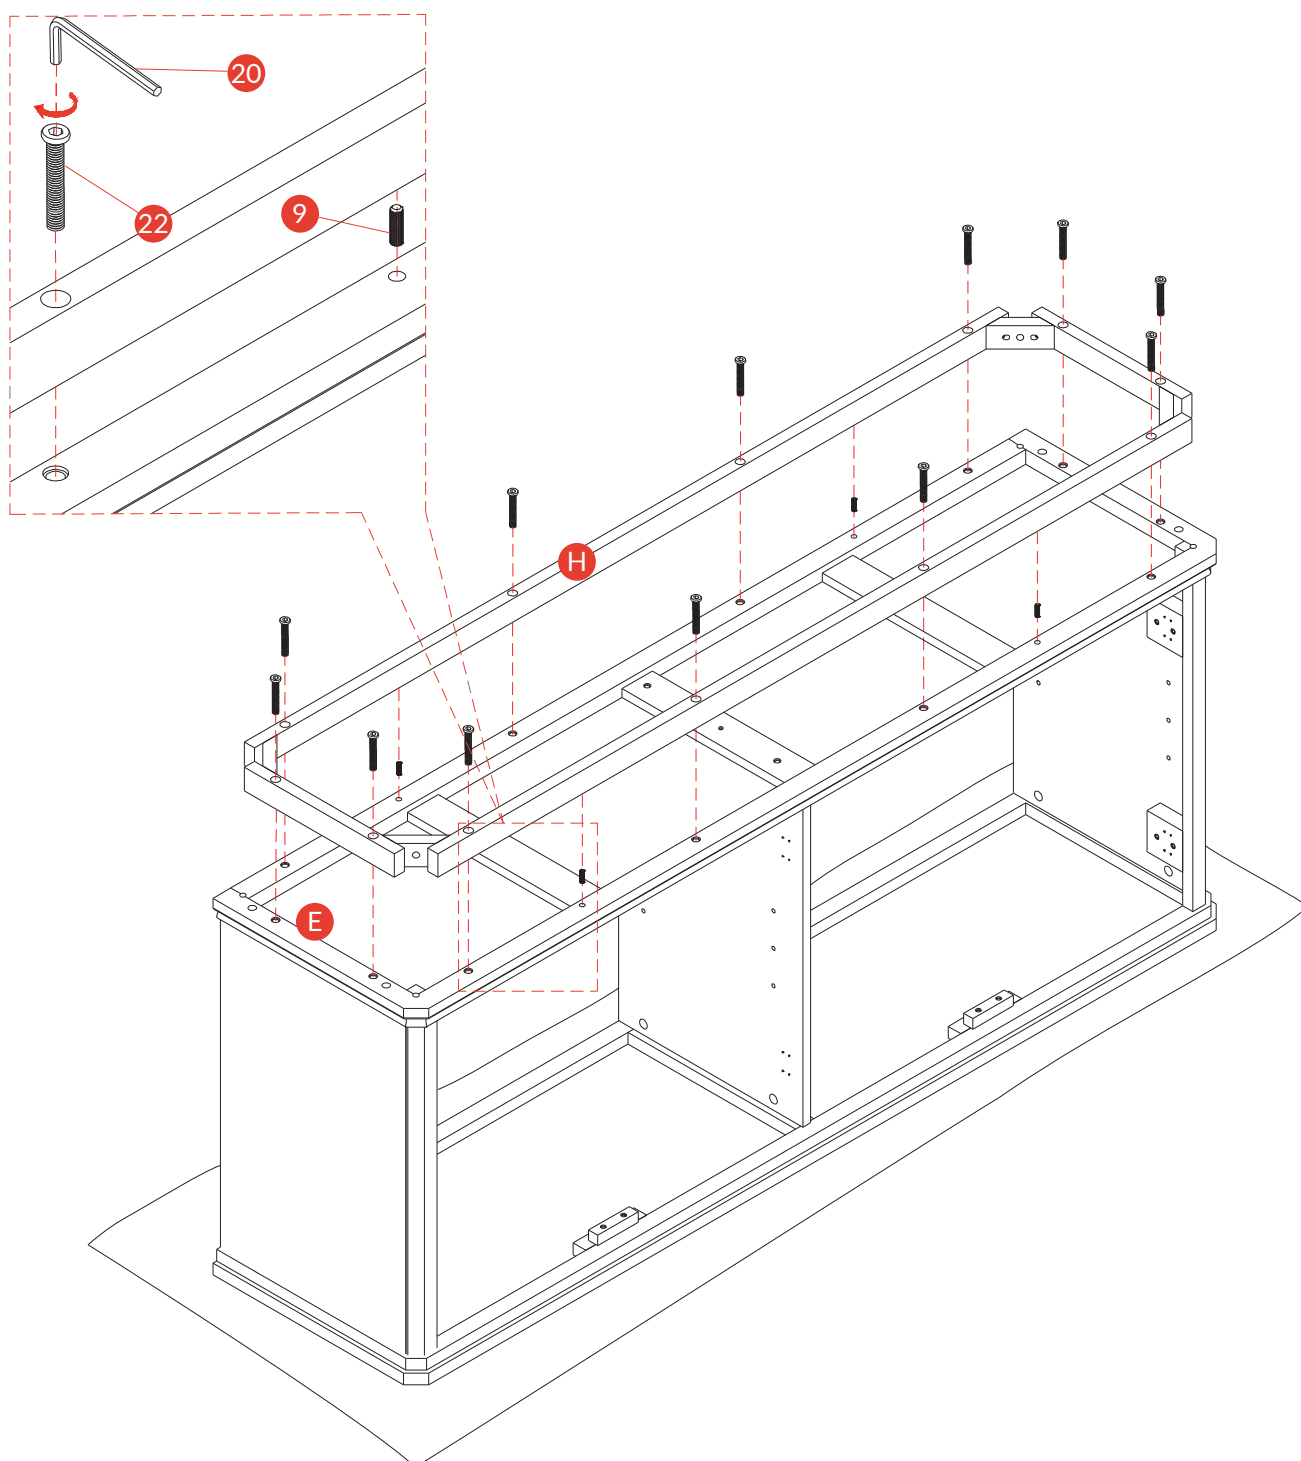 

Step 05

Install tree top (9) into base plate (E), and insert legs (J) into the corresponding holes. Insert Mid foot (I) into the corresponding hole on the base plate and tighten it.


9		x 4	Ø8x30mm
---	---	-----	---------

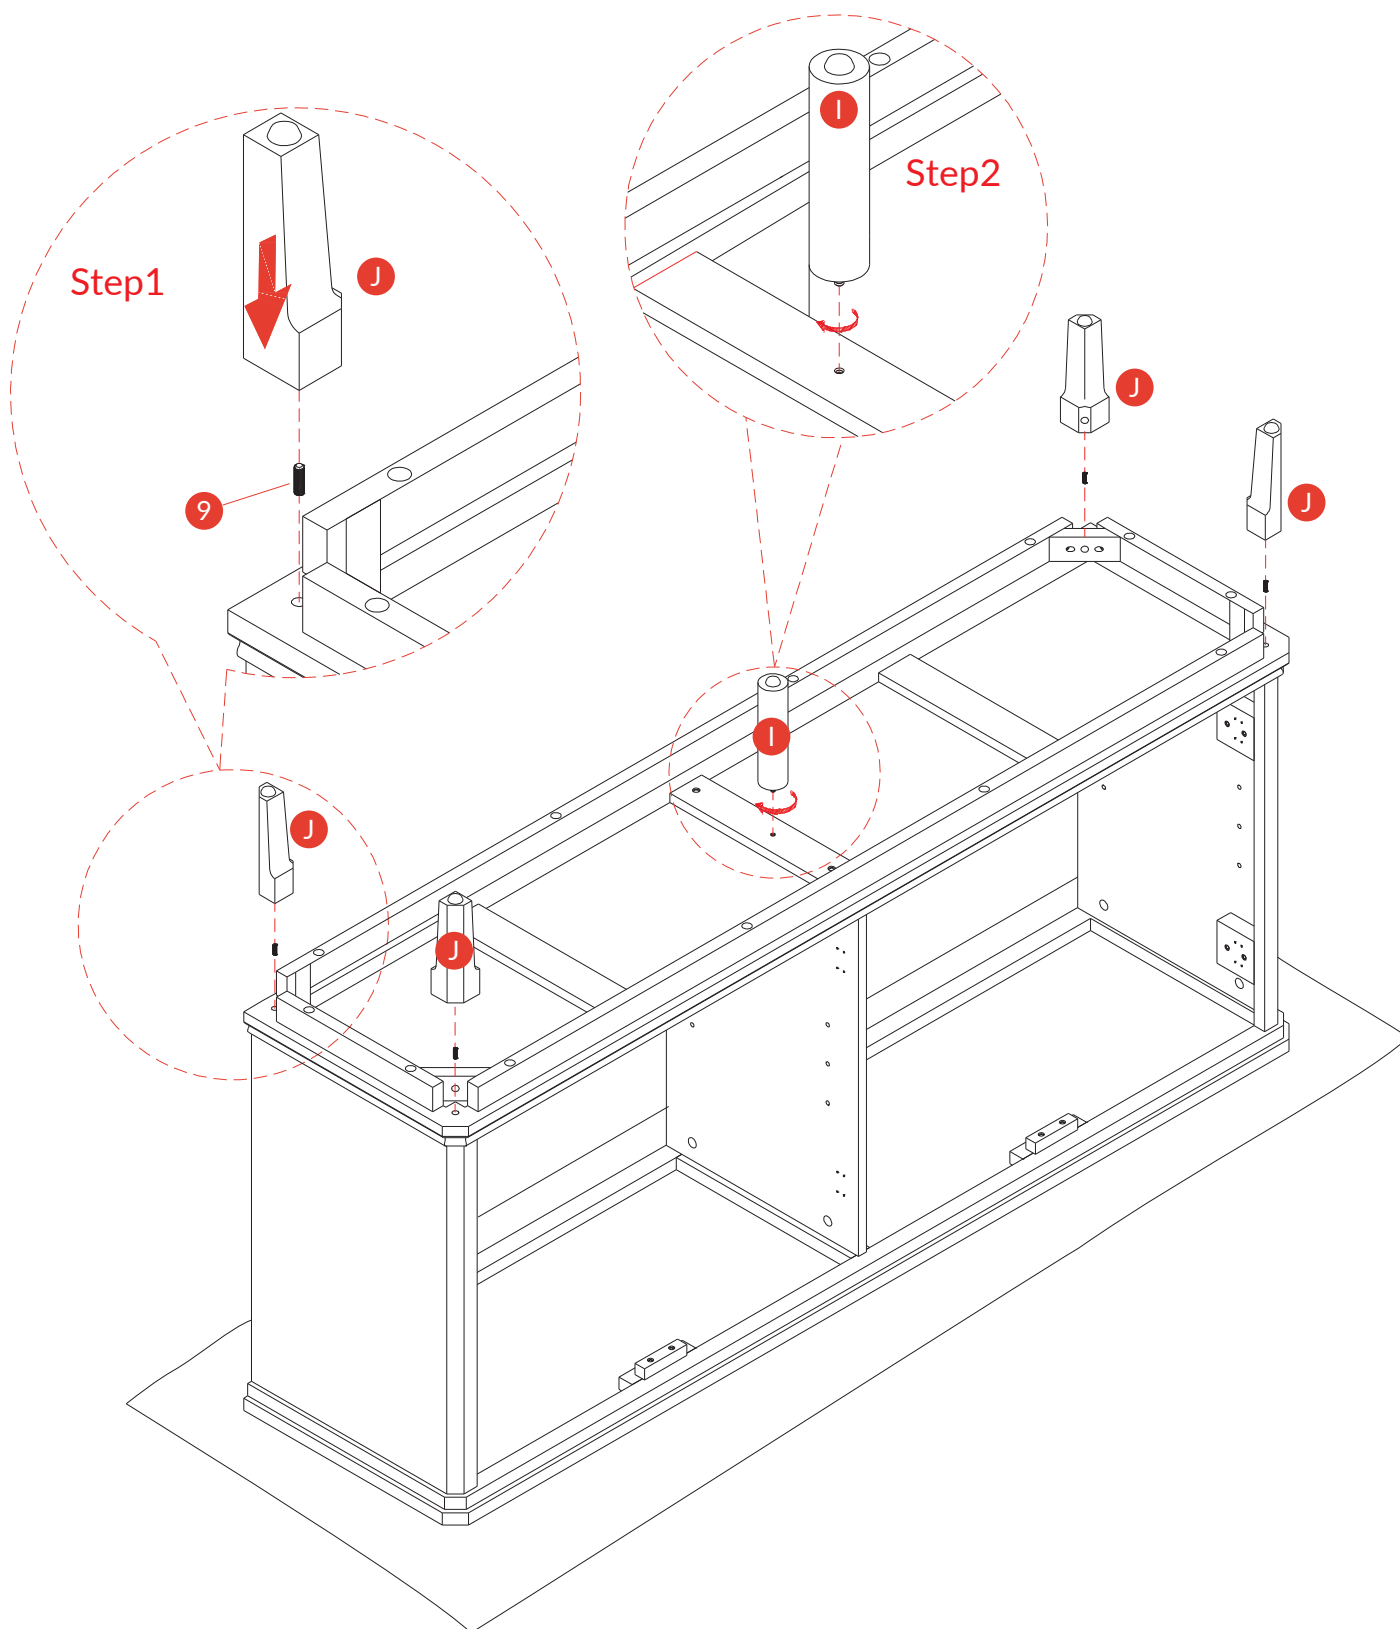 

Step 06


Install screw (23) through washer (21) and then through foot pedal (H) into the corresponding hole of Legs (J), and tighten with wrench (20).


21		x 4	Ø8x30mm	23		x 4	M6x30mm
20		x 1	M4				

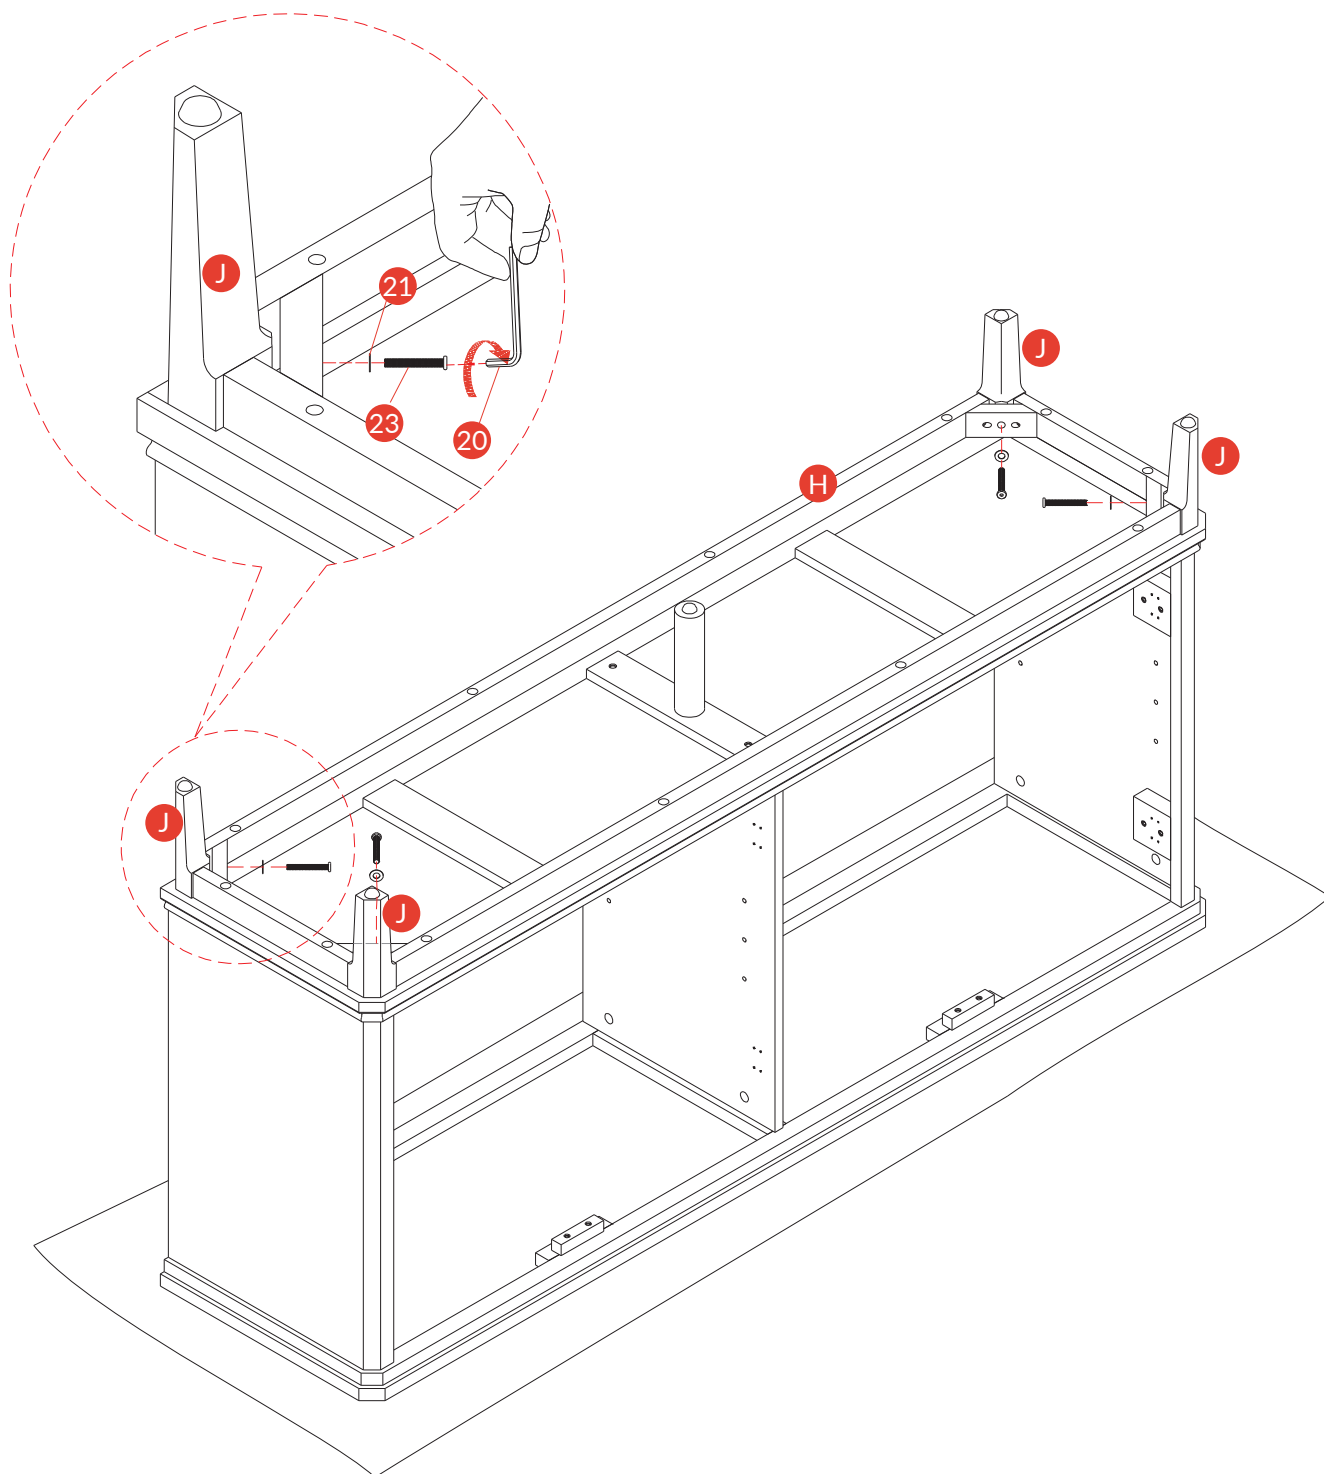 


Step 07

 Open the bck panel (F) and insert it into the back panel slot of the cabinet .Pass screw (17) through the back panel into the cabinet,and tighten it with screwdriver(6).

17	 x 34	D3x16mm
6	 x 1	Screwdriver

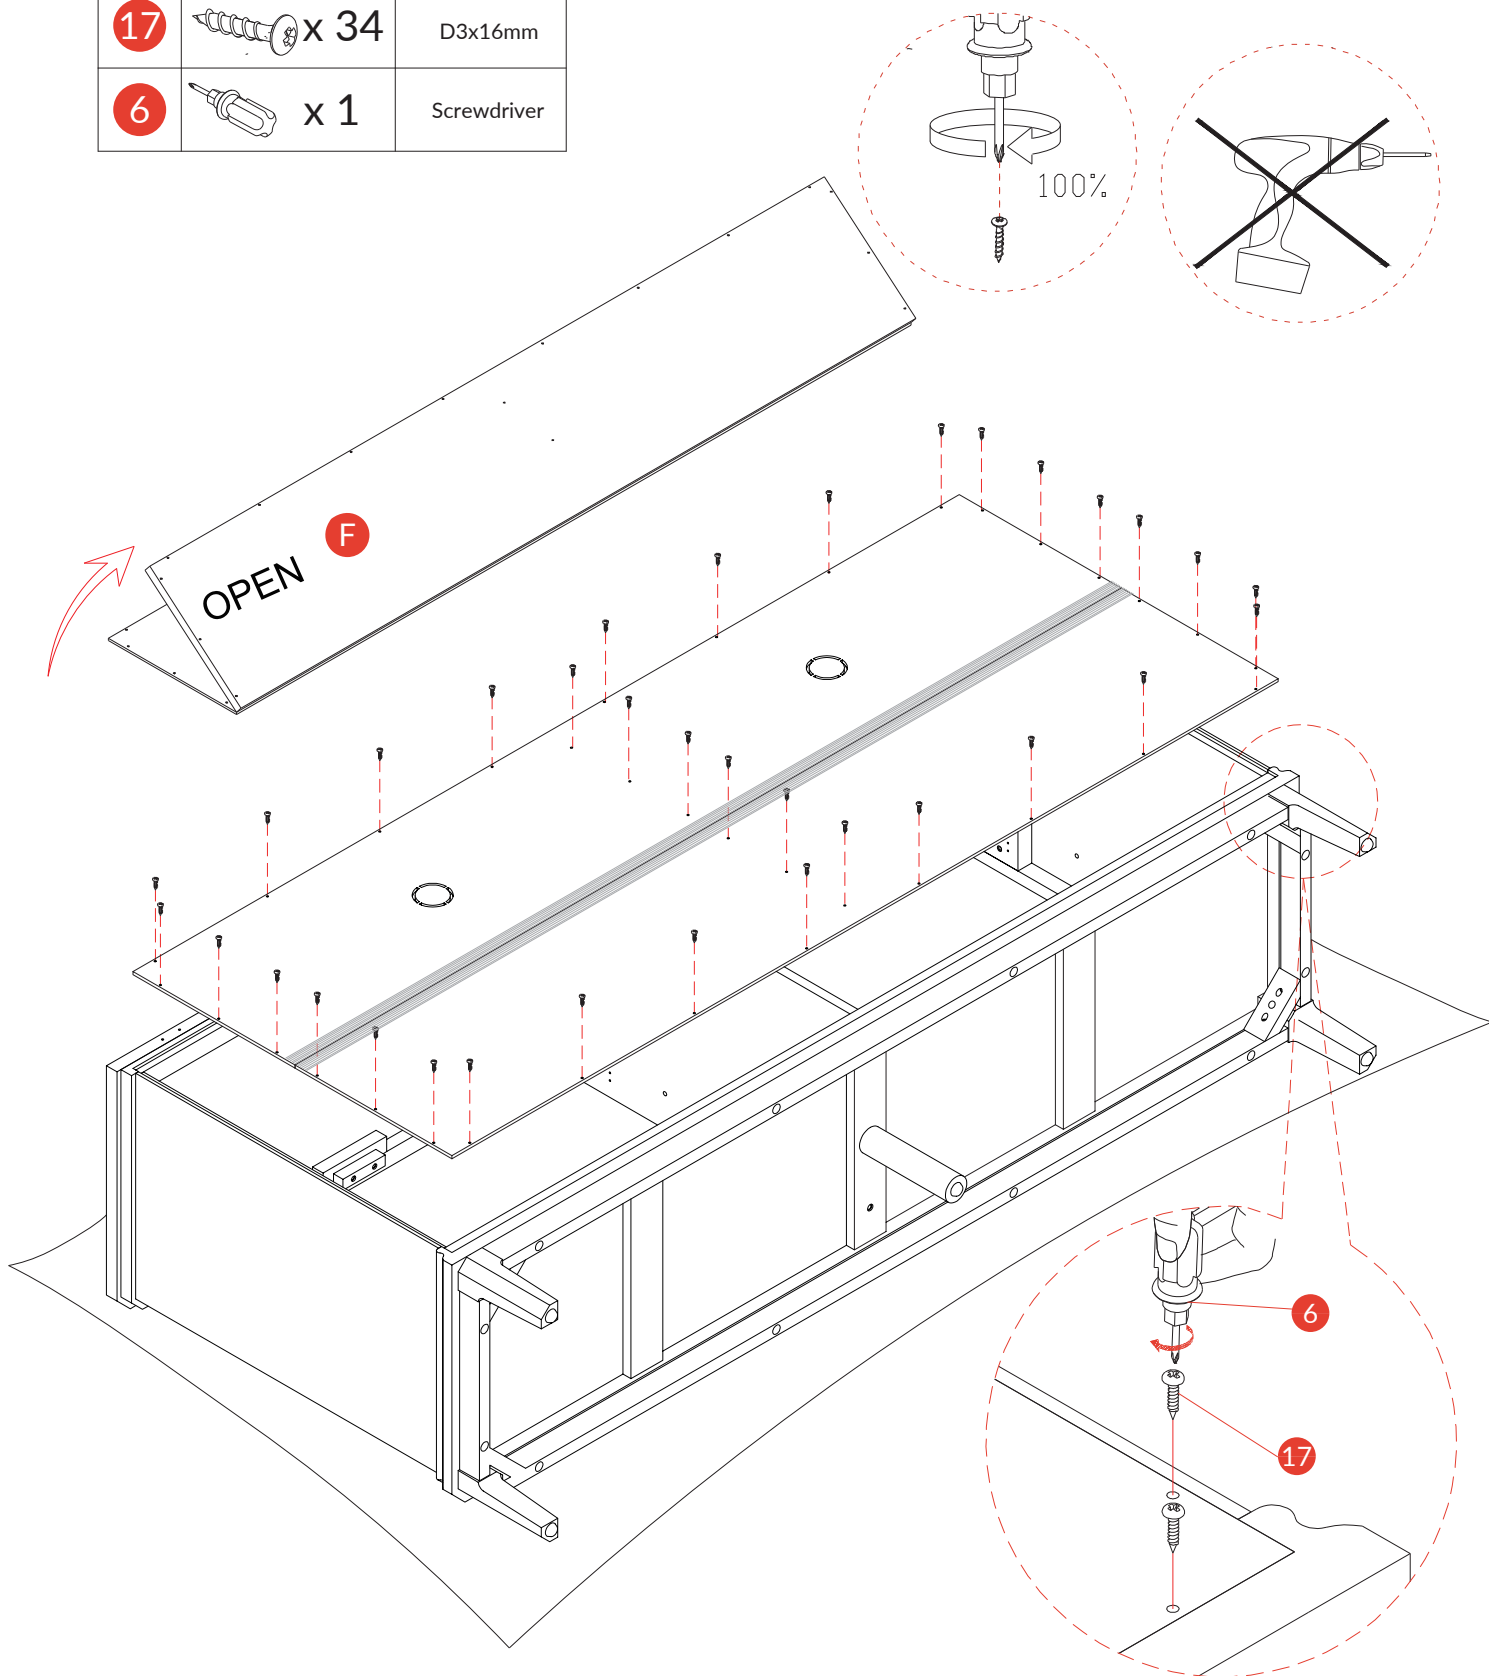 

 Step 08

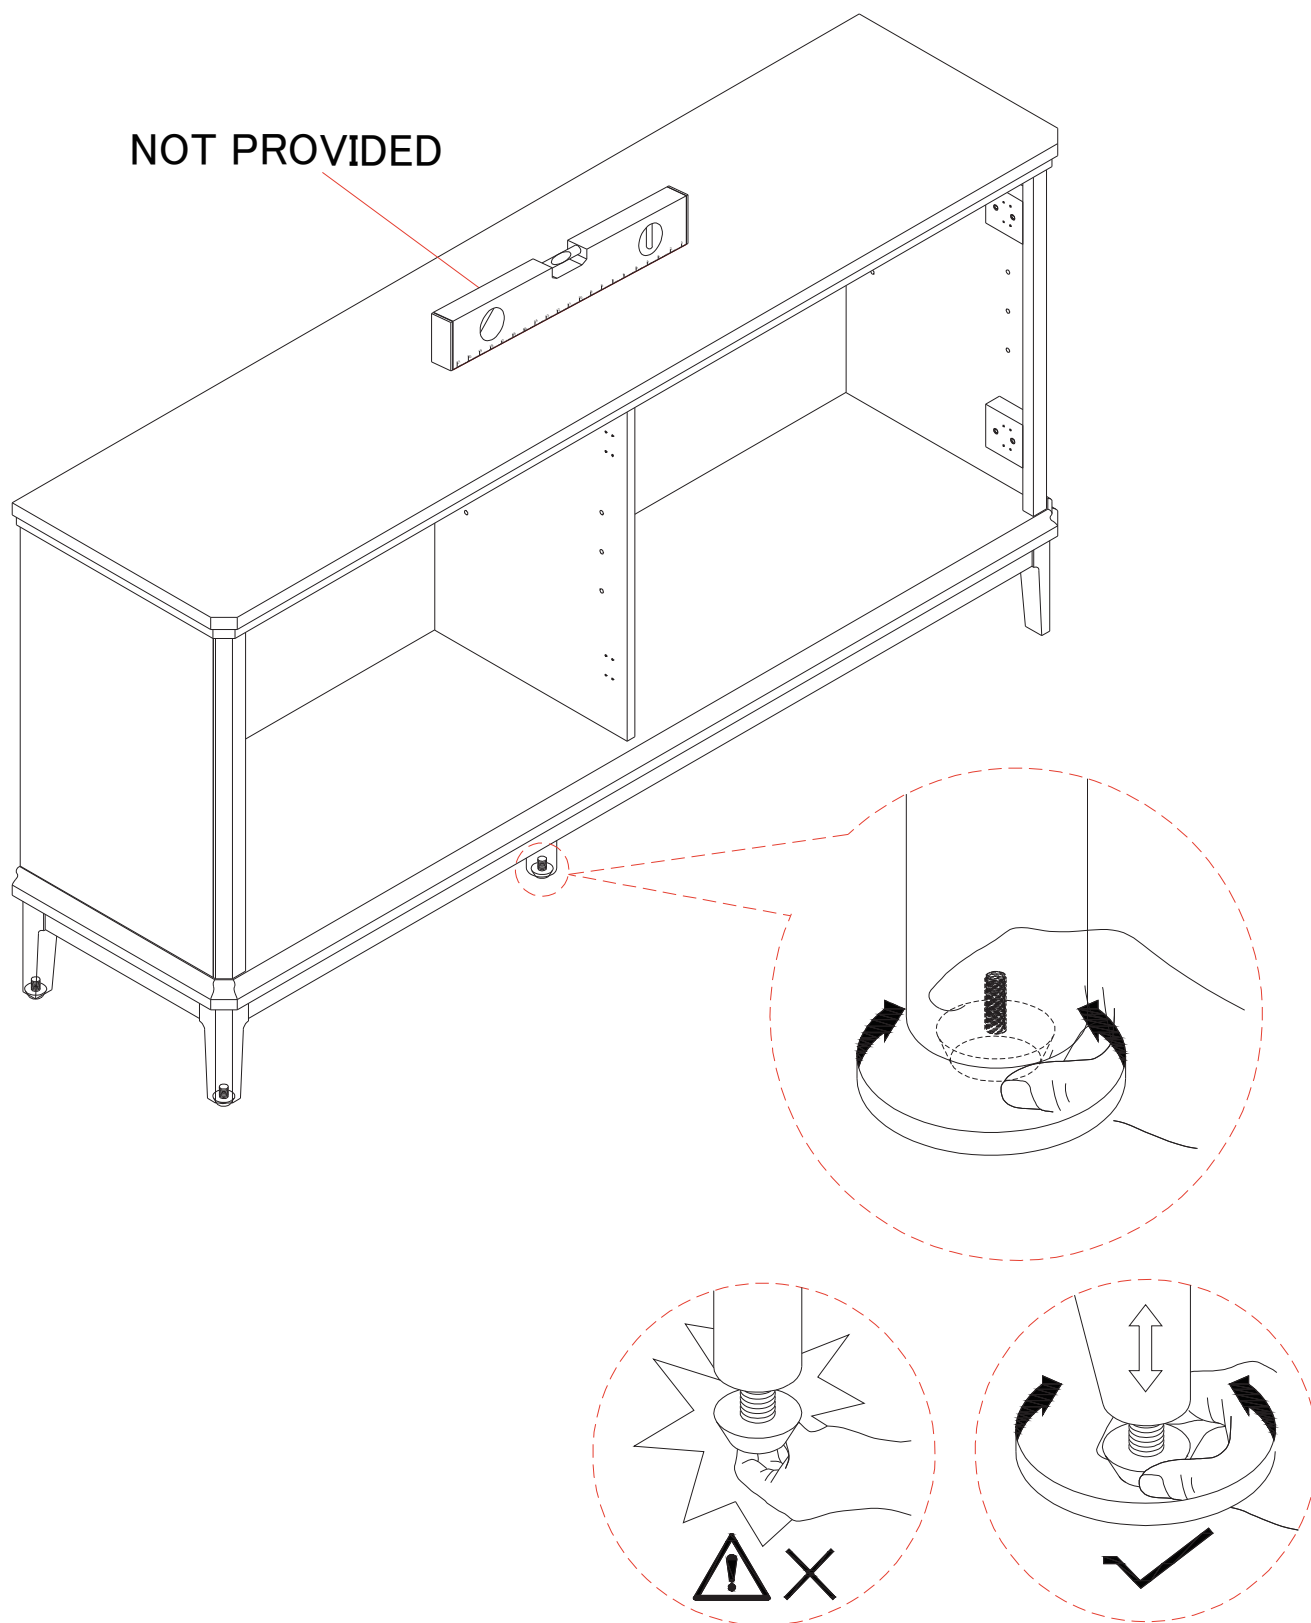


Note:

Before the next step, adjust the feet of the locker to keep it level.

Step 09

Nail shelf (15) into the corresponding holes of side panels (B/C/D), and place shelf (G) inside the cabinet, leveling it.


15		x 8	Layer board support
----	---	-----	---------------------

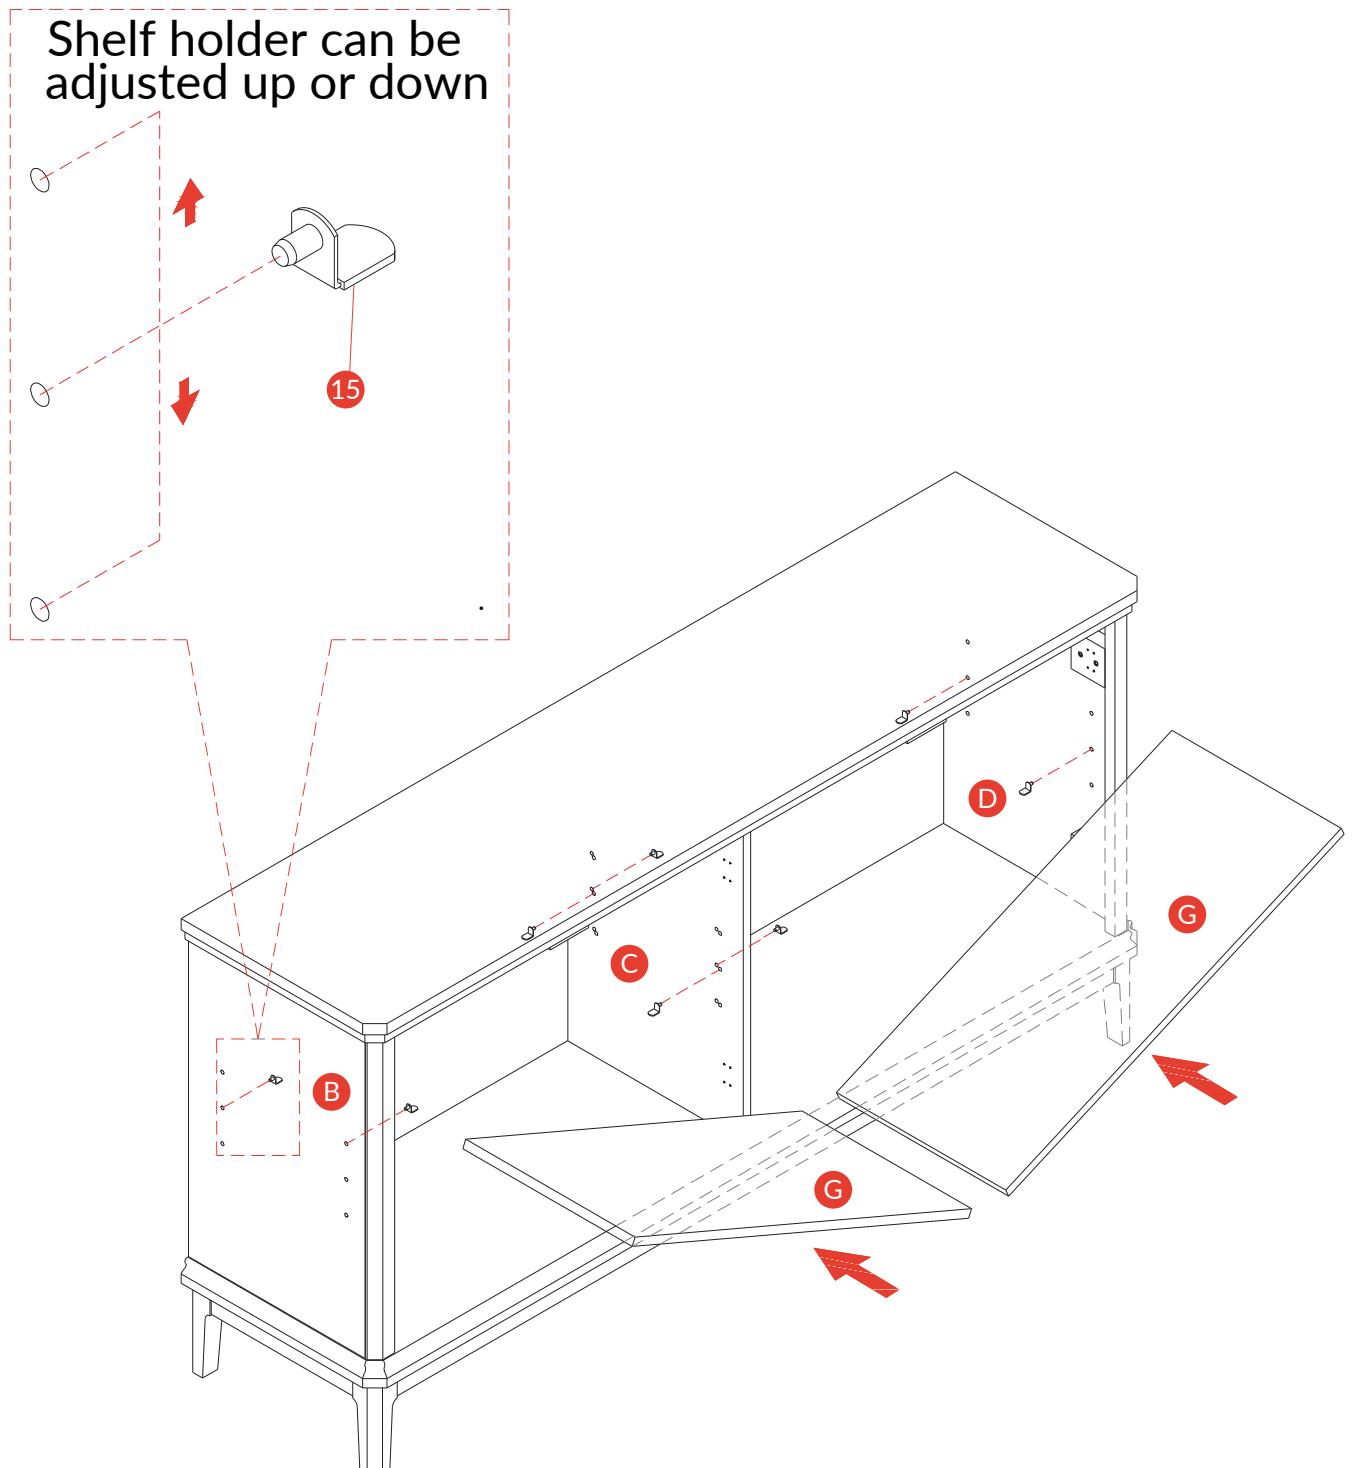 

Step 10

Pass screw (14) through hinge (13) and insert it into the corresponding holes on door panel (K/N), then tighten with screwdriver (6). Pass handle screw (11) through the door panel and insert it into the corresponding holes of handle (10), then tighten with screwdriver (6)


13	 x 4	Ø35mm	14	 x 8	D4x16mm	10	 x 2	Hold hands
11	 x 4	D4x18mm	6	 x 1	Screwdriver			

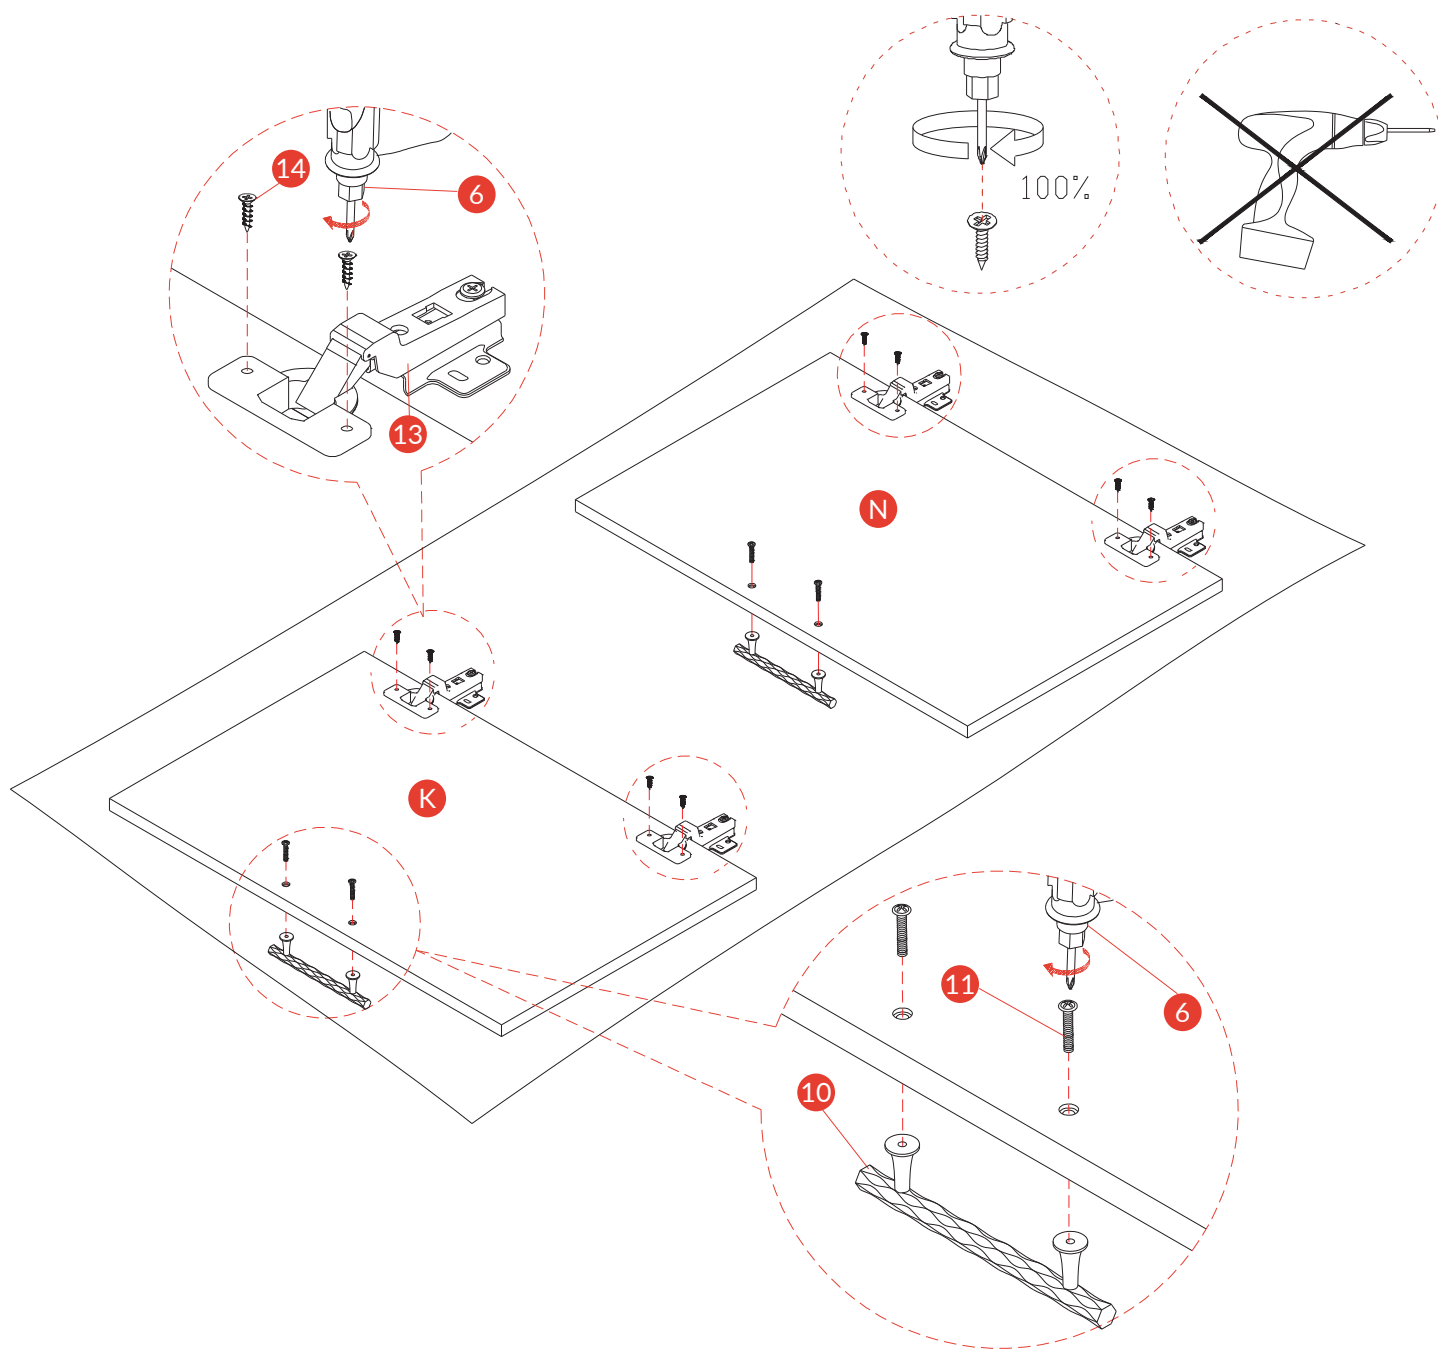 


Step 11

Insert screw (14) through the door hinge on the left door panel (K) into the corresponding hole on the side panel (B), and tighten it with screwdriver (6).

 
Insert screw (14) through the door hinge on the left door panel (N) into the corresponding hole on the side panel (D), and tighten it with screwdriver (6).


14	 x 16	D4x16mm	6	 x 1	Screwdriver
----	--	---------	---	---	-------------

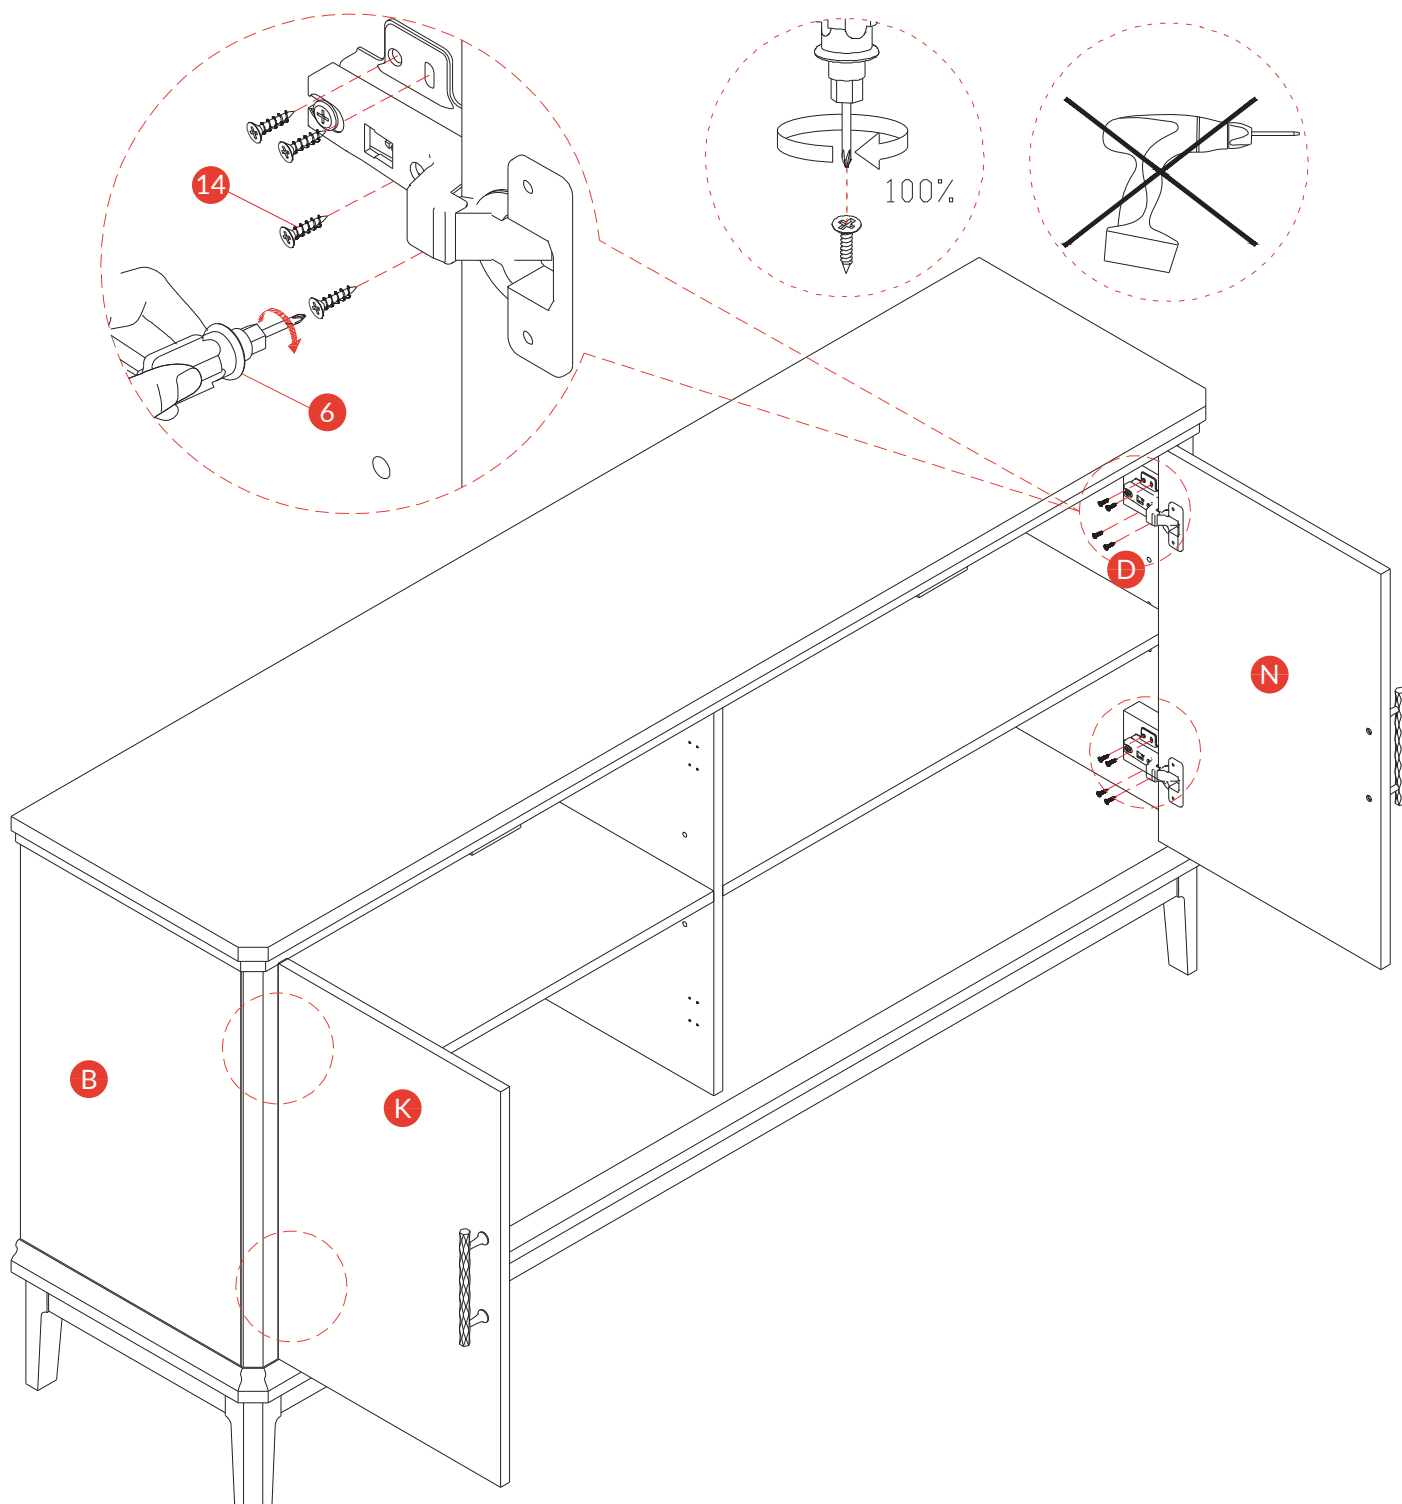 

Step 12

 Pass screw (14) through hinge (12) and insert it into the corresponding holes on door panel (L/M), then tighten with screwdriver (6). Pass handle screw (11) through the door panel and insert it into the corresponding holes of handle (10), then tighten with screwdriver (6)


12	 x 4	Ø35mm	14	 x 4	D4x16mm	10	 x 2	Hold hands
11	 x 4	D4x18mm	6	 x 1	Screwdriver			

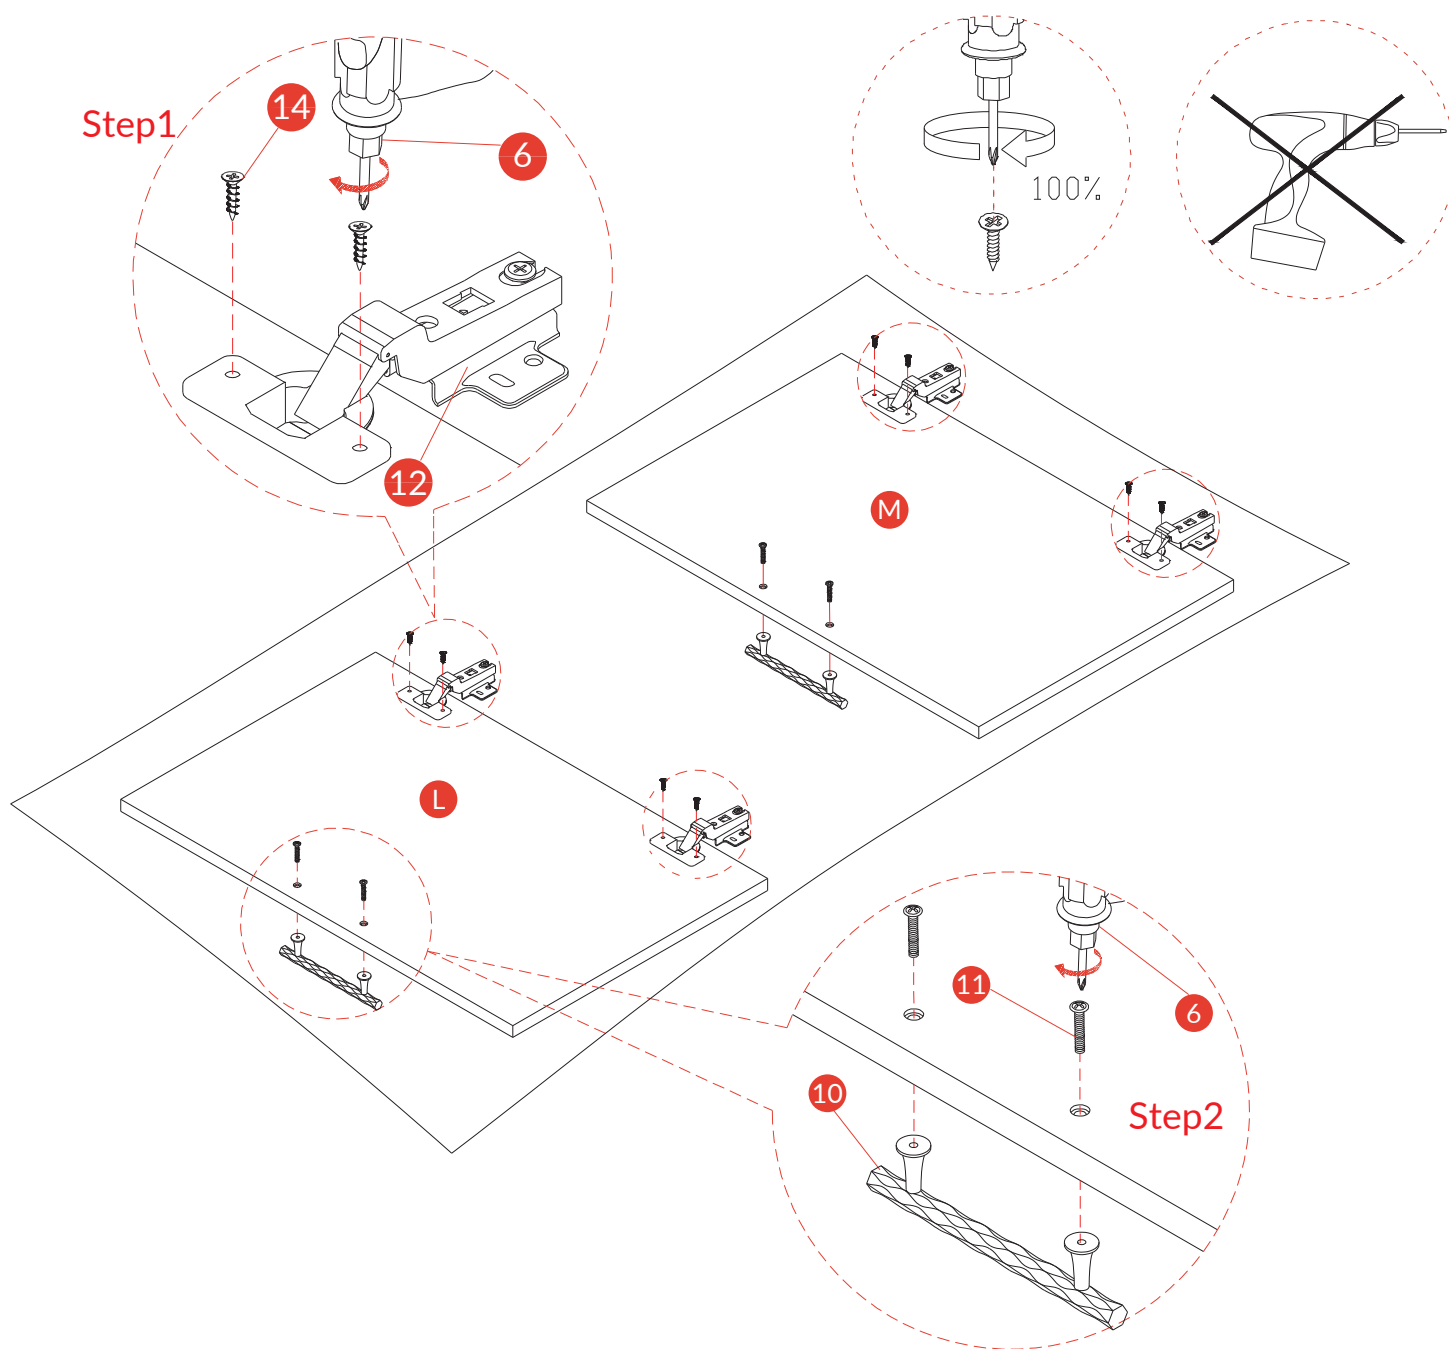 

Step 13


Install screw (14) through the door hinge on the right door panel (L) and attach it to the left side of the middle side panel (C) Insert screw (14) through the door hinge on the left door panel (M) and attach it to the right side of the middle side panel (C)

14	 x 16	D4x16mm	6	 x 1	Screwdriver
----	--	---------	---	---	-------------

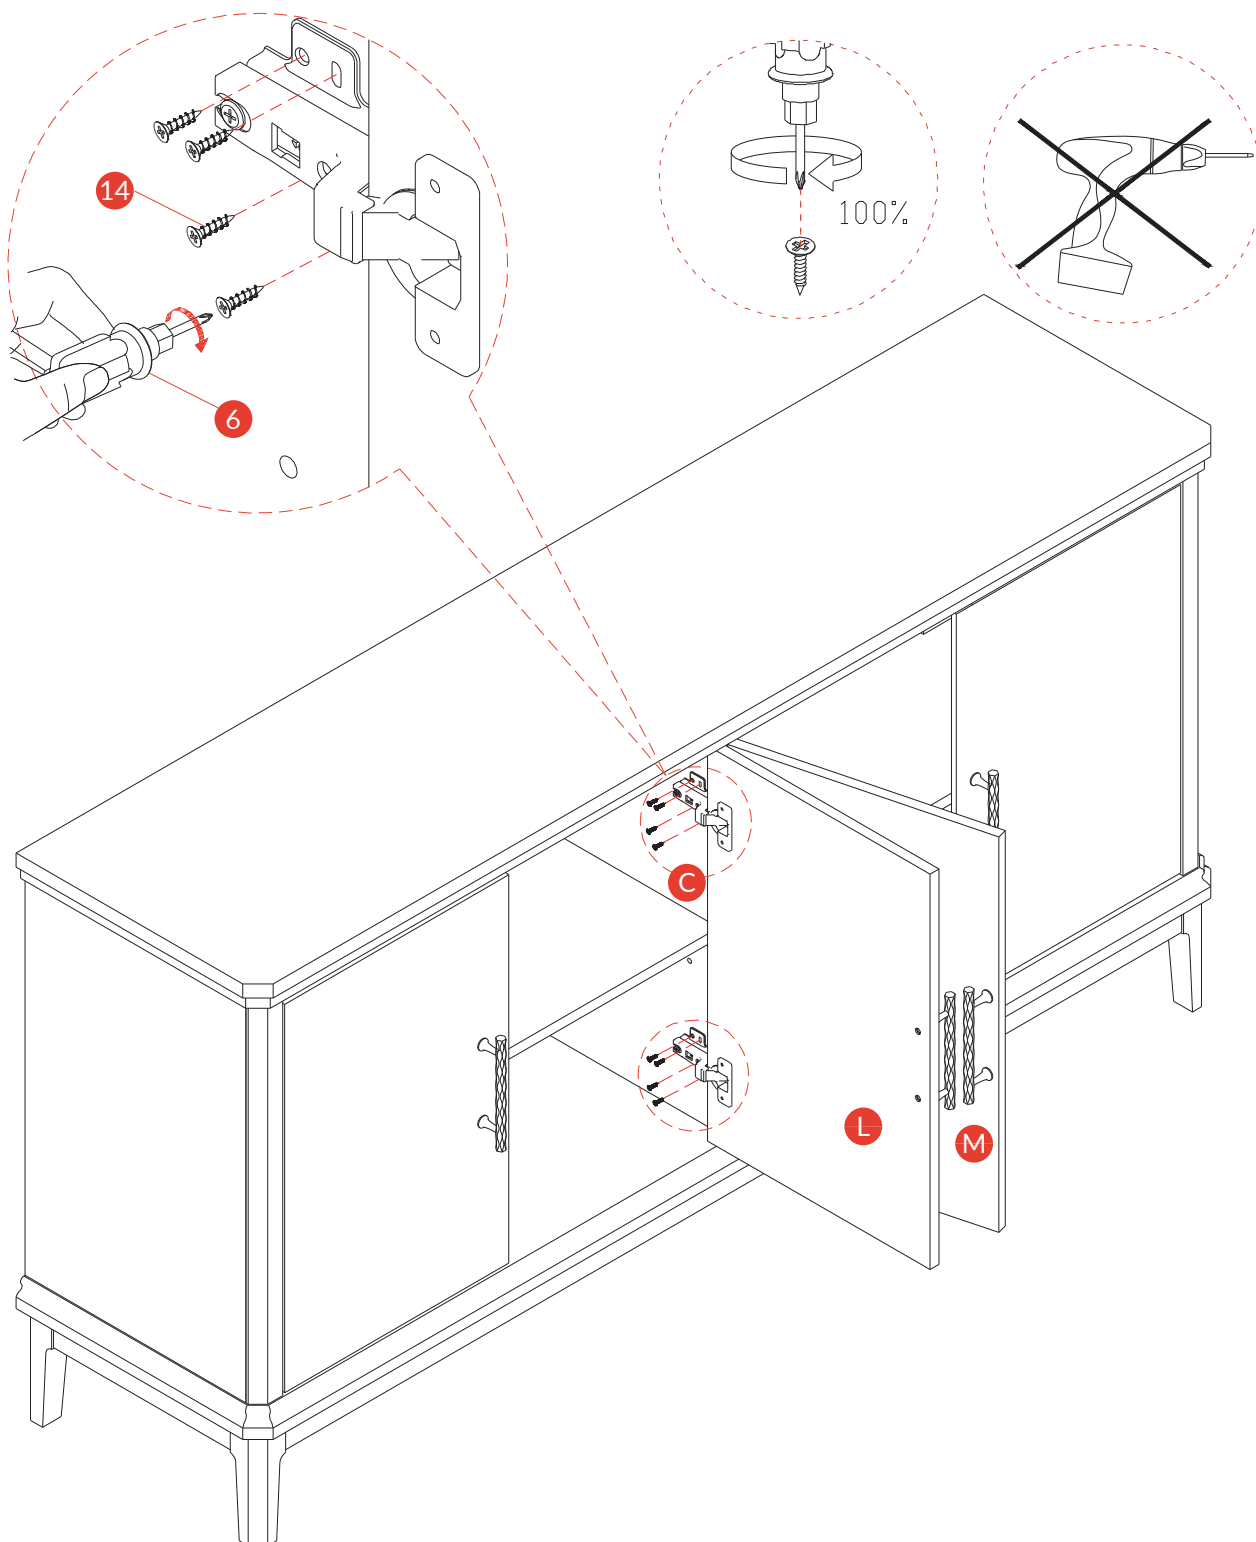 


Door Hinge Adjustment Instructions

 
Concealed hinges are three-way adjustable.

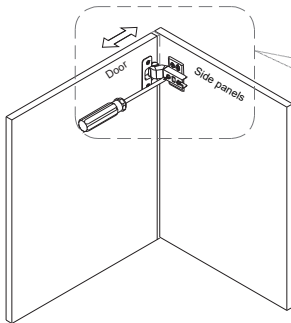


Horizontal by screw adjustment!

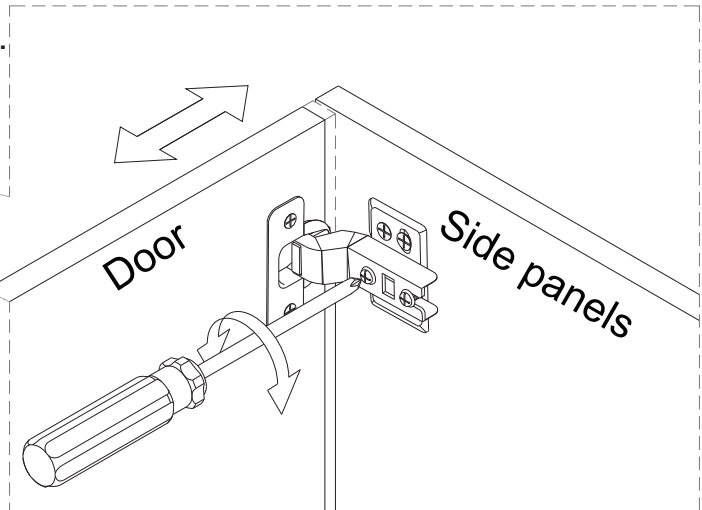 

 
Concealed hinges are three-way adjustable.

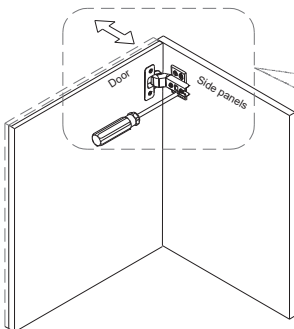

 
In-and-out by loosening the hinge arm mounting screw or via cam adjustment!

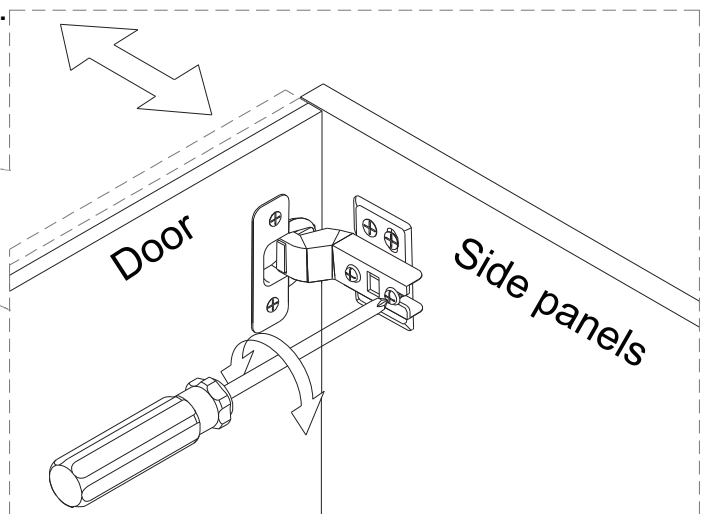

 Concealed hinges are three-way adjustable.

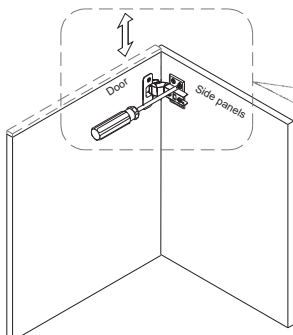

 
Vertical via slots in the mounting plate or via cam adjustment!

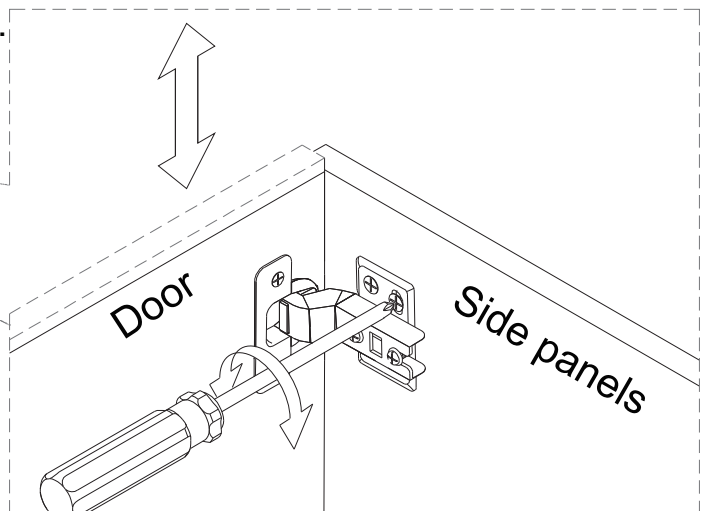

Step 14


Insert screw (2) through the anti-fall part (1) into the corresponding hole on panel (A), and tighten it with screwdriver (6).



2		x 4	D4x20mm
1		x 2	Anti-tip componeng
6		x 1	Screwdriver

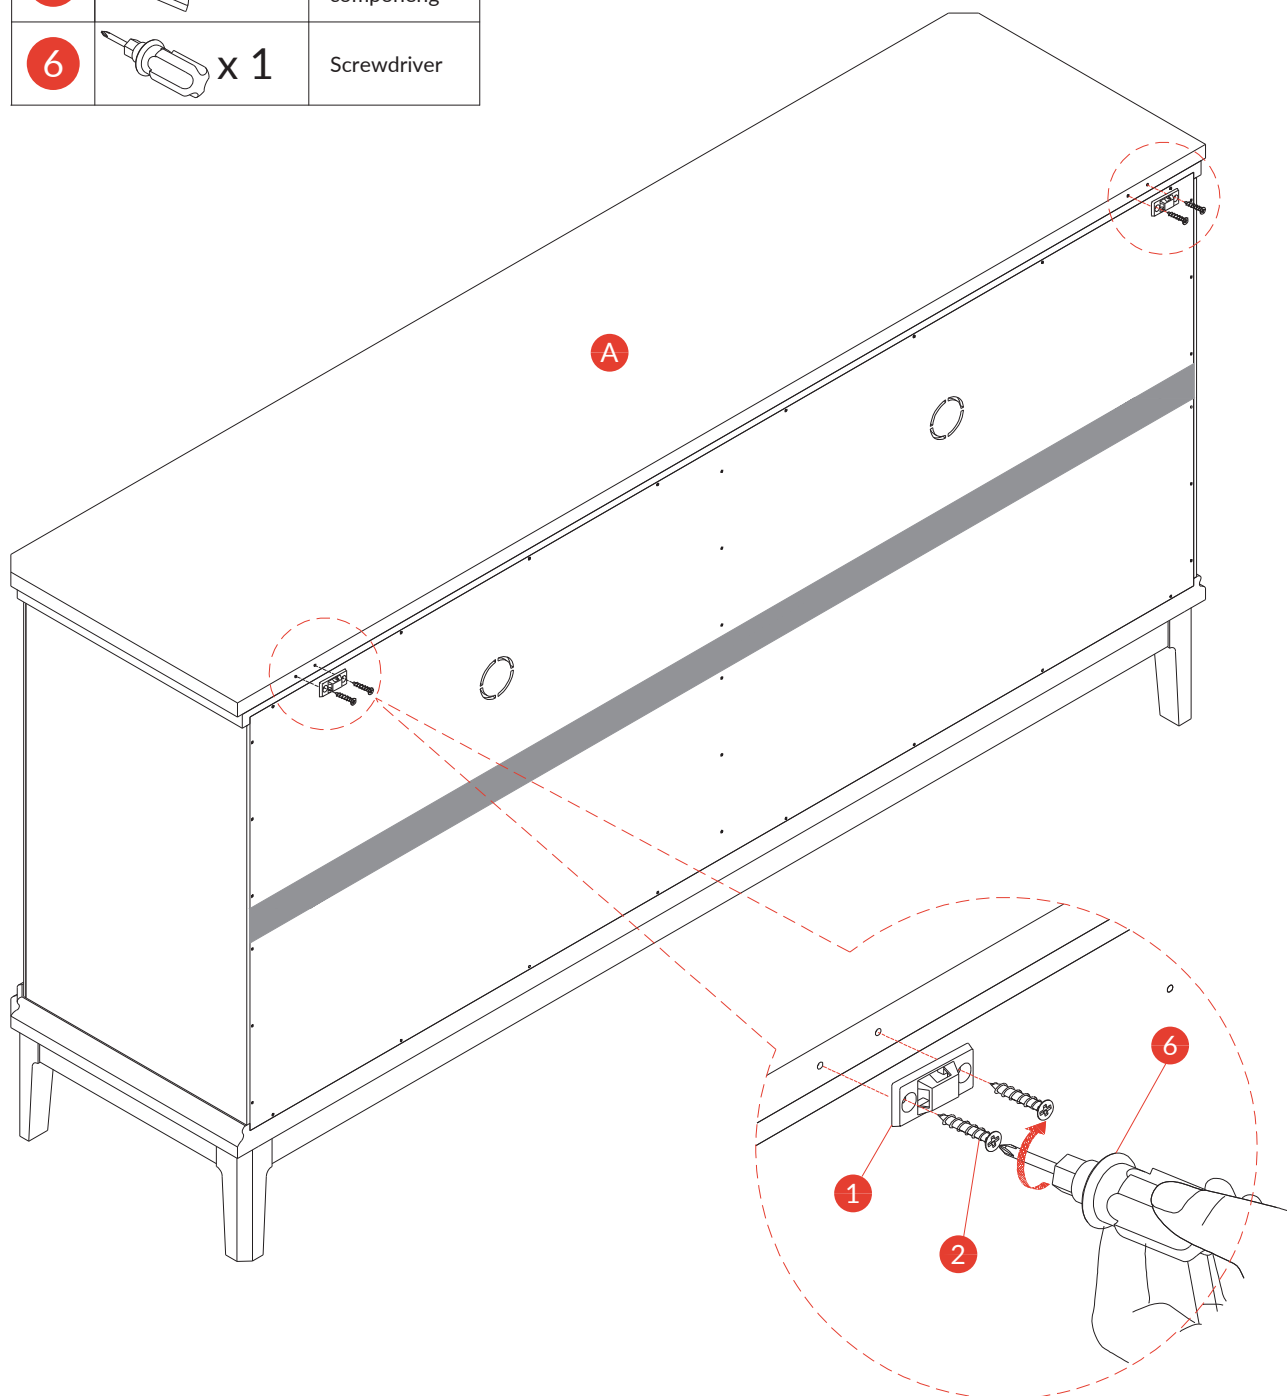 


Step 15

 Install Anti-tip device (1) to the wall in this step.


5	 x 4	D4x40mm	1	 x 2	Anti-tip componeng
4	 x 4	L=30mm	6	 x 1	Screwdriver

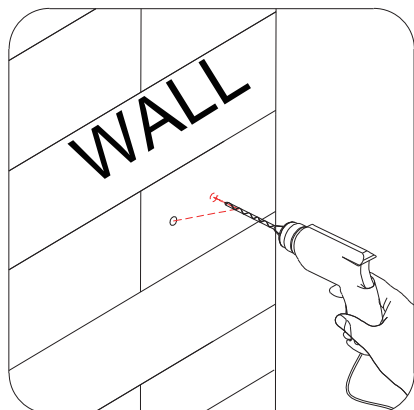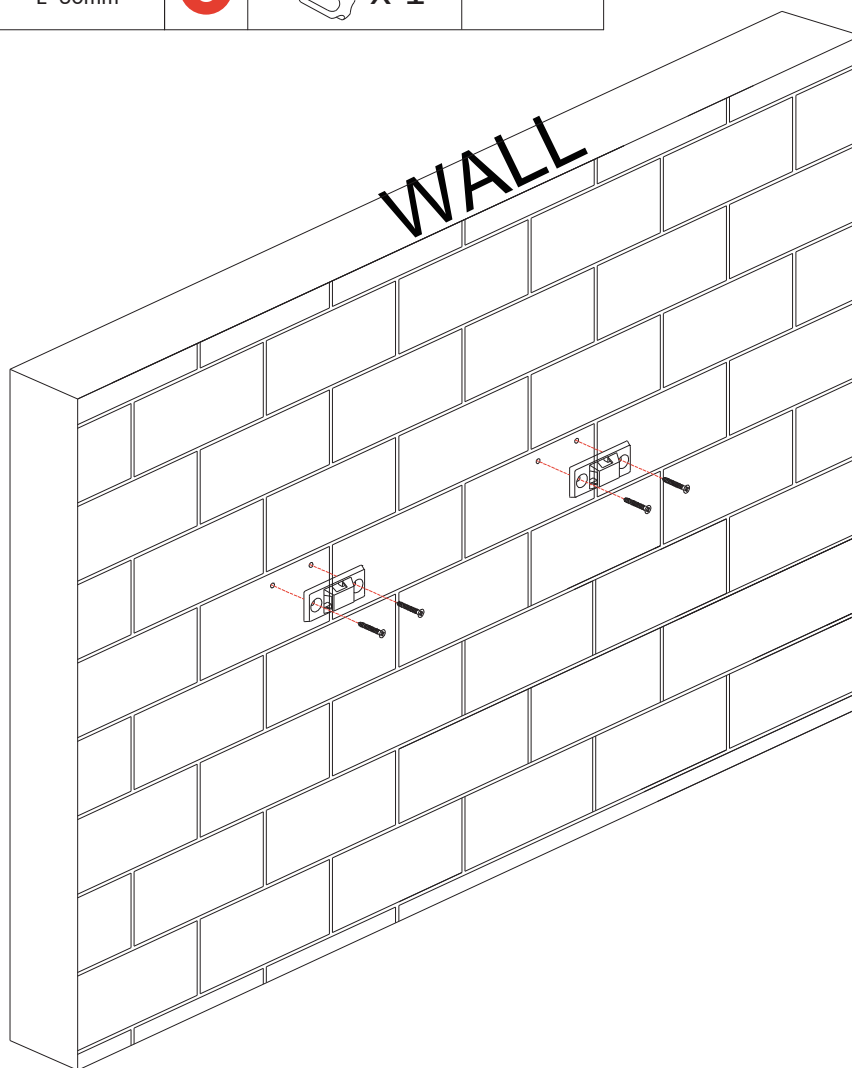  

 1. Drill a hole in the wall with an electric drill.

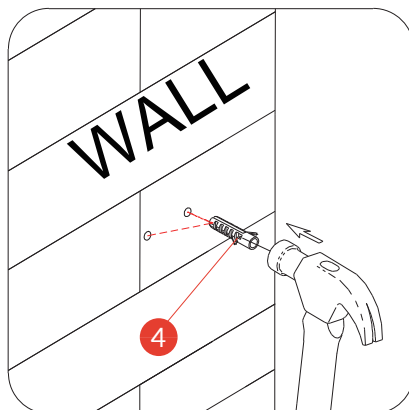

 2. Tap the plastic wall anchor into the hole with a hammer.

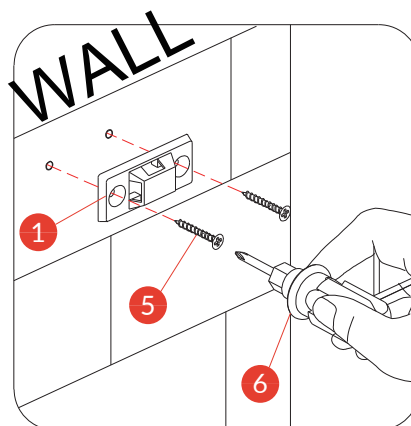

3. Secure the Anti-tip device 1 to the wall with screws 5.

Step 16

WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- For use with televisions weighing 35 lb or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

