

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

182677 *Barstool*

REVISION 0: 09/22/2023

PAGE 1 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A BACKREST	1PC	E FRONT RAIL (LONG)	1PC
B SEAT CUSHION WITH FRAME	1PC	F BACK RAIL (SHORT)	1PC
C LEFT LEG FRAME	1PC	G FRONT STRETCHER (LONG)	1PC
D RIGHT LEG FRAME	1PC	H BACK STRETCHER (SHORT)	1PC

HARDWARE IDENTIFICATION

1	BOLT (M6 x 50mm - RBW)	16PCS	WOOD DOWEL (M8 x 30mm-WOOD)	8PCS
2	LOCK WASHER (5/16" - RBW)	8PCS	5 ALLEN WRENCH (M4 x 100mm - BLK)	1PC
3	FLAT WASHER (M6 x 13mm - RBW)	8PCS		


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ASSEMBLY INSTRUCTIONS

STEP 1

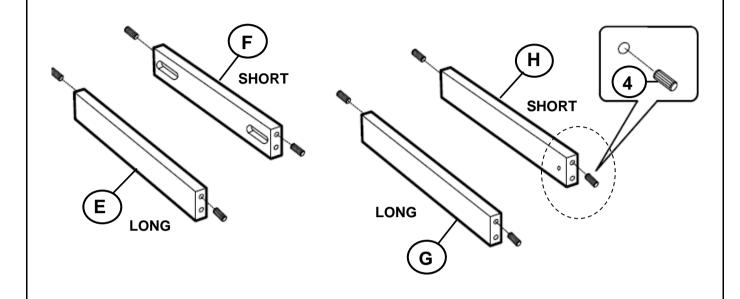


STEP 2

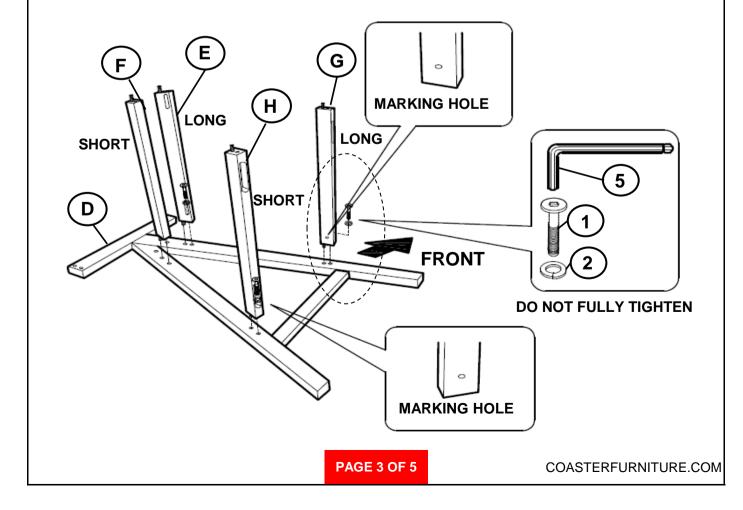




ASSEMBLY INSTRUCTIONS STEP 3

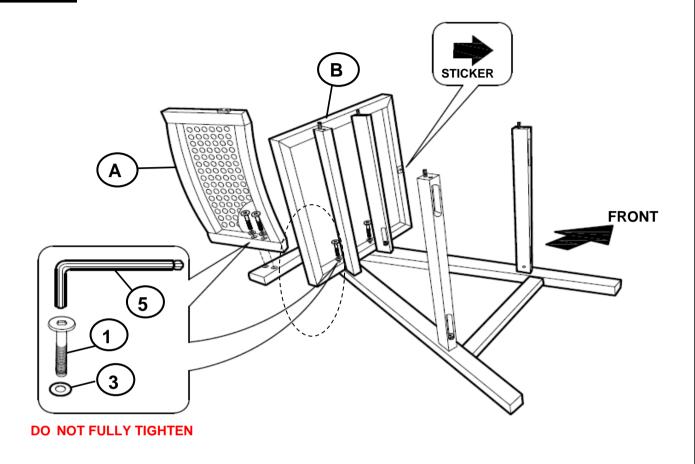


STEP 4

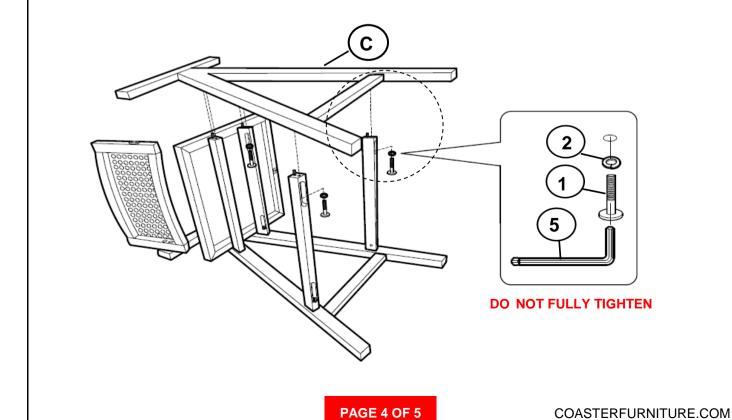


COASTER

ASSEMBLY INSTRUCTIONS

STEP 5

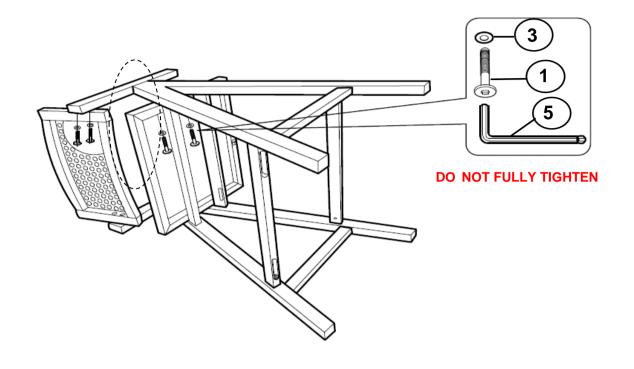

STEP 6 COMPLETE

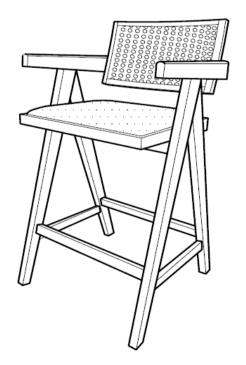

FULLY TIGHTEN ALL BOLTS



COASTERFURNITURE.COM





