

INSTRUCTION

PRODUCT INTRODUCTION

Make sure the Adapter and the Ring Connector are connected correctly according to the picture. Then connect the string lights end to end as you like.



IR RECEIVER




1. Control Button: Press button to change between 8 different modes;
2. To set and reset timer press button for 3 seconds, Green light ON means timer is ON(6H ON/18H OFF).

- Power supply: 30V adapter, IP44 rainproof
- Input: 120V AC 50/60Hz
- Output: 30V DC 6W



REMOTE CONTROL

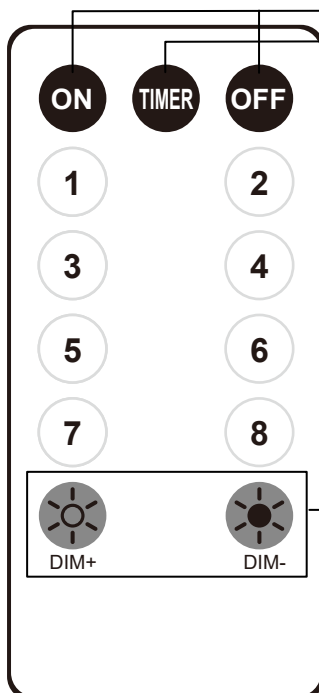


Press this button to turn on/off the light

Press this button to activate the timer (6hrs on and 18hrs off)

1. Combination
2. In waves
3. Sequential
4. Slo-glo
5. Chasing/flash
6. Slow fade
7. Twinkle/flash
8. Steady on

Replace the battery of the remote control.

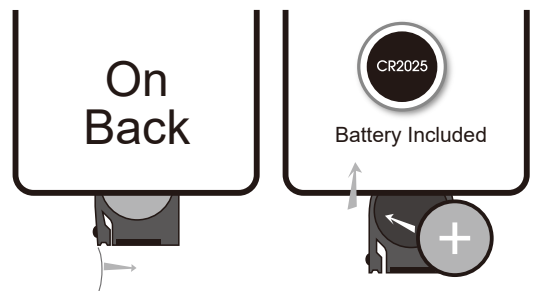

Press this button to increases or decreases Brightness

Note:

It is recommended to operate remote control within Ten (10) feet with no block to IR receiver.

IMPORTANT SAFETY INSTRUCTIONS

When using outdoors, please install to a covered weather proof GFCI electrical outlet. Make sure the adapter and cord are assembled correctly and secured tightly to prevent from water.

1. Please read and follow all instructions and warnings on the instructions and product carefully before using.
2. Retain the instruction for future reference.
3. This product is to be used only as intended.
4. For indoor/ outdoor use.
5. If using outdoors, connecting the product to a Ground Fault Circuit Interrupting (GFCI) receptacle.
6. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat
7. Do not secure the wires with staples, nails, or anything sharp which may cut the wire and insulation.
8. This is an electric product, not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.
9. Avoid the product and extension cords being caught by doors or windows, which may damage the wire and insulation.

WARRANTY

E Home International Inc guarantees that this product is free of defect in material and workmanship, and provides a one-year limited hardware warranty for the product commencing from the date of purchase. Please keep your receipt for proof of purchase. This product is designed for light or decoration usage only. Using this device in any other capacity voids the warranty.

The warranty offered covers normal use. Defect or damage that result from improper operation, storage, misuse or abuse, accident or neglect, which are not the fault of E Home, are excluded from warranty coverage.

Distributed by E HOME INTERNATIONAL INC.
725 Old Norcross Rd. Ste D, Lawrenceville, GA 30046
Customer Service Line: (888) 997-9468
www.ehomeinc.com
service@ehomeinc.com

