 


MOUNTING METHOD

Fix the safe in the place which is not easy to move.

- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counter clockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten all screws.

⚠ CAUTION: Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

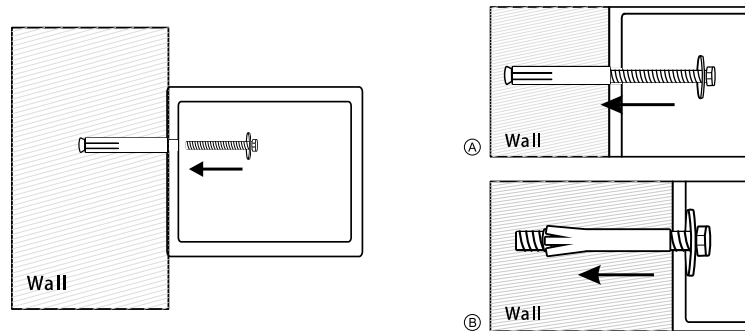

INTELLIGENT ELECTRONIC LOCK SAFE


⚠ Please do not keep emergency keys in your safe!

Dear valued customer:


Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

Schematic drawing of case

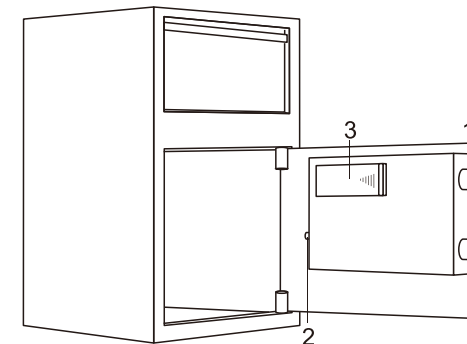 

Schematic drawing of control panel

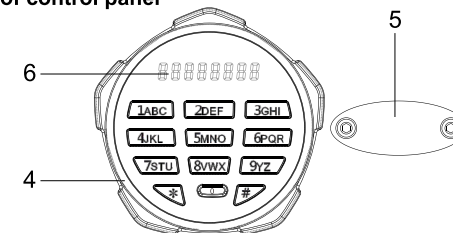 

- | | |
|------------------------|---------------------------------|
| 1. Bolts | 5. Emergency Lock Cover |
| 2. Reset Button | 6. Display |
| 3. Battery Compartment | 7. Power Supply: 4 AA batteries |
| 4. Knob (Master Key) | |

For any help, kindly consult the local distributor

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first opening, users should open the safe with the emergency key. The operation in details refers to “opening the safe with the emergency key”.

- Remove emergency lock cover, then insert the emergency key, and turn it count clockwise.
- Turn the knob clockwise to open the door.

CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

INSERTING THE BATTERIES

- Open the door.
- Insert 4AA batteries into the battery compartment.
- Under normal condition, if the LED display shows “BA-L” after entering “#” button, you should change the batteries.

CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the “+” and “-” signs. When outage for thirty minutes or longer, you should reset the user code.

OPENING DOOR

- Input your user codes (3-8 digits) then press “#”, the code lock will be unlocked with the display show “OPENED”.
- Turn the knob clockwise and open the door.

CAUTION: The user preset code “1234”.The code lock has the function of auto-locking, and if there is not any operation after inputting the code, the lock will lock automatically again. If inputting wrong code for three times, the lock will lock automatically for 3 minutes.

CLOSING DOOR

- Turn the knob counter clockwise to close the door.

SETTING THE USER CODE

- With the door open by user code, the LED display show “OPENED” press reset button, the LED display show “-----”.
- Input your new user code(3-8 digits), and press the “#” button to confirm.
- The display will show “DONE” to indicate the code setting is successful. So now you can use your safe box by new code.

OPENING THE SAFE IN EMERGENCY

Upon first receipt of the safe, or either the electronic circuit malfunction or codes unknown. You could also use the emergency key to open the safe.

- Remove the cover of the emergency lock.
- Insert the emergency key to the key hole, turn count clockwise, then turn the knob clockwise to open the door.

