


Assembly Instruction

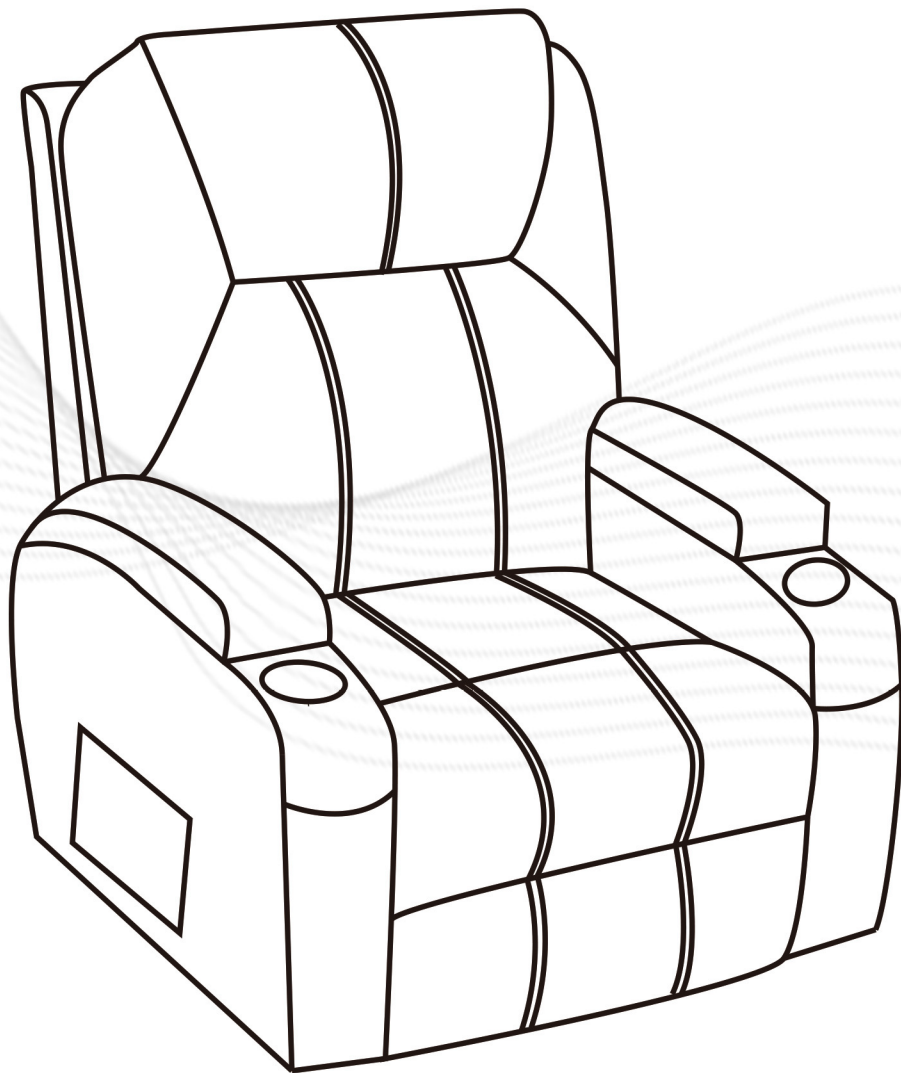

NOTICE

- Firmly secure all parts before use.
- Reconfirm that all parts are secure every 90 days.
- Do not use or store this item or its parts in the proximity of open flame or flammable/combustible chemicals.
- Do not expose this product to water.
- This chair is not designed for multiple people to sit at once.
- Do not stand on the chair.
- Do not let small children or pets near during assembly.
- Do not sit reverse or sit outside of the seat cushion.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

WARNING


- This product contains electrical components; avoid exposing it to high temperatures or humidity.
- Always disconnect this appliance when not in use.
- Use only a grounded outlet to plug in this product.
- Do not plug this product in with an electrical adaptor.
- Do not modify the plug.
- Do not allow unattended children and defective persons to operate this product.
- Do not stand on any part of the chair.
- Do not use this product outdoors.
- Do not use this product if the massage mechanism is exposed.
- If you experience any pain, illness, or discomfort during use, discontinue using this chair and consult with a physician.
- Do not use this product at the same time as other medical or therapeutic devices, such as blanket warmer or another massage device.
- Only operate this device on a stable, flat surface.
- Do not operate massage function or heating function for long periods of time.
- Do not pull out the plug to turn off this product. Turn off all functions before unplugging this product. Refrain from using this product if advised against by your healthcare professional.
- Do not operate this product if under the influence of alcohol, have a pacemaker, heart condition, skin injury, pregnancy, recent childbirth, sensory feedback disruption conditions like diabetes, osteoporosis, chronic pain, fever, or any medical condition that may impede safe usage.

CHAIR SPECIFICATIONS


Weight	89.29lbs
Power Input	100-240VAC ~ 50-60Hz
Power Output	29VDC 1800MA
Rated Voltage	DC 29.0V
Rated Power	58W
Maximum Power	217W
Rated Current	2A

Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instructions properly. Make sure all the parts are included (7 kinds in total)


COMPONENTS

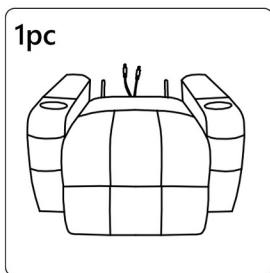


(A) Chair Base

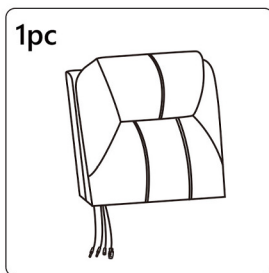


(B) Backrest

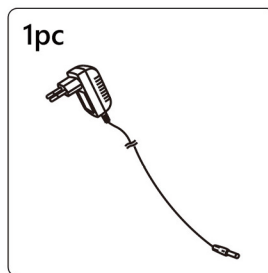


(C) Power Cord

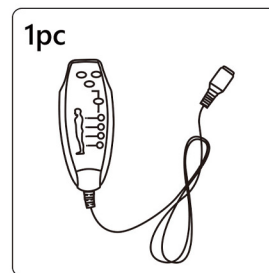


(D) Massage Remote Control

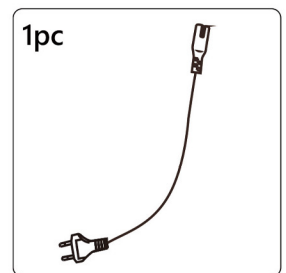


(E) Plug

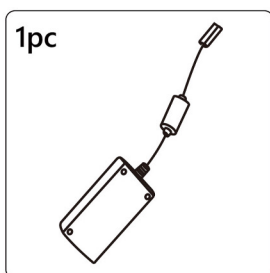


(F) Power Supply

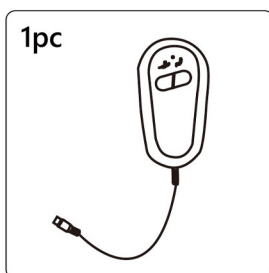

(G) Lift Remote Control

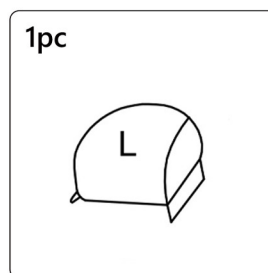

(H) Left Armrest

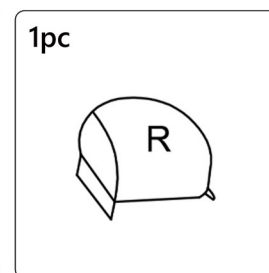


(I) Right Armerest

ASSEMBLY INSTRUCTION

Step 1


First install the handrail (H) at the base handrail. The left handrail (H) is mounted on the left and the right handrail (I) is mounted on the right. Place the Backrest (B) onto Chair Base (A) and insert the tabs of the backrest (B) into the two metal pins on the chair base (A) with a click.

Attention: Please install the armrest (H) first, and then install the backrest (B).

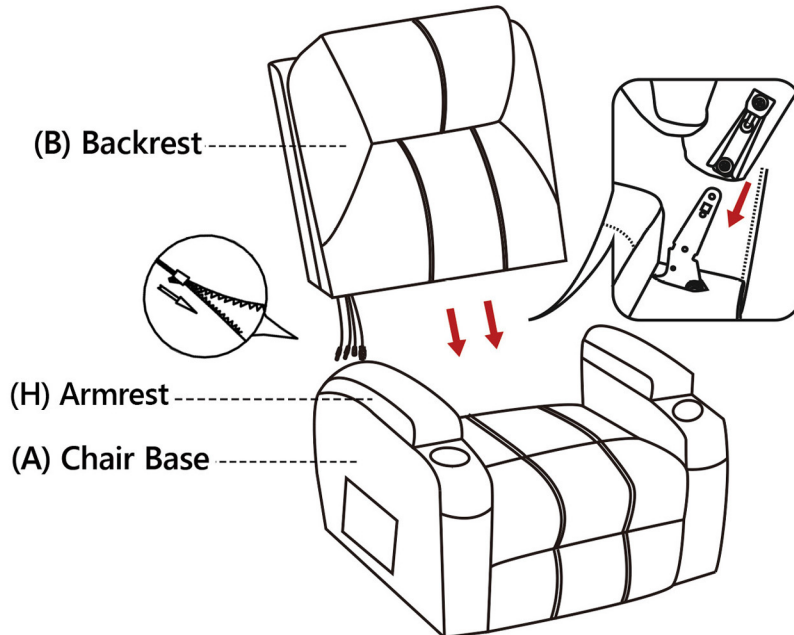

Step 2

Connecting Power Supply (F) and Lift Remots Control (G) to each of the two wires on the Chair Base (A). Then connecting Plug (E) and Power Supply (F).

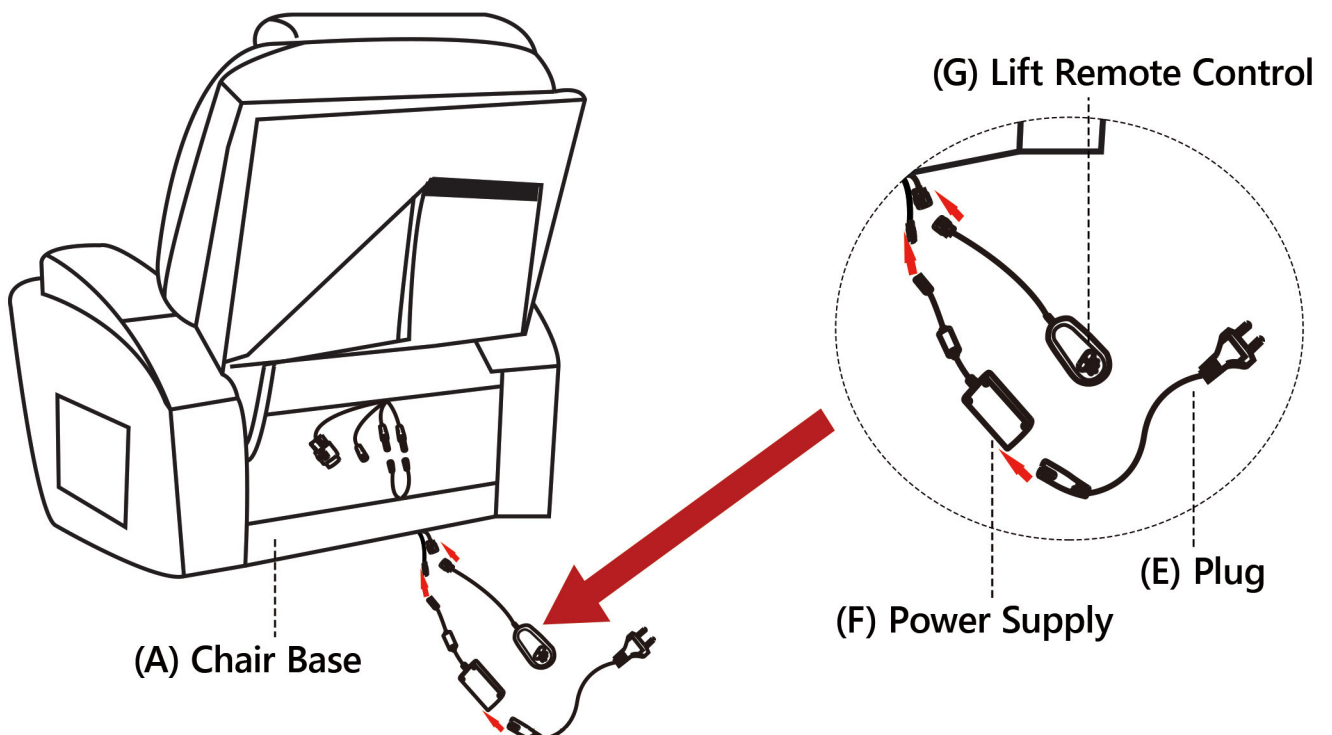


Step 3

No.1 wire connects with the Backrest (B) and Chair Base (A).


No.2 wire connects with Backrest (B) and Power Cord (C).

No.3 wire connects with Backrest (B) and Massage Remote Control (D).

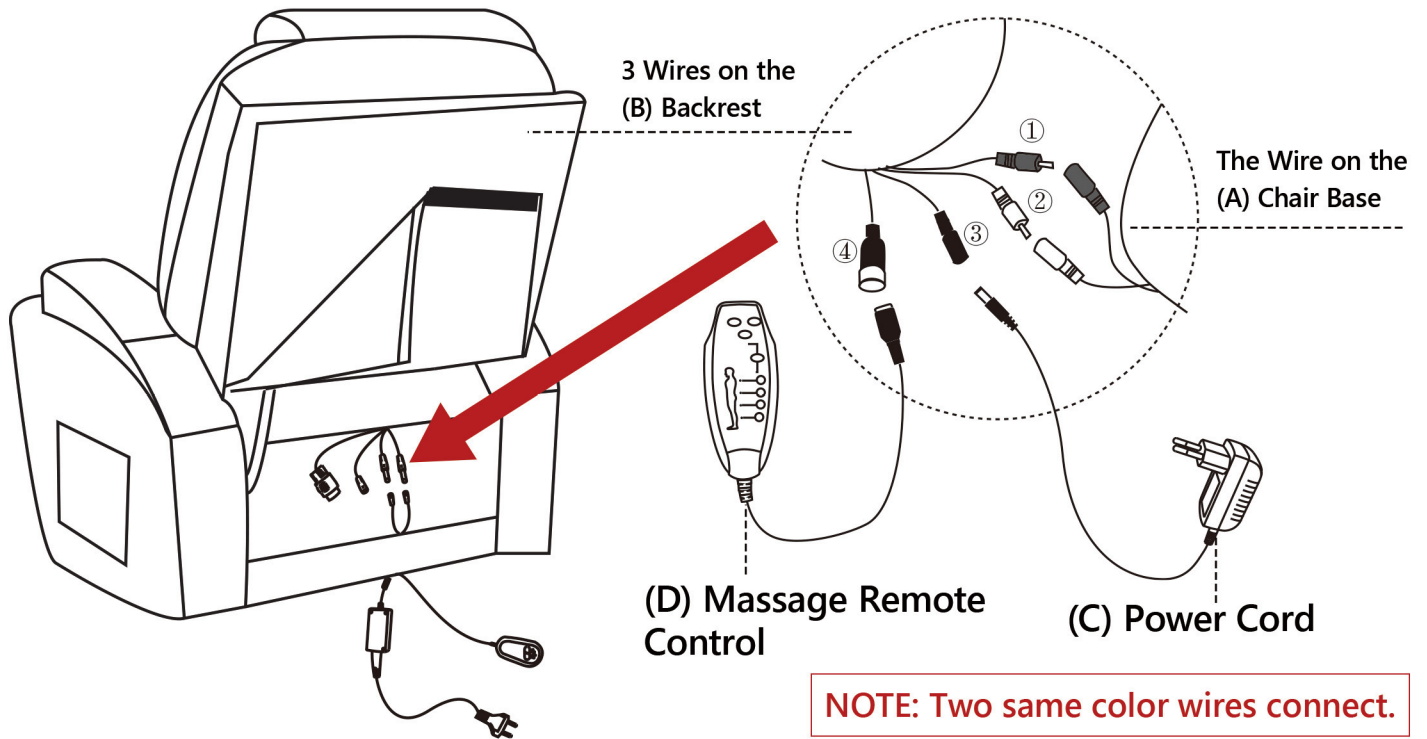


Step 4

The assembly is complete now. Turn on the power and you can use it.

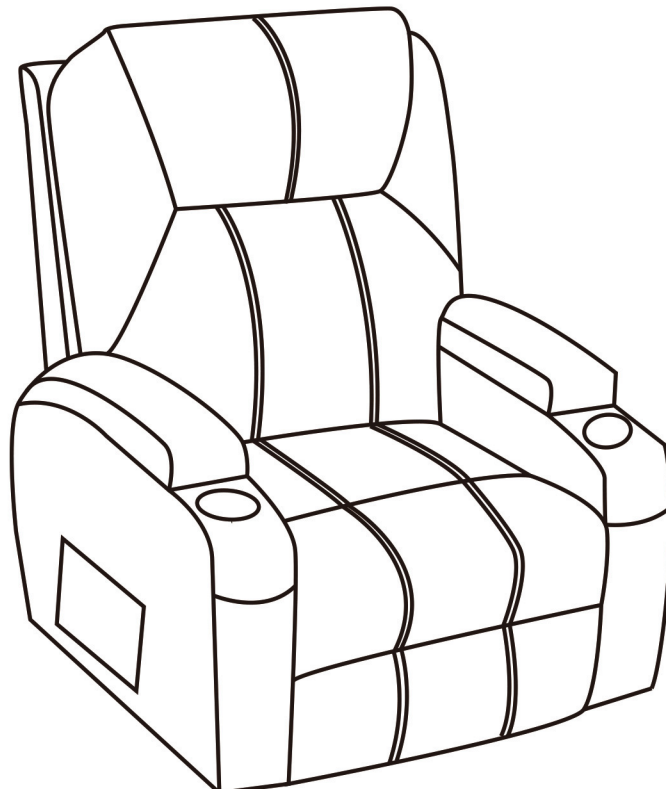


Instructions for Operate

How to recline?

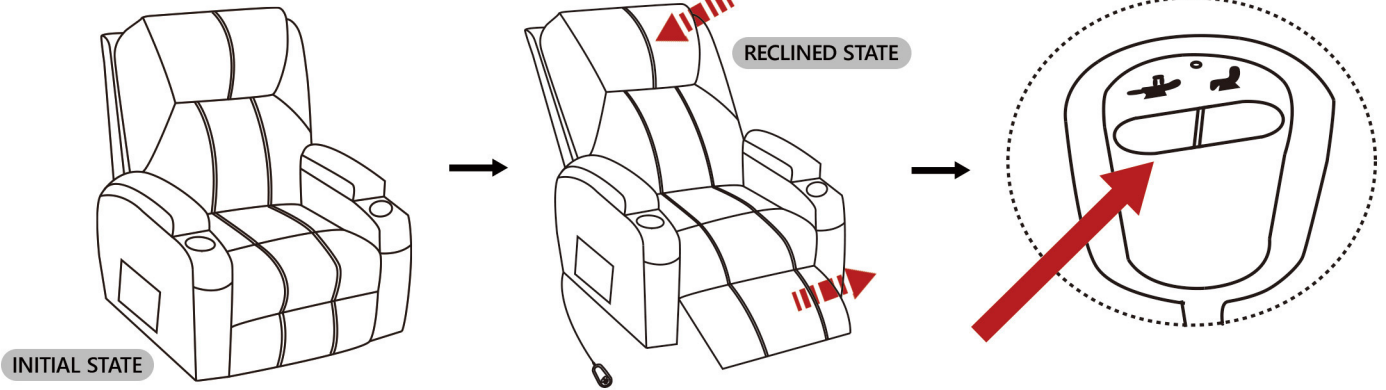


When the chair is in its initial state, press and hold the lower button on the lift control to achieve your desired angle.

How to get footrest latch down?

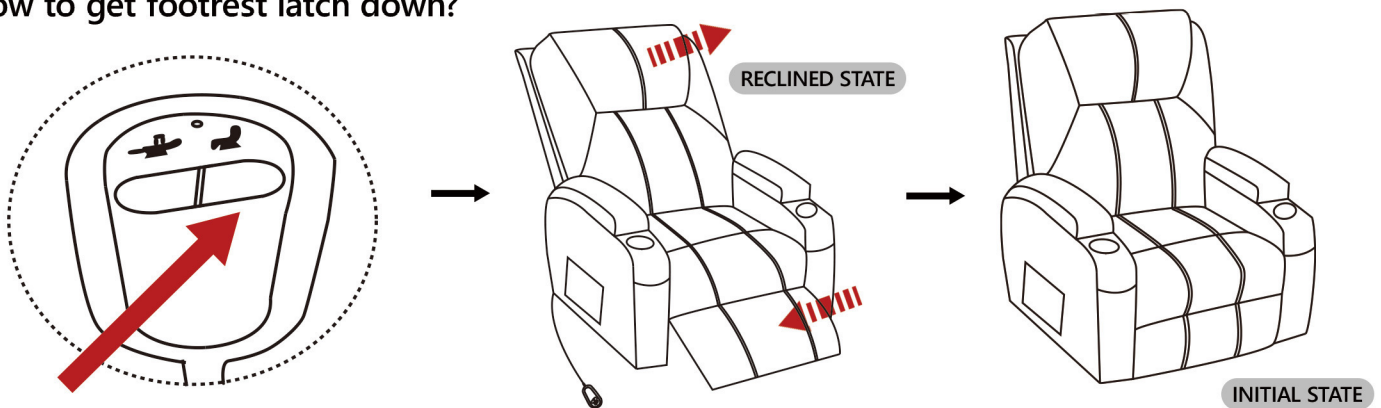


When the chair is in its reclined state, press and hold the top button on the lift control to get footrest latch down.

How to lift?

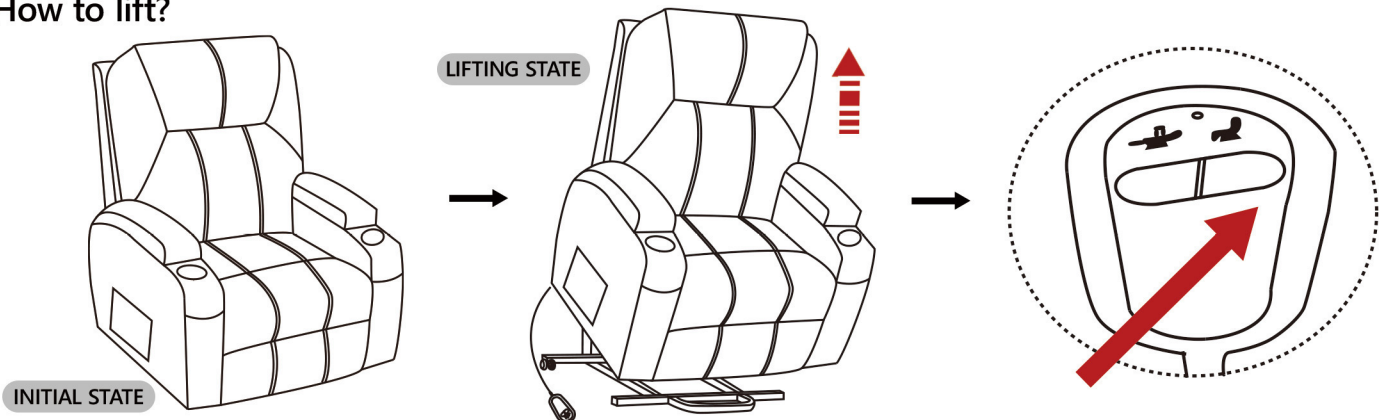


When the chair is in its initial state, press and hold the top button on the lift control until your feet reach the ground.

How to down?

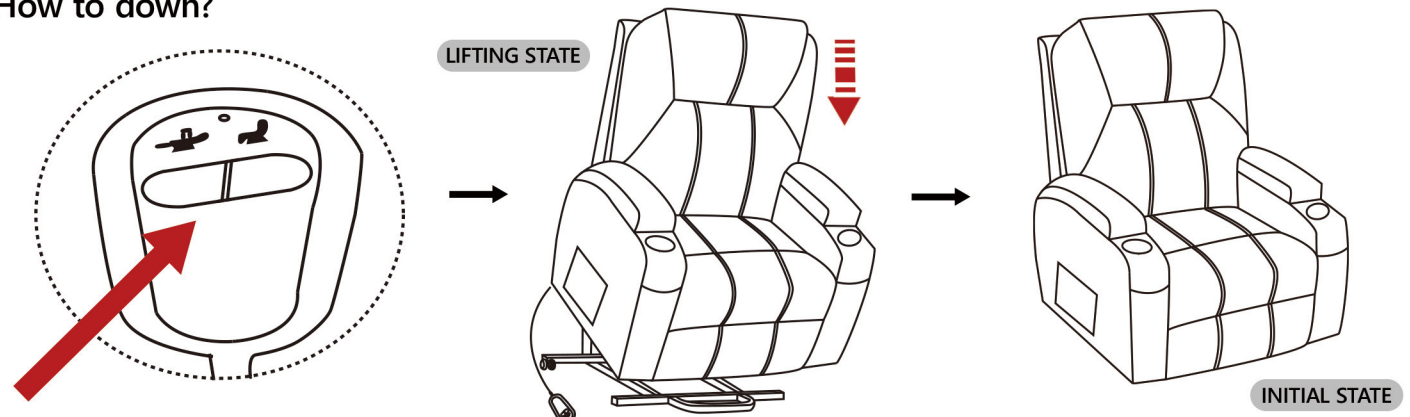

When the chair is in its lifting state, press and hold the lower button on the lift control to put the chair down.

HOW TO USE MESSAGE REMOTE CONTROL?

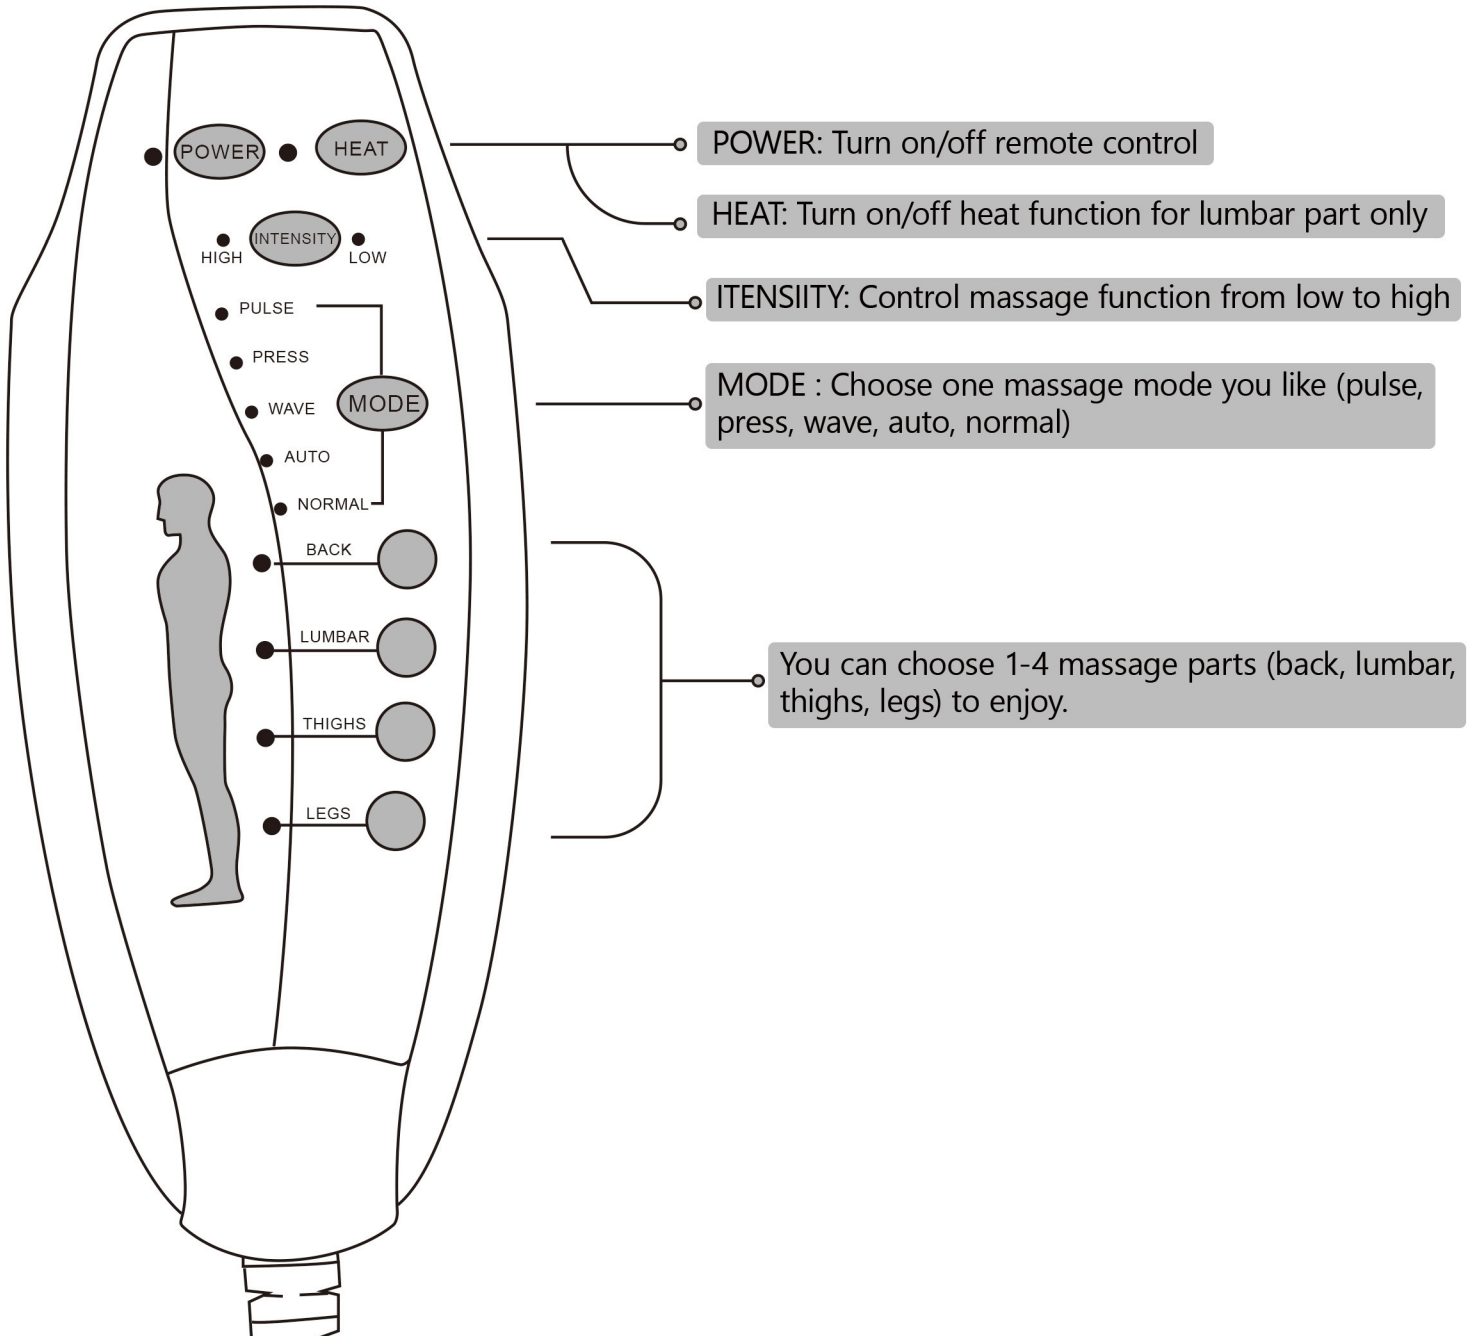



Chat Support



Product Consult



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY DETAILS

1. If you need to return and the reason for return is a result of an error by the Seller, please contact the after-sales team. Please include a brief description of the problem and photos of the damaged product in your email.
2. Please Note: If the customer does not contact the after-sales team to provide a return label, the customer purchases the return label by themselves, which may incur expensive return shipping charges.
3. If the product is damaged by the customer, we have reason to refuse to provide a prepaid return label, and the customer will need to pay for the return shipping.
4. Boxes for return shipping will not be provided by the seller and is the customer's responsibility to either use the original shipping boxes, or purchase new boxes if no boxes.
5. After all returned items arrive at Return Center, please contact the After-sales team and we will fully refund back to the original payment method.
6. If you have any ideas and questions, please feel free to contact us, we will provide you with a satisfactory solution.

NOTE:

Manufacturer and seller expressly disclaim any liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

