

DOUBLE CAMPING CHAIR WITH CANOPY

USE AND CARE GUIDE



CAMPING CHAIR ACCESSORIES



Camping Chair *1




Cooler Bag*2



Storage Bag*1

WARNING!!!

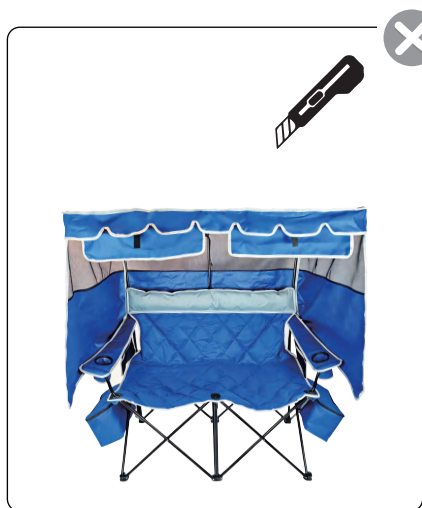

Do not scratch the camping chair with sharp objects.




Please keep away from fire.

STEPS FOR USAGE

STEP 1

Open the packaging box and take the camping chair out of the storage bag and untie the straps.

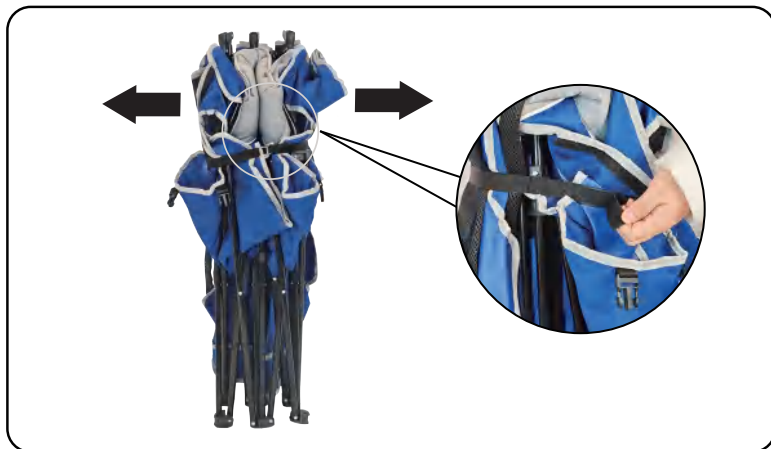

STEP 2

How to unfold the camping chair: Hold the back of the chair with one hand and use your other hand to push down on the armrests until the chair unfolds.



STEPS FOR USAGE

STEP 3

Flip the canopy to the top position to provide shade.



STEP 4

Unfasten the three canopy fastening buttons located at the bottom of the chair back.



STEPS FOR USAGE


STEP 5

Pull up the three canopy poles on the chair back, and press the three canopy fastening buttons to secure the canopy in place.



STEP 6

Fasten the internal buckles of the canopy and straighten the internal cross poles to prevent sagging.

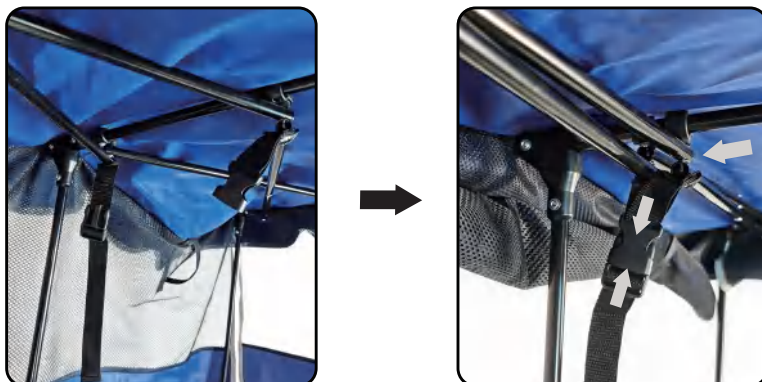

STEPS FOR USAGE

STEP 7

Lower the sunshade and fold up the camping chair.



STEP 8

Attach the side panels to the Velcro located under the armrests and the back panel to the Velcro on the chair back to prevent being blown away by the wind.



STEPS FOR USAGE

STEP 9


Install the attached Cooler Bag onto the chair.



STEPS FOR STORAGE

STEP 1


Roll up the side, back, and front panels of the awning and secure them with Velcro.

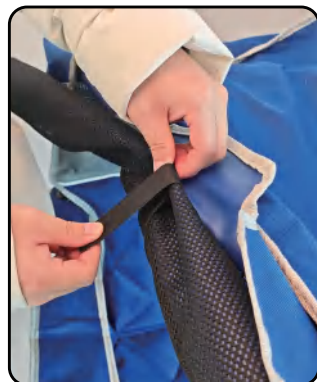

STEPS FOR STORAGE

STEP 2

Roll up the side, back, and front panels of the awning and secure them with Velcro.

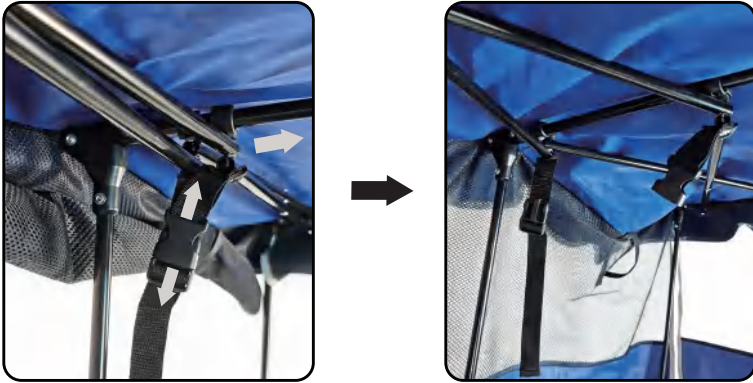

STEP 3

Unfasten the buttons securing the three canopy poles, lower the canopy, and return it to its original position.



STEPS FOR STORAGE

STEP 4

Flip the canopy down to the back of the chair.



STEP 5

Pull the chair inward to reduce it to its minimum size.



STEP 6

Secure the chair with Velcro straps, then place the folded chair into the storage bag.

