

FREESTANDING TV FLOOR STAND

HOW TO USE

Assembly parts in package


For setting standing column

Short screws × 2 (B)
Long screws × 2 (C)

Knob nut × 1
nut × 3

Anti-skid pad × 4
Screws × 3 (A)

Wrench × 2
Connecting pad × 1

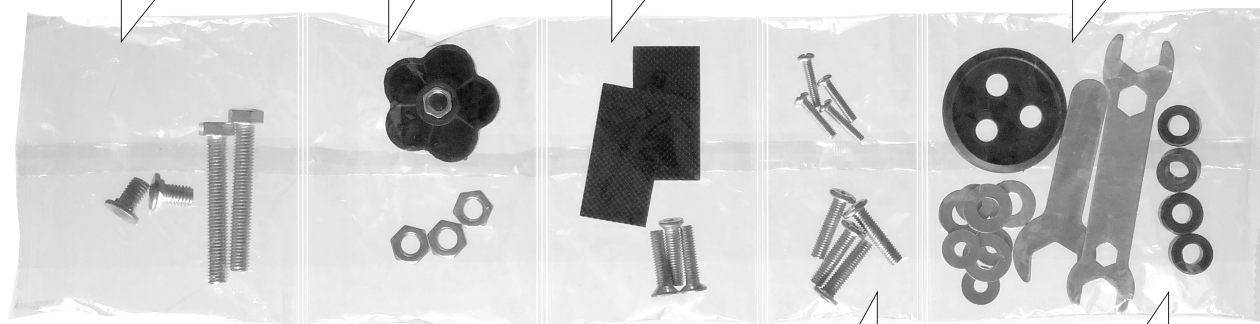

- ***1 We provide 2 types of screws for TV connection
Please check if they match your TV size or not.
- ***2 When it happens that they don't fit your TV,
purchase separately your right size screws
- ***3 When the screws are too long for TV mounting,
please use the spacer between TV and mounting plate
We provide 1 type of spacer.


Small screws × 4
***1
Large screw × 4
***1

Flat washer small × 4
Flat washer large × 4
Plastic spacer washer × 4
***2

For TV connecting

How to connect base and pole

Between pole and base, place the connecting pad
by precisely fitting each hole

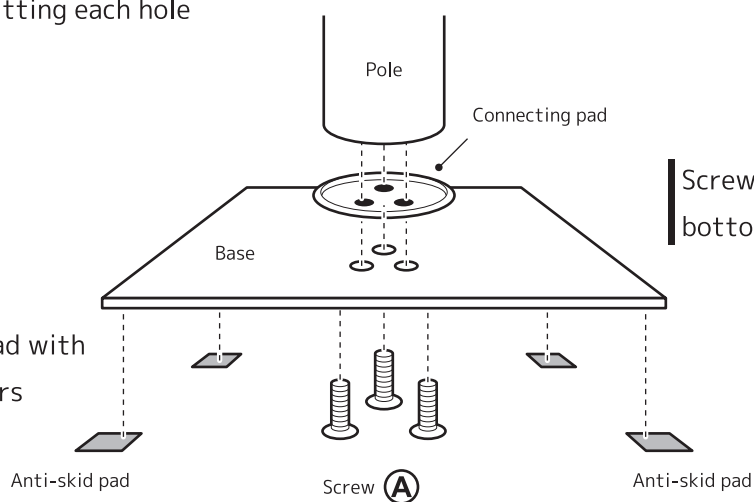


Put the anti-skid pad with
adhesive on 4 corners


Screw tightly from the
bottom of base

Mounting Plate & connection

Connect the mounting plate and plate connector with small screws **(B)** and nut

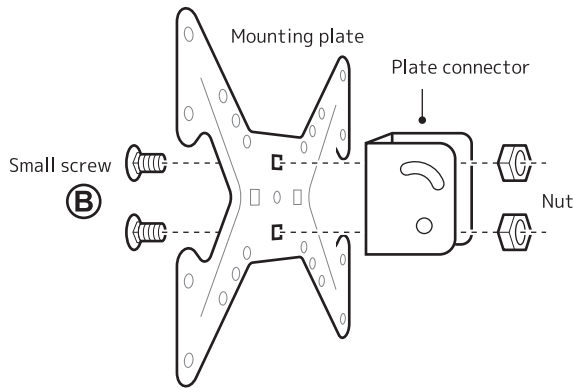


Fix the mounting plate on the backside of TV

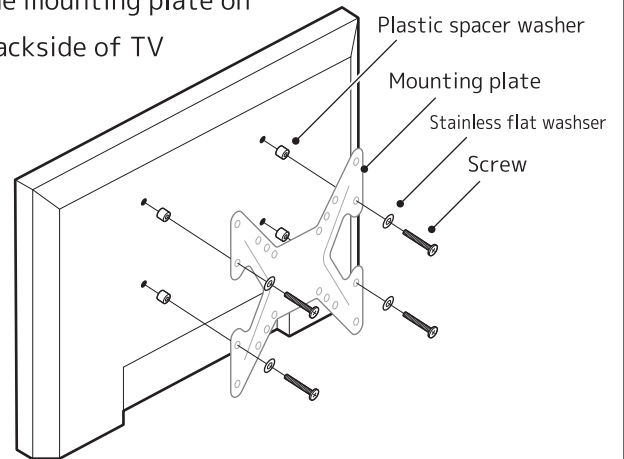


*Needed to select the right size of screws and washers between 2 sizes

Mounting plate and pole connector


Put the pole adapter on the pole edge and insert the plate connector by adjusting hole positions

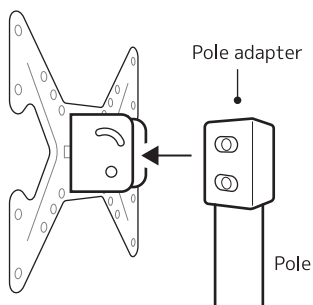

Fix the plate connector with 2 long screws and knob nut and nut

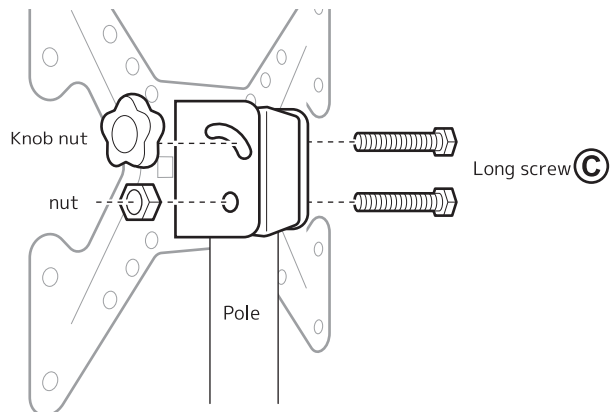

Pole adjustment

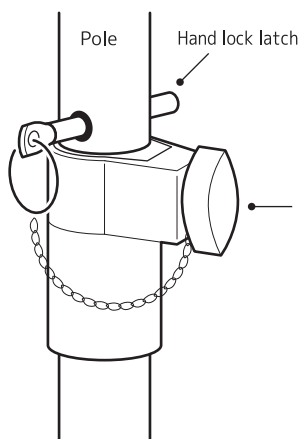

Adjustable height by changing position s of hand lock latch with adjustable knob loosened

Swivel at 360 degrees by turning adjustable knob

Adjustment in 3 parts

