

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

MOUNTING THE FIXTURE (Fig.2)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware
2. Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to misplace any small parts necessary for installation.
3. Attach the mounting plate (C) to the junction box using the mounting screws (B). The side of the mounting plate marked "GND" must face out.

FIXTURE INSTALLATION (Fig.1, Fig.2)

4. Secure the stem (I) onto the socket (J). Fasten it using the Allen screw (P) and the Allen wrench (O).
5. Adjust the fixture cable length by loosening the cable-gripper (H) and the lock washer (E), pulling the wire as desired, then secure it tightly using the cable-gripper (H). Notes: a. Retract the wires close to the desired length to within the canopy before securing the fixture in place, using the cable-gripper to adjust more than 18" of cable length is not recommended. b. Shortening the cable without professional help or electronic background is not advisable.

CONNECTION THE WIRES (Fig. 3)

6. At this point, connect the electrical wires as shown in Fig. 2, making sure that all wire connectors (A) are secured. If your outlet box has a ground wire (green or bare copper), connect the fixtures ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (C) using the green screw provided. After the wires are connected, tuck them carefully inside the junction box.

FINISHING THE INSTALLATION (Fig.1, Fig.2)

7. Place the canopy (F) over the mounting plate (C), and secure it with nuts (G).
8. Put the glass shade (K) onto the socket (J). Secure it using the spacer (L) and the ring (M).
9. Install one Med. base (E26) bulb (N) up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Care & Cleaning Instructions

ALWAYS turn off and/or unplug fixtures prior to cleaning.

Finishes: To avoid damage to the finish do not use polish, abrasive cleaners, or harsh chemicals.

Shade: Shades can be gently dusted with a dry, clean, soft-bristle brush. Remember to clean the inside of shade as well.

Using any advised against cleaning methods will void the product's warranty.

Fig.1

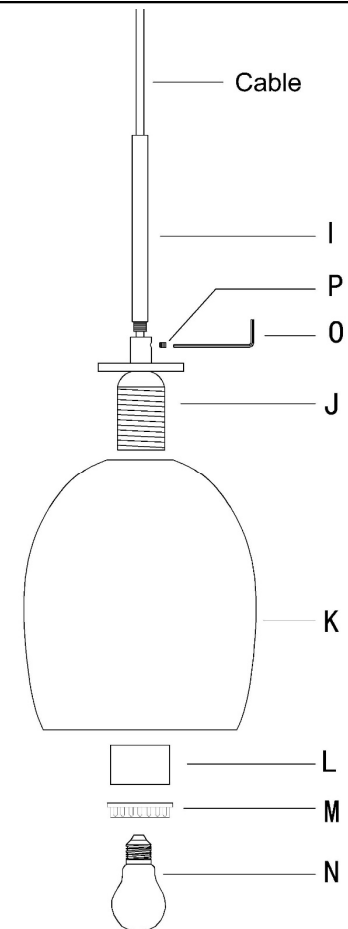


Fig.2

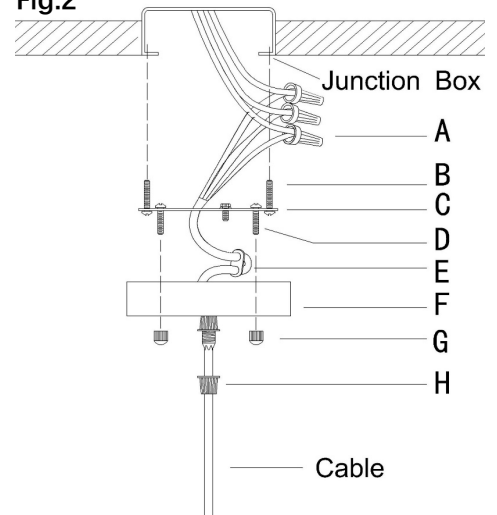


Fig.3

