


Furniture of America[®]

Assembly Instructions

WI4363S

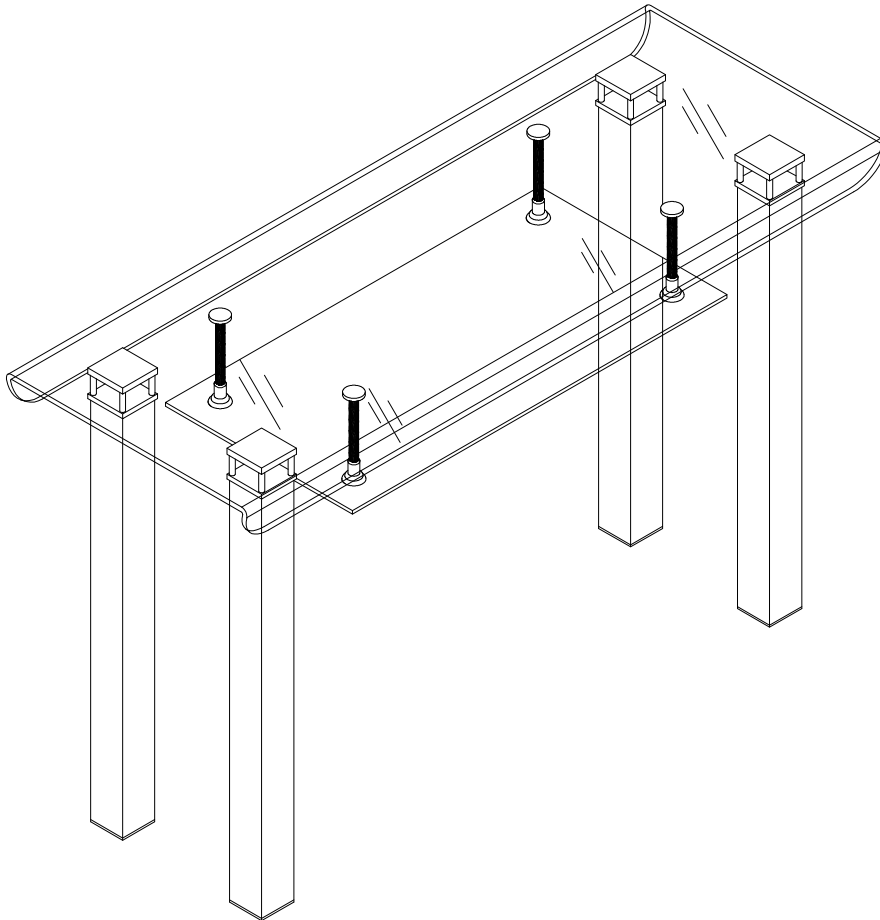


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


Tools Required For Assembly:

Hex Wrench

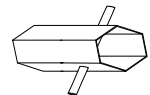


(Included)

Wrench

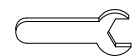


(Included)

EASY

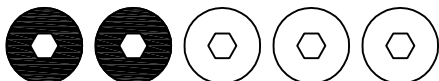

DIFFICULT

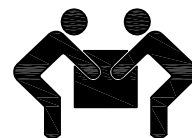

2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES




When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

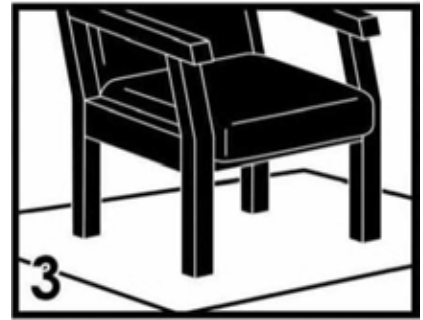


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

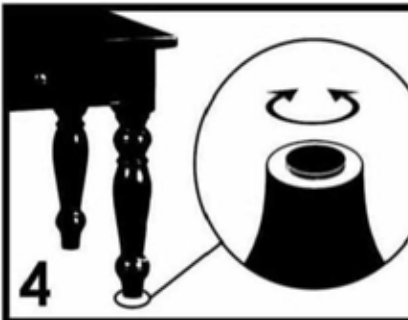

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

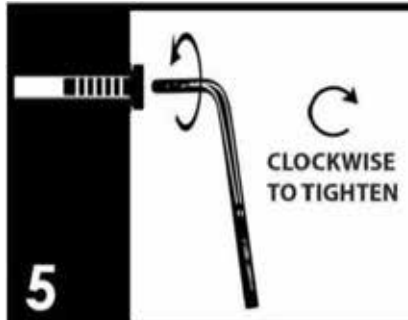


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

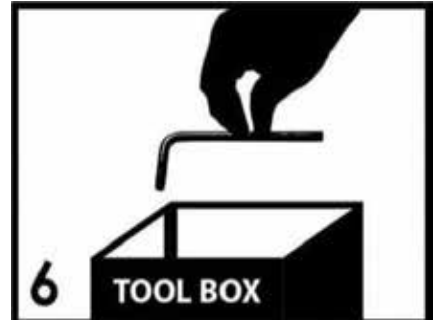

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

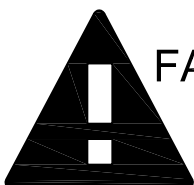


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List

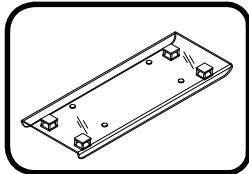


#1 x 1pc
Glass Top

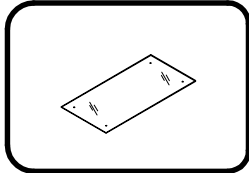


#2 x 1pc
Shelf

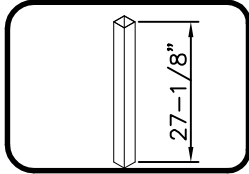

#3 x 4pcs
Leg

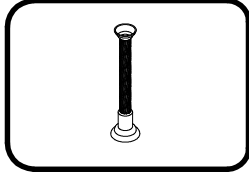


#4 x 4pcs
Connector

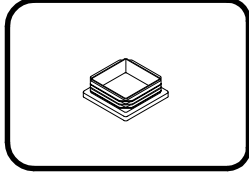


#5 x 4pcs
Cap


Hardware List

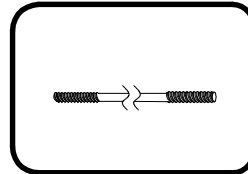


#A x 4pcs
ROD 5/16"X6-1/4"

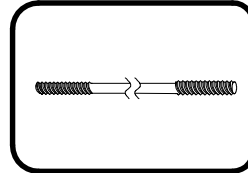


#B x 4pcs
ROD 3/8"X27"

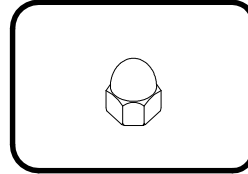


#C x 4pcs
CAP NUT M8

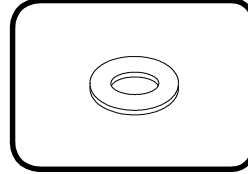


#D x 8pcs
Metal Washer

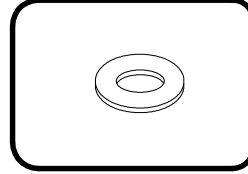


#E x 8pcs
Plastic Washer

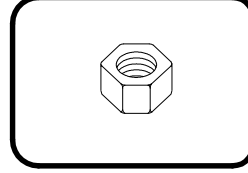

#F x 4pcs
NUT M10

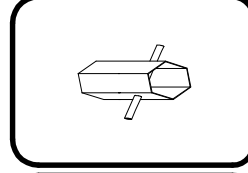

#G x 1pc
Hex Wrench M10

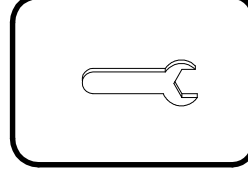


#H x 1pc
Wrench




#1

1) Insert rod (#B) to each corner of the top panel (#1).


1-1

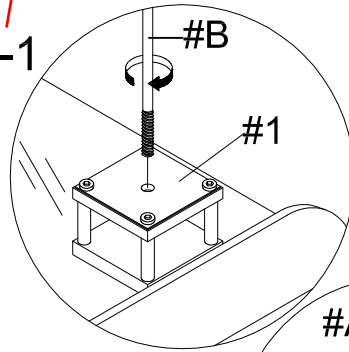

1-2

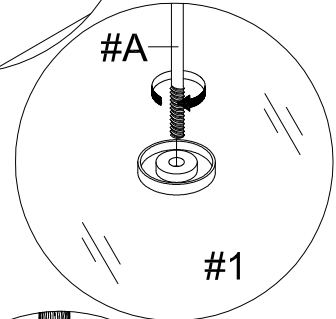


1-3

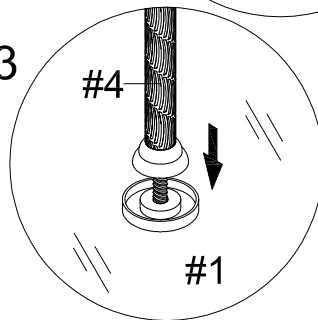

2) Insert rod (#A) to each holes of the top panel (#1).

#A x 4pcs
#B x 4pcs

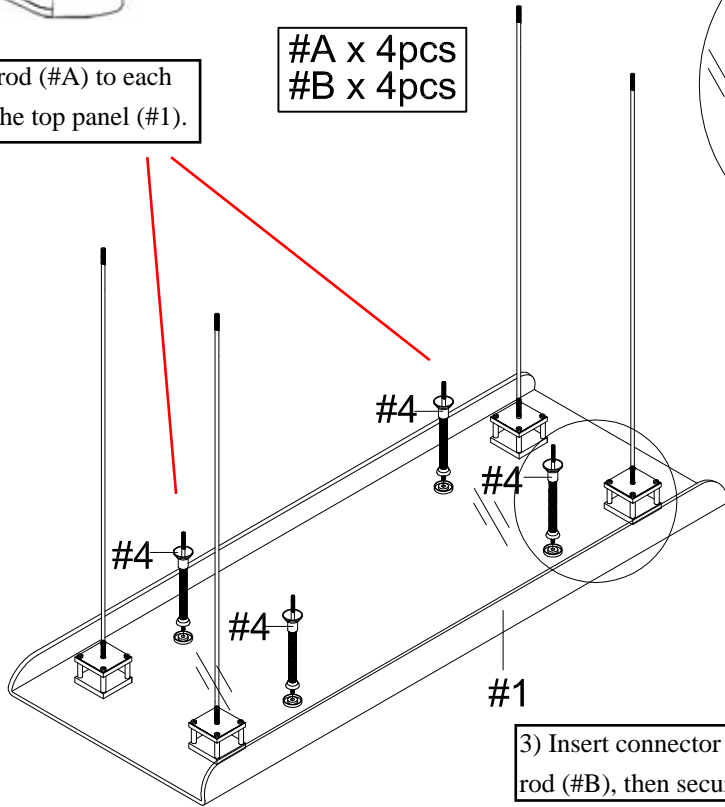

3) Insert connector onto rod (#B), then secure.




#2



1) Align the shelf (#2) to the connectors (#4), then insert 2 plastic washer (#E) and a metal washer (#D) to each connectors (#4). Secure with cap nut (#C).

#C x 4pcs
#D x 4pcs
#E x 8pcs

2-1

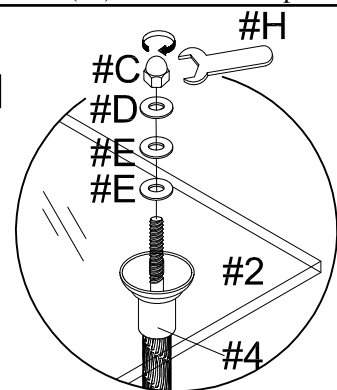


2-2

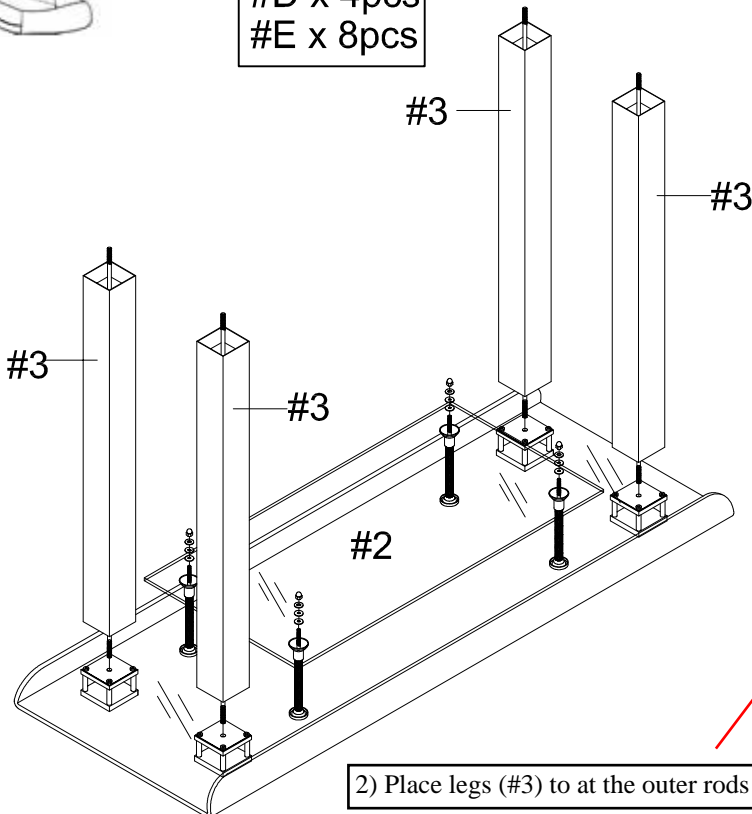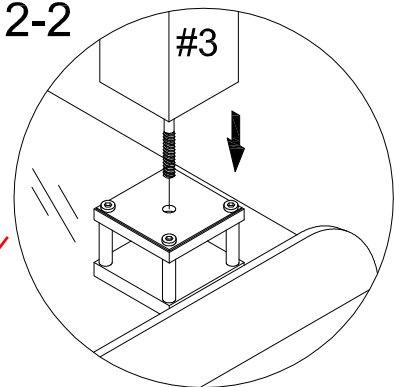


2) Place legs (#3) to at the outer rods of the top panel (#1).




1) Insert metal washer (#D) to the rod in the leg (#3), then secure with nut (#F) by using a hex wrench (#G).

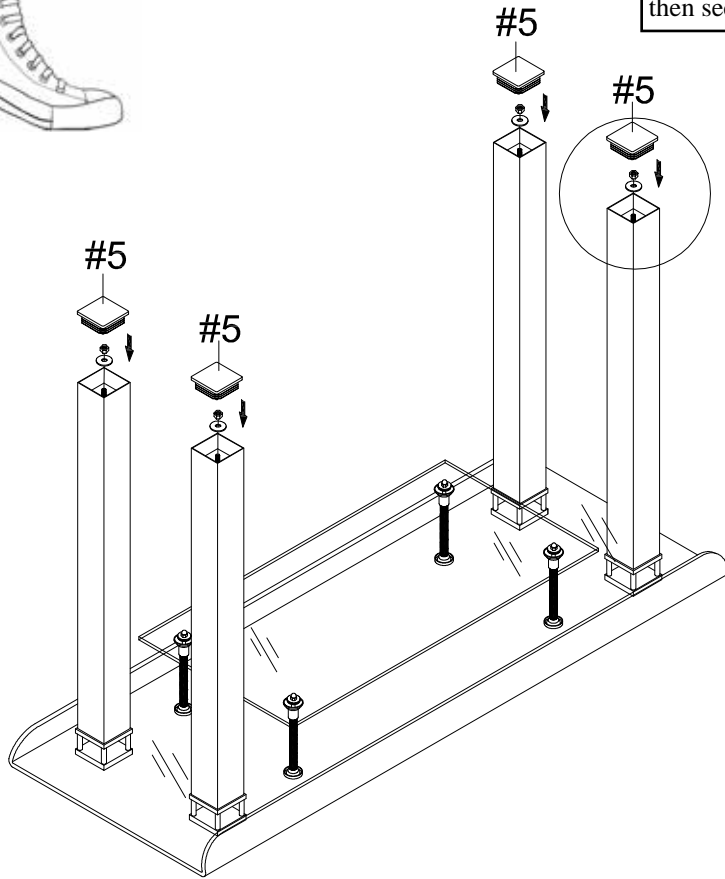

3-1

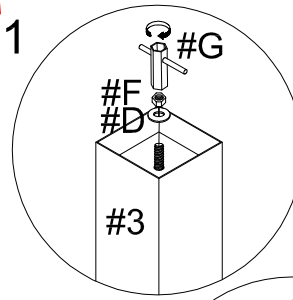

3-2

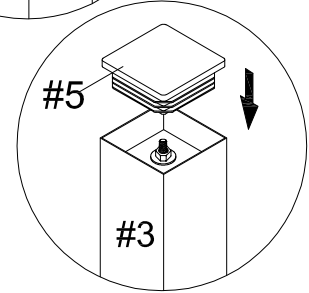

#D x 4pcs
#F x 4pcs

2) Place cap (#5) on the leg (#3)



Make sure everything is firm and sturdy

