


DOUBLE SHOT® ARCADE BASKETBALL SYSTEM

MODEL 90648

BEFORE ASSEMBLY:

- At least 2 people recommended for setup
- Assemble on a level surface

ASSEMBLY INSTRUCTIONS

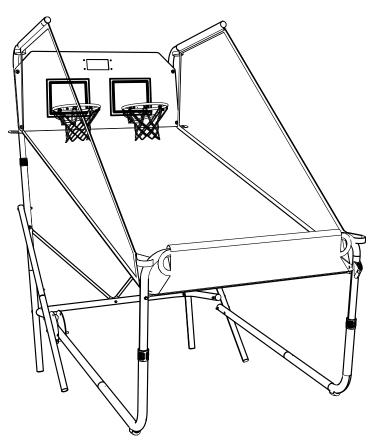



CAUTION – ELECTRICALLY OPERATED PRODUCT – Not recommended for Children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

THIS PRODUCT IS INTENDED FOR INDOOR USE ONLY.



Small parts, sharp edges and points may be present during assembly.

TOOLS REQUIRED





ICON LEGEND / LÉGENDE DES ICÔNES / LEYENDA DE ÍCONOS



- Indicates special heed should be taken when reading.
- Indique qu'une attention spéciale doit être portée à la lecture.
- Indica que uno debe prestar atención al leer.



- Indicates the parts (or no parts) required for a section.
- Indique les pièces (ou aucune pièce) à utiliser pour une section.
- Indica las piezas (o ninguna pieza) que se usarán en una sección.



 
- Indicates the hardware (no new hardware) required for a specific page or section.
- Indique la quincaillerie (ou aucune nouvelle quincaillerie) n'est requis pour une page précise.
 - Indica el herraje (que no se necesita nuevo herraje) para una página específica.



- Indicates the tools (or no tools) to be used for a section.
- Indique les outils (ou aucun outil) à utiliser pour une section.
- Indica las herramientas (o ninguna herramienta) que se utilizarán para una sección.



- Indicates to use/not use an electric drill for a specific step.
- Indique quand utiliser une/que ne pas utiliser de perceuse électrique pour une étape précise.
- Indica la utilización de/que no utilizar un taladro eléctrico para un paso específico.



- Indique le nombre d'adultes requis pour effectuer une étape spécifique, p. ex., 2, 3, 4, etc. Il est possible de réaliser certaines étapes seul mais, pour des raisons de sécurité, il est préférible d'être au moins deux adultes. Et... c'est toujours plus facile avec un assistant ou deux.
- Indica el número de adultos requeridos para realizar un paso específico, p.ej., 2, 3, 4, etc. Es posible realizar unos pasos solo mas, por razones de seguridad, es mejor tener dos adultos o más. Y... siempre es más fácil con un ayudante o dos.

- Indicates to repeat a step or an action.
- Indique de répéter une étape ou une action.
- Indica repetir un paso o una acción.



- Indicates the use of a centerlock nut. A nut with this marking will require some effort to tighten. This hardware was designed with this feature in order to prevent loosening later.
- Cette image indique l'usage d'un écrou de blocage central. Un écrou avec ce marquage requerra plus d'effort pour le serrer. Cet écrou a été conçu avec cette fonction afin d'empêcher son desserrage plus tard.
- Indica el uso de una tuerca de bloque central. Una tuerca con esta marca requerirá un poco de esfuerzo para apretarlo. Esta tuerca fue diseñada con esta característica con el fin de evitar su aflojamiento más tarde.

'5#@*%!'

- Indicates a specific step is harder to perform.
- Indique qu'une étape spécifique est plus difficile à exécuter.
- Indica que un paso específico es más difícil de realizar.
- Indicates that one should only hand-tighten the hardware until instructed otherwise.
- Indique qu'il ne faut serrer la quincaillerie qu'à la main jusqu'à ce que l'on reçoive des instructions contraires.
- Indica que sólo se debe apretar a mano el herraje hasta que indique lo contrario.

WARNINGS & NOTICES



SAFETY INSTRUCTIONS



Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this product without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. <u>Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document.</u> Proper and complete assembly, use and supervision are essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this product is not installed, maintained, and operated properly.

- If using a ladder during assembly, use extreme caution.
- Two capable adults are recommended for this operation.
- Assemble the pole sections properly. Failure to do so could cause the pole sections to separate during play or transport.
- The power adaptor should be periodically examined for potential hazards.
- Any potentially hazardous parts must be repaired or replaced immediately.
- Do not allow the system or any of the components to get wet. Keep the system in a climate-controlled low-humidity environment.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.


ELECTRICAL RATING 5.9V — Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

A CAUTION – UPRIGHT STORAGE OF THE PRODUCT:


When storing the Double Shot Arcade Basketball System in the upright position, make sure the back of the backboard is up against a wall or other reasonable support to prevent the system from falling over, which could result in personal injury or property damage. FRAME ASSEMBLY



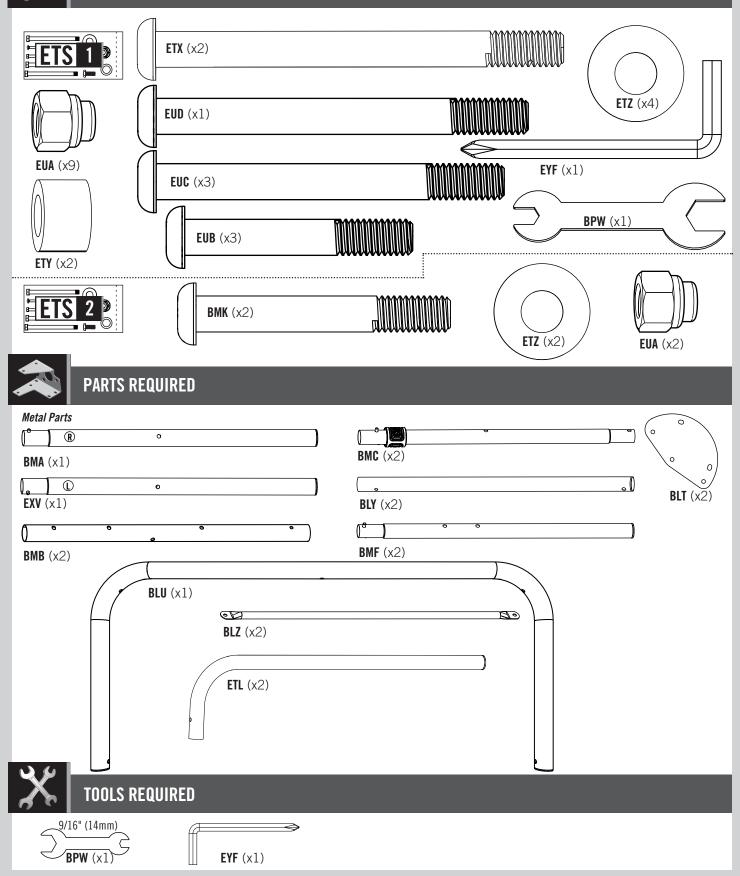


► SECTION 1 (CONTINUED)

TOOLS AND HARDWARE REQUIRED

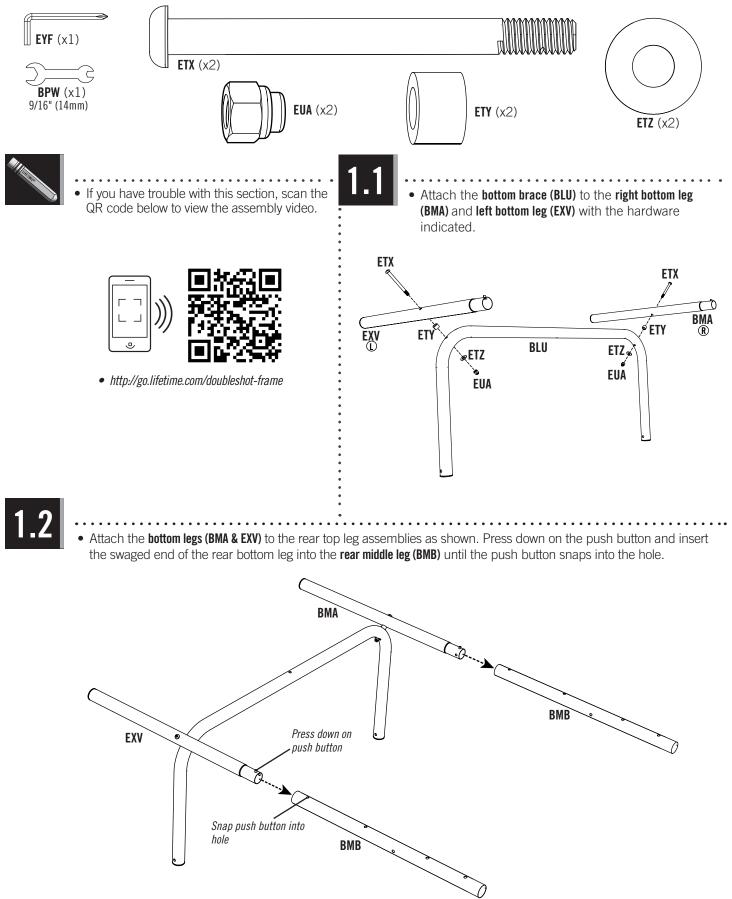


SECTION 1 (CONTINUED)

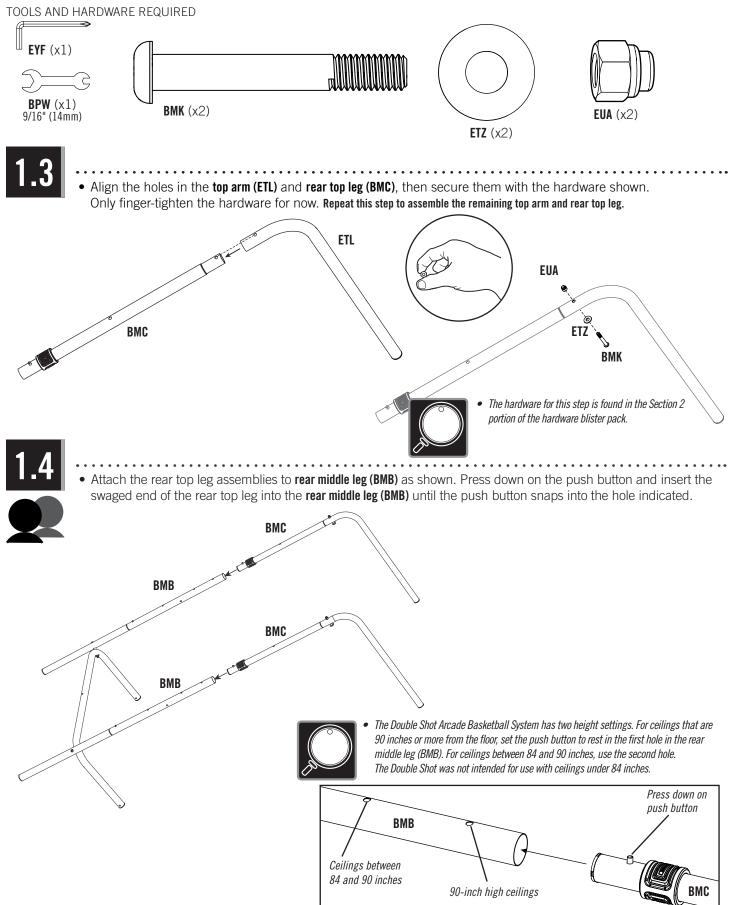


SECTION 1 (CONTINUED)

TOOLS AND HARDWARE REQUIRED

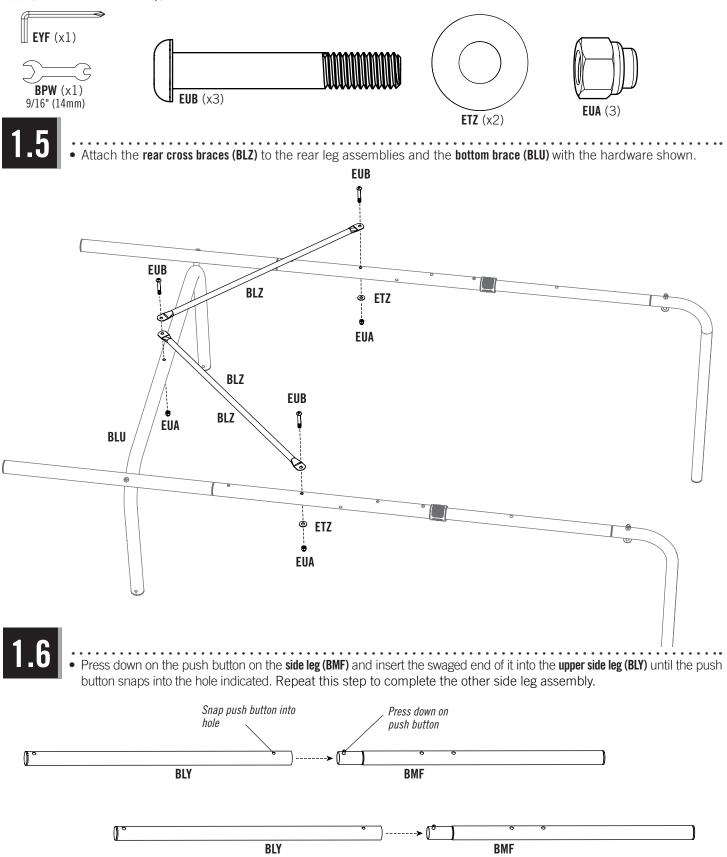

► SECTION 1 (CONTINUED)

TOOLS AND HARDWARE REQUIRED

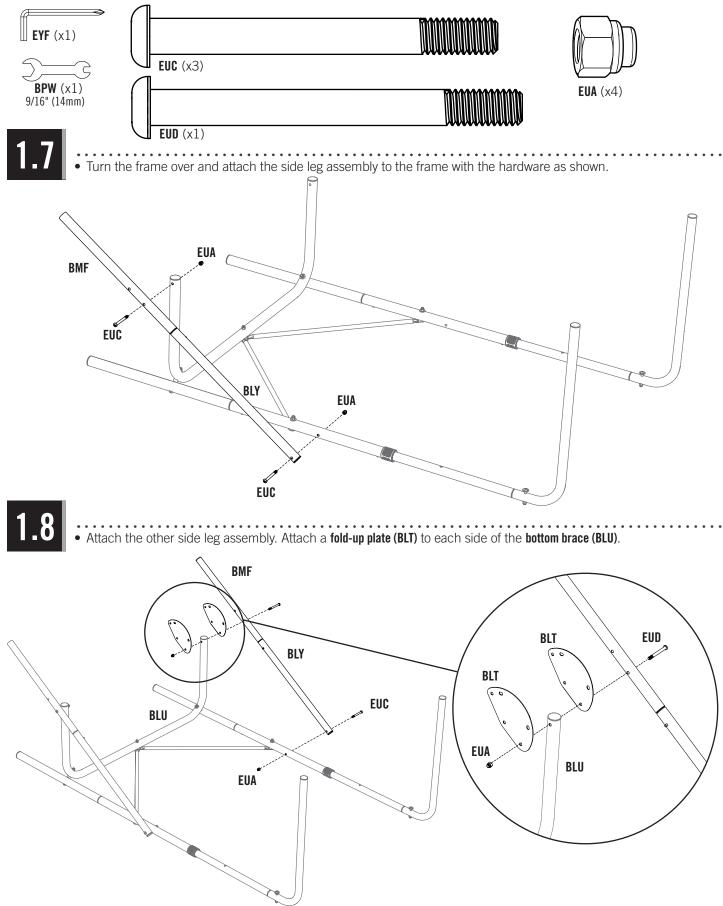


2

BACKBOARD TO RIM ASSEMBLY



HARDWARE REQUIRED

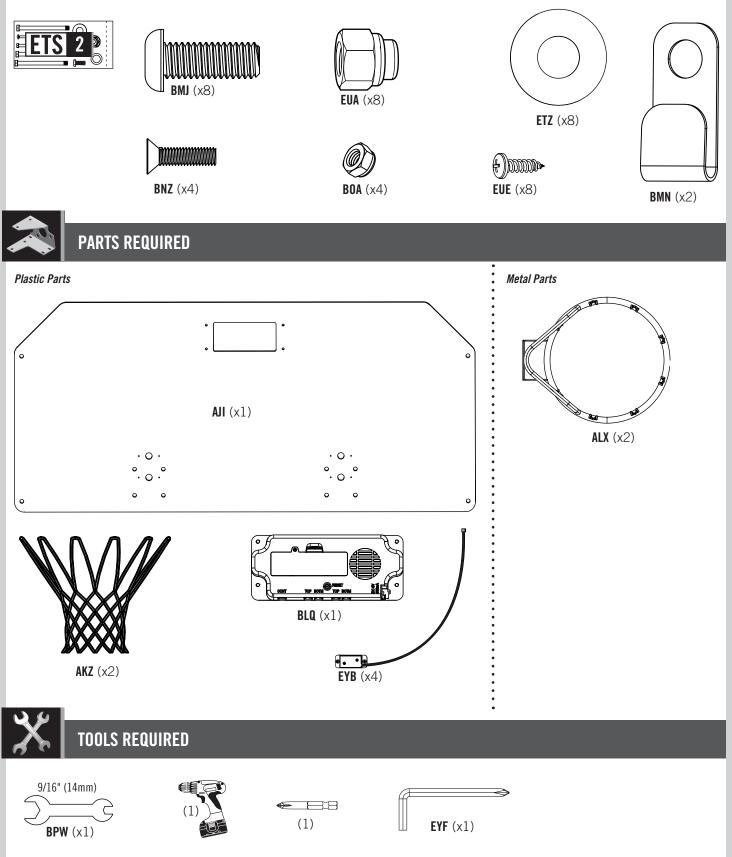

SECTION 2 (CONTINUED)

TOOLS AND HARDWARE REQUIRED






• If you have trouble with this section, scan the code below to view a video on on its assembly.



• http://go.lifetime.com/doubleshot-backboard





• Remove and discard the plastic shield from the **electronic scoreboard (BLQ)**, and snap the four **sensors (EYB)** into place as shown.

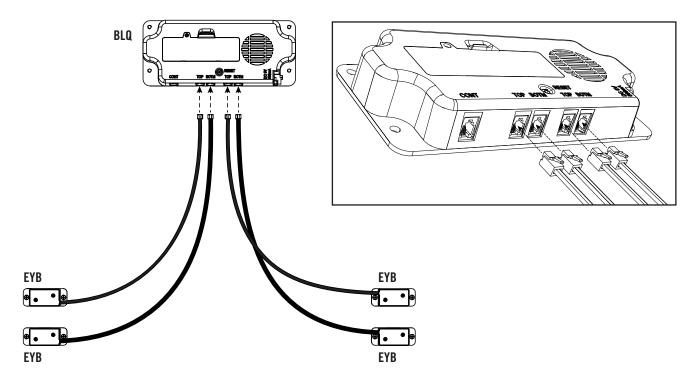

► SECTION 2 (CONTINUED)

TOOLS AND HARDWARE REQUIRED

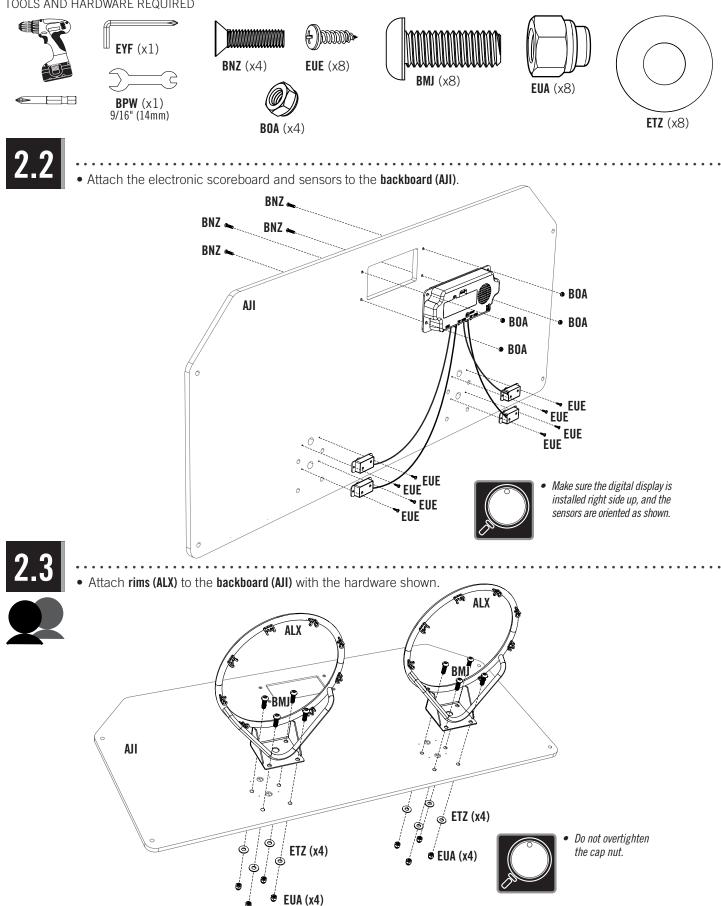

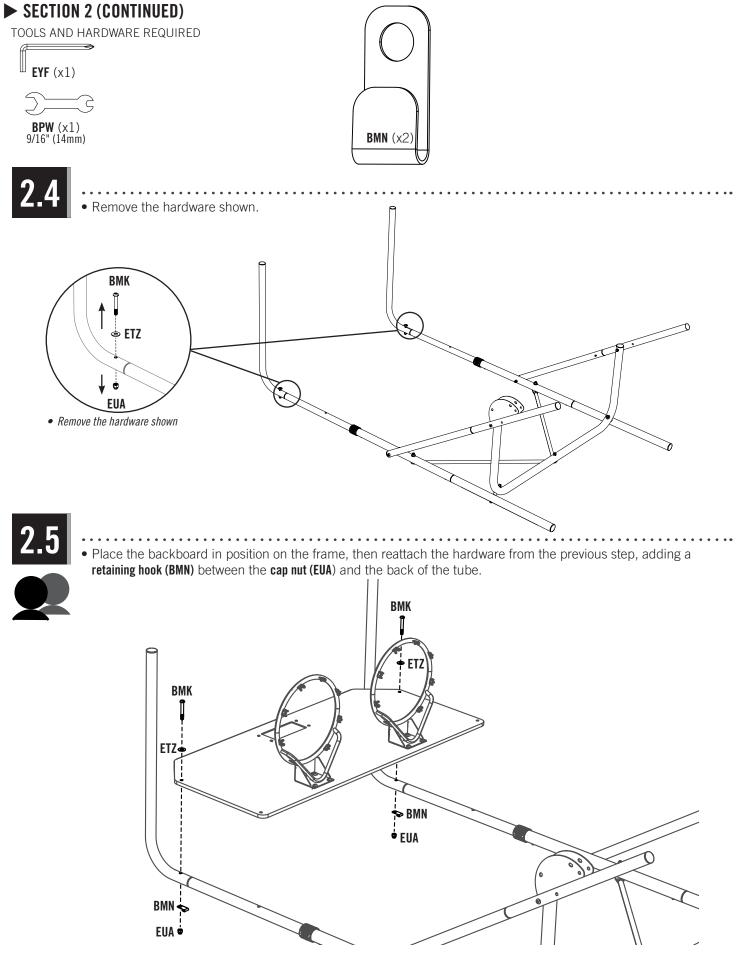









• Attach the **nets (AKZ)** to the rims.

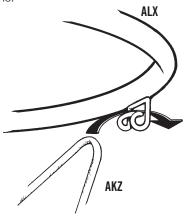



• With the help of another adult, rotate the rear frame assembly upright as shown.

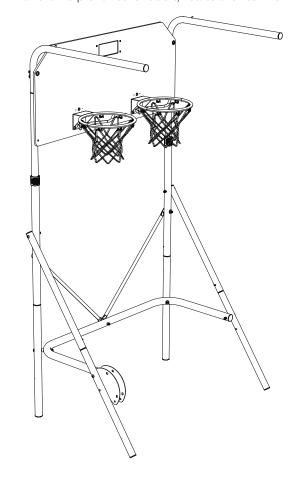


The Double Shot Arcade Basketball System has two height settings. Make sure the frame has been adjusted to the proper height setting for your ceiling. See Step 1.4 for more details. 3

RAMP ASSEMBLY



HARDWARE REQUIRED

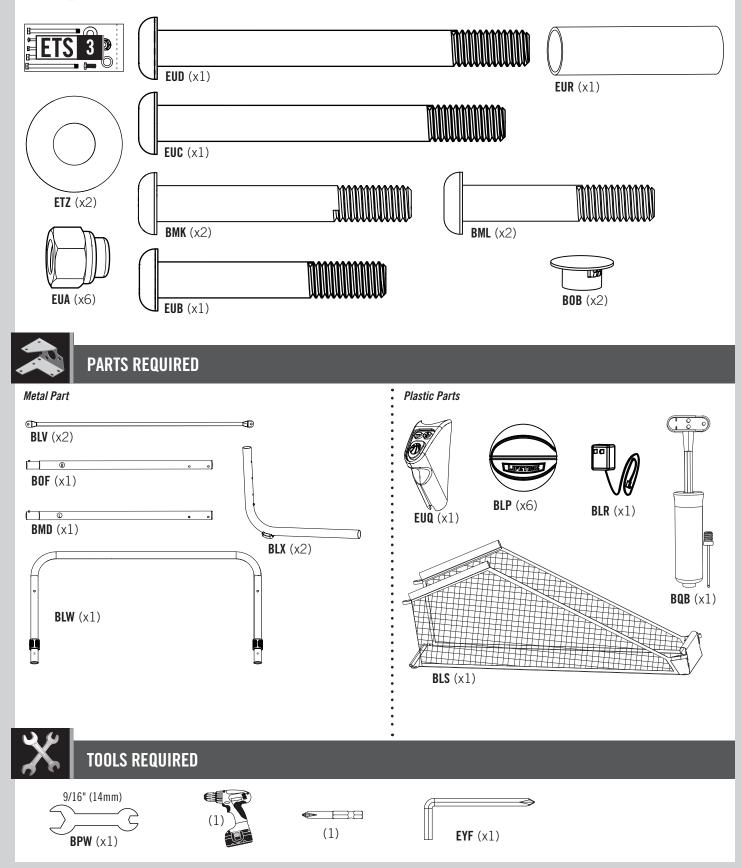


This page intentionally left blank

Detach this yellow section to reference during assembly




PARTS IDENTIFIER


Metal Parts

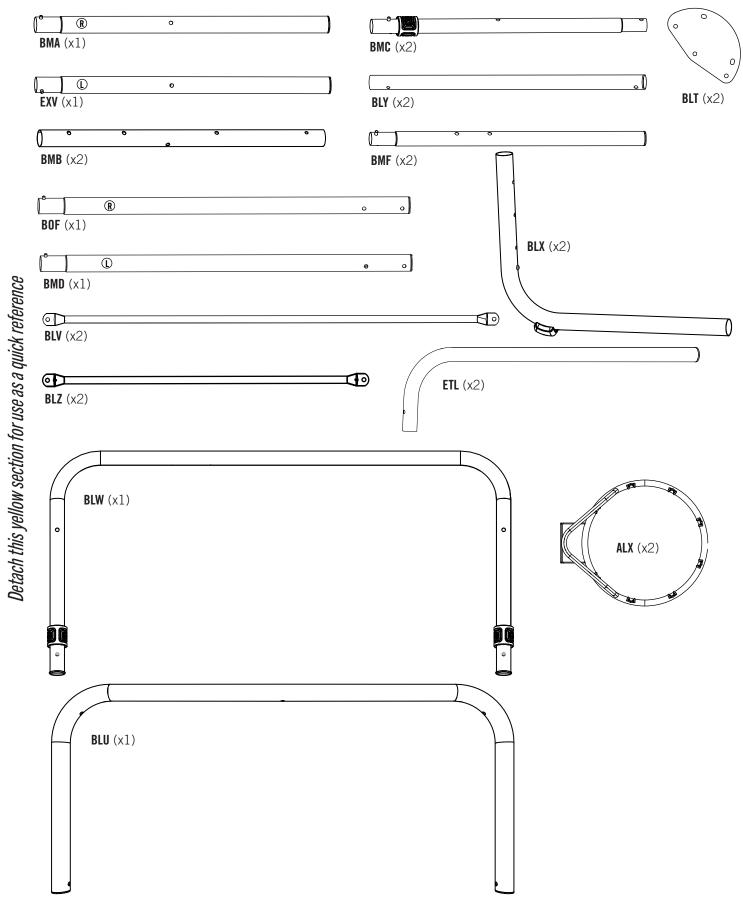



PARTS IDENTIFIER

 Plastic Parts

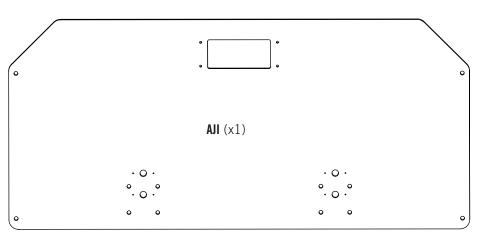

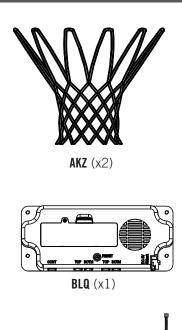

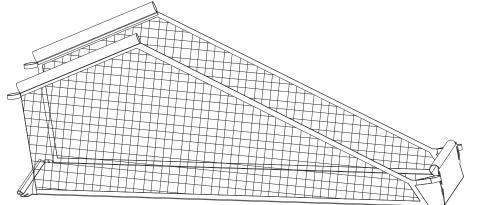















HARDWARE REQUIRED



This page intentionally left blank

Detach this yellow section to reference during assembly

SECTION 3 (CONTINUED)

TOOLS AND HARDWARE REQUIRED






• If you have trouble with this section, scan the code below to view a video on on its assembly.



• http://go.lifetime.com/doubleshot-ramp




• Slide the **lean bar (BLW)** through the sleeve of the **ball return ramp (BLS)** with the the push buttons on the lean bar facing the canvas ramp as shown.

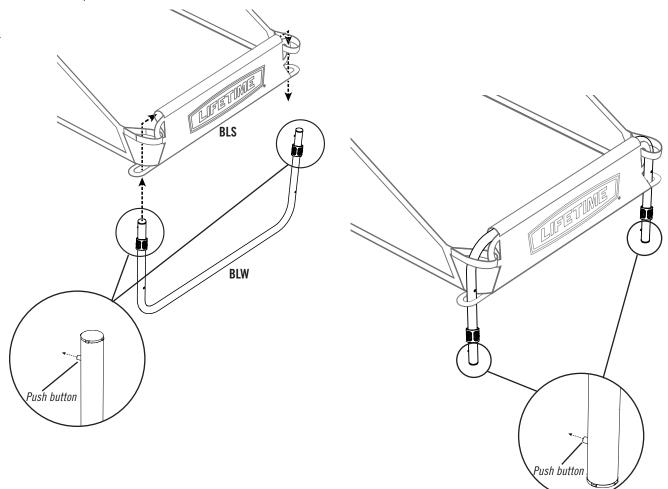


► SECTION 3 (CONTINUED) TOOLS AND HARDWARE REQUIRED Insert the side rail with push button (BMD) and side rail without push button (BOF) into the front legs (BLX) until the push buttons snap into the holes indicated. Double-headed Push Button BMD BOF BLX No Push Button BLX Press down on push button Press down on push button Snap push button into hole Snap push button into hole • Press down on the push buttons on the front leg assemblies and insert the swaged ends of the front leg assemblies into the lean bar (BLW) until the push buttons snap into the holes indicated. Clip the straps together through the loops on both sides of the ball return ramp near the sleeve. Press down on push button LIFETIM Snap push button into hole. BLX BOF BLX BMD Double-headed push button Attach the Front Leg Assembly that has a double-headed push button on BLX the left side of the system as shown.

► SECTION 3 (CONTINUED)

TOOLS AND HARDWARE REQUIRED

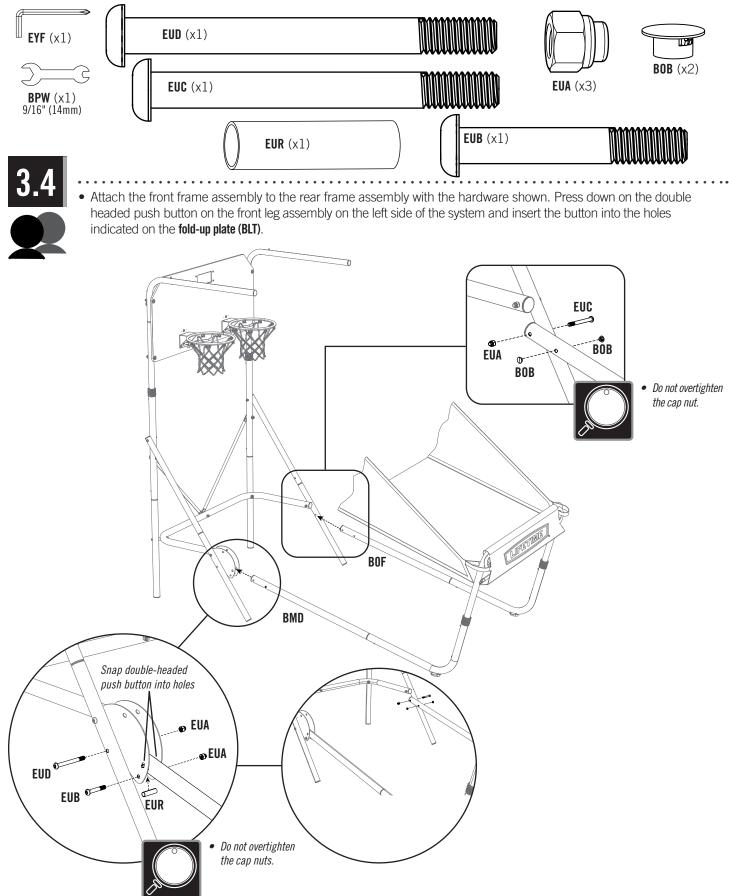

► SECTION 3 (CONTINUED)

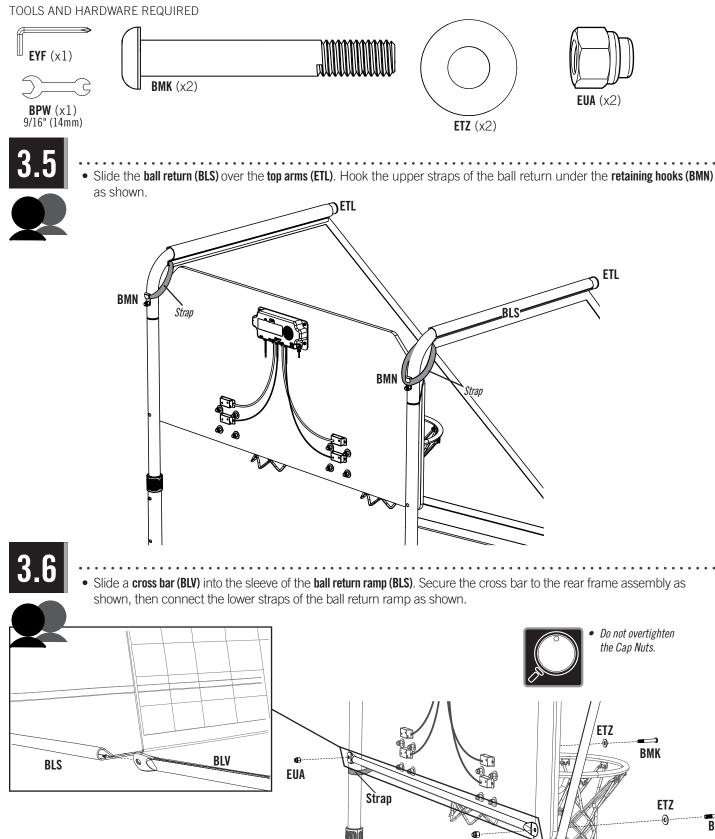


EUA

Strap


BMK

SECTION 3 (CONTINUED)

TOOLS AND HARDWARE REQUIRED

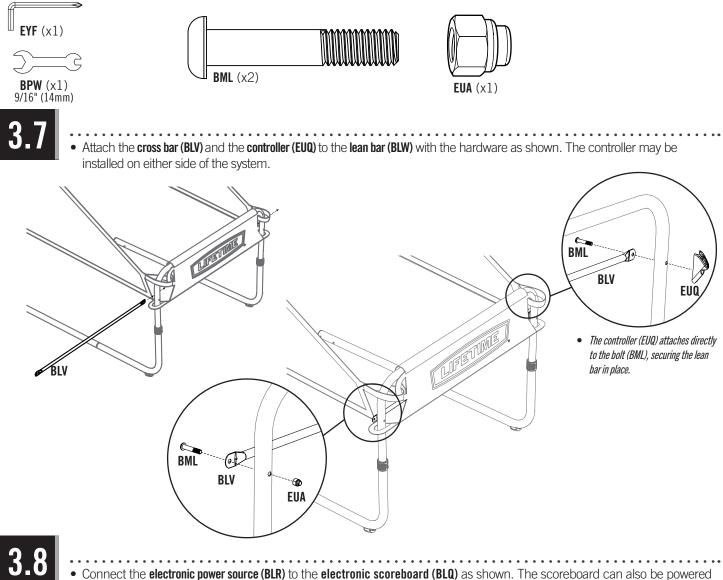

• Connect the **electronic power source (BLR)** to the **electronic scoreboard (BLQ)** as shown. The scoreboard can also be powered by four AA batteries (not included).

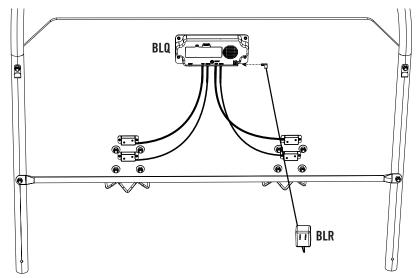


SECTION 3 (CONTINUED)

TOOLS AND HARDWARE REQUIRED



3.9


• Run the cord for the **controller (EUQ)** through the loops on the side of the ramp. Plug the end of the cord into the remaining input in the scoreboard.

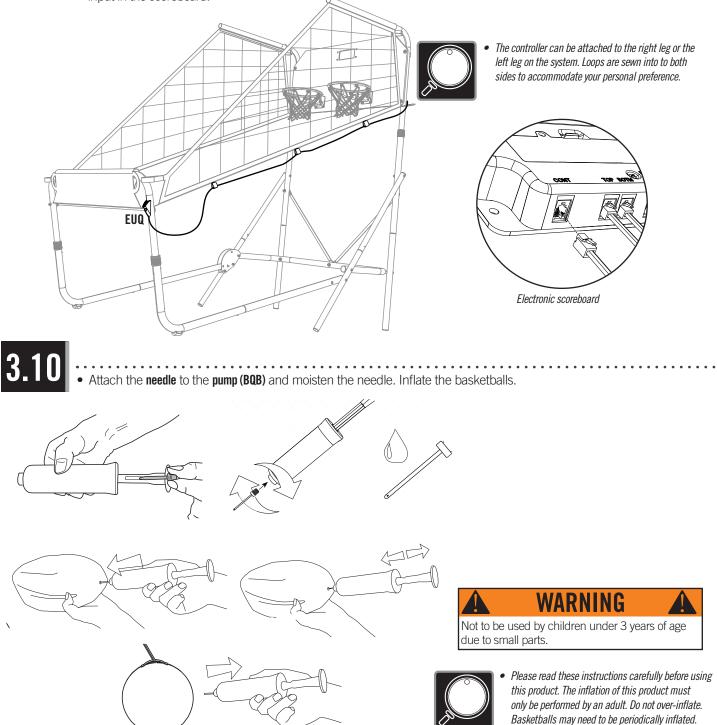



ADJUSTING THE SYSTEM

• The Double Shot Arcade Basketball System can be adjusted to accommodate lower ceilings and younger players. To adjust the system, locate the push buttons shown below. Press the push buttons and slide the tubes to the desired height.

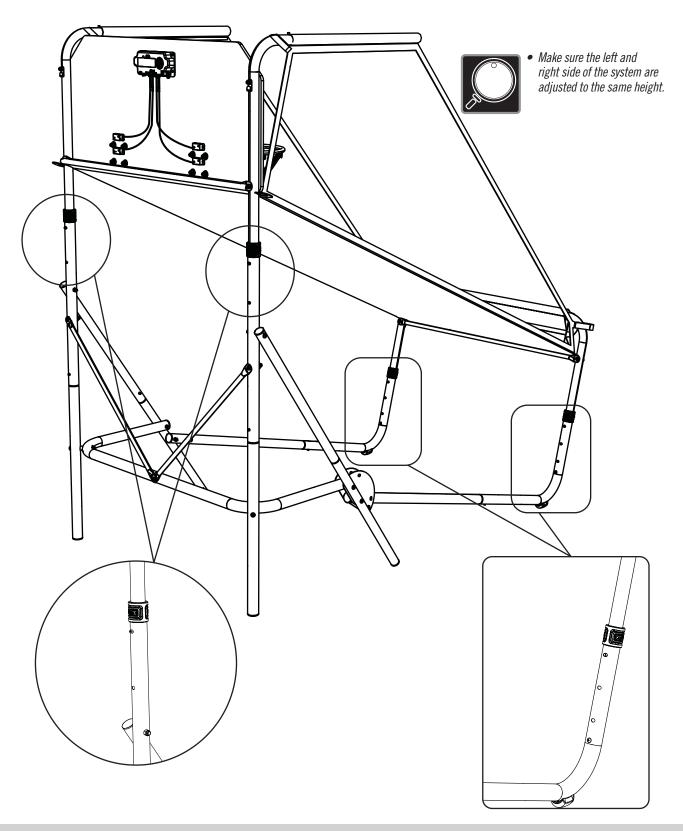



MAINTENANCE

The life of your basketball system depends on many variables. This system is intended for indoor use only. The climate, exposure to corrosives such as salt, pesticides, or herbicides, and excessive use or misuse can all contribute to failure of the electronics, metal tubes and plastic components, which may cause property damage or personal injury.

Check your basketball system frequently for loose hardware, excessive wear, and signs of corrosion. For safety reasons, and to prolong the life of your basketball system, you must take the following preventive measures:

- A. Check all nuts and bolts. If any are loose, tighten them.
- B. Check all parts for excessive wear and tear. If necessary, replace any parts that have been worn or damaged through usage. Contact our customer service department for replacement parts.
- C. Inspect the warning stickers on the system. If they are ripped, faded, or illegible, call our customer service department to request a replacement sticker.
- D. Check all pole sections for visible rust or chipped or cracked paint. If either are present, do the following:
 - 1. Use an emery cloth to completely remove any rust or chipped paint.
 - 2. Clean the area with a damp cloth and allow it to dry.
 - 3. Apply two coats of a rust preventative, high gloss enamel paint to the area. Allow the paint to dry between coats.

IF RUST HAS PENETRATED THROUGH THE POLES ANYWHERE, REPLACE IT IMMEDIATELY!



REGISTER YOUR PRODUCT ONLINE AT WWW.LIFETIME.COM

At Lifetime[®], we are committed to providing innovative and quality products. While registering, you will have the opportunity to give us your feedback. Your input is valuable to us.

- You can also opt in to receive new product notifications or promotions.
- In the unlikely event of a product recall or safety modification, your registration provides the information we need to notify you directly.
- Registration is fast, easy, and completely voluntary.

LIFETIME'S PROMISE TO YOU:

Maintaining your privacy is our long-standing policy at Lifetime[®]. And you can rest assured that Lifetime[®] will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!



• If a Warning Label or Sticker is illegible, destroyed or removed, contact Customer Service for a replacement.



• Do not climb on the structure of the Double Shot system.

• Ne pas monter sur le structure du

système Double Shot.


- No subir en el sistema Double Shot 1173076
- The Warning Sticker is located on the Ball Return Ramp at the front of the system.



• The Pinch Warning stickers are located on the Fold-up Plates on the left side of the system near the bottom.



• The System Fold-Up Warning sticker is located on the Side Rail with Push Button on the left side of the system near the bottom.

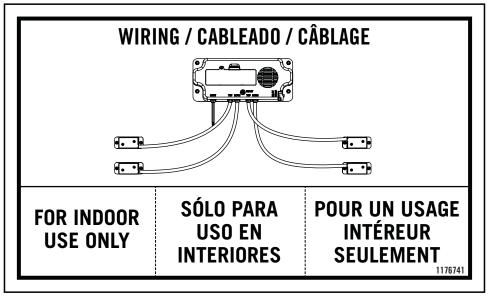

• The Wiring Configuration Sticker is located on the back of the Backboard.









90-DAY LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of ninety days from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.

2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory or distribution center are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the basketball system or its components are not covered under this warranty.

3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the rim will void this warranty.

4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.

5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.

6. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

7. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PLEASE INCLUDE YOUR DATED SALES RECEIPT AND PHOTOGRAPHS OF DAMAGED PARTS.

REPORT PRODUCT DEFECTS IN WRITING TO: Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or call 1-800-225-3865 M-F 7 a.m. to 5 p.m. MST.

REGISTER YOUR PRODUCT FOR QUICKER CUSTOMER SERVICE.

Visit www.lifetime.com or call 1-800-225-3865 to register your product today.

FOR INTERNATIONAL WARRANTY CLAIMS:

All warranty claims must be accompanied by a sales receipt. Report all warranty claims in writing to your regional sales support representative. Please include your dated sales receipt and photographs of damaged parts. To Identify the representative for your region, please visit: www.lifetime.com/international



www.lifetime.com

ENHANCE YOUR LIFETIME[®] PURCHASE BY ADDING ACCESSORIES OR OTHER GREAT PRODUCTS

To purchase accessories or other Lifetime[®] products, visit us at:

www.lifetime.com

or dial 1-800-424-3865



www.lifetime.com



 $\textcircled{C} \ \textbf{2023 Lifetime Products, Inc., Clearfield, UT}$

1220843 B