



ApexDesk™

AFFORDABLE ADJUSTABLE DESKS FOR EVERYONE

Little Soleil Children's Adjustable Chair

Assembly Guide




REV-1506A

Table of Contents

PARTS & COMPONENTS LIST	3
ASSEMBLY INSTRUCTIONS	4
HOW TO USE	6
CARE INSTRUCTIONS.....	6
WARRANTY INFORMATION	7
CONTACT INFORMATION	7

PARTS & COMPONENTS LIST

COMPONENTS INCLUDED

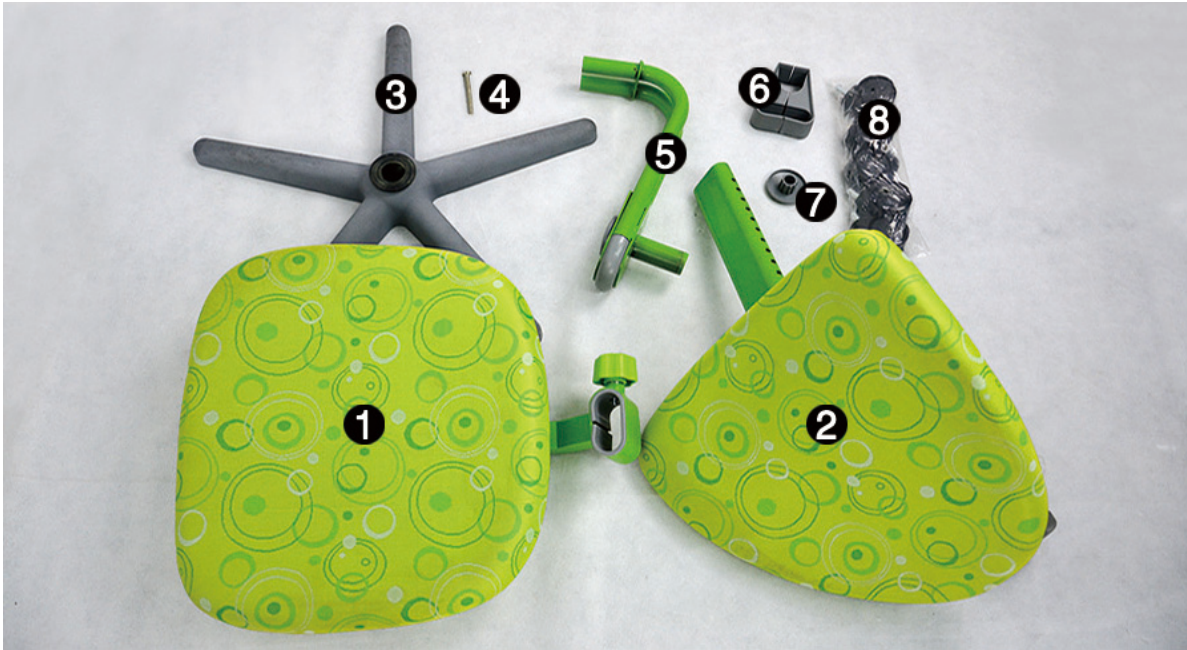

No.	COMPONENT LIST	QTY
1	Saddle-Shaped Seating	1
2	Backrest	1
3	5-Armed Base	1
4	Hex Screw	1
5	Connecting Tube	1
6	Anti-Twisting Base Lock	1
7	Base Lid	1
8	Rolling Casters	5


ASSEMBLY INSTRUCTIONS

BEFORE YOU BEGIN

Lay out all components and hardware to ensure that you have all the parts listed on the parts page. This children's adjustable chair is designed for use in an indoor environment and dry work areas only. The seat height is adjustable so that it can be positioned at the most suitable height for your growing child. Any other use is at user's risk. Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused from improper use or handling of the chair.

STEP 1 – INSTALL THE 5-ARMED BASE

Turn the 5-Armed Base upside down and insert the Casters into the holes on the 5 tips of the Base.

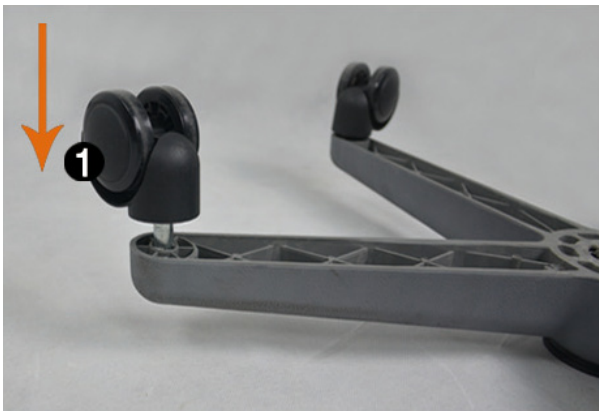

Flip the Base over and insert the Connecting Tube to the hole in the middle of the Base. Turn the Base over again with the Casters facing up and use the Base Lid to cover the middle hole.



STEP 2 – INSTALL THE BACKREST AND SEAT

Hook up the Backrest to the Saddle-Shaped Seat.



STEP 3 – FINAL ASSEMBLY

With provided Hex Screw, connect the assembled pieces from **Step 1** and **Step 2**. Install Base Lock (optional) to prevent chair from twisting and turning. The Lock should be attached to the bottom of the Connecting Tube and one of the Base Arms.



Optional Base Lock

HOW TO USE

1) How To Adjust Seat Height

Prevent chair from rolling by stepping on the seat base. Grab the seat cushion, pull and hold knob outward and pull/push seat to desired height. Once you reach desired height, release knob and move the seat around a bit until you hear a clicking sound locking seat into position.



2) How To Adjust Seat Depth

There are two preset positions for seat depth. Prevent chair from rolling by stepping on the seat base. Pull and hold knob outward to adjust seat depth. Once you reach desired position, release knob and slightly push or pull seat until you hear a clicking sound locking seat into position.



3) How To Adjust Backrest Height

Twist knob slightly loose and adjust to desired height. Screw tight to secure position.

CARE INSTRUCTIONS

Chair is intended for use in dry, indoor areas. Avoid extended exposure to direct sunlight.

For all surfaces: wipe clean with a damp cloth.

WARRANTY INFORMATION

SCOPE OF WARRANTY

Apex Furniture LLC (“ApexDesk”) warrants to the original purchaser its new merchandise (except for components not warranted under “Exclusions”) manufactured by ApexDesk to be free from defects in material and workmanship under normal use and service. ApexDesk’s obligation under this warranty is limited to the repair or replacement, at ApexDesk’s sole option, of the parts or products the defect of which are reported to ApexDesk within the applicable warranty period and which, upon examination by ApexDesk, prove to be defective.

APPLICABLE WARRANTY PERIOD

The applicable warranty period, measured from the date of delivery to the original user, shall be three (3) years limited warranty on all warranted merchandise.

EXCLUSIONS

This limited warranty does not cover and ApexDesk shall not be liable for the following: (1) repairs and replacements because of misuse, abuse, negligence, alteration, accident, freight damage, or tampering; (2) products which are not installed, used, stored and properly cleaned as required in the ApexDesk “Assembly Guide” for this product; (3) products considered to be of a consumable nature; (4) Shipping to or from repair center; (5) accessories or parts not manufactured by ApexDesk; (6) charges by anyone for adjustments, repairs, replacement parts, installation, or other work performed upon or in connection with such products which is not expressly authorized in writing in advance by ApexDesk.

EXCLUSIVE REMEDY

ApexDesk’s only obligation under this warranty is the repair or replacement of defective parts. ApexDesk shall not be liable for any direct, special, indirect, incidental, exemplary, or consequential damages or delay, including, but not limited to, damages for loss of profits or loss of use.

CONTACT INFORMATION

Apex Furniture LLC (“ApexDesk”)
18467 Railroad Street
City of Industry, CA 91748
Email: support@apexdesk.com
(877) 516-DESK
www.apexdesk.com

For technical assistance, please call us or visit us at www.apexdesk.com/support.