



La Plus Belle

ASSEMBLING & INSTALLATION INSTRUCTIONS

The drawing shown may not exactly match the product enclosed. However, the installation instructions do apply to this product.

*****WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**

*****ATTENTION! COUPER LE COURANT AU FUSIBLE OU UN DISJONCTEUR.**

ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off the power at the circuit breaker box. Remove old fixture and all hardware from Junction Box. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
2. Fix mounting plate D on junction box with Box Screw . The side of the mounting plate marked "GND" must face out. **The junction box is not included.**
3. Follow wiring instructions carefully.(see fig.2)
4. Attach the back plate of the lamp body (F) onto the junction box, and lock it securely with the Mounting Screw.
5. Install the light bulbs(not included) in accordance with the fixture's specifications. **NOTE: DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**

CONNECTING THE WIRES (Fig.2)

1. Connect the electrical wires as follows. Connect the Black wire from the fixture to the black house (hot) Wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outlet box has a ground wires (green or bare copper) connect fixture's ground wire to it. Otherwise attach the bare copper fixture wire to the green ground screw on the mounting plate.
2. Tuck the wire connections neatly into the wall junction box.

Your installation is now complete. Return power to the junction box and test the fixture.

FIG.1

To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back plate where it meets the wall leaving a space at bottom to allow moisture a means to escape.

 
 
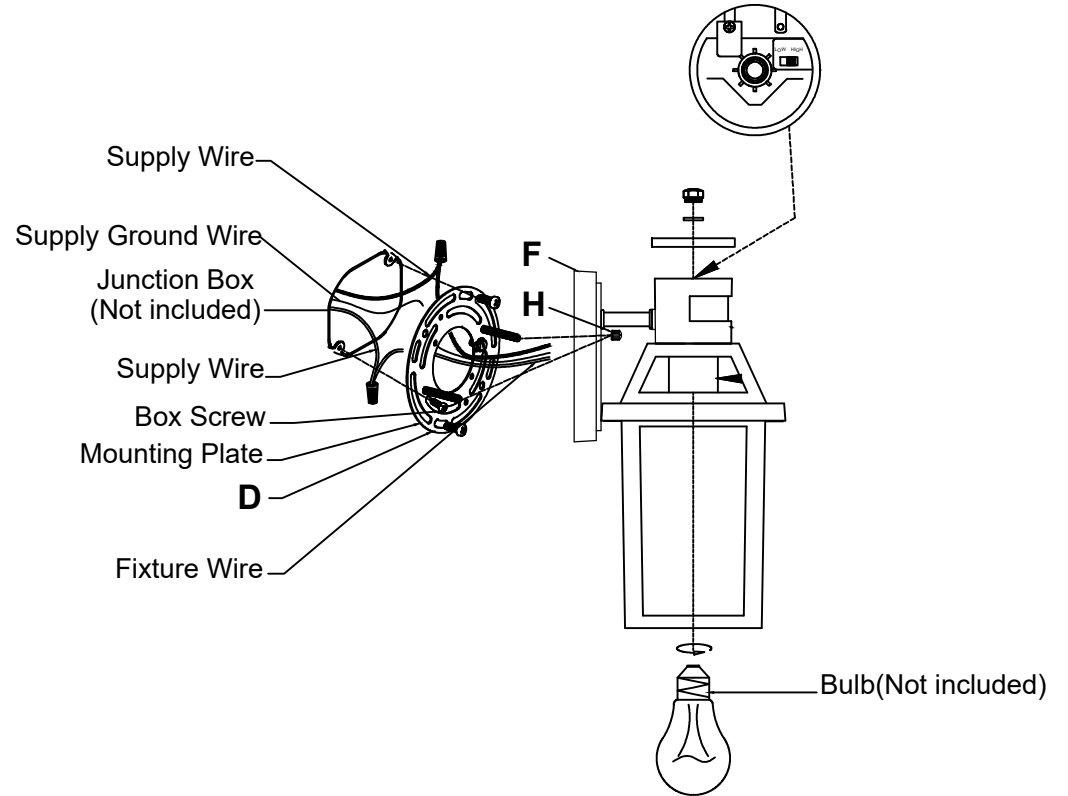 


FIG.2

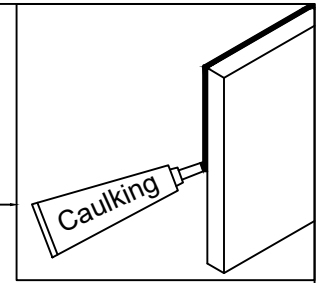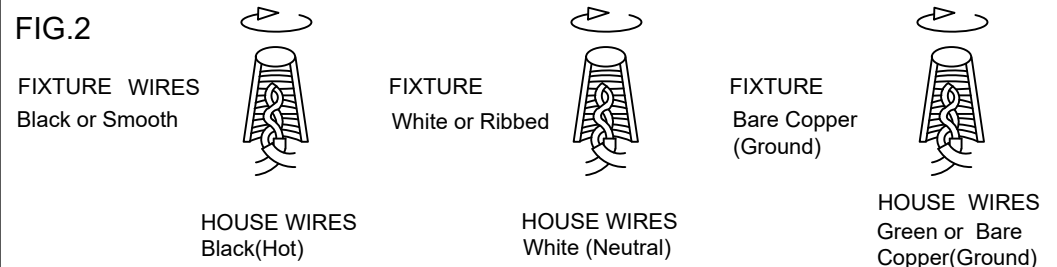

Product Function:

Auto High Mode:Default Factory Setting. Automatically turn on 30% brightness at dusk, 100% brightness when motion is detected, then back to 30% brightness after 120s without motion sensing.

Auto Low Mode:1) Remove the knob and cover of the sensor on the top of the light, toggle the switch to from Auto High Mode to Auto Low Mode;2)Keep off at dusk, automatically turn on 100% brightness once motion is detected, then turn off after 120 seconds when no motion is detected.

Manual Override Mode:1) Change the Auto High/Low Mode to Manual Override Mode by pressing the wall switch "off-on" 1 time within 0.5-2 seconds;2)Keep on 100% brightness at night for 8 hours,then automatically turn off at dawn and back to Auto High/Low Mode.

Notes:1) To ensure the above function works properly, please keep the wall switch always "ON" after installation.

2) When turn off the wall switch for more than 10 seconds,it will be back to Auto High/Low Mode.

