



# Halloween Haunted House with Bat Projection

HWHH001

This unit is made for display purposes and is not a toy. Read the following carefully to ensure satisfactory and safe operation of this unit. Carefully remove the product from the packaging so that it does not get damaged. Please keep these instructions for future reference.

## FEATURES

1. When the lights turn on a skeleton is exposed that was hiding in the doorway and bats are projected from the back of the house onto a nearby wall in an orange light.
2. Cord-free decoration can easily be displayed anywhere indoors.
3. Timer function to preserve battery life (6 hours on, 18 hours off).



## OPERATING PROCEDURE

1. Carefully remove haunted house from shipping box. After unboxing, bat may be gently bent upward to position above the chimney as shown in photo.
2. Open the battery compartment door at the bottom of the unit.
3. Insert 3 AA size batteries with the correct polarity as shown in Fig. 1. Alkaline batteries are strongly recommended for the best performance.
4. Slide the switch to the "ON" position to turn on product.
5. Slide the switch to the "TIMER" position to start the 6 hr. on, 18 hr. off timer.
6. To extend battery life slide switch to the "OFF" position when not in use.

## TIMER FUNCTION

When the switch is slid to the "TIMER" position the lights will turn on for 6 hours and then turn off for 18 hours. The 6-hour on and 18-hour off cycle will repeat as long as the switch is left in the "TIMER" position. If the timer function stops working properly replace the batteries with new ones.

## BATTERY WARNING

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Replace batteries when the light is faint.
4. Do not allow the bottom of the unit to come in contact with heat.
5. Remove all batteries from unit before storage.
6. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Non-rechargeable batteries are not to be recharged.
8. Do not mix old and new batteries.
9. Make sure to insert batteries with the correct polarity (See Fig. 1).
10. Remove exhausted batteries from product.
11. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.
12. Improper handling/disposal of batteries may cause batteries to explode or leak.
13. Please recycle or dispose of batteries according to the local laws and regulations of your region.

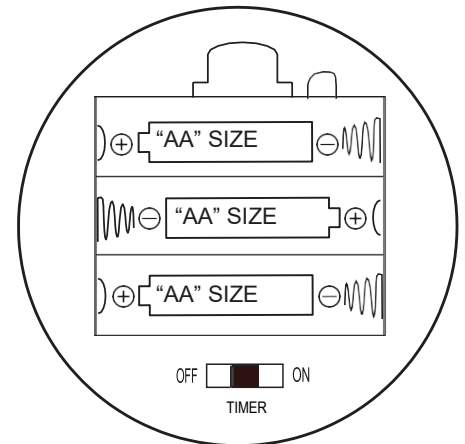


Fig. 1

THANK YOU FOR YOUR PURCHASE

Comments or questions?

Call us at 1-877-359-0115 or

Email us at [customerservice@haute-decor.com](mailto:customerservice@haute-decor.com)

Haute Decor  
PO Box 1594  
Allen, TX 75013



© 2025 Haute Decor

For Indoor Use Only  
Made in China