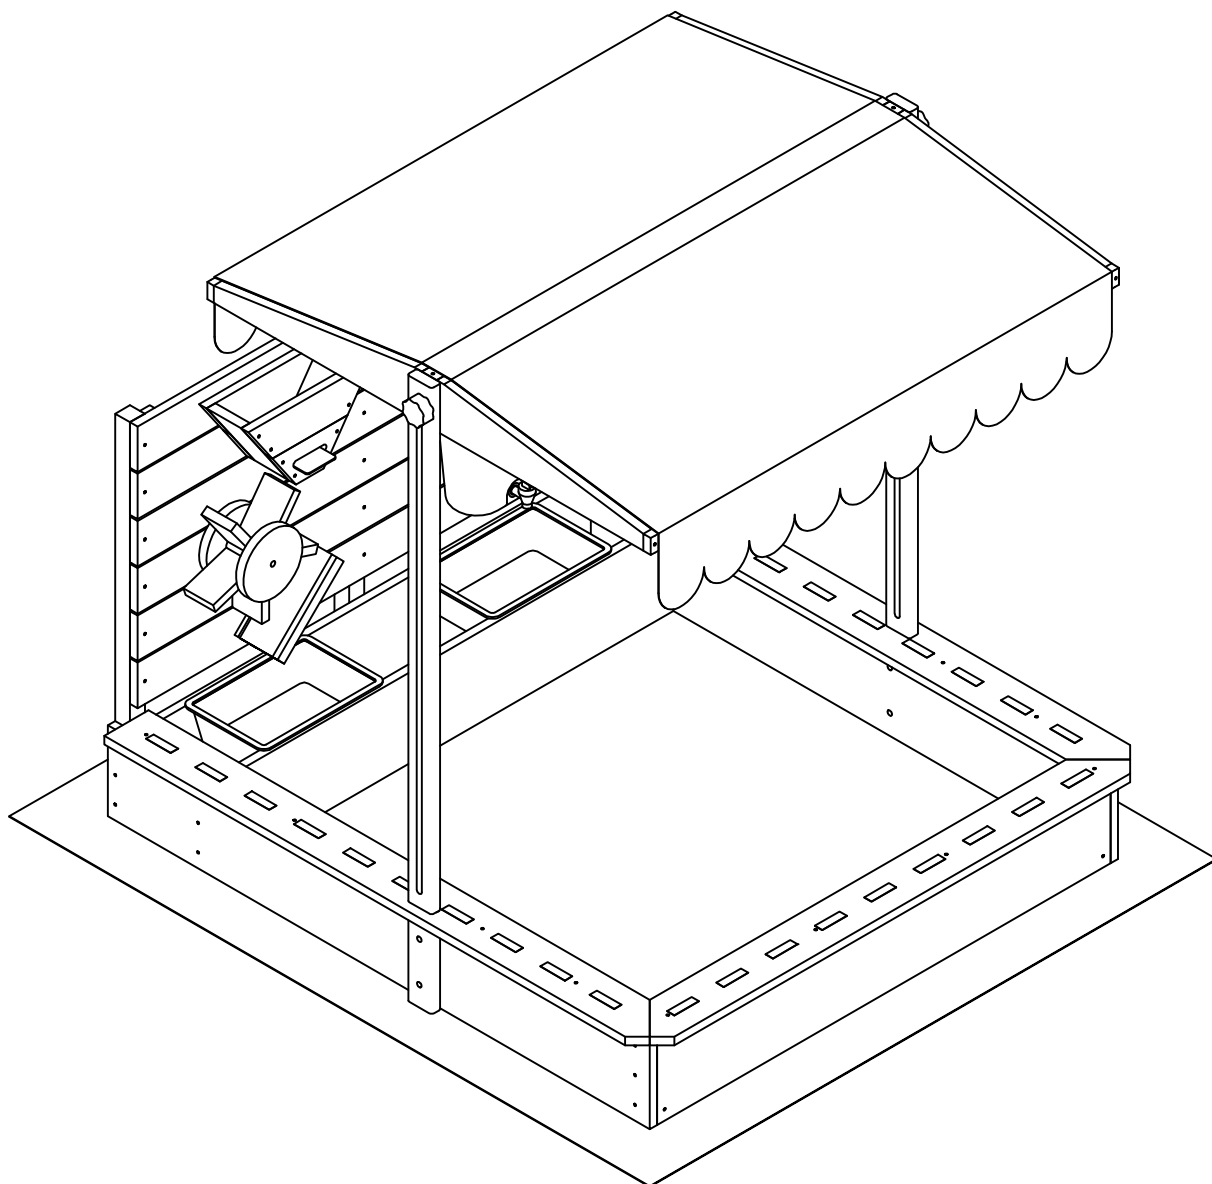 




WARNING:
CHOKING HAZARD-Small parts
Not for children under 3 yrs

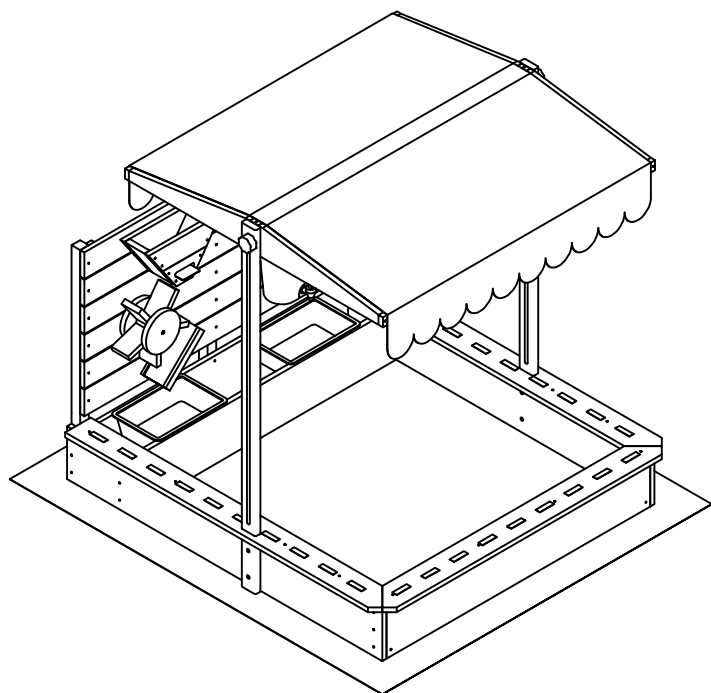 


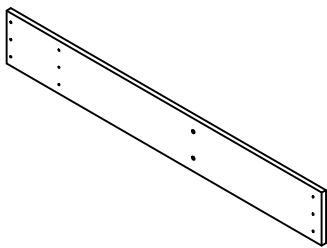 
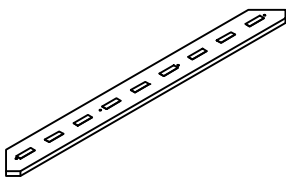 
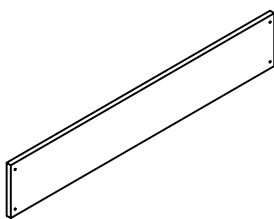 
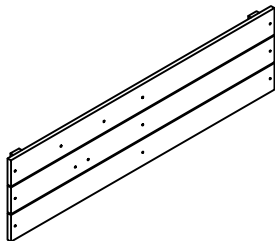 
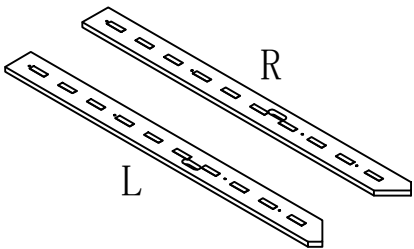 
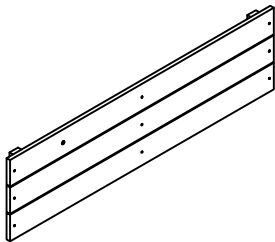 
WARNING:
Adult assembly required, Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.








INSTRUCTION MANUAL











Kids Sandbox

1. Toy must be assembled by an adult before use exactly in accordance with the instructions.
2. Children must not use this product until properly installed.
3. Check all parts are present before you start to assemble the product. Place small parts on a tray or similar to ensure they are not lost. The manufacturing process can very occasionally result in sharp edges/waste material so please take care when assembling this product.
4. If any parts are missing do not use the product until the replacement parts are fitted.
5. Ensure your product is sited on level ground. Failure to do this may put additional stress on connections and joints and in time could cause them to fail.
6. Avoid locating this product in full sun.
7. Remove all packaging before giving to your children.
8. Equipment should be checked by an adult at the beginning of each season and at regular intervals during the usage season to ensure it is safe. Pay special attention to all connections and fastenings.
9. Parts may need to be replaced if they show signs of wear and tear. Replace any defective parts in accordance with these instructions.
10. Due to the natural characteristics of timber, it is vital to check your playframe regularly for splintering, lifting of surface layers of wood or exposure of rough wood. Affected areas must be rubbed down using coarse sandpaper to restore a smooth, safe surface.
11. Any changes to this toy eg changing or adding an accessory, must be done in accordance with our instructions. Failure to do this will render your guarantee null and void and may make your product unsafe.
12. Ensure children's clothing is appropriate for the play activity.
13. Never place toys near a fire.
14. In high winds, ensure outdoor toys are moved to a sheltered position and/or securely staked down.
15. The age recommendation for this product is clearly stated on the packaging and in these instructions. Please adhere to it at all times. Adult supervision is required at all times to ensure children play safely.
16. When you dispose of this equipment please do so responsibly.




1		2PCS	4		1PC
2		2PCS	5		1PC
3		2PCS	6		1PC

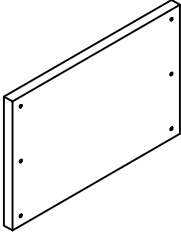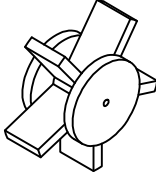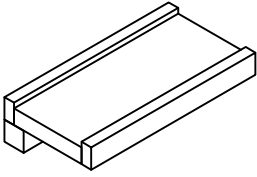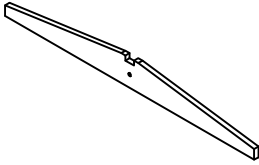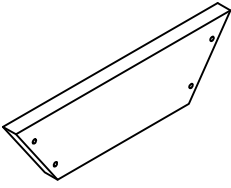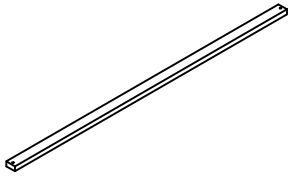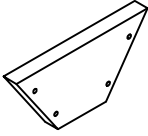       
7		3PCS	12		1PC
8		4PCS	13		1PC
9		2PCS	14		1PC
10		2PCS	15		2PCS
11		3PCS	16		1PC

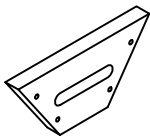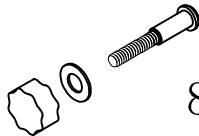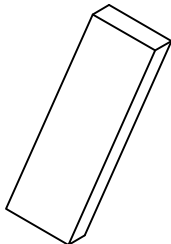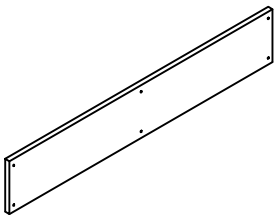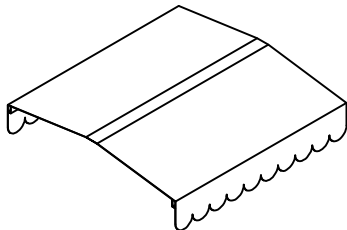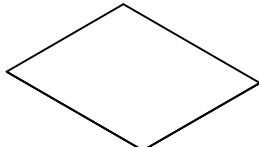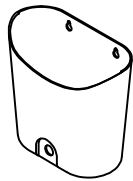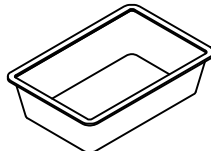          17		1PC	E	 6x28mm	4PCS
			F	 8x43mm	2PCS
18		2PCS	G		1PC
			H		1PC
19		1PC	I		1PC
A	 3x23mm	12PCS	J		1PC
B	 3x28mm	36+2PCS	K		1PC
C	 4x30mm	50+2PCS	L		1PC
D	 M8x115mm	1PC	M		2PCS

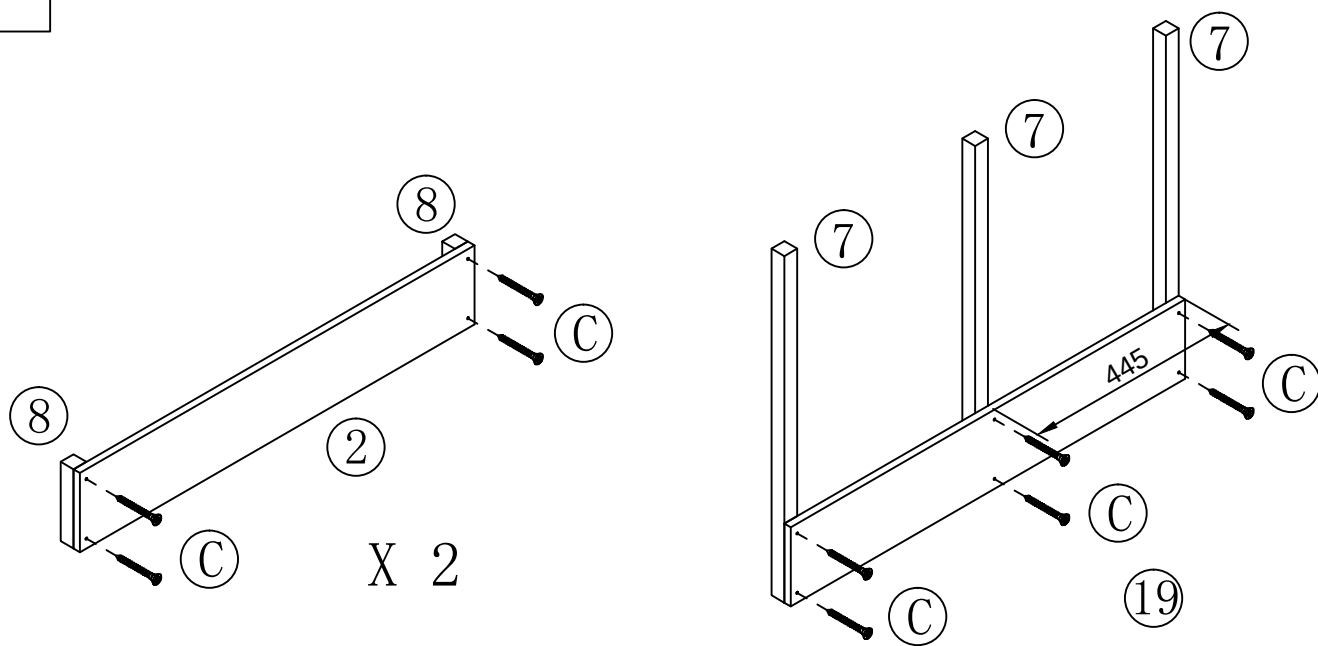 
1




2

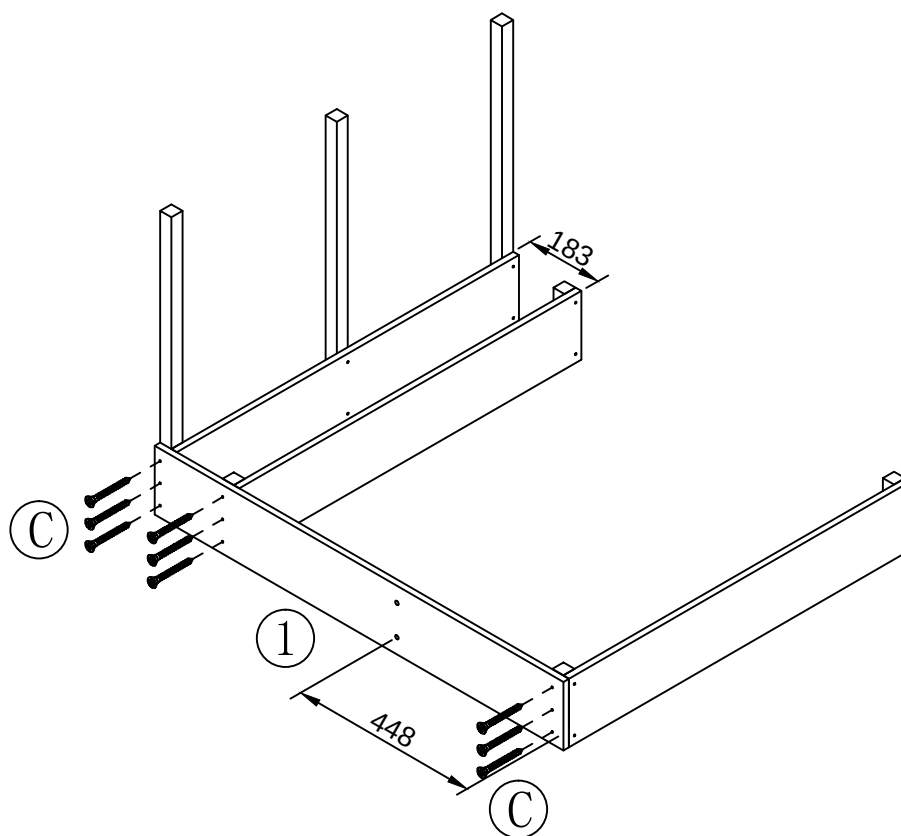 


3

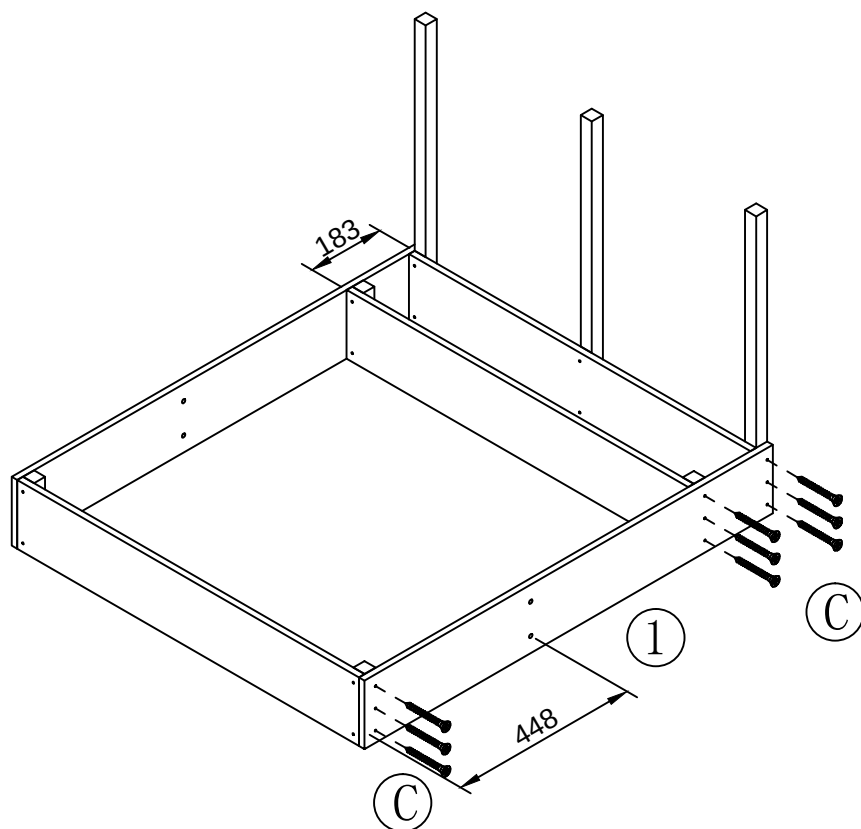 


4

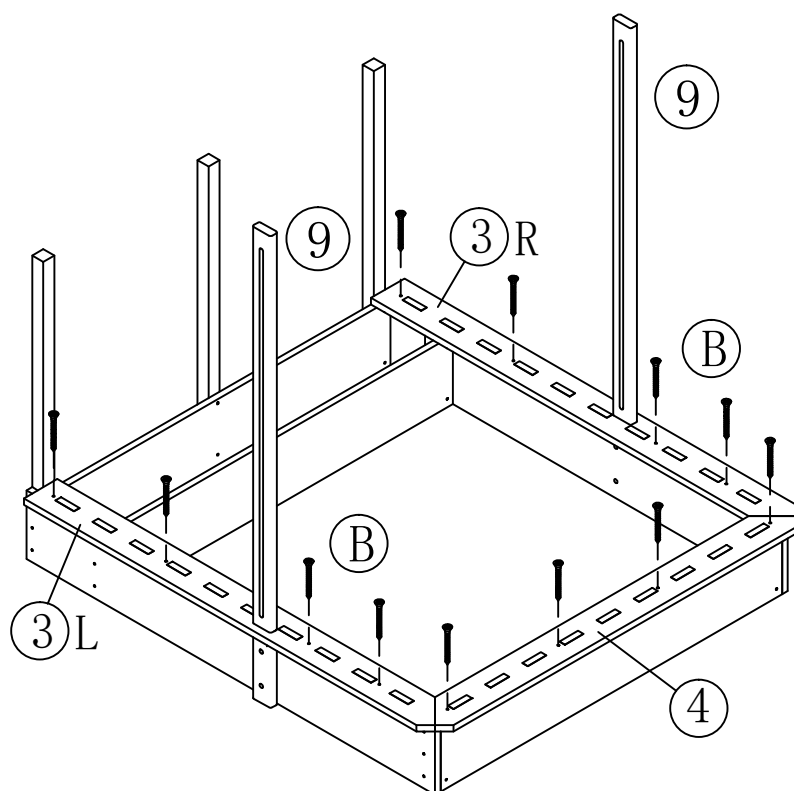 


5

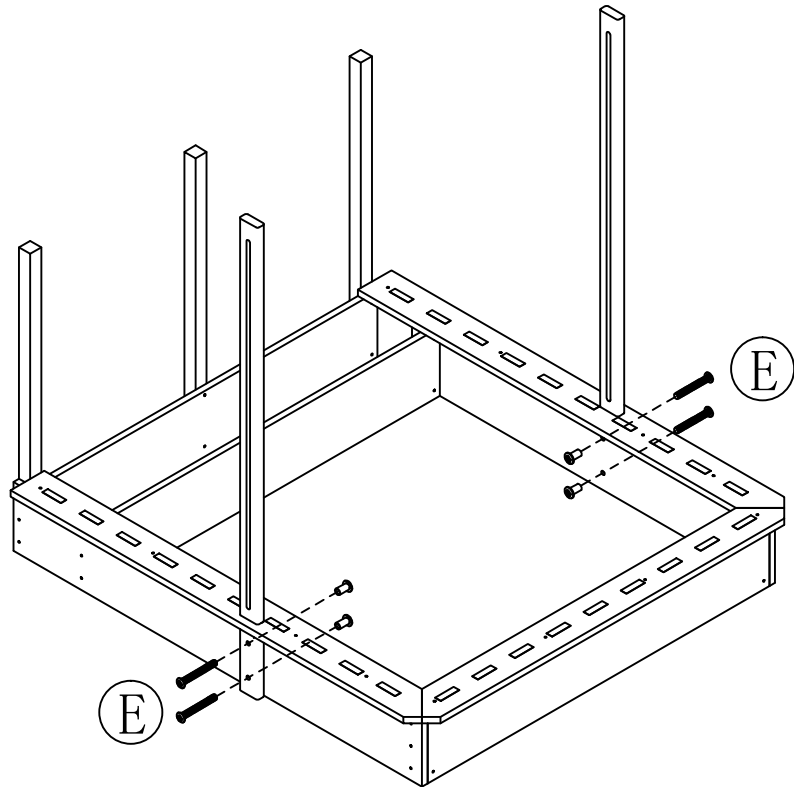 


6

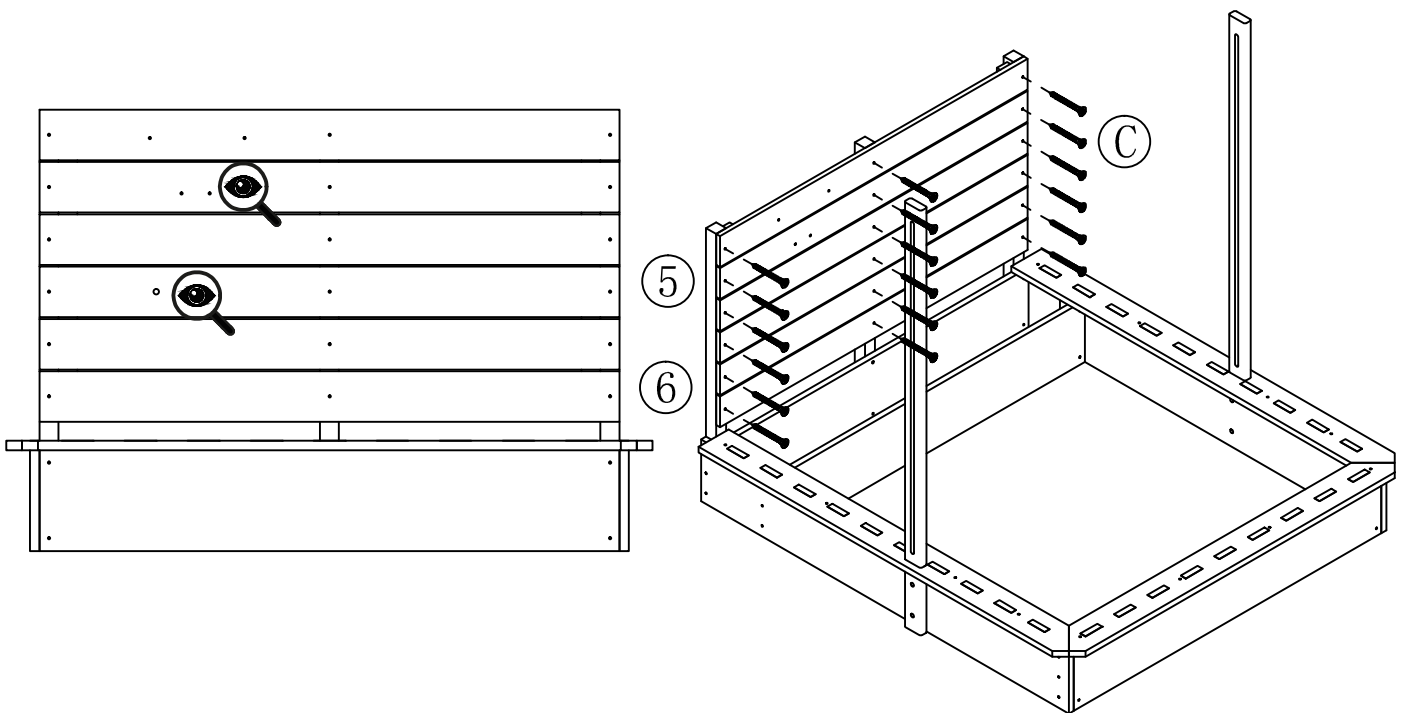 


7

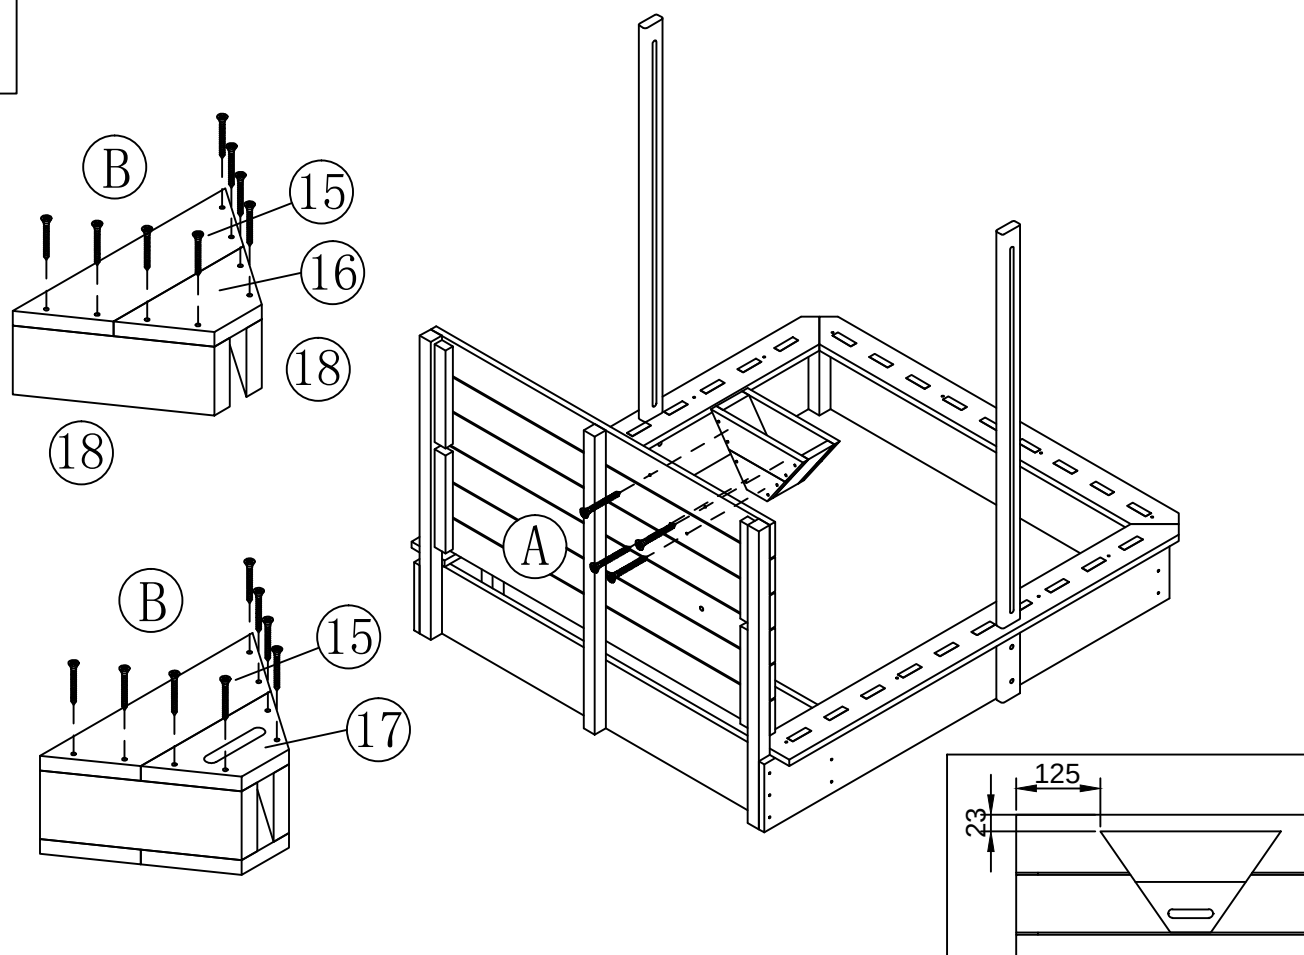 


8

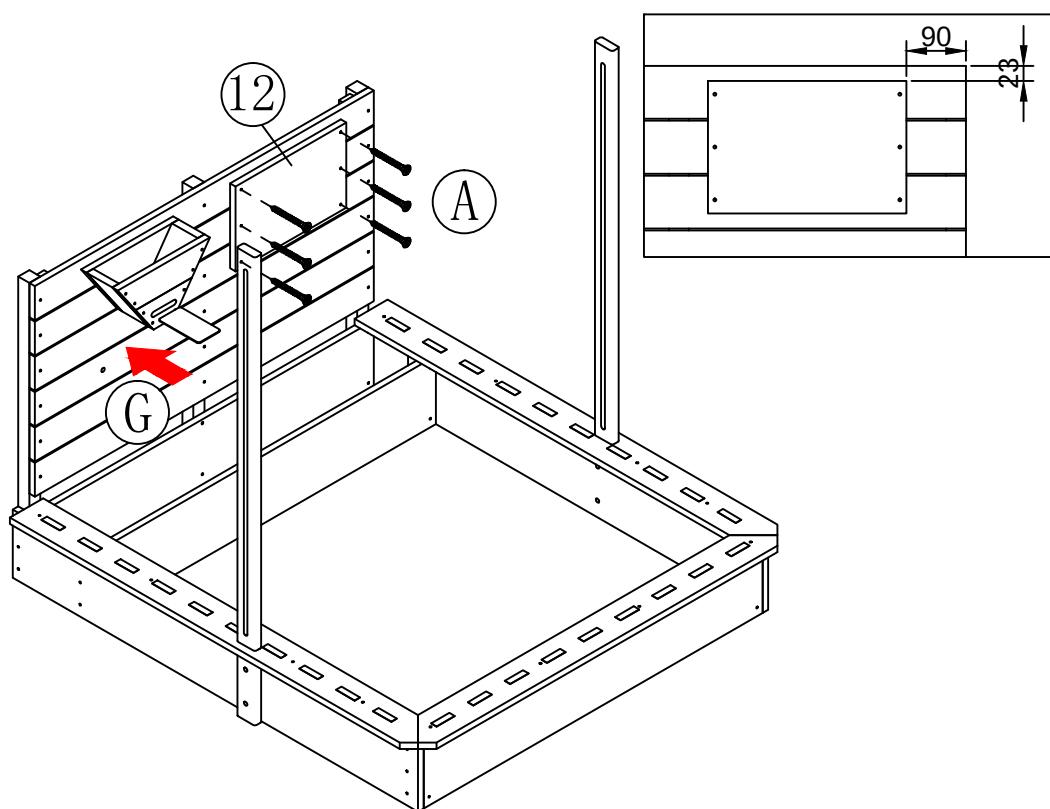 


9

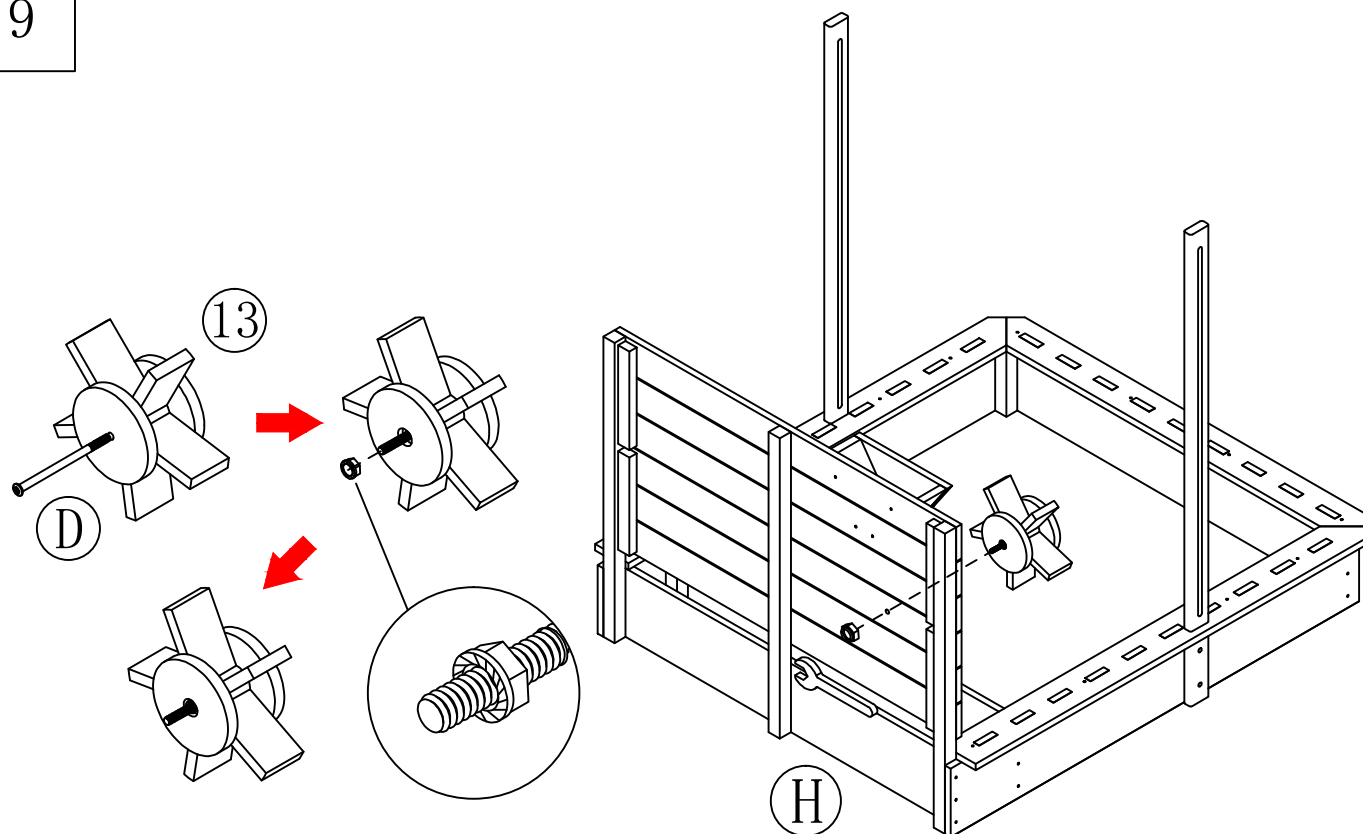 

10

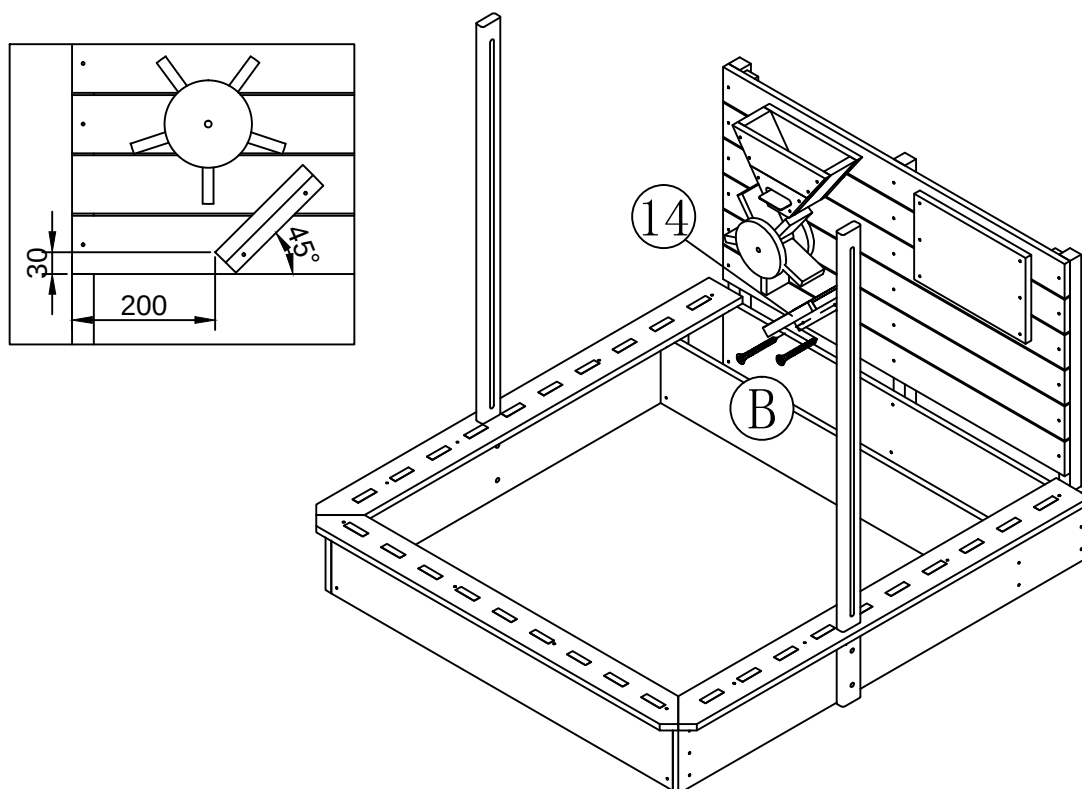 


11

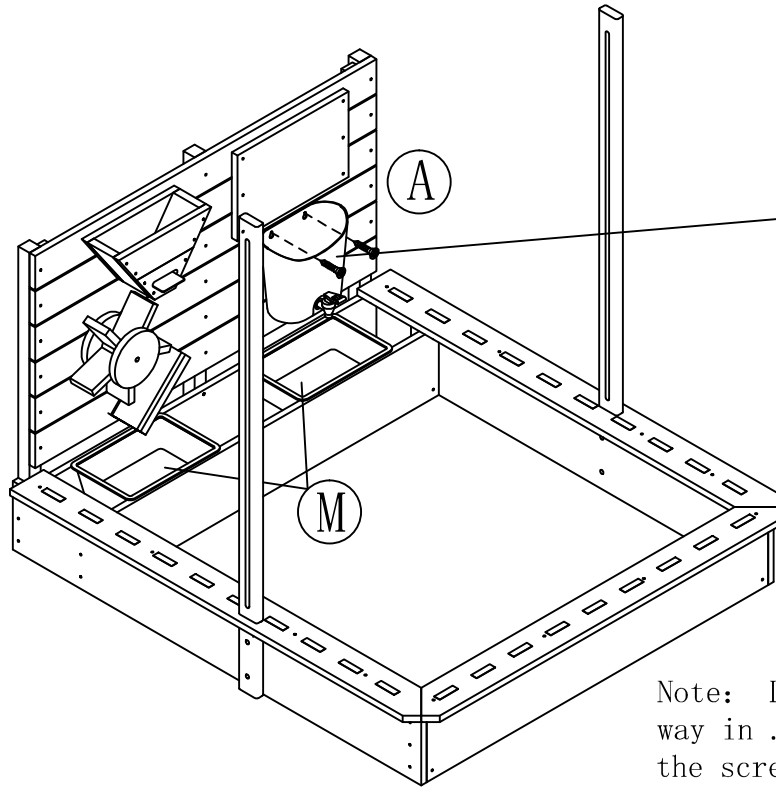 


Note: Do not push the screws all the way in .Hang the water container on the screws and only then push the screws in , fixing the container to the board .

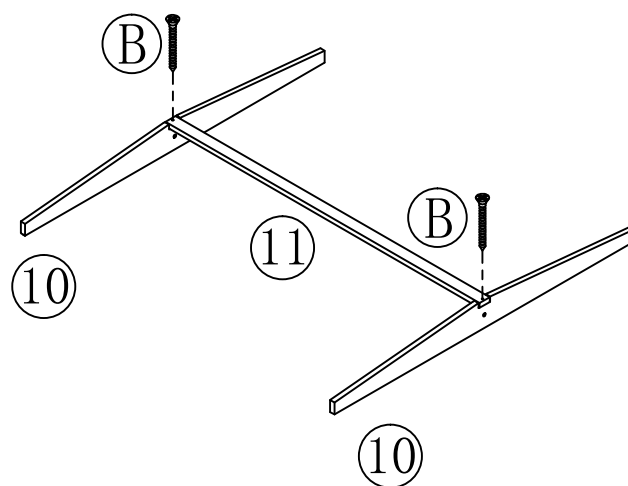 12



13

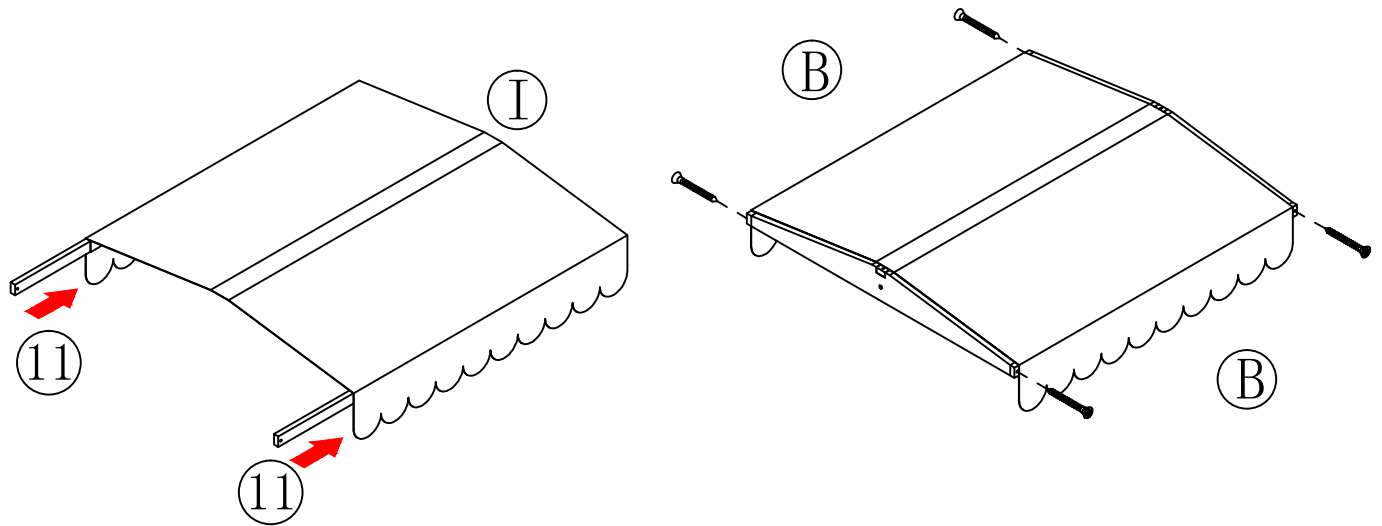 

14

