

ASSEMBLY INSTRUCTIONS

Decker Adjustable Height Swivel Stool

ASSEMBLY	25 MINUTES	1-Person
REQUIREMENTS	Assembly Time Per Stool (Approximate)	Assembly

Thank you for purchasing our product!


Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

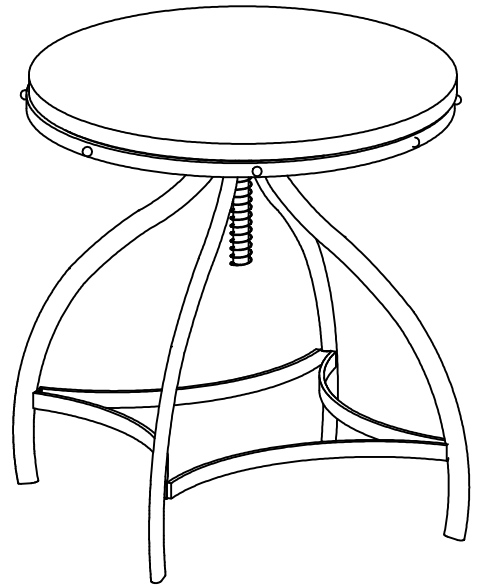

SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE





 

 


- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


ASSEMBLY INSTRUCTIONS

Decker Adjustable Height Swivel Stool

PARTS & HARDWARE LISTS


A		LEG	8PCS	F		BOLT	8PCS
B		LOWER STRETCHER	2PCS	G		BOLT	24PCS
C		CONNECTING BAR & POST	2PCS	H		FLAT WASHER	8PCS
D		WOOD SEAT	2PCS	I		SPRING WASHER	8PCS
E		ALLEN WRENCH	1PC				

STEP 1

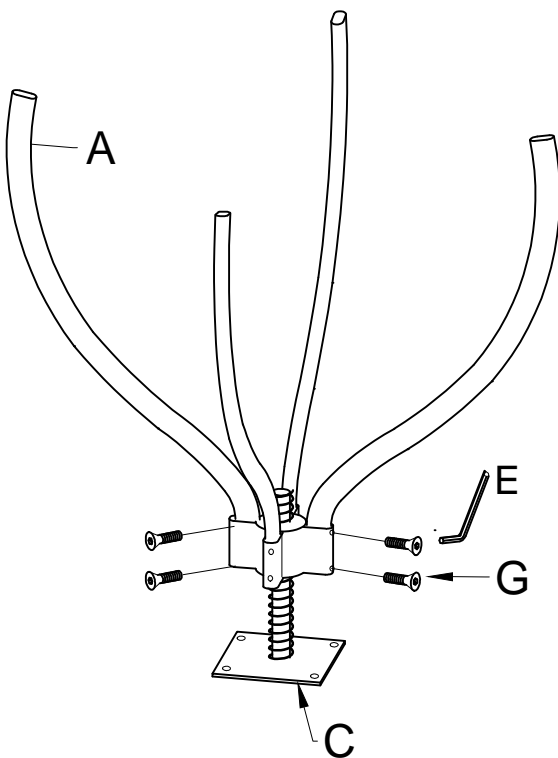

Insert Leg (A) into Connecting Bar and Post (C) as shown and use Bolt (G) to fasten. Use Allen Wrench (E) to drive (G). Do not tighten the all the bolts completely at this time.

STEP 2

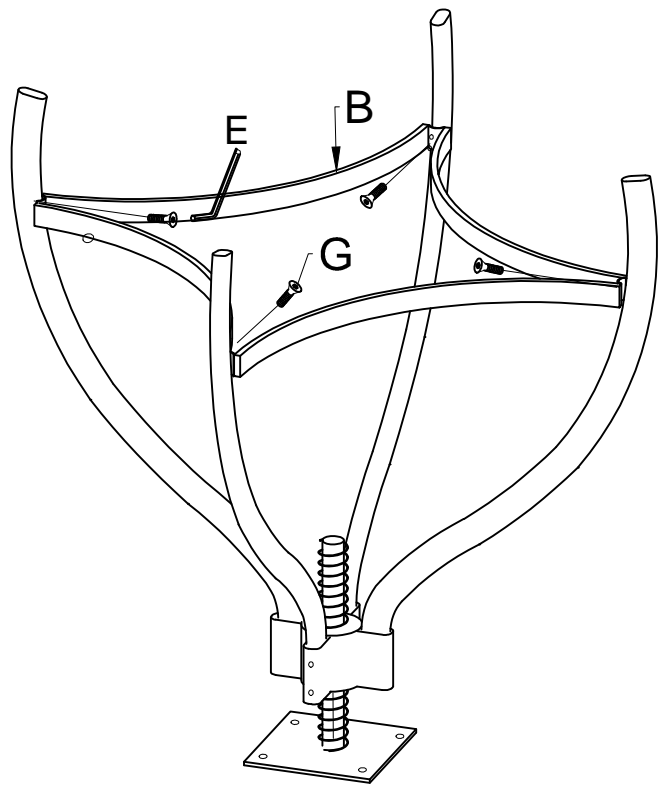


- Fasten individual Leg (A) to Lower Stretcher (B) by using Bolt (G). Use Allen Wrench (E) to drive (G). Do not tighten (G) completely until all of the bolts are in place on (B).
- Tighten all of the Bolts (G) in STEP 1 completely at this time.

ASSEMBLY INSTRUCTIONS

Decker Adjustable Height Swivel Stool


STEP 3

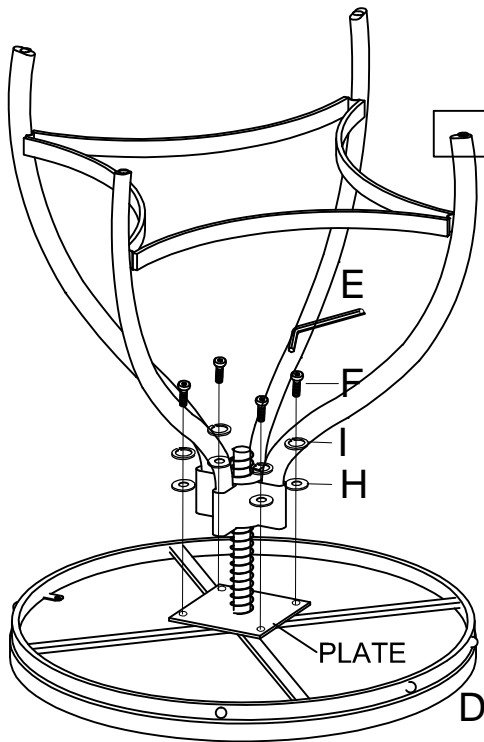

Adjust Screw Glide as needed for uneven floor.

Place Wood Seat (D) bottom-side up and align bolt holes on plate of Post (C) to bolt holes on (D) as shown. Use Bolt (F) fitted with Washers (I & H) to fasten (D) to (C). Use Allen Wrench (E) to drive (F). **Do not tighten Bolt (F) completely until all the bolts are in place on (D).**

STEP 4

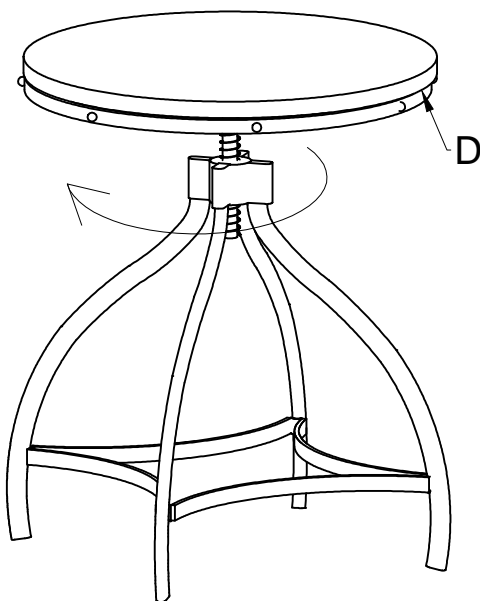

Place stool right-side up. The assembly of the stool is complete. Turn the Wood Seat (D) clockwise to lower, and counter-clockwise to raise the height of stool.