

**MODLE: GT23009**






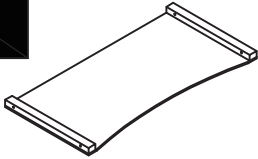
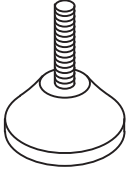
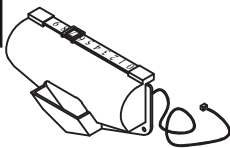



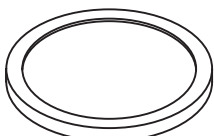
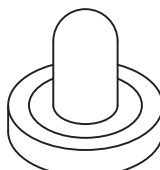
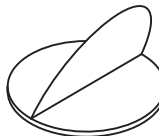
 





Missing parts, damages, and any other problems, please contact us via email.



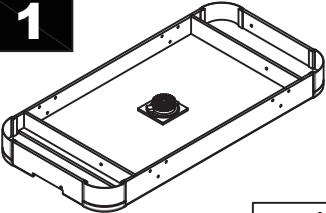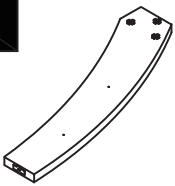



[raykeepgoods@outlook.com](mailto:raykeepgoods@outlook.com)

ENGLISH

## GT23009 PARTS LIST

<b>1</b>  Hockey Cabinet x1	<b>2</b>  Leg Right x2	<b>3</b>  Leg Left x2	<b>4</b>  Leg Panel x2
<b>5</b>  Leg Leveller x4	<b>6</b>  Goal box x2	<b>7</b>  Electronic scorer x1	<b>8</b>  Adapter x1
<b>9</b>  Connect Box x1	<b>10</b>  Hockey Puck x2	<b>11</b>  Hockey striker x2	<b>12</b>  Felt Pad x2
<b>A1</b>  1/4"x1-5/8" Bolt x12	<b>A2</b>  1/4" Washer x12	<b>A3</b>  4x12mm Screw x6	<b>A4</b>  4x40mm Screw x8
<b>A5</b>  3x22mm Screw x2	<b>A6</b>  Wrench x1		


## GT23009 PRE-INSTALLED PARTS

<b>P1</b>  Motor x1	<b>P2</b>  Apron Corner x4	<b>P3</b>  T-Nut x12	<b>P4</b>  Nut x4
--	---	--	--


# ENGLISH

## ASSEMBLY INSTRUCTIONS:

1. Find a clean, level place to begin the assembly of your Air Hockey Table. The table will be assembled upside down and then turned over on its legs once the assembly completed. This game table is heavy, and turning it over will require at least two strong adults.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts list. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.

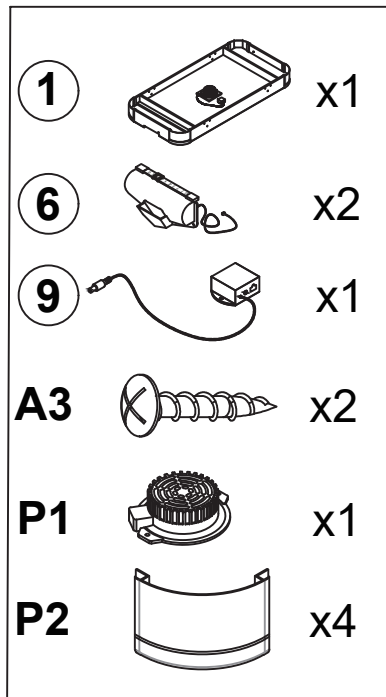


**Fig 1**

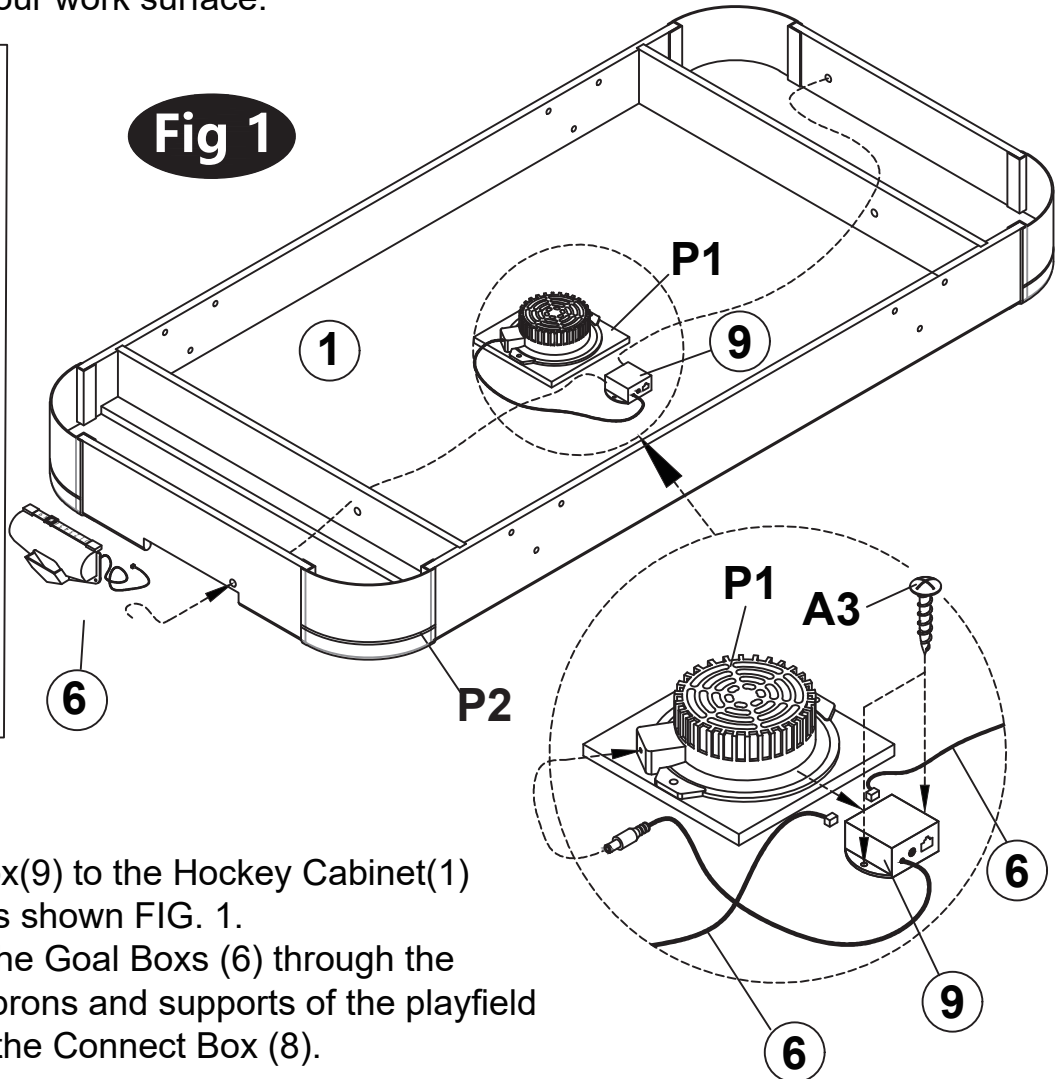


**Fig 1**

3. Attach the Connect Box(9) to the Hockey Cabinet(1) using two Screw(A3) as shown FIG. 1.
4. Thread the wire from the Goal Boxes (6) through the openings of the end aprons and supports of the playfield to insert the Wire into the Connect Box (8).

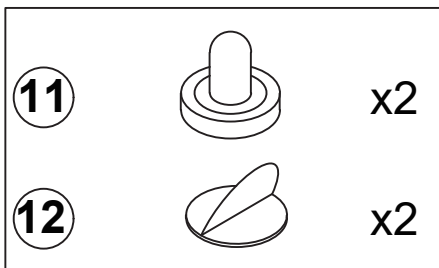

**Fig 2**

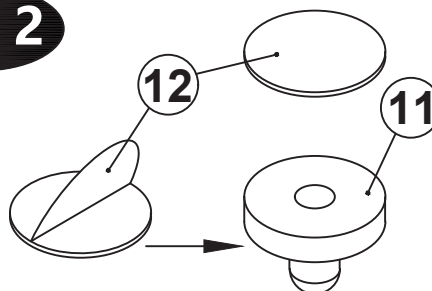


**Fig 2**

5. Tear off the backside papers of the Felt Pads (12) and stick them onto the bottom of the Pushers (11). See FIG. 2.

**Fig 3**



<b>2</b>		x2
<b>3</b>		x2
<b>5</b>		x4
<b>A1</b>		x12
<b>A2</b>		x12
<b>P3</b>		x12
<b>P4</b>		x4

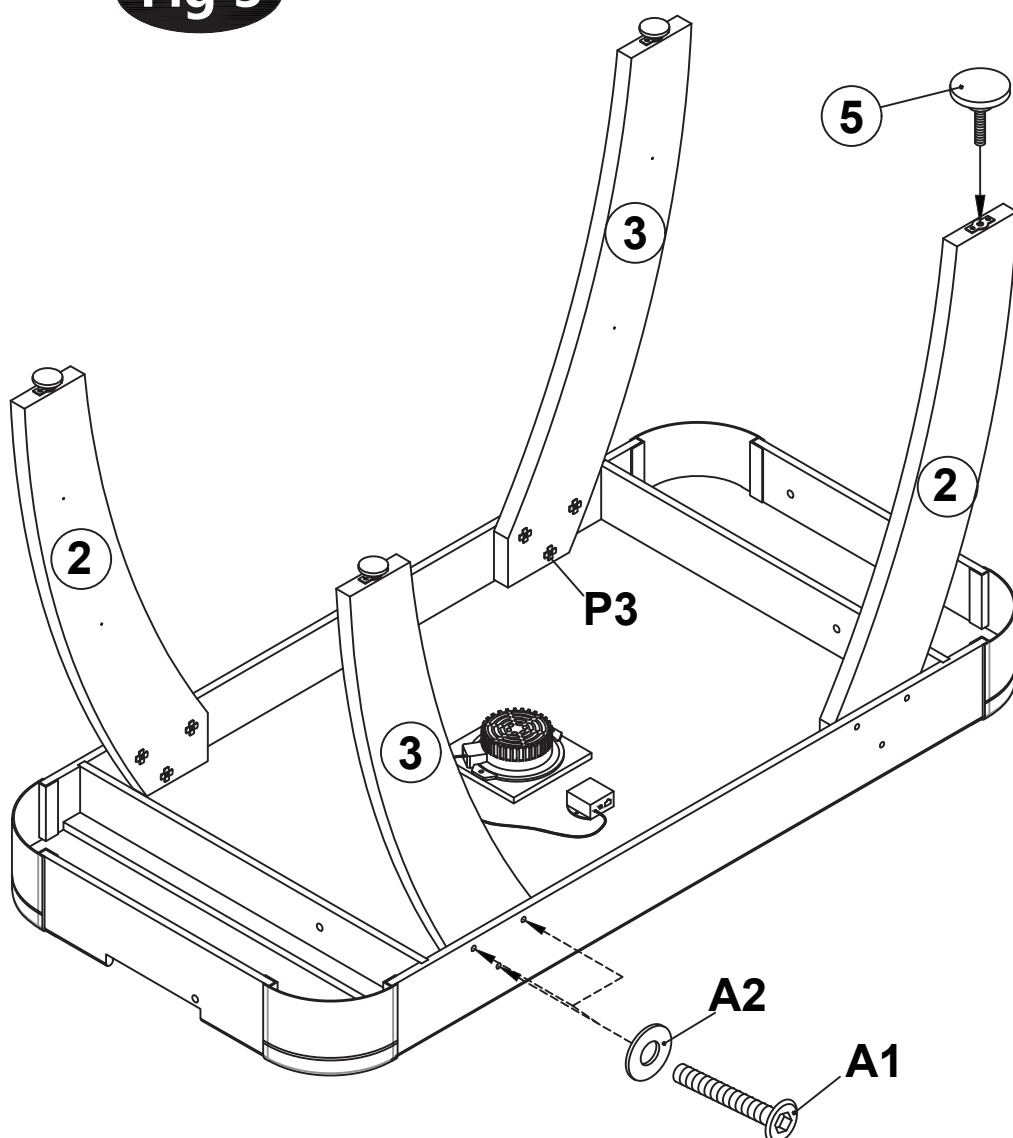

**Fig 3**

- Place the Mainframe (1) face down on a clean and flat surface. Attach the Right Legs (2) and Left Legs (3) to the Mainframe using three Bolts (A1) and three Washers (A2) per Leg. See FIG. 3.
- Screw the Leg Levelers (5) into the bottom of each Leg (2 & 3).

**Fig 4**

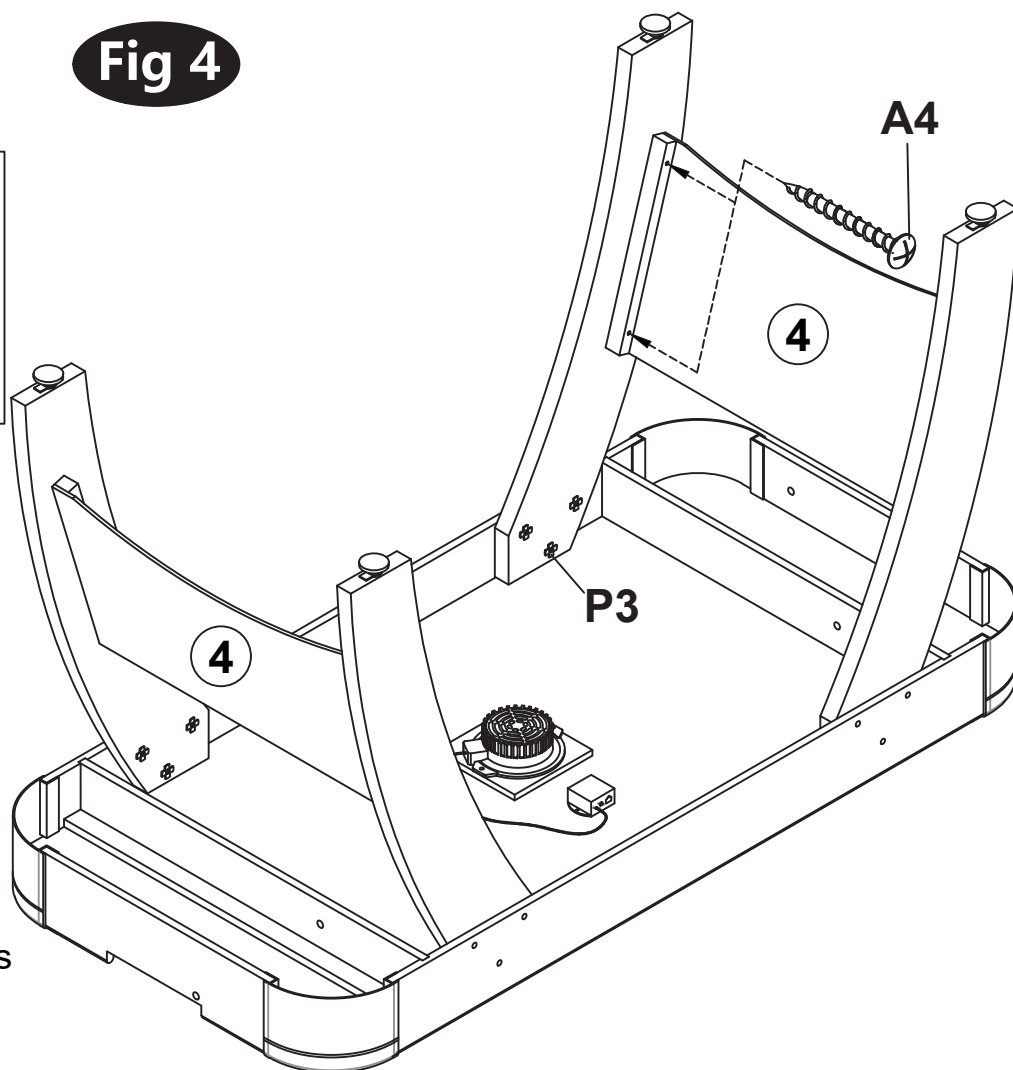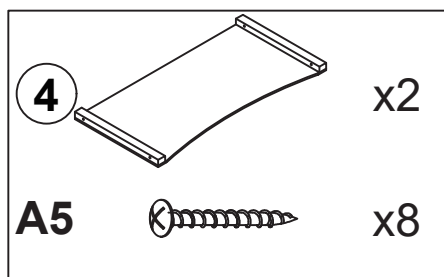


**Fig 4**

8. Attach the Leg End Panels (4) to the Legs (2 & 3) using four Screws (A4) per Leg Side Panel. See FIG. 4.


9. Lift the table assembly from the floor with two adults, turn it over, and set the table on its leg in the location where you will play.

***Go back and make sure that all connections are tight.***

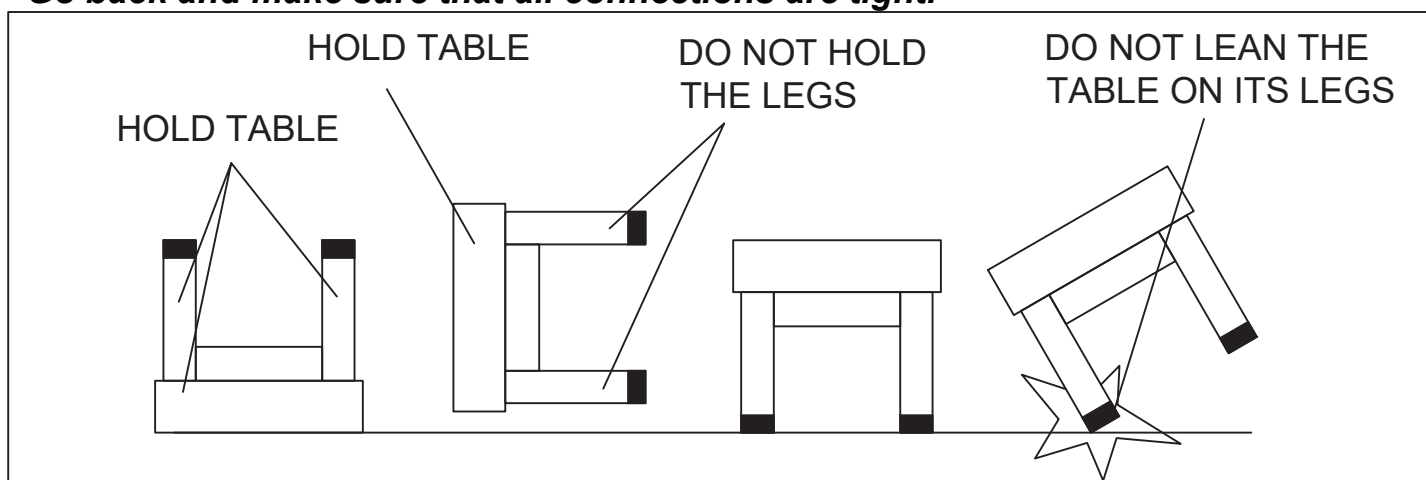


**CAUTION:** Two strong adults are recommended to turn the table over as shown.

1. Lift the table off the ground.
2. Turn the table over.
3. Place it on all four feet at the same time on the ground.

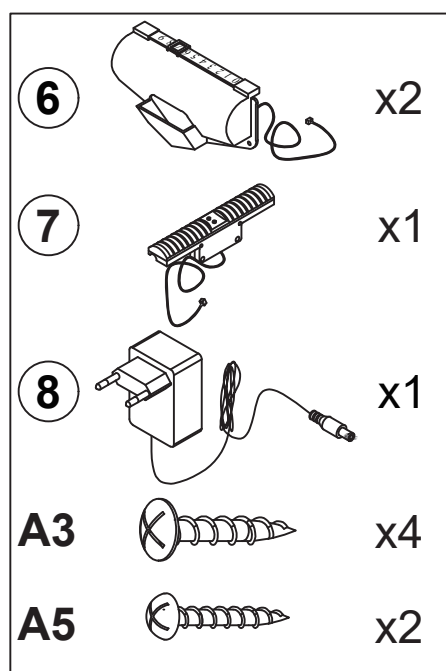

**Fig 5**

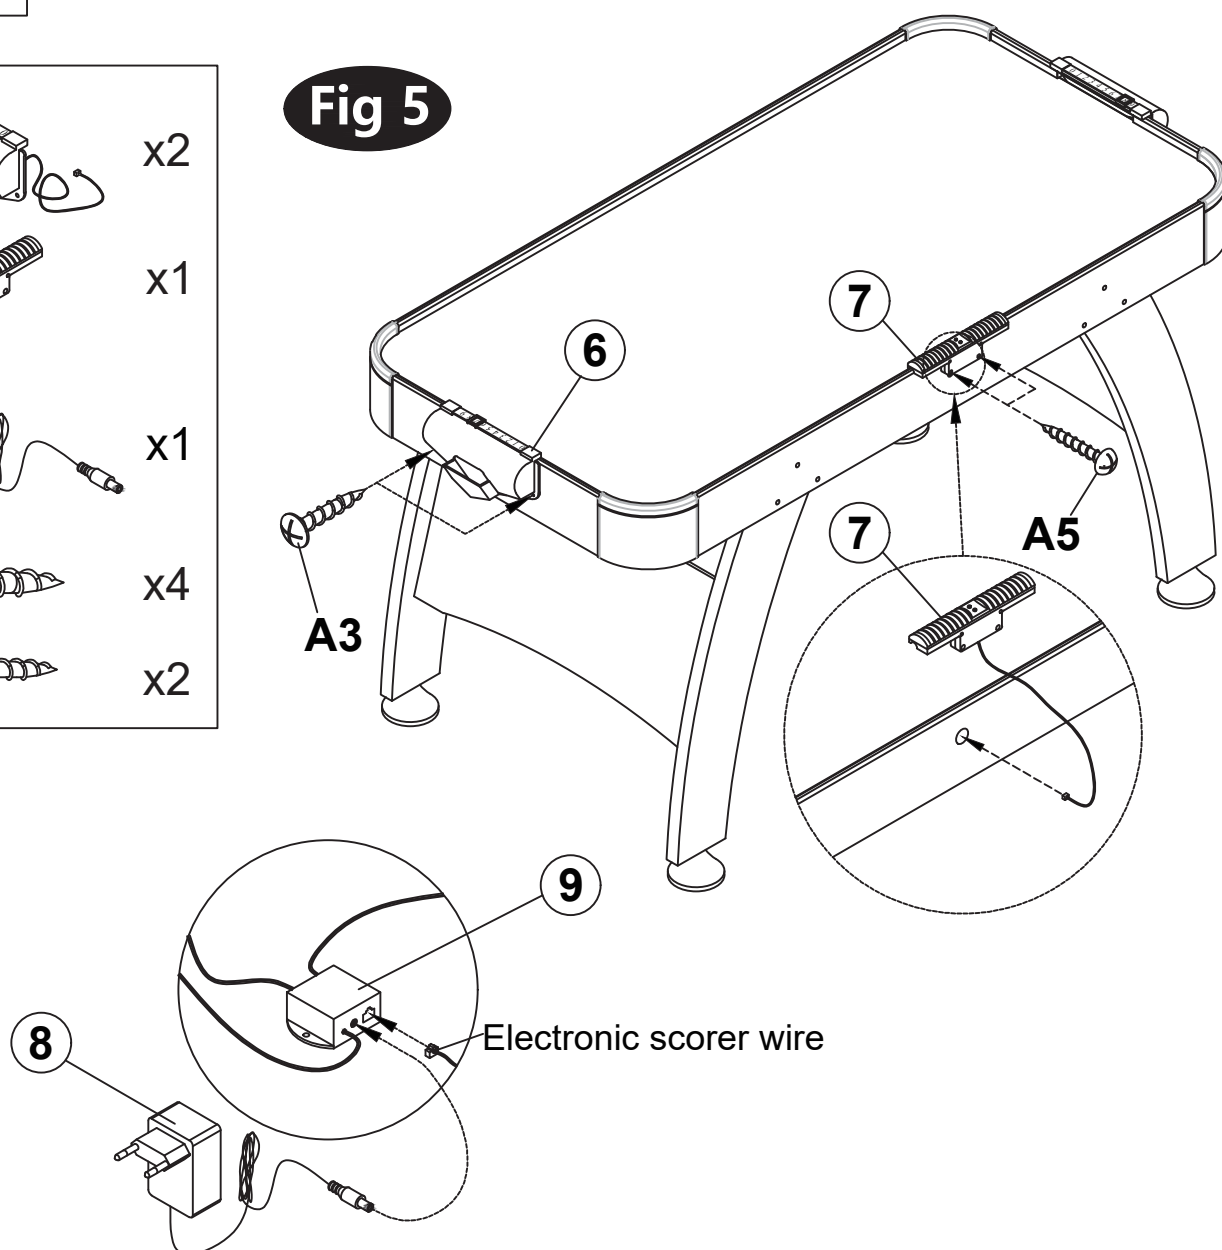


**Fig 5**


10. Attach the Goals Boxes (6) to each end apron using two Screws (A3) per Goal Box. See FIG. 5.
11. Thread the Wire of Electronic Scorer (7) through the opening of the Side Apron to the Connect Box (P4), and then plug the Scorer wire into the Connect Box (P4). See FIG. 6.
12. Attach the Electronic Scorer (7) to the Side Apron using two screw (A5) . See FIG. 5.
13. Insert the Adaptor (9) into the Connect Box (P4). See FIG. 6.

## ENGLISH

### ELECTRONIC CONNECTIONS DIAGRAM (BOTTOM OF TABLE)

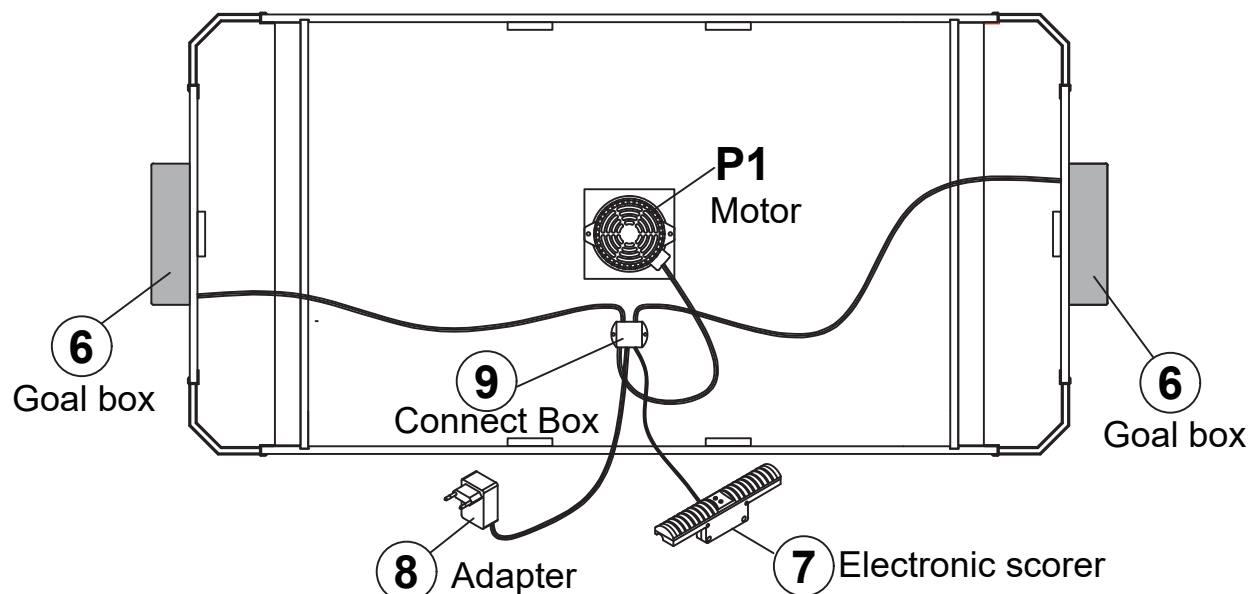

### ELECTRONIC SCORER OPERATION

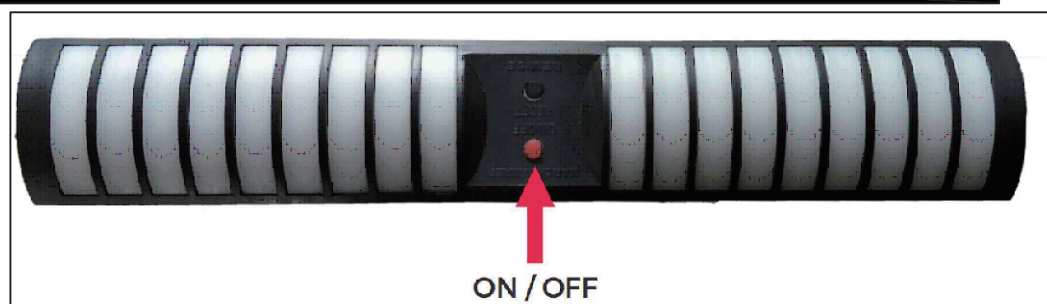

### HOW TO PLAY

1. When the "HOME" player scores a point, the "HOME" indicator will show 1 point; when the "VISITOR" player scores a point, the "VISITOR" indicator will show 1 point.
  2. The first player to reach 9 points wins the game.
  3. After the game, you can press the "RESET" button to start a new game.
- Note:
1. You can press the "RESET" button at any time, to set the scorer back to the beginning status.
  2. You can press "ON/OFF" at any time to turn off the Press "ON/OFF" again to turn it back on.