

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- Failure to follow all instruction listed below may result in electric shock, fire and/or serious personal injury.

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use seasonal product outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided contact a qualified electrician for proper installation.
- This seasonal product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not install or use within 10 feet of a pool.
- Do not use in a bathroom.
- Do not let lamps and/or the inflatable rest on the supply cord or any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product - NOT A TOY! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not install near powerlines and other overhead obstacles.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from the cord, wire, or light string.
- Do not close doors or windows on the product extension cords as this may damage wire insulation.
- Do not cover product with cloth, paper or any material that is not part of the product when in use.
- Do not use an extension cord.
- Do not immerse in water
- This product employs overlord protection (fuse). A blown fuse indicates an overland or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product
- Read and follow all instructions that are on the product or provided with the product.

**⚠ WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

## SAVE THESE INSTRUCTIONS

- This manual contains important safety and operating instructions for power units.

### Use and Care Instructions

- Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged, frayed wire insulation or cords, cracks on the lamp holders or enclosures, or loose connections and/or exposed wires. *Some products do not have lamp holder or enclosure.*
- When not in use, store neatly in a cool, dry location protected from sunlight.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.

- 1 -

- For even better night time illumination, you may choose to place an outdoor approved spotlight in front of your inflatable. (Outdoor approved spotlight not provided). Do not place the bulb too close to the inflatable as it may damage the product.
- Do not place any foreign objects inside your inflatable.

**CAUTION:** Please handle all inflatable products gently.

**CAUTION:** Do not put fingers near any rotating, spinning, or moving pieces on any inflatables. Doing so could result in injury.

**CAUTION:** To reduce the risk of fire, do not deliberately reposition either lamp holder contact. *Some products do not have lamp holder or enclosure.*

**CAUTION:** Do not attempt to inflate during unusually strong winds, rain, or snow. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better conditions.

**CAUTION:** Do not attempt to plug in or use the inflatable into an electrical outlet when it is wet or soaked. It is dangerous to combine electricity and water. Protect the electric fan and power cord from direct exposure to water, to reduce the risk of electrical shock. When the temperature is below 14°F (-10°C), the motor temporarily might not run. Simply bring your inflatable indoors for a short period of time and allow unit to reach room temperature.

### CONTENTS:

- Inflatable Unit: 1 pc (Actual item may vary slightly from photo)
- Nylon Tethers: 2-8 pcs (Quantity may vary)
  - Plastic Stakes: 2-10 pcs (Quantity may vary)
  - Metal Stakes: 0-2 pcs (Quantity may vary, for fan / blower)
  - Fan / Blower: 1 pc


### USER SERVICING INSTRUCTIONS

Risk of fire: Do not replace attachment plug or other parts and accessories. Discard if the attachment plug or parts are damaged.

### INSTRUCTIONS

1. Remove contents from packaging; lay out in a clean, open area free from obstruction or other debris.
2. Before plugging your inflatable into an electrical outlet, please make sure all zippers are closed. Note: All inflatables with connectors (plastic coated electrical clips) must be connected together before plugging into an electrical outlet.
3. Check to make sure inflatable is not tangled together. If product is tangled, please do not plug into electrical outlet. Simply untangle inflatable on a flat surface then proceed to plug into electrical outlet to inflate once straightened out.
4. Plug into GFCI electrical outlet. Be sure to inflate in a space that will allow the inflatable to expand without any obstructions.
5. Ensure that there is no fabric or other material that will block the air intake of the fan.
6. Once fully inflated, clip the tethers to each of the nylon loops/ring grommets on the side of the inflatable (Please see illustration #1).
7. Insert the stakes into the ground and attach the tethers and fan (Please see illustration #2).
8. To deflate simply unplug and open the zipper. Do not unplug by pulling on the cord. Allow inflatable to fully deflate and dry
9. Store in a dry location when item is not use.

- 2 -

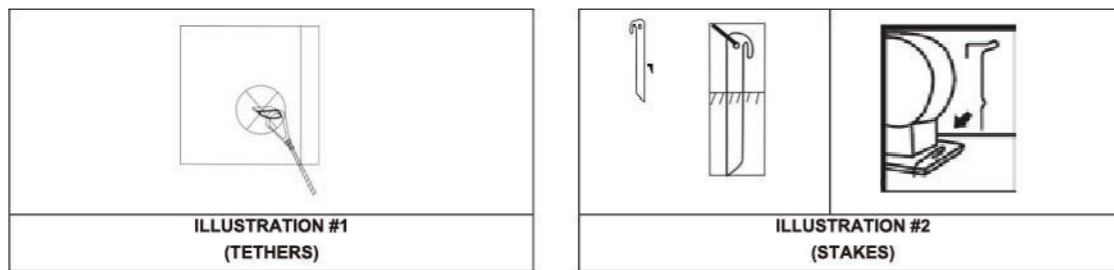

**CAUTION:** Do not place near fire, electric heaters, gas, candles, or any other similar sources of heat.

**CAUTION:** Nylon tethers that are used for securing the inflatable in place should not be played with by any children. Tethers can be circled around the child's neck and cause injury.

### TROUBLE SHOOTING CHECKLIST:

If the inflatable is not inflating, the problem may be:

- The power source is interrupted or the cord may be unplugged or fuse is blown.
- Debris may be lodged in the motor.
- The zipper may not be securely closed.
- If the weather conditions are under 14°F (-10°C), the motor may temporarily not run. Simply bring back the unit inside and allow reaching room temperature.
- If the lights are not working, the problem may be (only apply to products with lamp holder):
  - The power source is interrupted or the cord may be unplugged.
  - The light bulb may need replacement.

The unit is torn

- You may hand sew rips with any type of thread or use clear packing tape to cover the tear


**⚠ WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded. This item is not a toy and should be used for decorative purposes only.

### REPLACING THE FUSE

**CAUTION:** Risk of Fire: Replace only with same size and type of fuse

**CAUTION:** Risk of Fire: Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades. (See illustration #3)
3. Remove fuse carefully.
4. Risk of fire. Replace fuse only with 5 Amp Max, 125 Volt (provided with product).
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

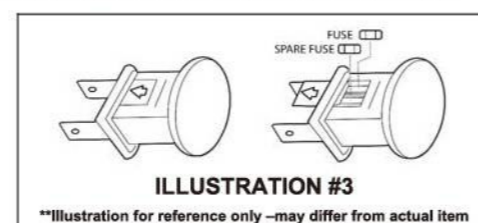

- 3 -


### REPLACING THE BULB (only apply to products with lamp holder)

**CAUTION:** To reduce the risk of overheating, replace burned-out bulbs promptly. Only use C7, 7-Watt Max Candelabra-base 120 Volt UL-Classified bulbs.

**CAUTION:** Unplug the unit and allow the bulb to completely cool before you replace the bulb. Do not touch the bulb when the power is On. The bulb is extremely hot.

1. Grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open the zipper on the inflatable unit.
3. Open the protective bulb cover carefully by pressing down on the two locking side tabs simultaneously.
4. Hold the upper part of the candle with one hand and turn the bulb clockwise to get it off with the other hand.
5. Replace lamp with same type of lamp.
6. Do not over-tighten the lamp as this may damage the lamp or lamp holder.

### USAGE PRECAUTIONS

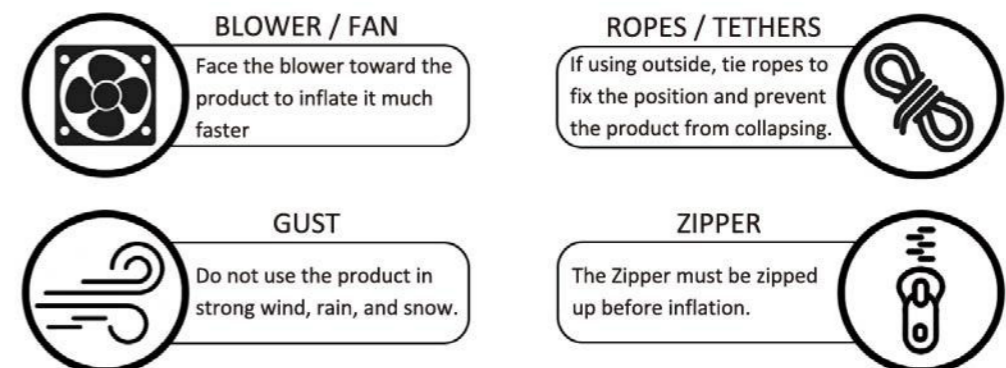

- 4 -