


edishinē

Chandeliers

SKU: HCDL18A
[Instruction Manual]

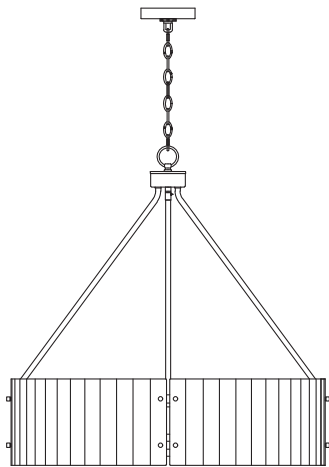

Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

V51224

Warning:

Risk of fire. Min 167°F/75°C supply conductors. Consult a qualified electrician to ensure correct installation. Before installation, please turn off the main power of the circuit breaker to prevent possible electric shock.

Installation Instructions

FIG.1. Turn the wall switch to the "OFF" position. Depending on which type of fuse box in your home:

FIG.2. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or turn off the individual switch that supplies power to where the fixture will be installed.

OR

FIG.3. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or unscrew the fuse that supplies power to where the fixture will be installed.

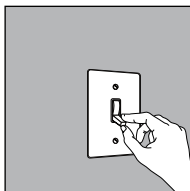


FIG.1 WALL SWITCH

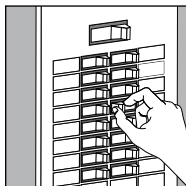


FIG.2 BREAKER PANEL

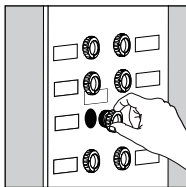
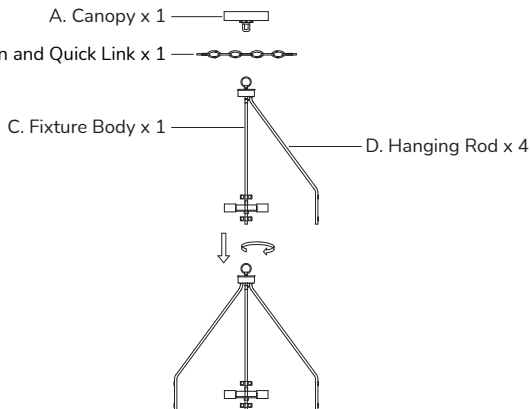









FIG.3 FUSE BOX

PACKING LIST




1. Pass the power cord of Fixture Body (C) through Chain and Quick Link (B) and Canopy (A).
2. Spread out the four lamp arms of Hanging Rod (D) evenly.

INSTALLATION KIT

AA	x1	BB	x2	CC	x1	DD	x3
							
Mounting Bracket		Outlet Box Screw		Ground Screw		Wire Nut	
EE	x32	FF	x16	GG	x4		
							
Silicon Washer		Knurled Screw		Glass Shade			

1. Silicon Washer (GG) have some extra pieces for back-up.
2. Ground Screw (CC) have been pre-installed on Mounting Bracket (AA).

INSTALLATION

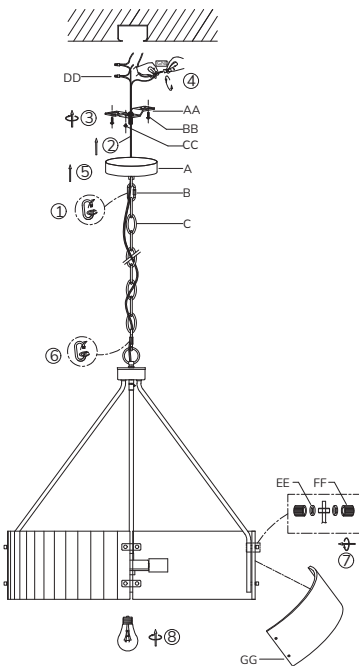

Step 1:

Loosen the Quick Link (B) fastener and remove the Canopy Loop.

Step 2:

Pass the wire through the Chain (B) and extend it to the hanging board until it reaches the ceiling.

Step 3:

Take off the screws from the outlet box, and secure the Mounting Bracket (AA) onto the box with the screws taken off or Outlet Box Screw (BB).

Step 4:

1. Wrap the ground wire from the outlet box around the Ground Screw (CC) on the Mounting Bracket (AA), and then connect the ground wire

from the fixture to the ground wire from the outlet box.

2. Connect the wires from the fixture to the house supply wires, neutral wire (white) to neutral wire, and hot wire (black) to hot wire.

3. Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

Step 5:

Tie Canopy (A) tightly to the ceiling, tighten the hanger, and lock Quick Link (B).

Step 6:

Link Fixture Body (C) with Quick Link (B).

Step 7:

Use Knurled Screw (FF) to secure the glass to the I-beam, and apply Silicon Washer (EE) to both the inside and outside surfaces of the Glass Shade (GG).

Step 8:

E26 Bulbs X 8

(Max 60W each, not included)

Specifications

- Input Voltage: 120VAC 60Hz
- Max.load Power: Incandescent Bulb 60w
- Socket Type: Standard Medium E26

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.



Made in China