


Owner Manual

The basics

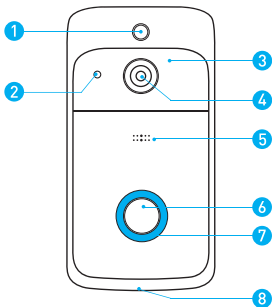

1. Motion Sensor

2. Light Sensor

3. 5 Hidden Infrared Lights


4. Wide-angle Lens

5. Microphone

6. Doorbell / Reset Button

7. Indicator Light

8. Speaker

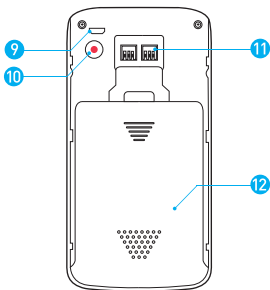


9. Micro USB Port
For Battery Charging

10. Restart Button

11. AC 8V~24C
Power Interface

12. Battery Door

 Indicator Light



Indicator light flashing RED

The device is reconnecting to the Wifi network. Please wait

 


Indicator light flashing RED and BLUE alternately




Low battery. Please recharge your batteries.

In the box



Video Doorbell

 

Mounting Bracket



User Manual



5 Anchors



5 Mounting Screws



Security Screw /
2 Hardwire Screws



Chime
(Optional)




3 Batteries
(Optional)




MicroSD Card
(Optional)

Charge batteries


1. Remove the battery tab.

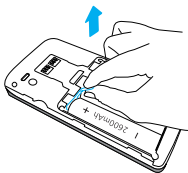

2. Insert batteries positive end facing up, as shown on the device.

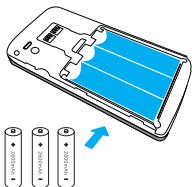

3. Fully charge batteries by connecting your device to a USB charger using a Micro USB cable. It takes about 14 hours for batteries to fully charge.

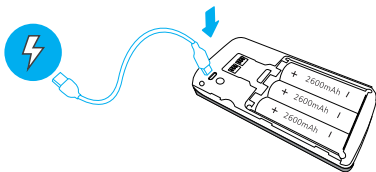


WARNING: Lots of events

If your device is capturing an excessive number of events every day, you might need to recharge your battery sooner. Plus, the battery is also drained each time you use the Live View to look or speak through your doorbell. To prevent excessive events, you can adjust your motion settings to a lower sensitivity

Connect the wires (optional)

Connect the wires coming out of your wall to the screws on the back of your doorbell. Either wire can connect to either screw. The order doesn't matter.

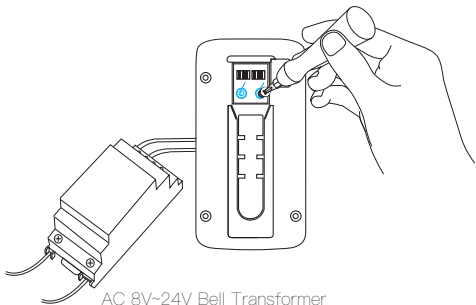


Set up your Video Doorbell

Step 1

Scan the QR codes below or search for the app on the Apple App Store or Google Play to download it. The app will walk you through setting up your doorbell.


Step 2

Tap + .

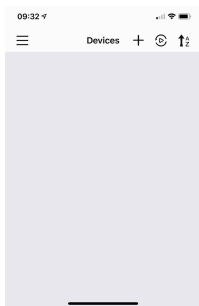

Step 3

Tap Doorbell Scan and select Video doorbell.

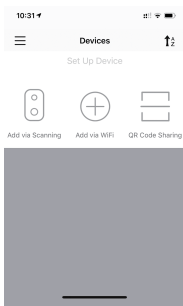


Step 4

Press and hold the doorbell select Video doorbell button for 8 seconds until the doorbell light is flashing red. Tap Next.



Step 5


Tap Yes.

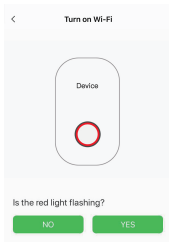


Install your Video Doorbell

Mark drill holes and use a bit to drill holes in your wall. Insert anchors and secure your doorbell with a security screw and mounting screws.


Step 1

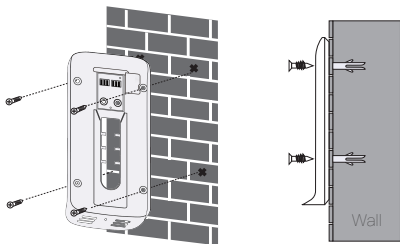


Step 2

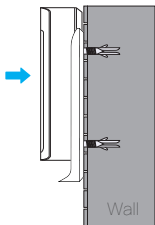

Step 3

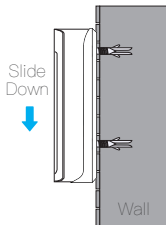

Step 4

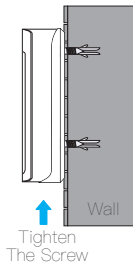

Frequently asked questions

How to RESET the doorbell

Press and hold the Doorbell Button for 8 seconds. Then follow the in-app instructions to finish your Wi-Fi setup.

How to share the device with my family

Open the app. From the home page, tap the Share icon. Tap Share via Email or Share via QR Code. You can share the device with up to 8 users.

Share via Email:

The new user has to download the app and create an account with the same email address which the device owner has shared with. Log in to the account and you'll see the shared device.

Share via QR Code:

1. Open the App on a new user's smartphone.
2. From the home page, tap +.
3. Tap **QR Code Sharing**, then scan the QR code the device owner generated before.
4. You will see **Share successful**, then tap **Confirm**.

How many users can view the video at the same time?

Up to 3 users may view the video feed, but only 1 user can use the direct intercom. Both iOS and Android are compatible.

Why is my Wi-Fi signal poor on my device?

Your device may be too far away from your wireless router or you may have some obstructions in between that reduce signal strength. You might try repositioning your router or getting a signal extender/repeater for your wireless router.

Is 5GHz Wi-Fi supported?

No. Only 2.4GHz Wi-Fi is supported.

How to adjust Motion Detection Sensitivity

1. From the home page, tap the settings icon.
2. Tap motion.

Motion Detection Sensitivity

- High: Records and notifies you about every motion. Shortest battery life.
- Medium: Records and notifies you about motion less often. Standard battery life.
- Low: Records and notifies you about motion even less often. Maximum battery life.

How to enable Notifications on my phone

To do this, you need to give permission for the app to access your microphone and enable notifications. Follow these steps to enable notifications.

1. Open Settings. Go to app permissions and select Notifications.
2. Make sure all switches are on.

What size MicroSD card should I use?

This device is compatible with 4GB, 8GB, 16GB, 32GB, and 64GB capacity microSD cards. We recommend only purchasing name brand microSD cards through official resellers.


Set up your Wireless Chime (Optional)

Connect the video doorbell to the doorbell chime, and get instant alert in your home when someone rings the doorbell. The chime plugs into any wall outlet, you can place it anywhere in the home.

NOTICE:

The video doorbell is only compatible with our wireless chime, and not compatible with traditional doorbell chimes. The wireless chime is optional. If it is not installed, doorbell notifications will still go directly to the app.

The Basics


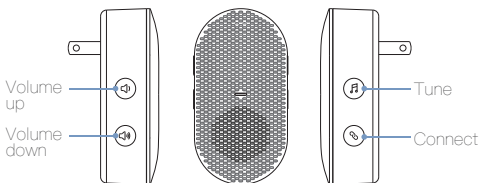


Getting started

Set up your chime with the video doorbell.


Step 1

Before the setup process, be sure your video doorbell has connected to your phone and plug in your chime.

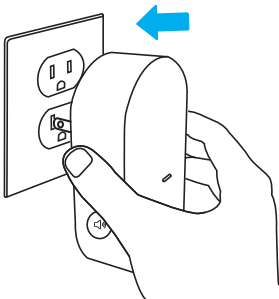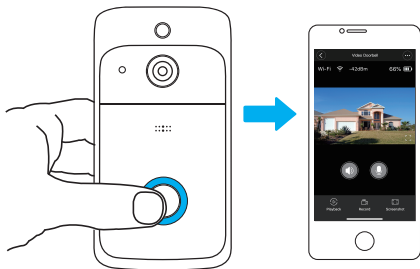

Step 2

 Press the Connect Button.




Step 3

Press the Doorbell Button to pair your doorbell to the chime.



Step 4

 Press the Tune Button to cycle through 38 different tunes and select a tune.



Step 5

Press the Doorbell Button again to make sure it's the tune you selected.

