 
 

Assembly Instructions

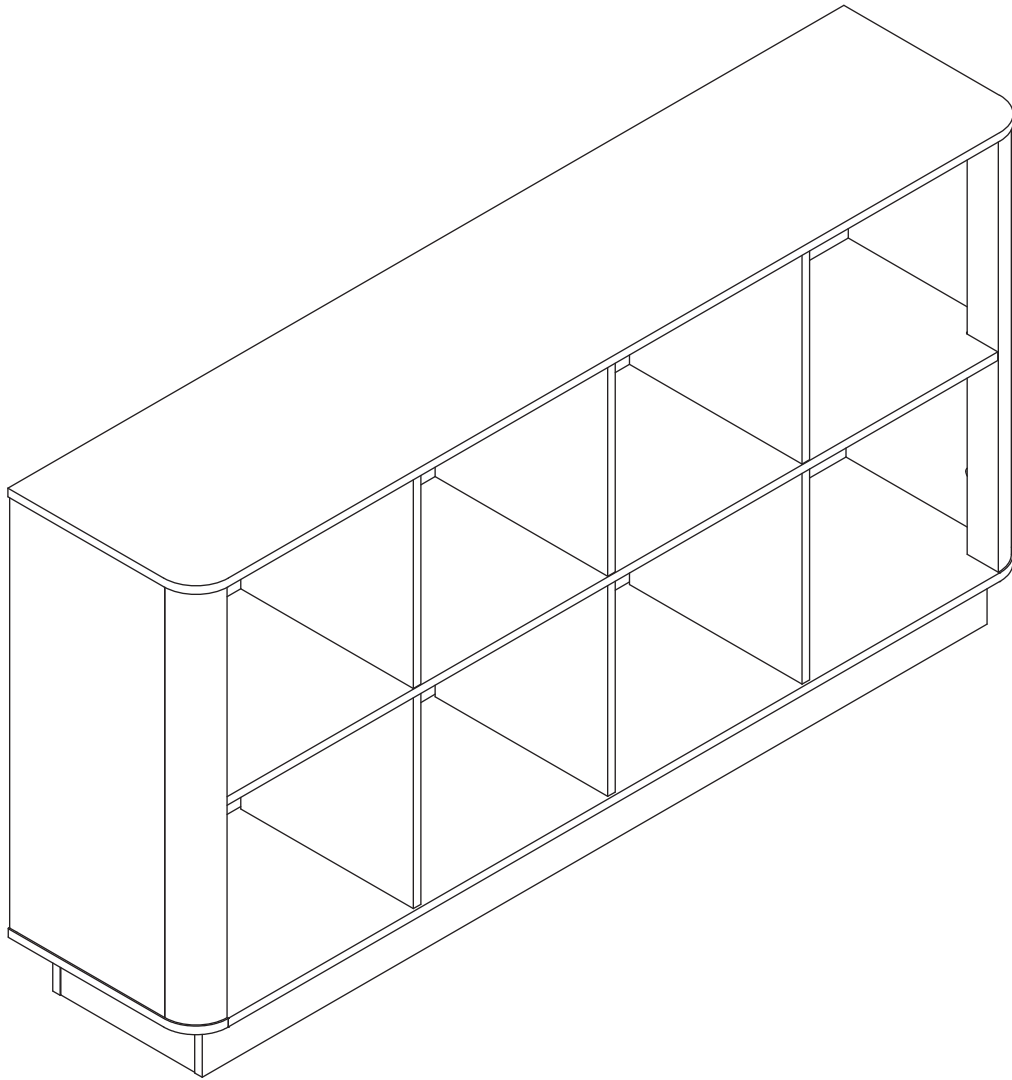

 
**DESIGN
TRANSFORMS
LIFE**

 
Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.













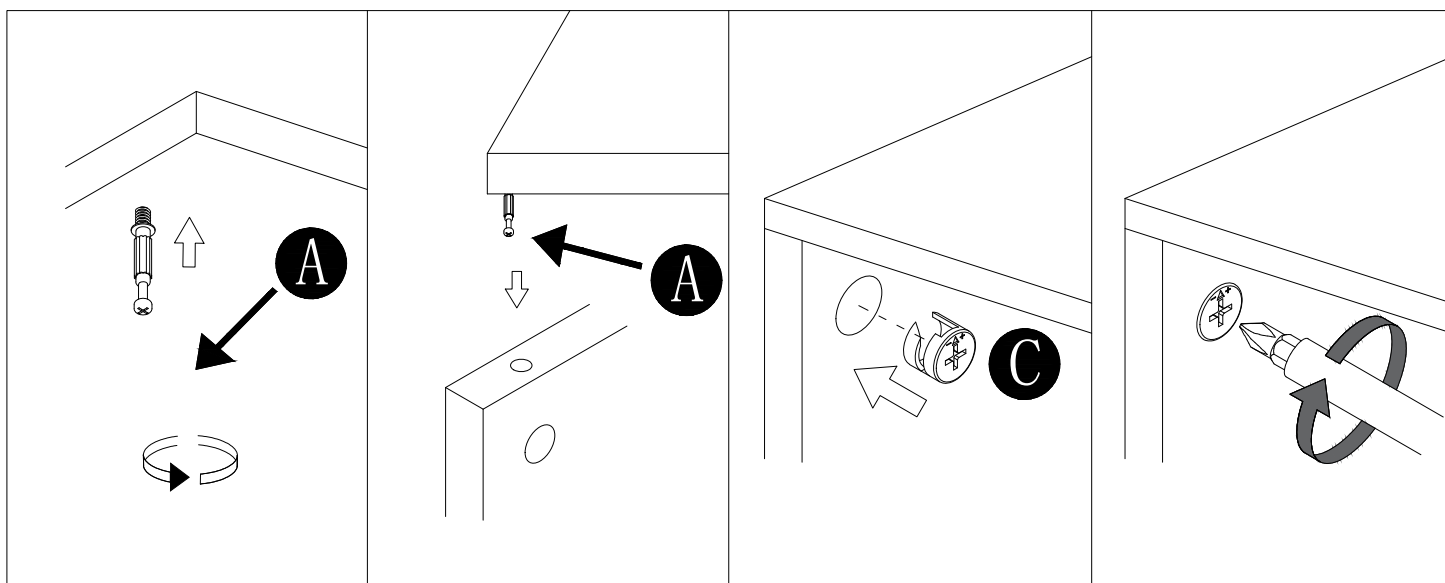


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.





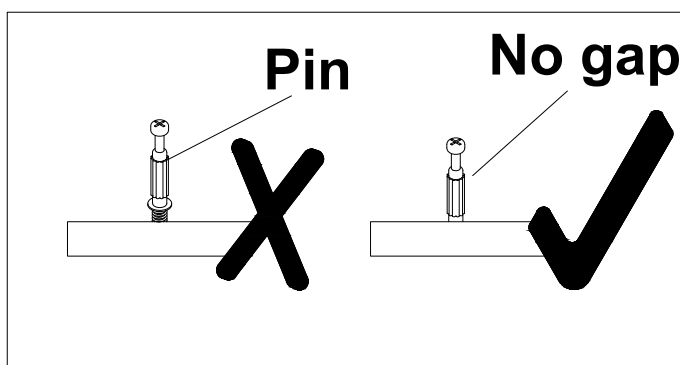


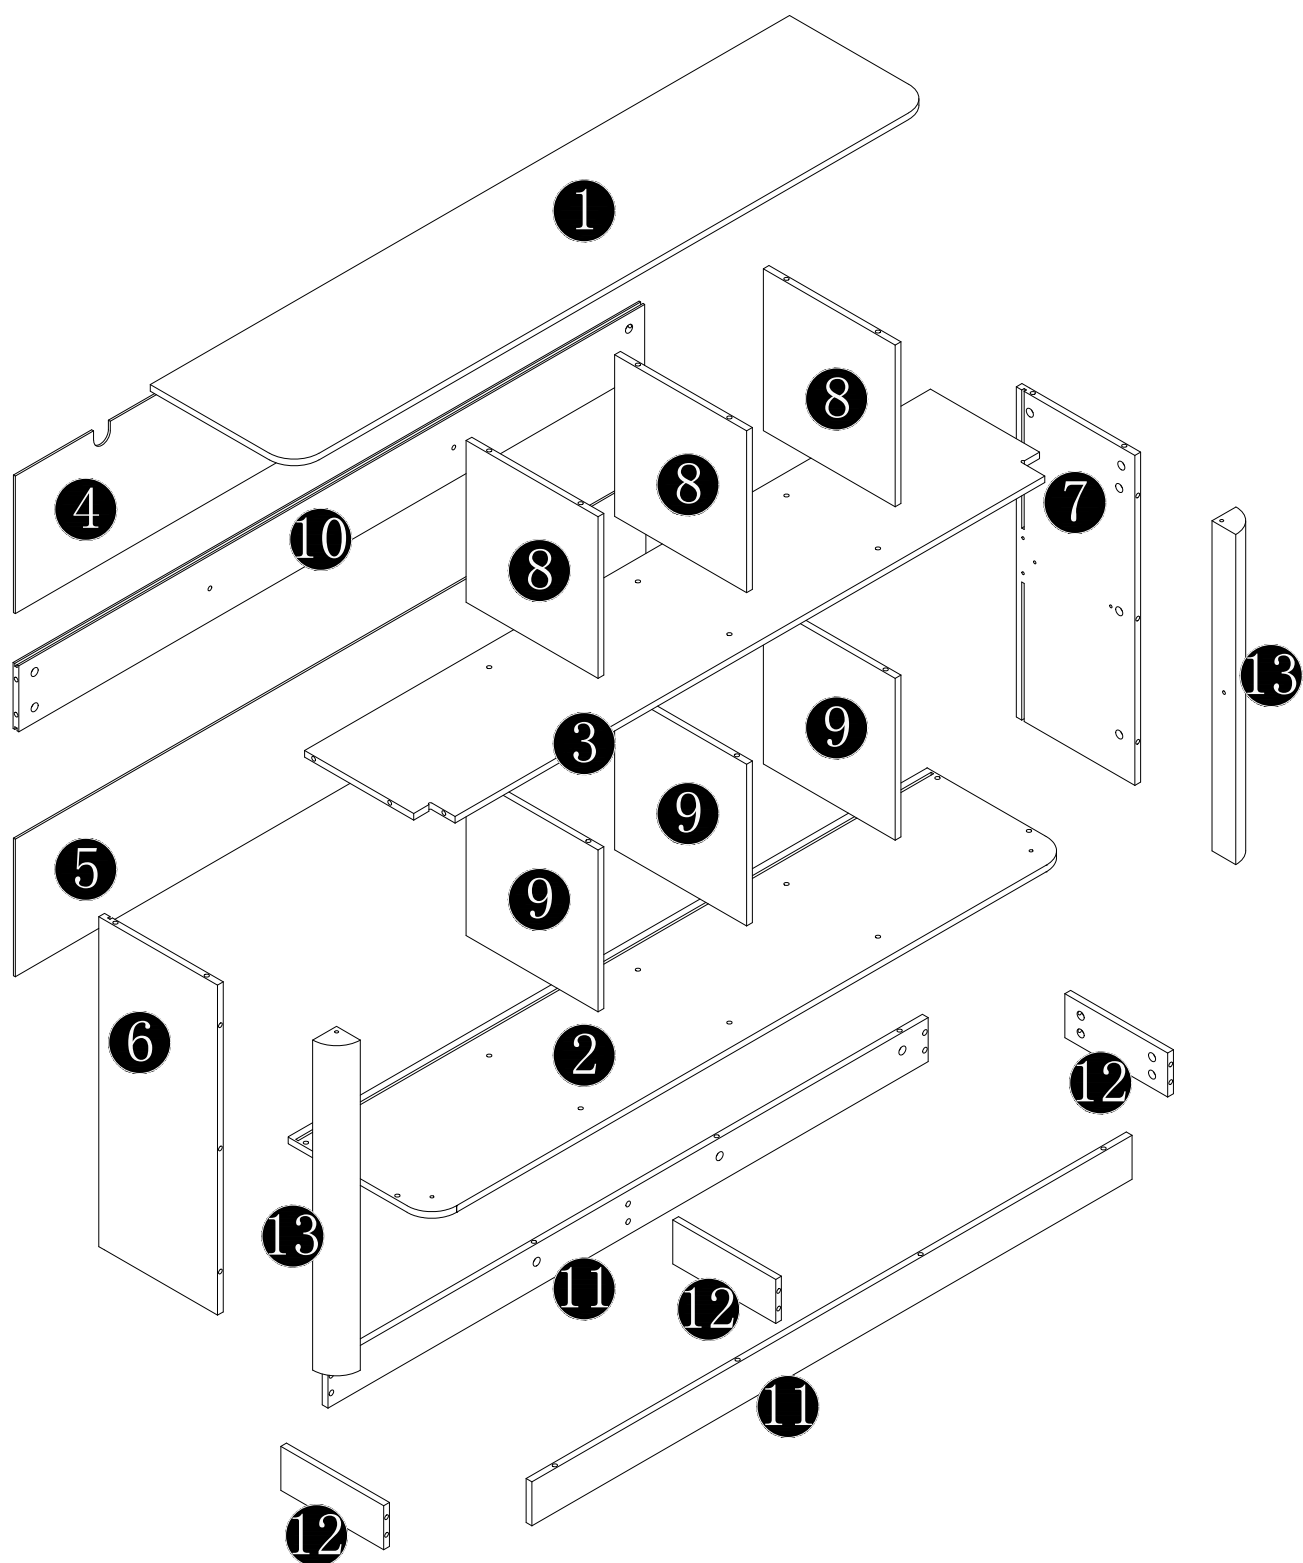



Parts & Hardware List

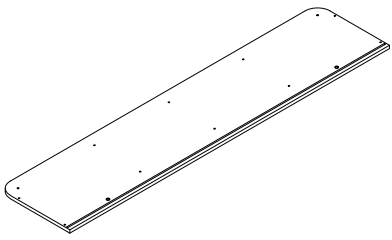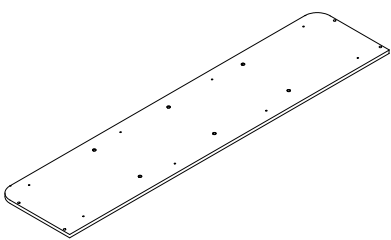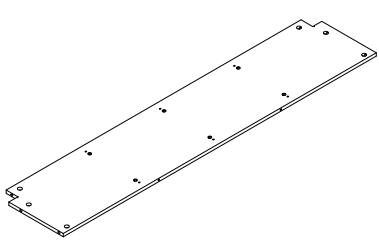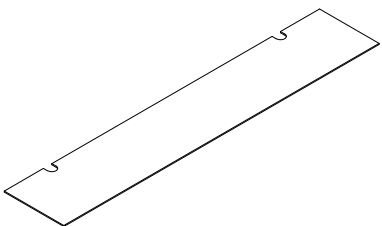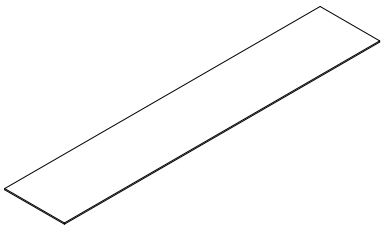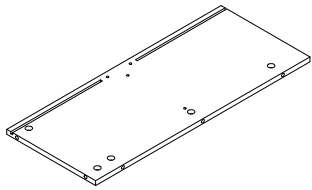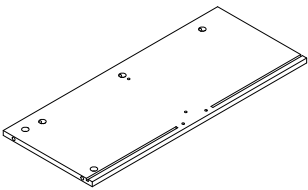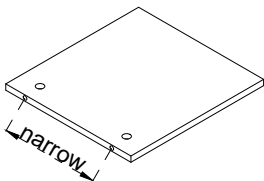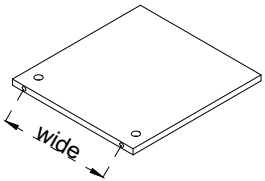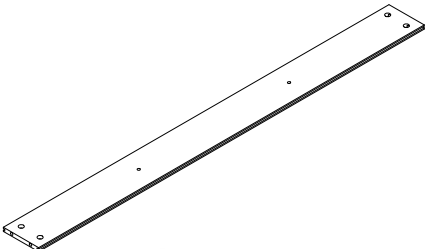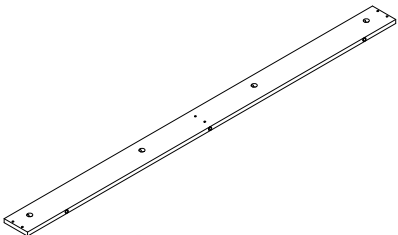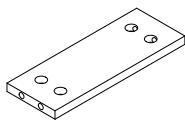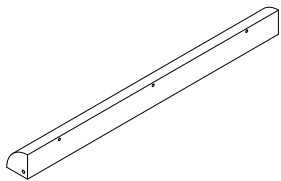              1 1pc	 2 1pc	 3 1pc
 4 1pc	 5 1pc	 6 1pc
 7 1pc	 8 3pcs	 9 3pcs
 10 1pc	 11 2pcs	 12 3pcs
 13 2pcs		

    
 
Parts & Hardware List

 A 52pcs	 M7X50MM B 18pcs	 C 52pcs	 Ø6X30MM D 4pcs	 M3. 5X14MM E 16pcs
 X 2pcs	 Z 2pcs			

 
 
1

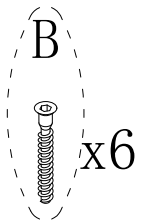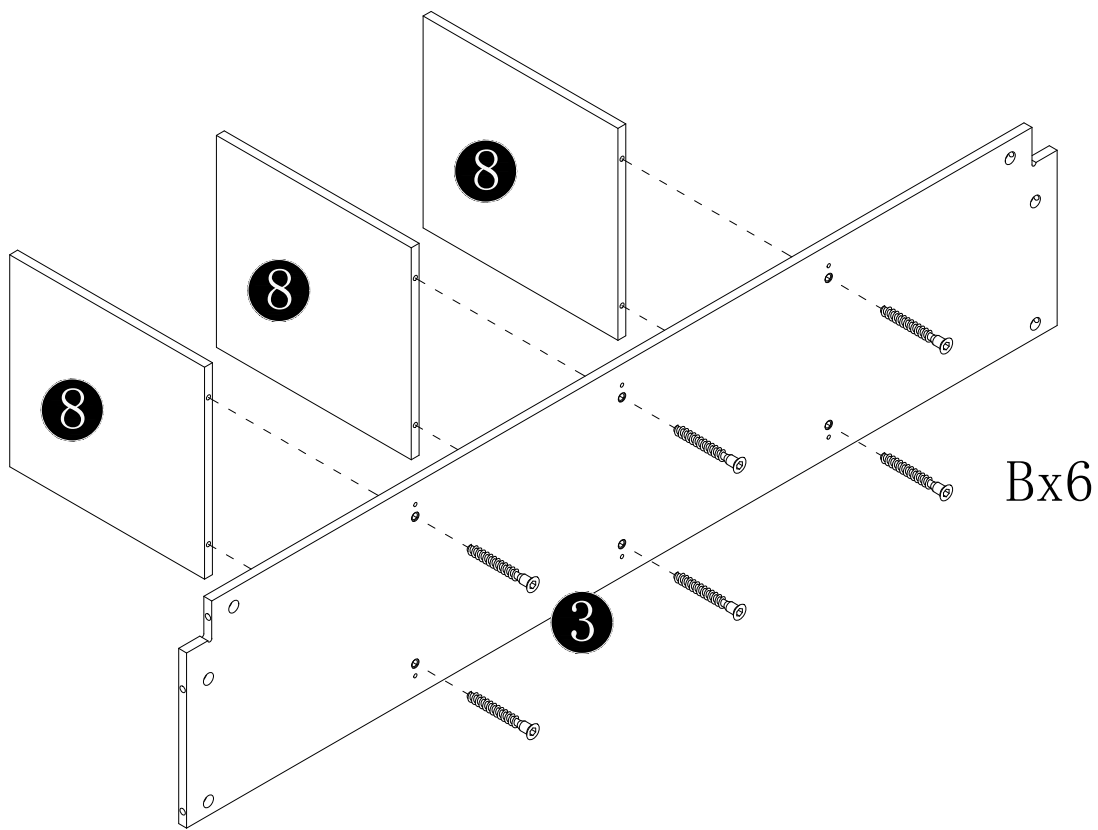



2

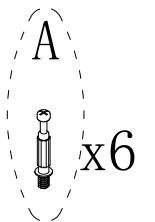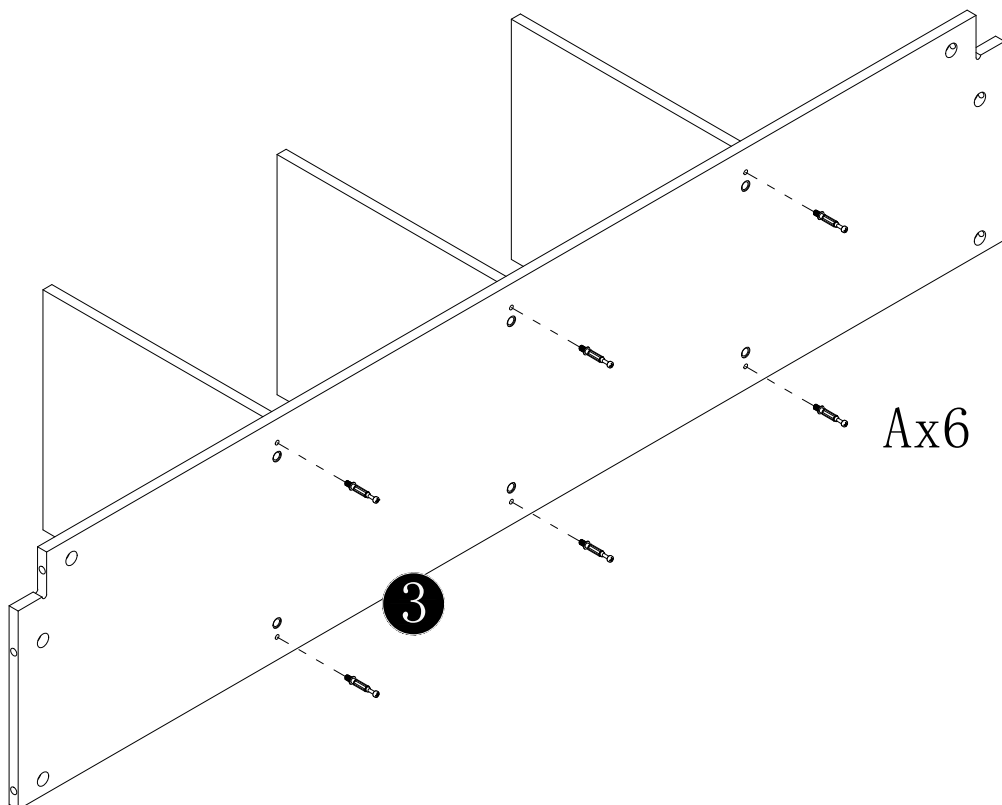  



3

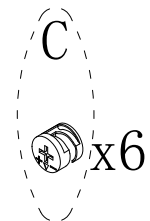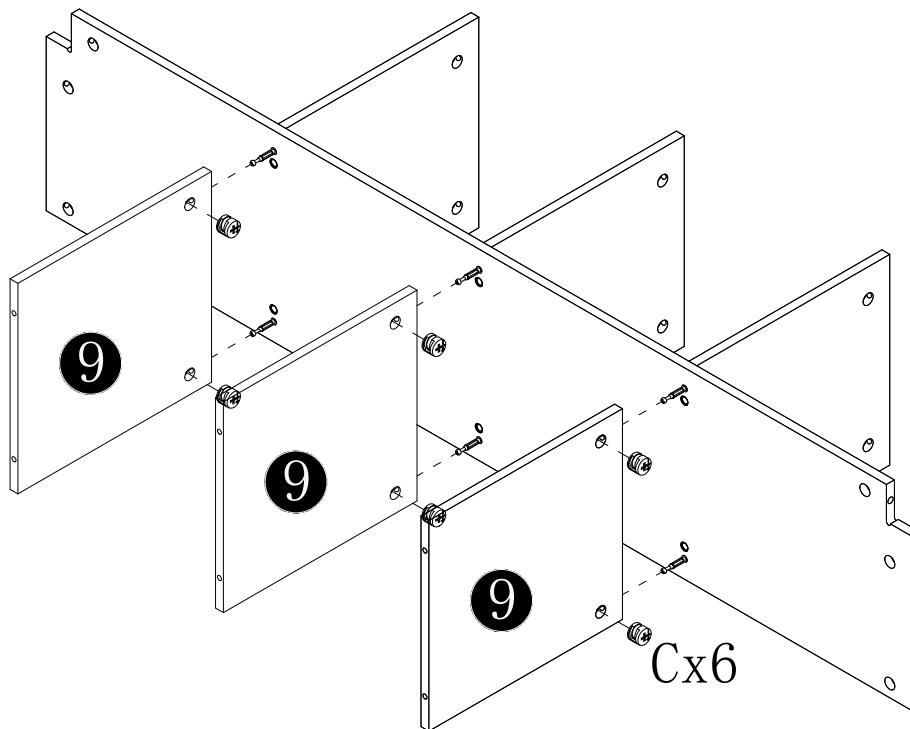  

4

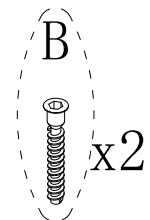 
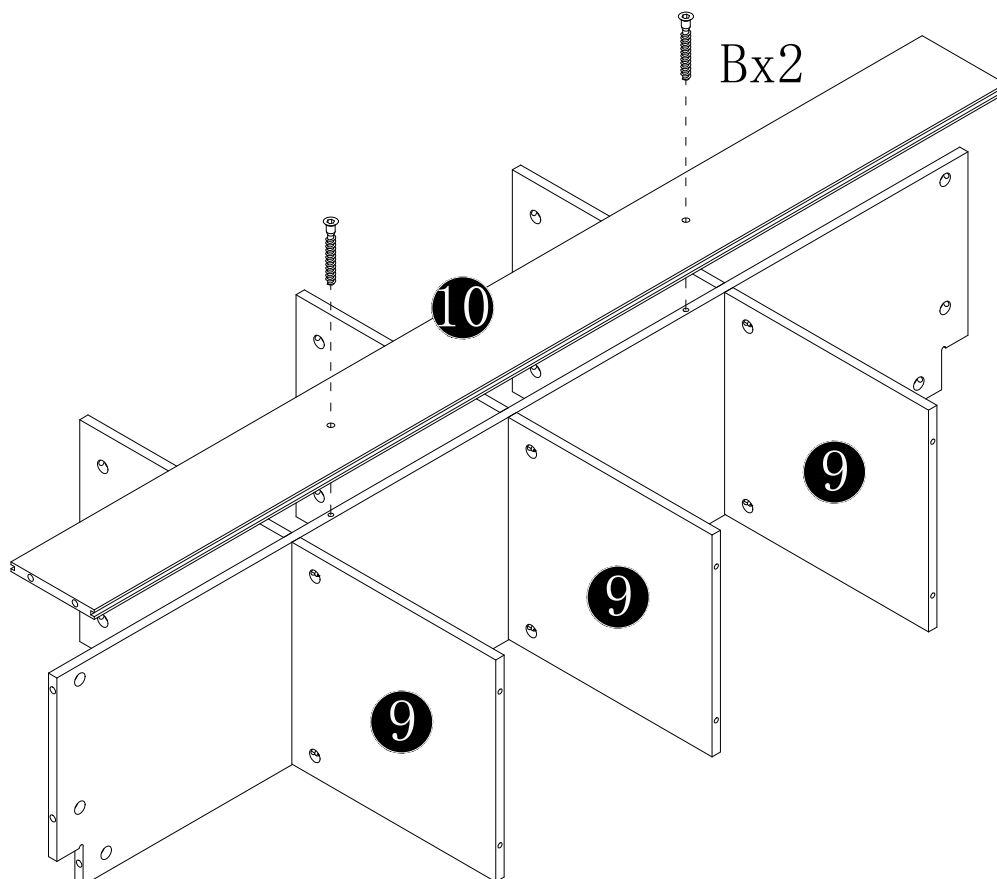 


5

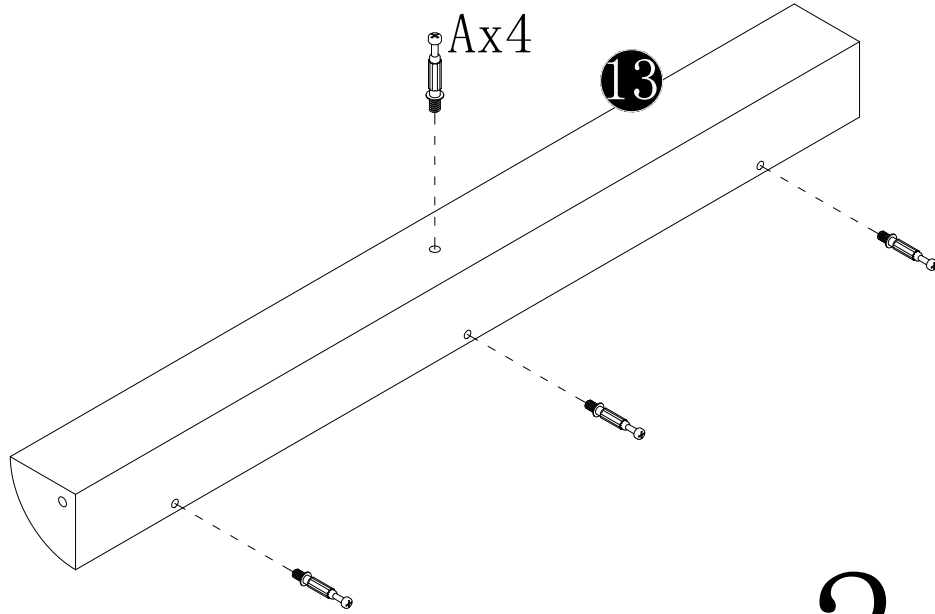 
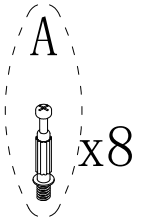 


x2

 
 
6

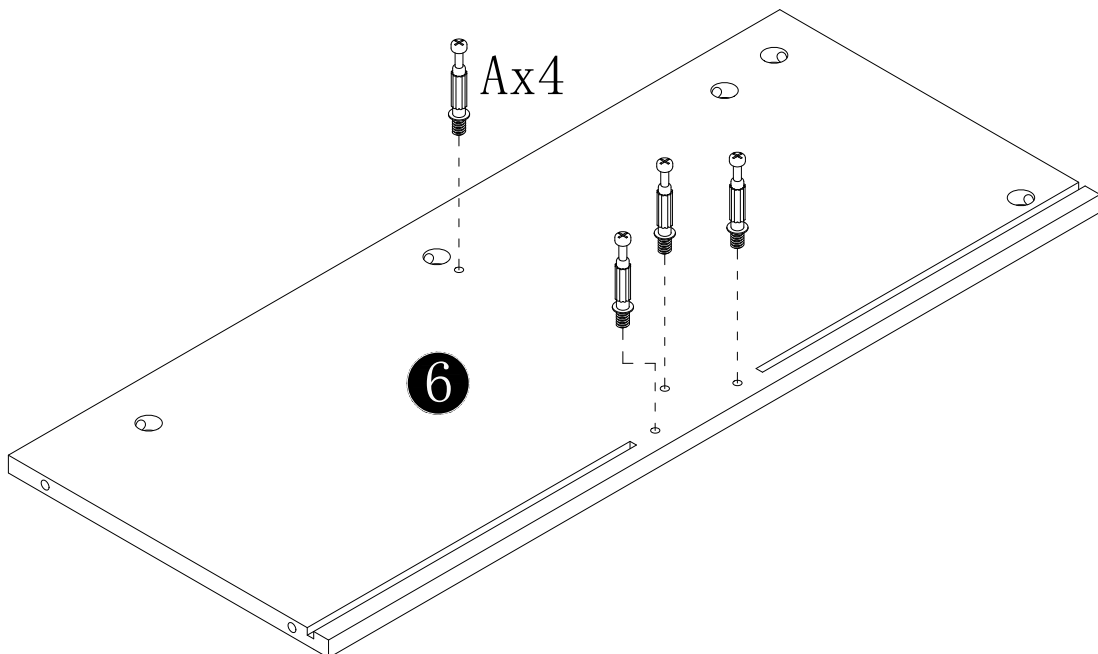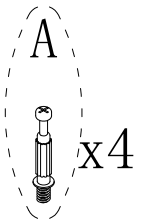


7

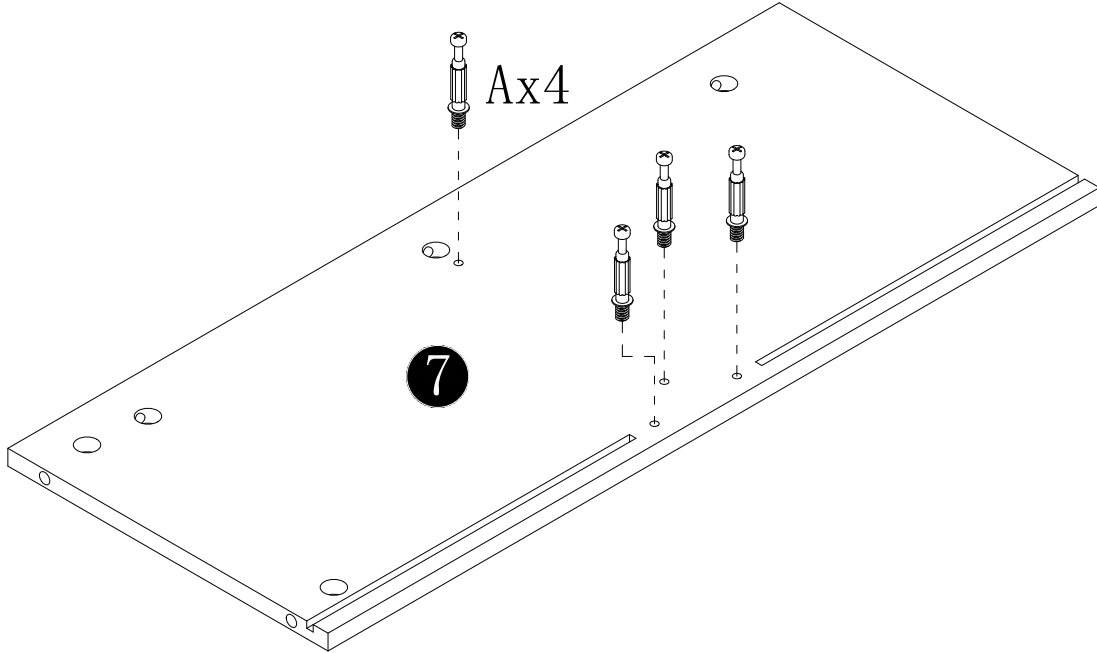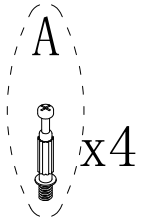  


8

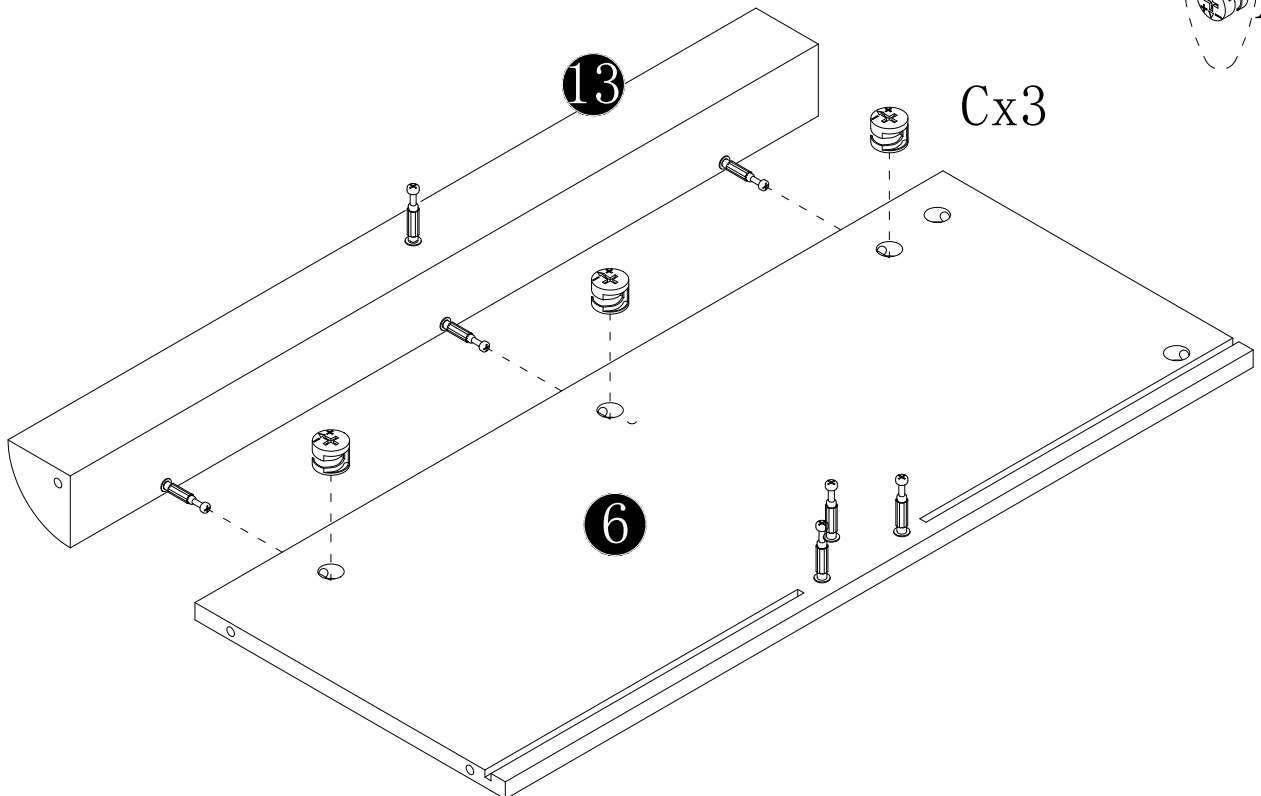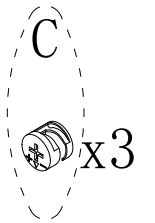  


9

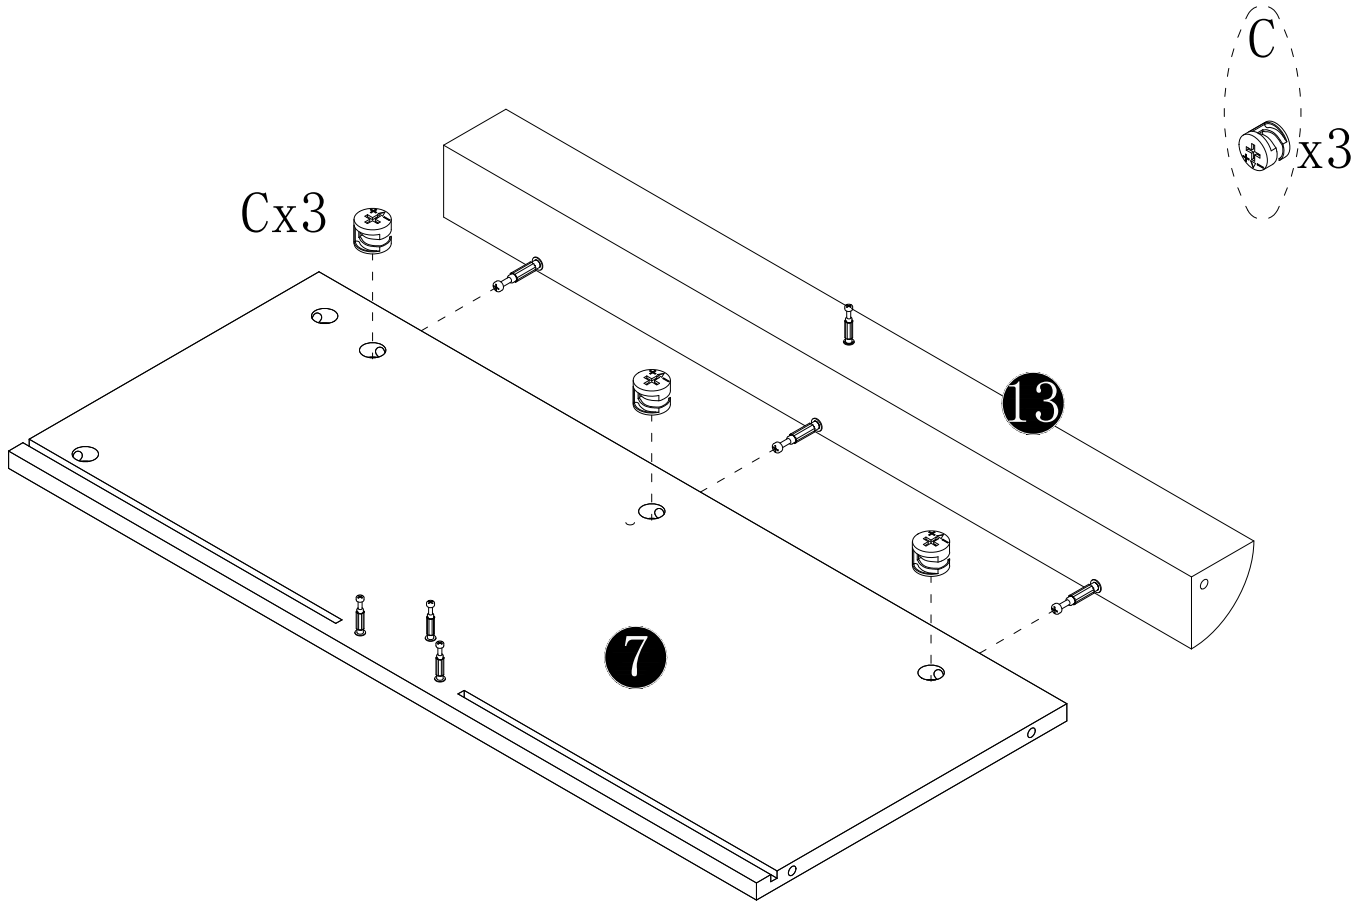 


10

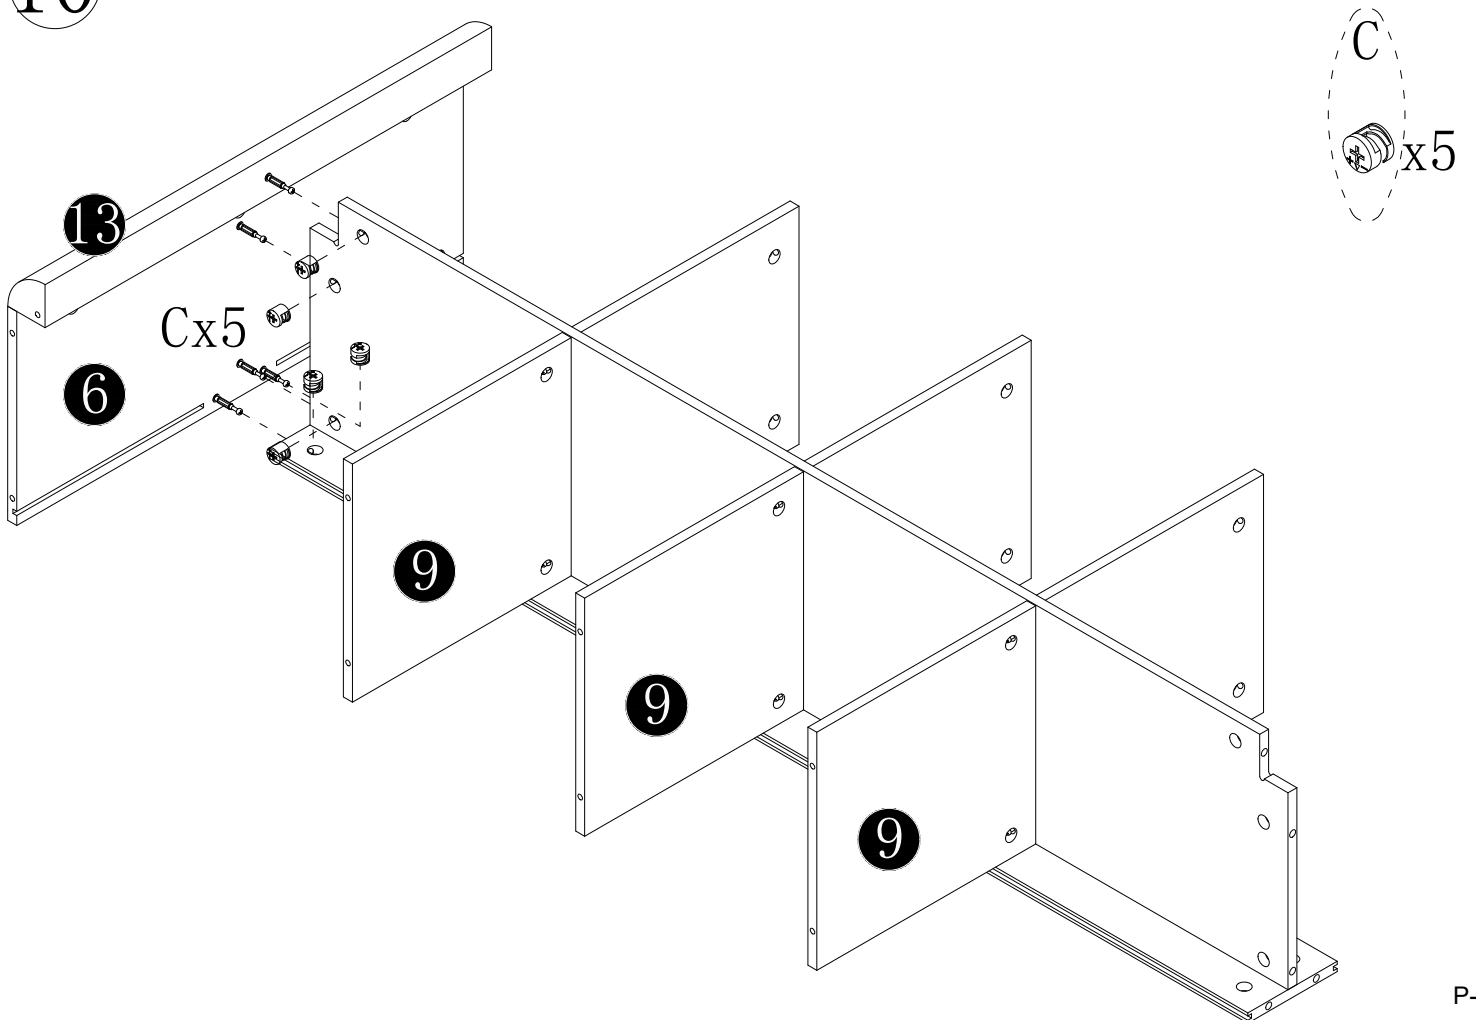 


11

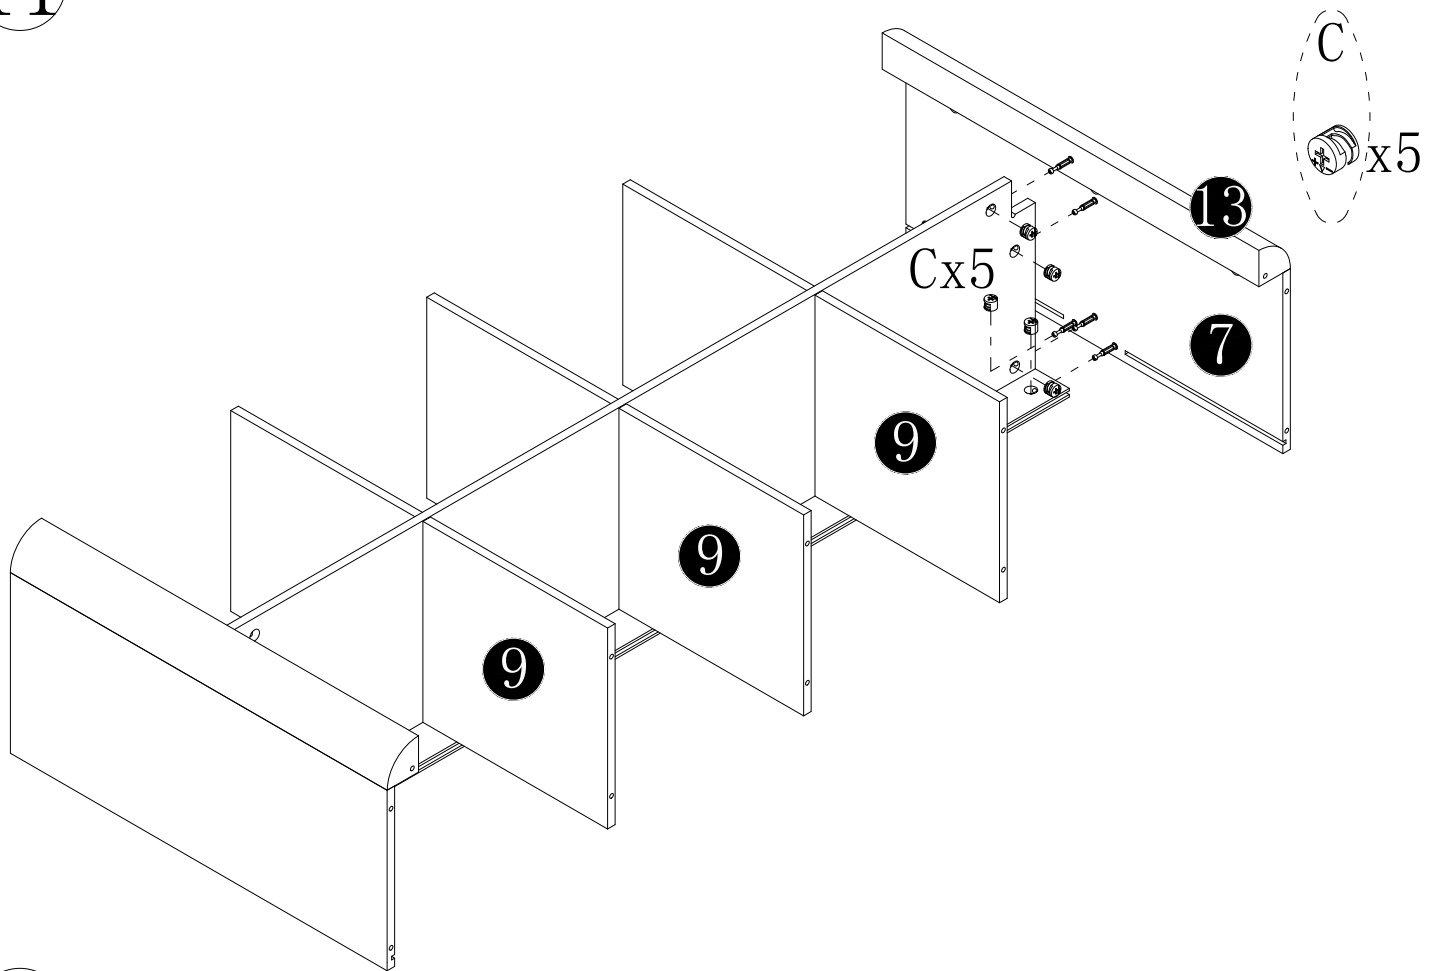 


12

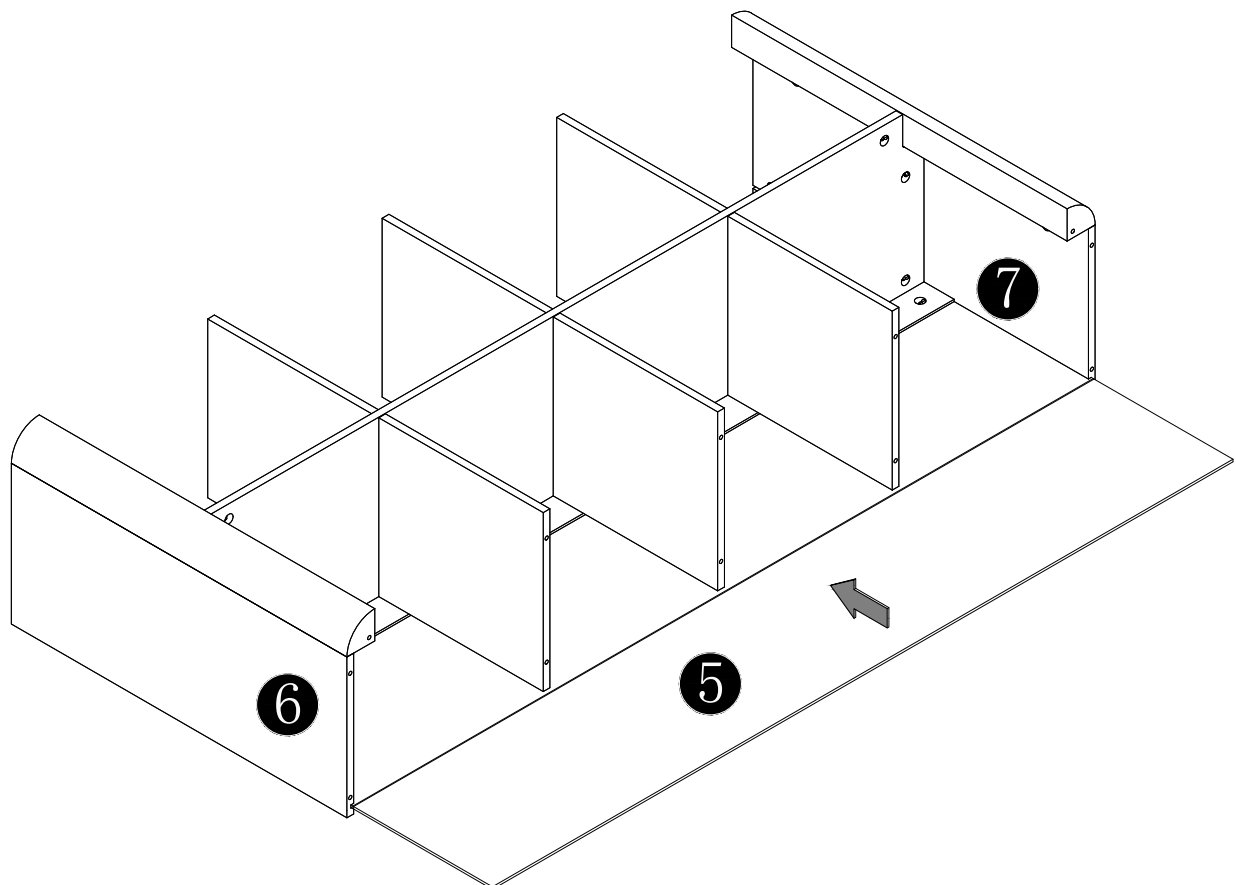 


13

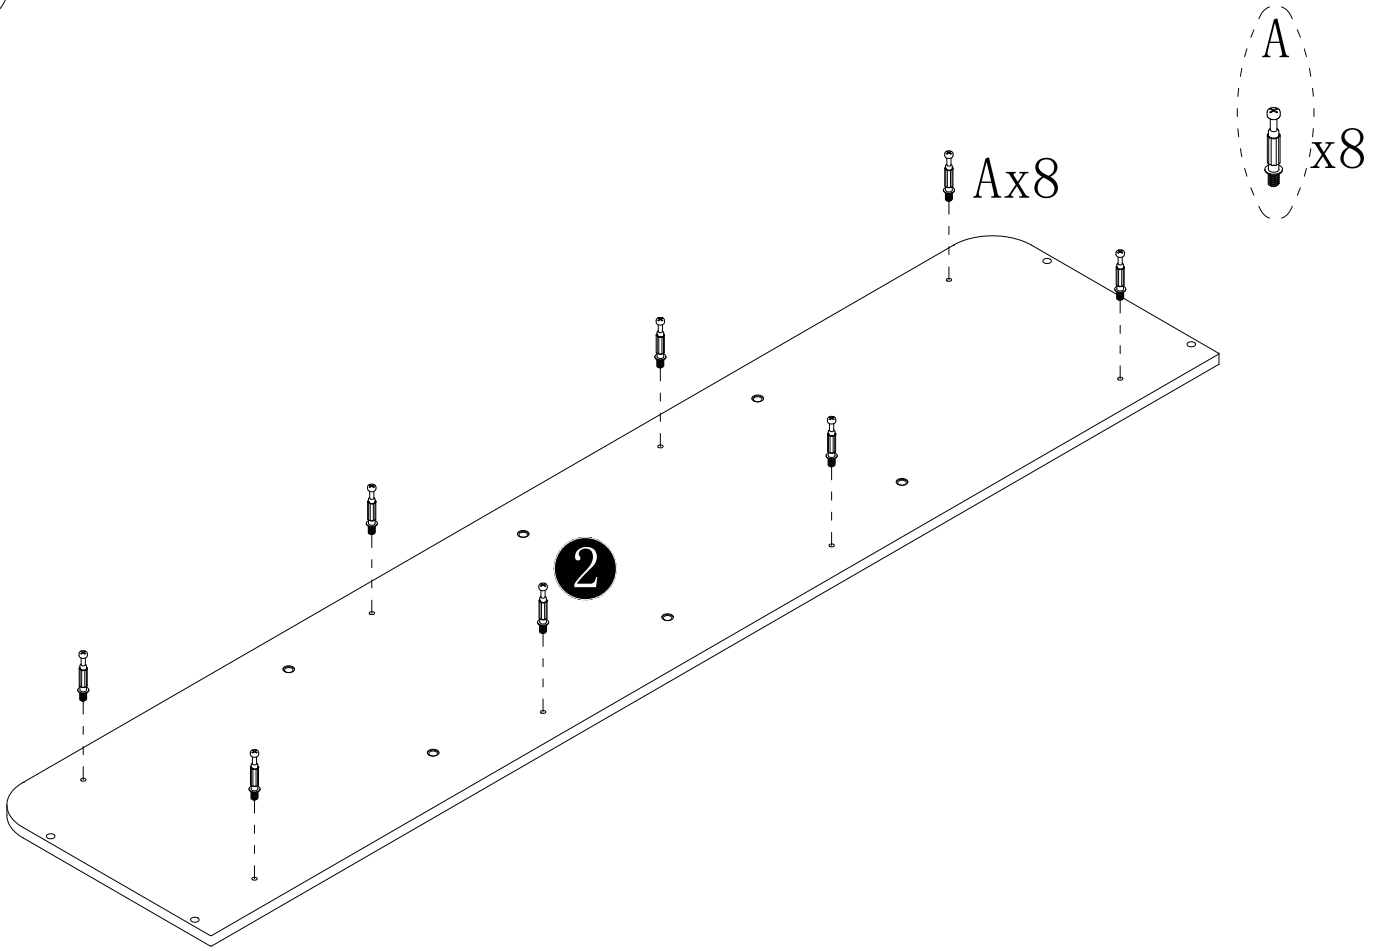 


14

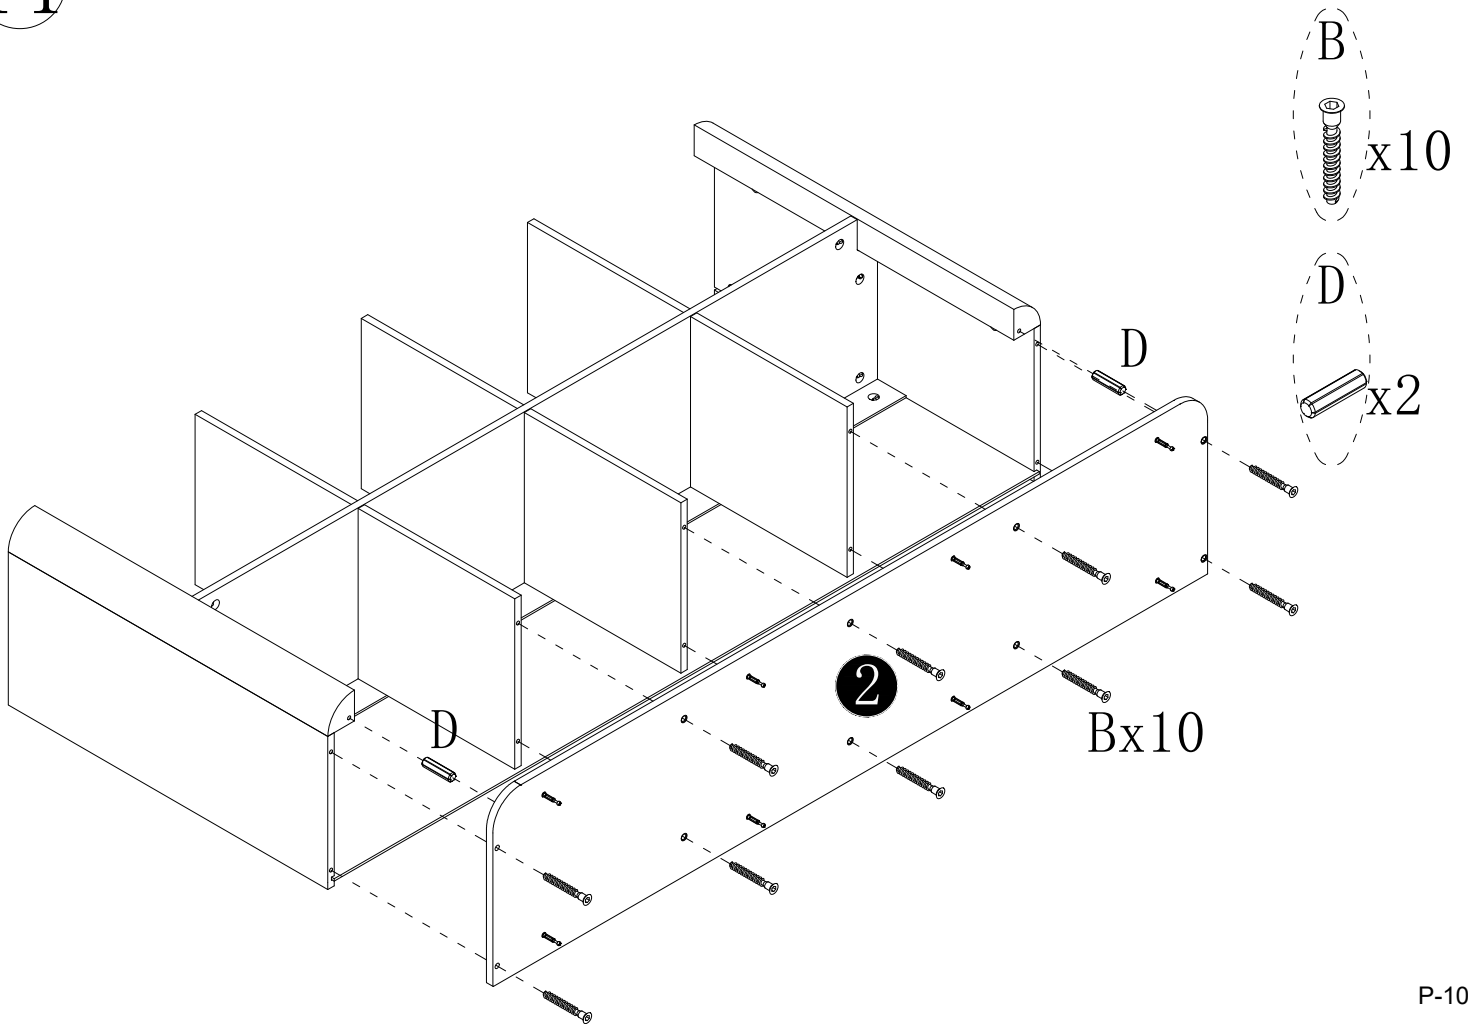 


15

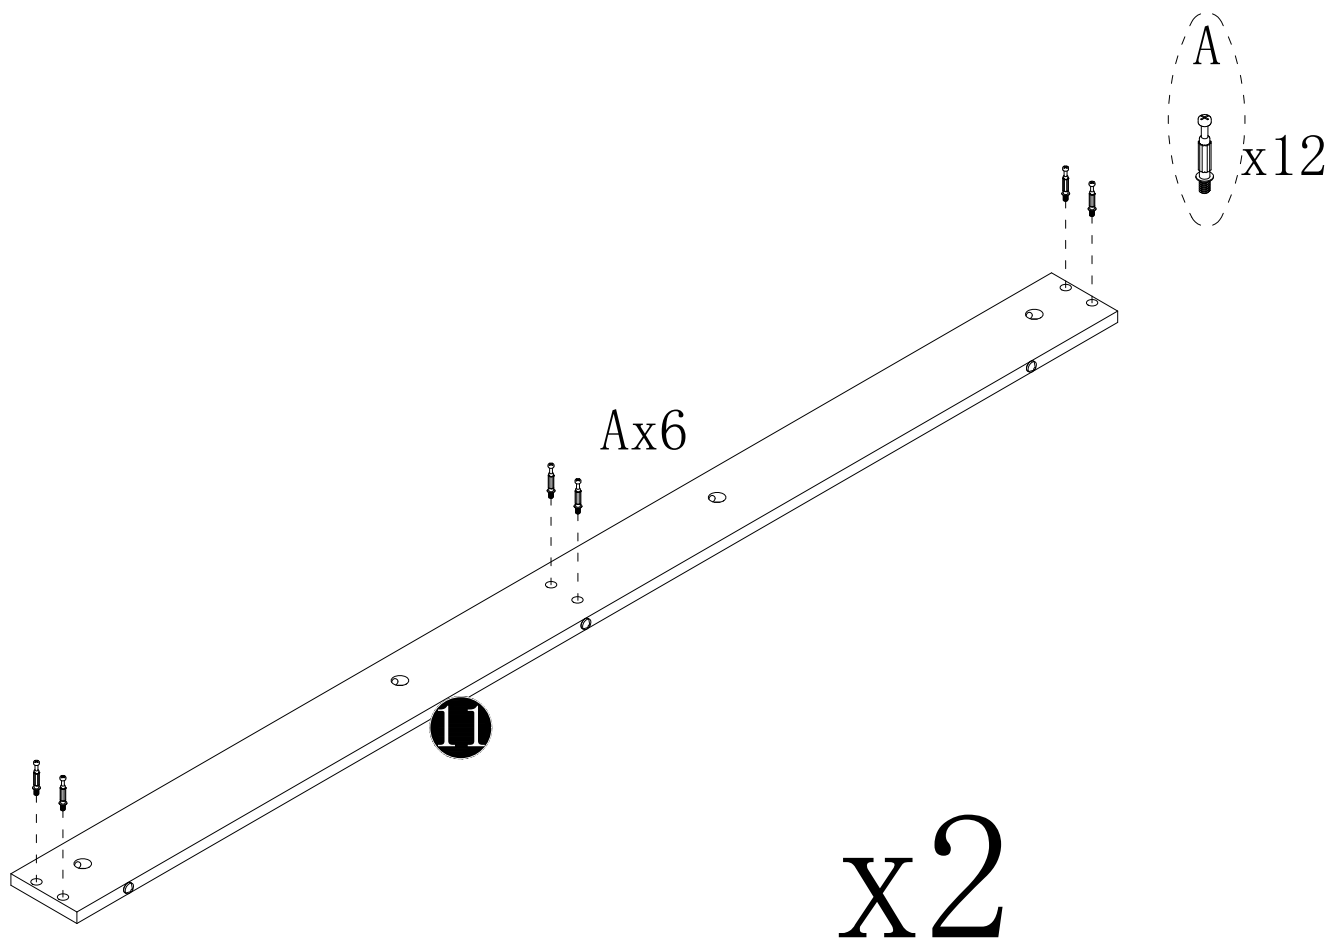 


16

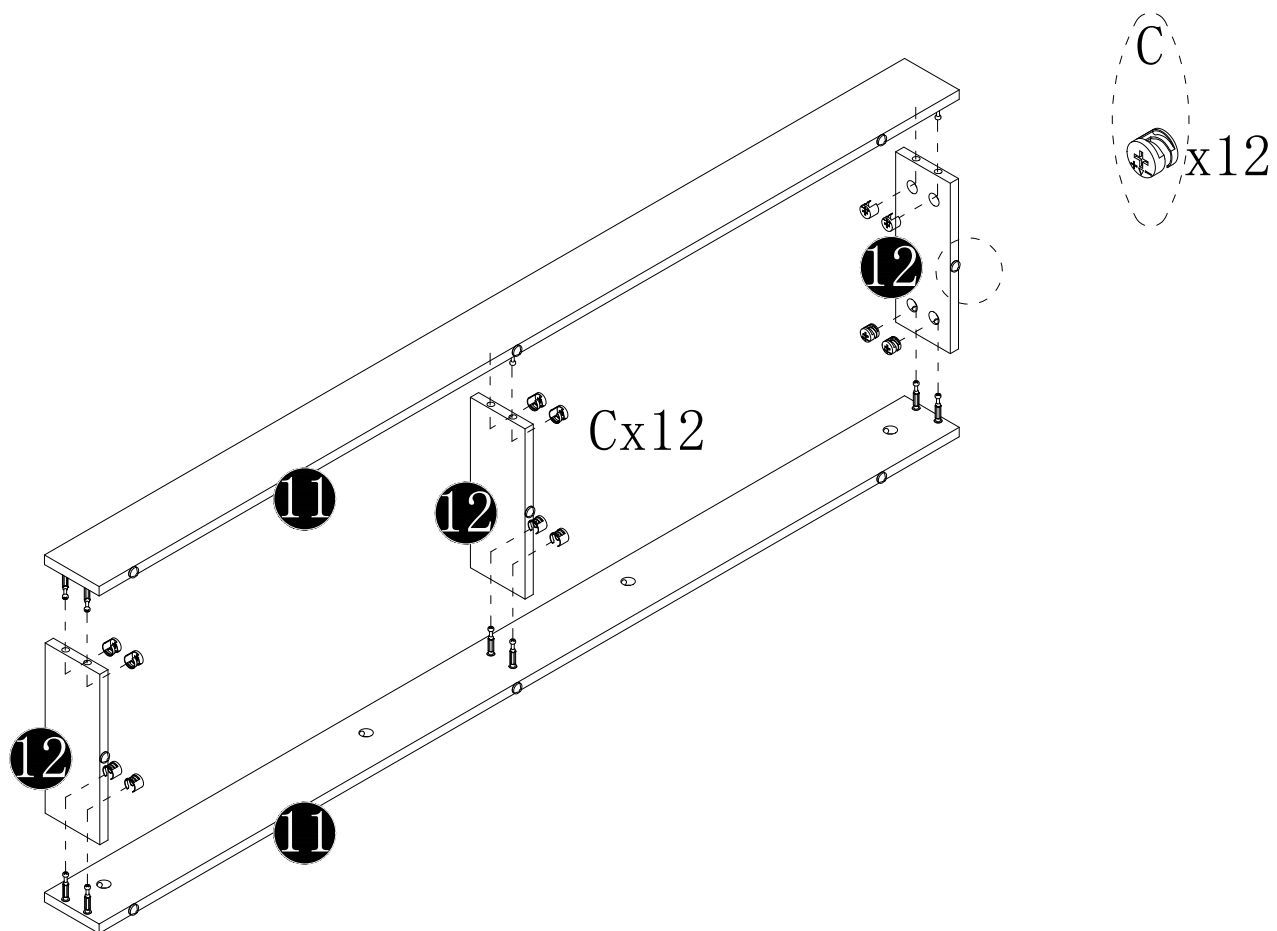 


17

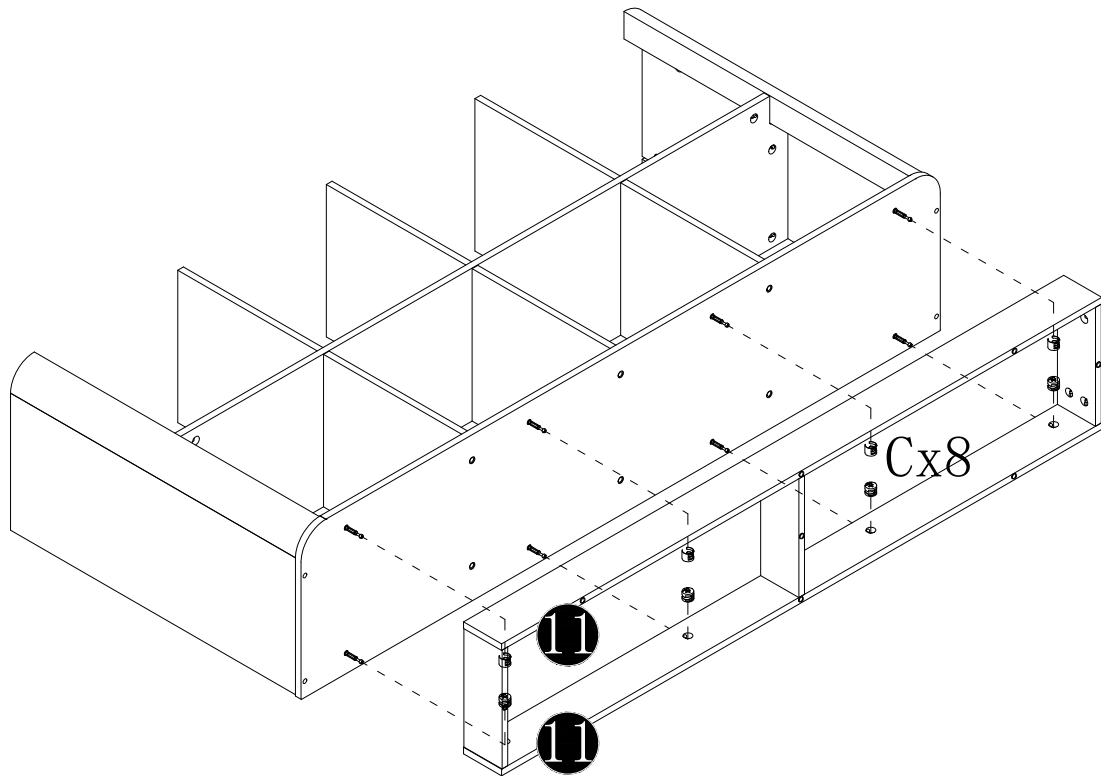 


18

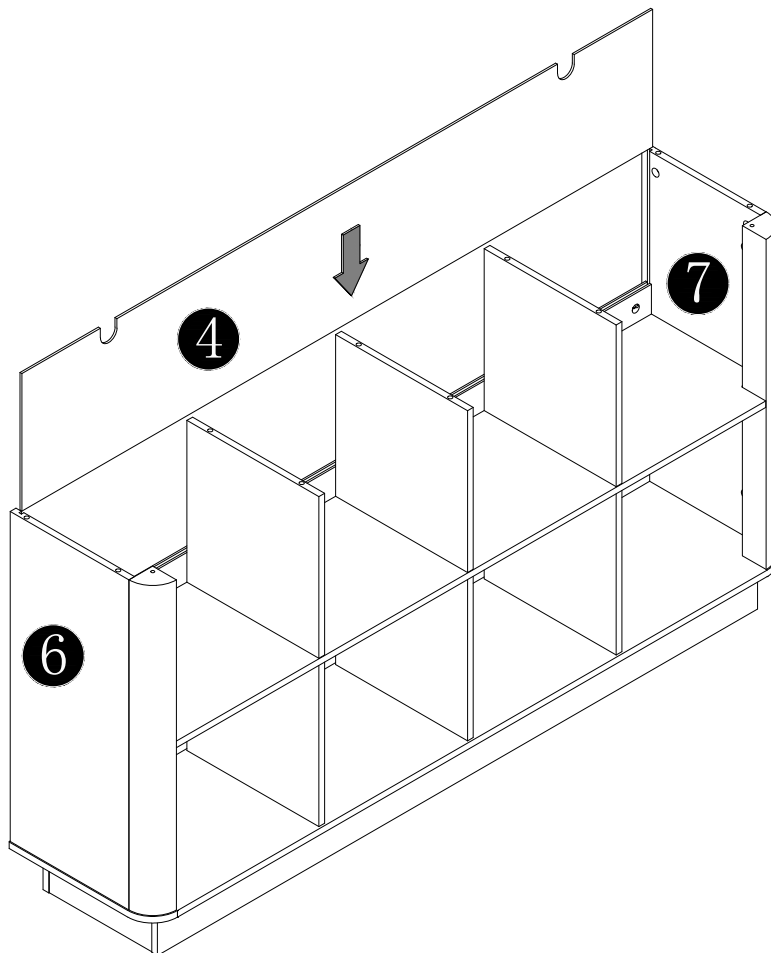 

19

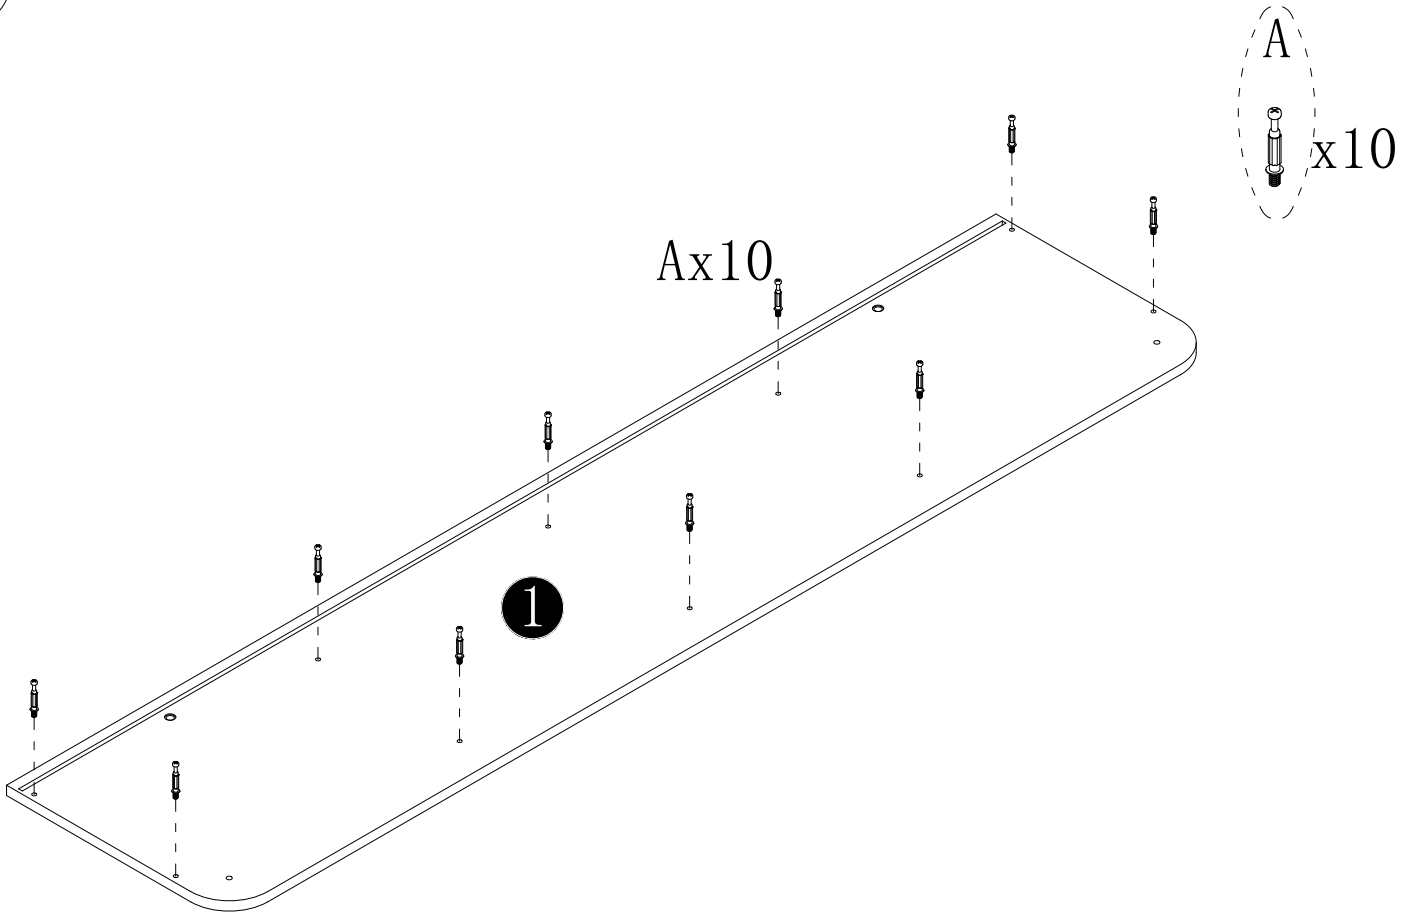 

20

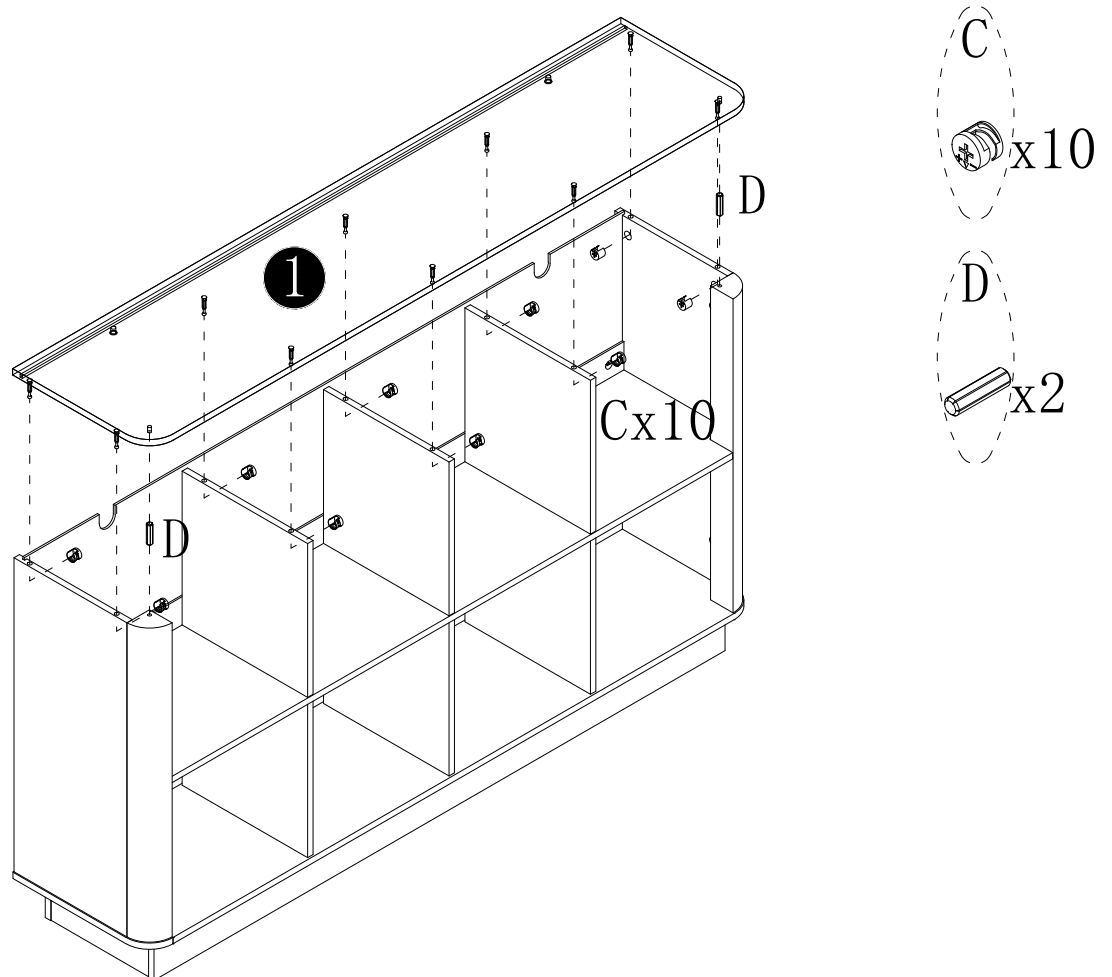 

21

E

 x16

E

Ex16

