 
 



ASSEMBLY INSTRUCTION FOR
MODEL: Salta Media Console


1		Tipping Hardware	1 SET
A		wooden shelf	1 PCS
B		Shelf pin	4 PCS
C		Screw driver [not include]	1 PCS

ASSEMBLY INSTRUCTIONS


- 1. Insert shelf pins (B) into the holes inside the Media and turn them to the right.
- 2. Place wooden shelf (A) on the shelf pins (B).

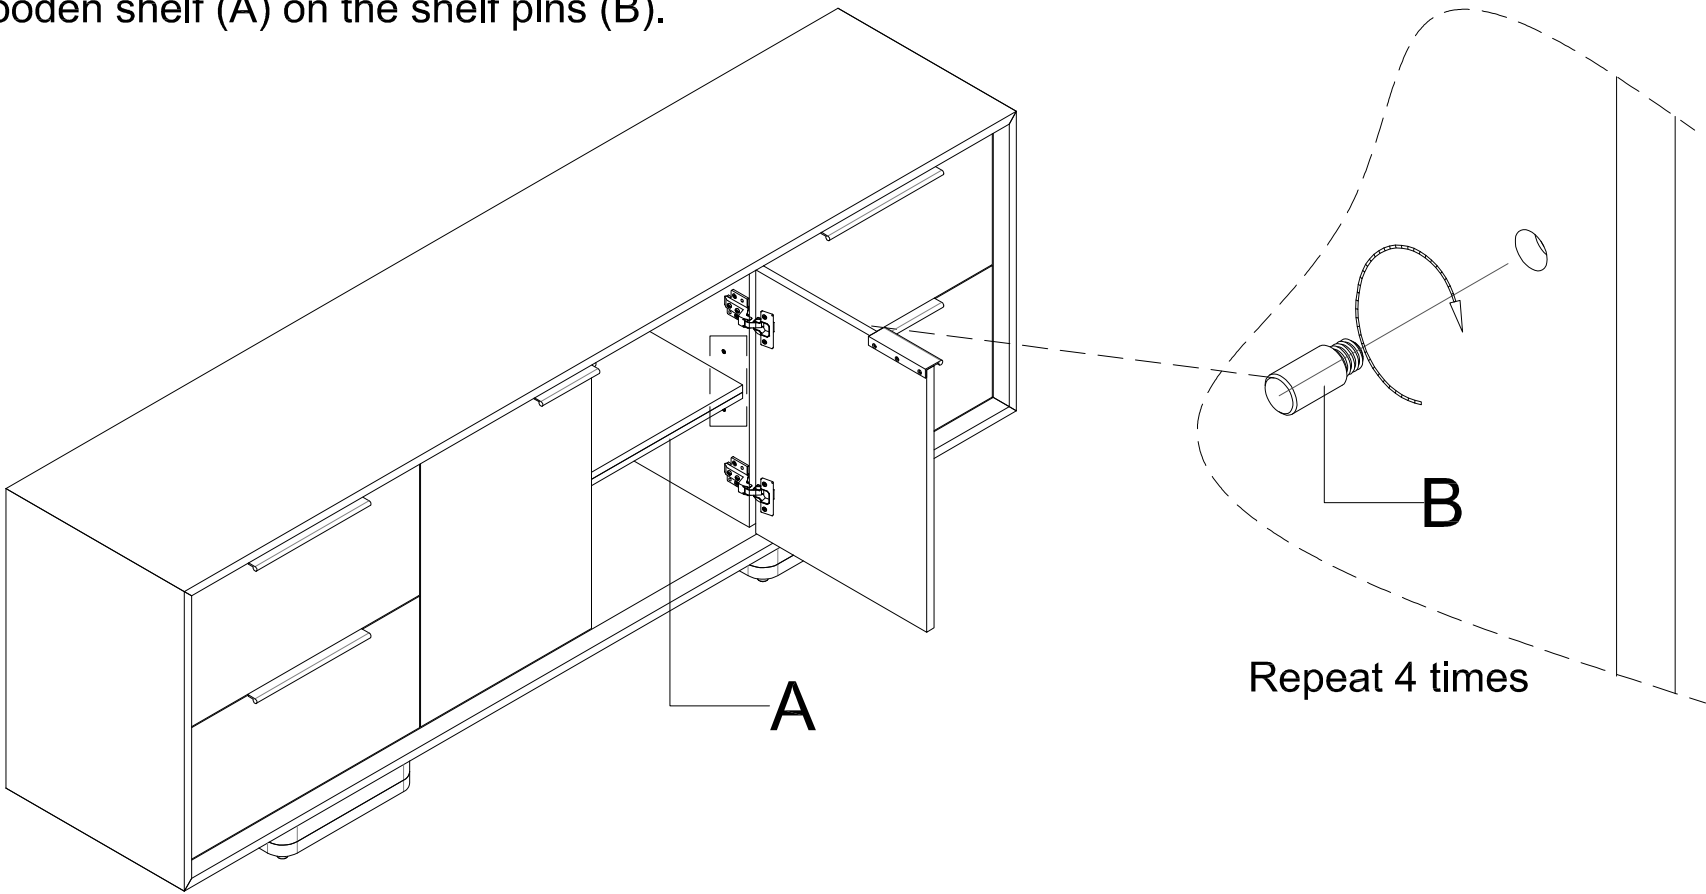

Tipping Hardware

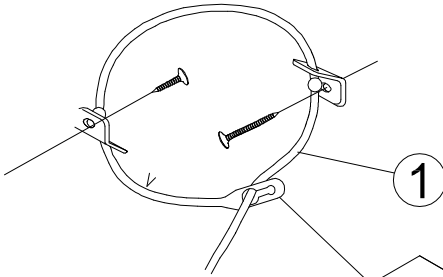

★ REMARK:There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

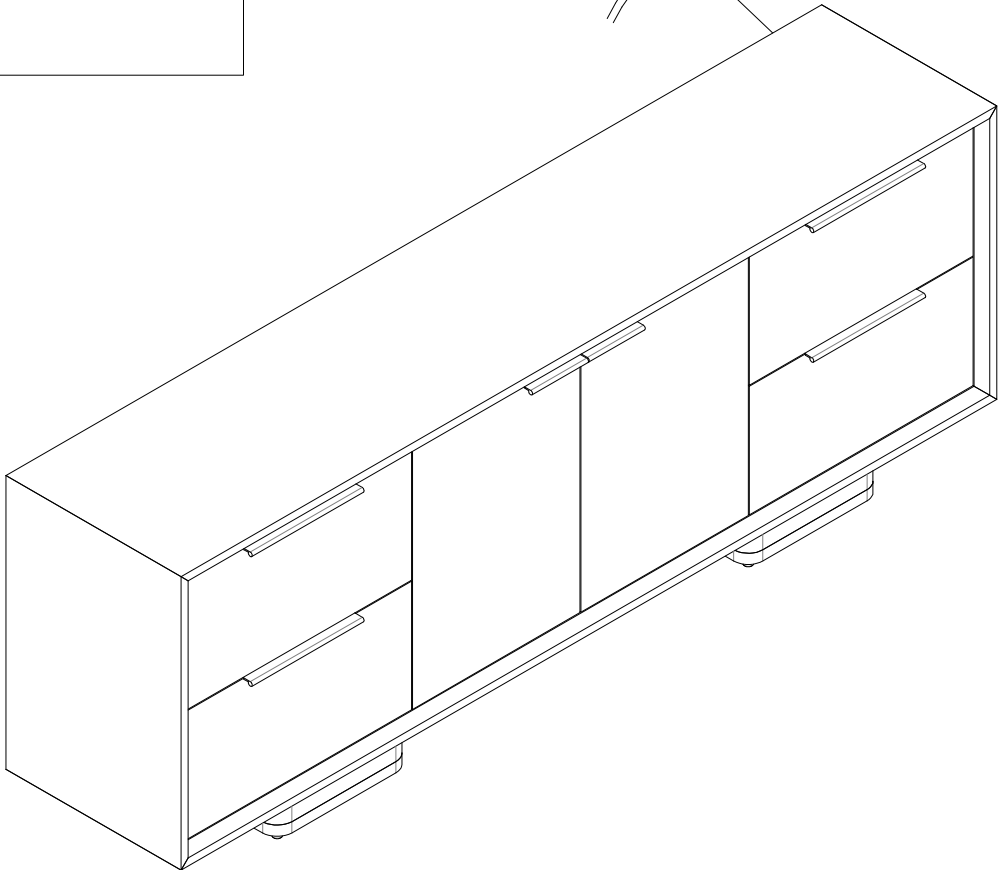

ASSEMBLY INSTRUCTION FOR

MODEL: SALTA MEDIA CONSOLE-BROWN OAK THICK VENEER-BROWN OAK THIN OYSTER-DARK ALUMINUM

Adjusting Floor Levelers


Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

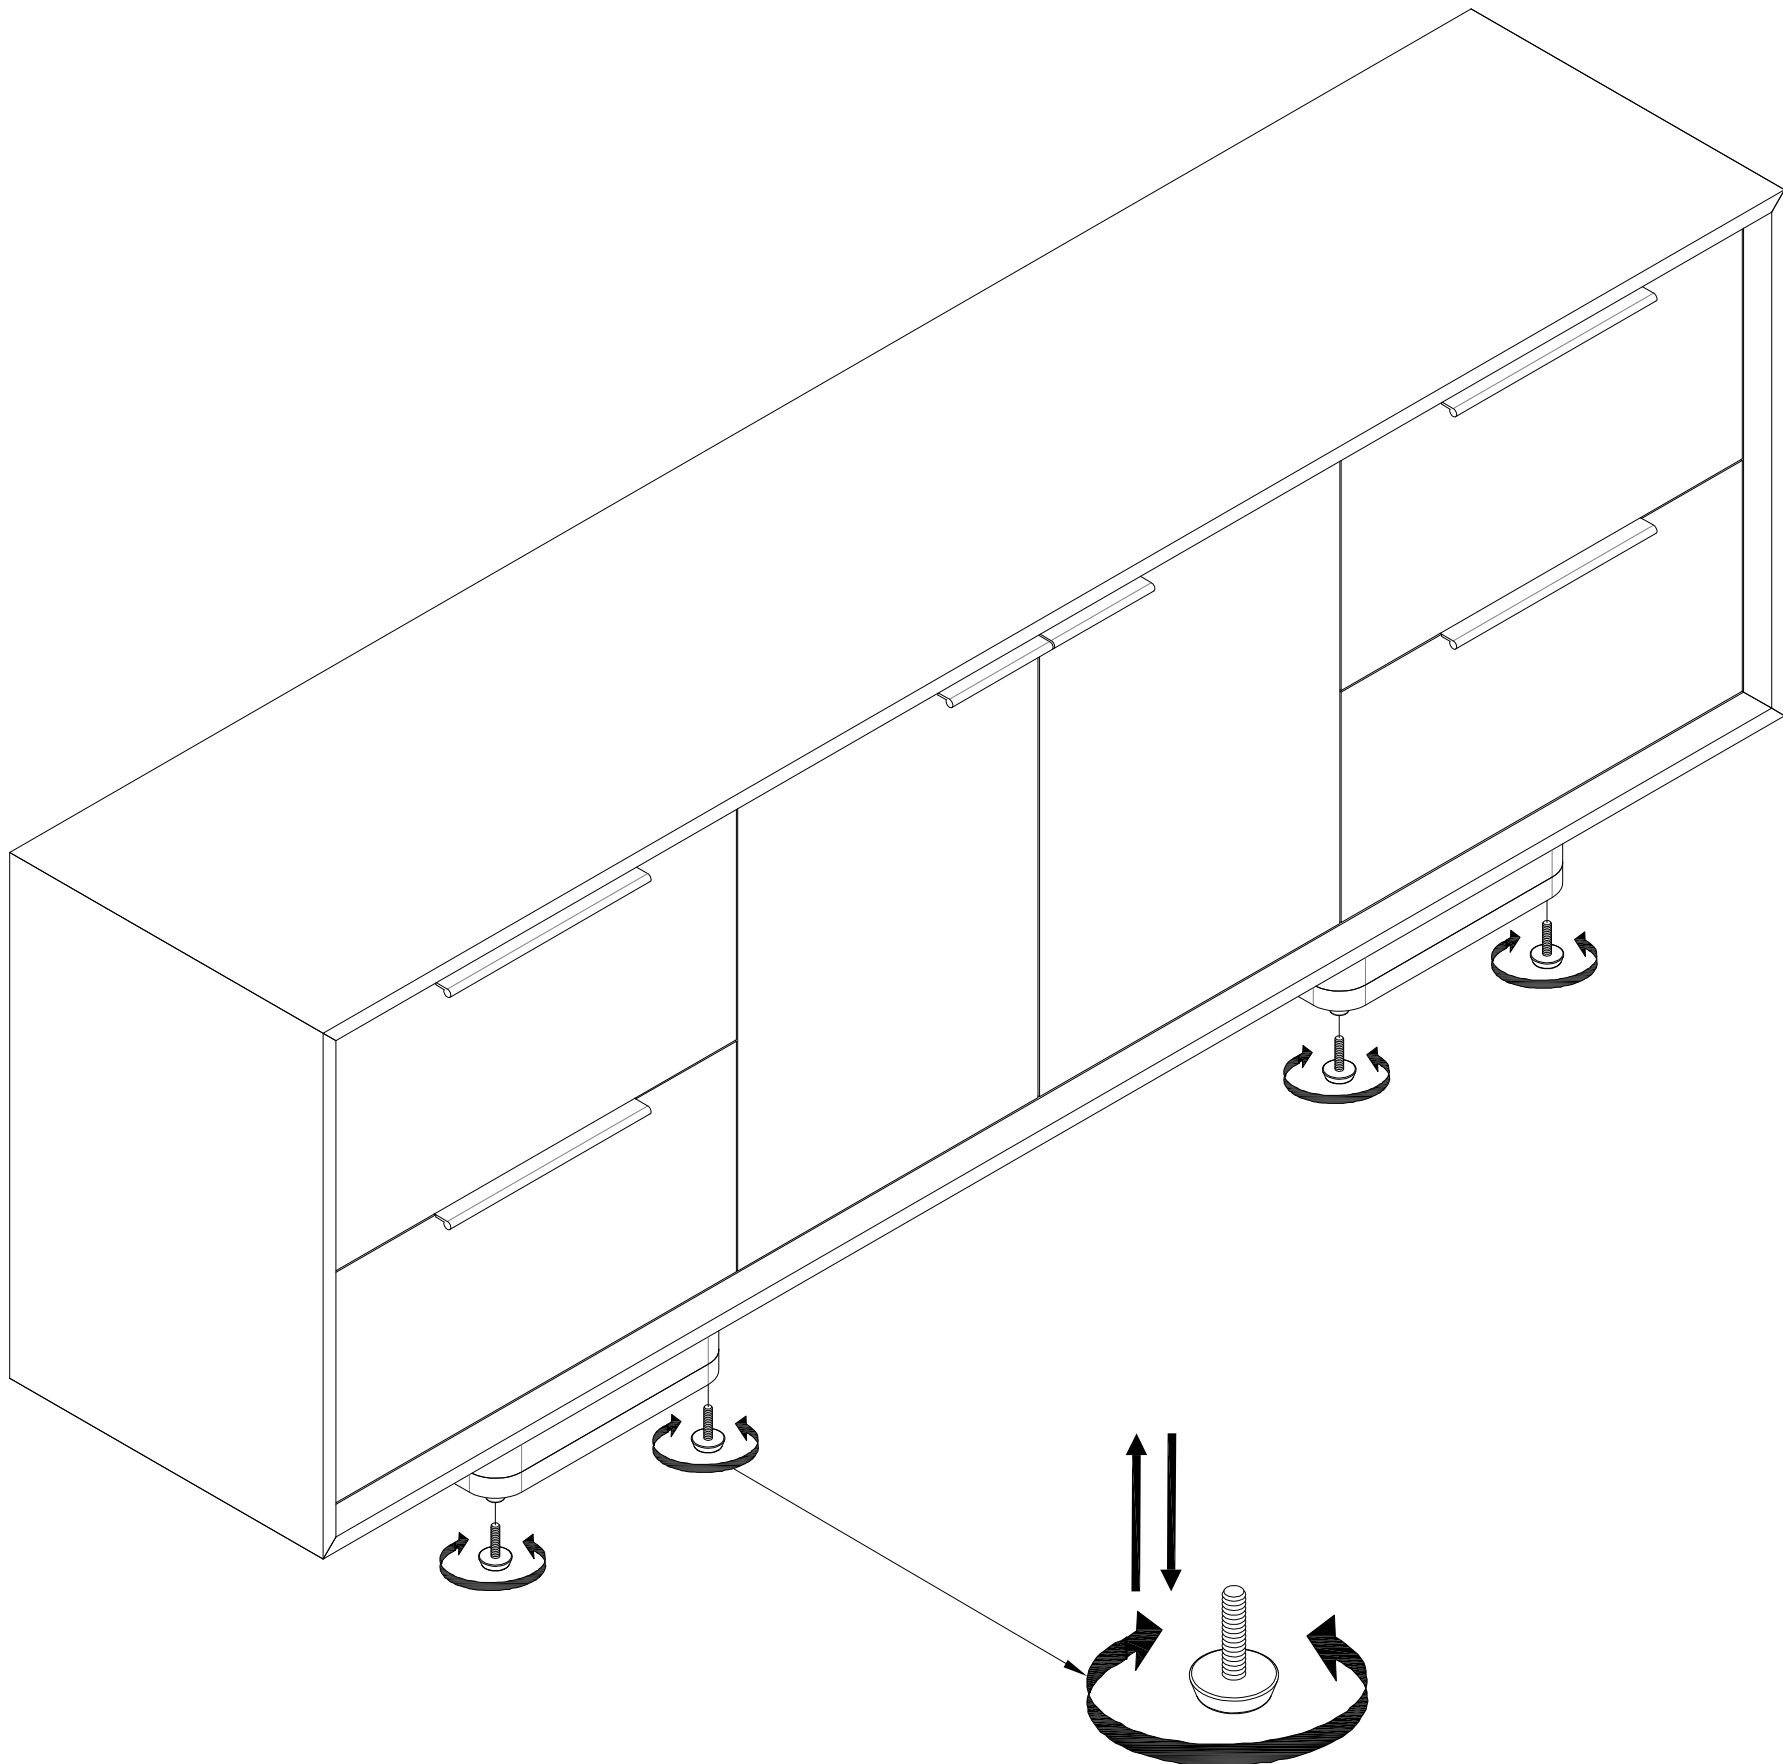


Adjustable Leveler

If you need further adjustments, repeat the process in small increments.


ASSEMBLY INSTRUCTION FOR

MODEL: SALTA MEDIA CONSOLE-BROWN OAK THICK VENEER-BROWN OAK THIN OYSTER-DARK ALUMINUM


1. Up and down adjustment: To move the cabinet door higher and lower.

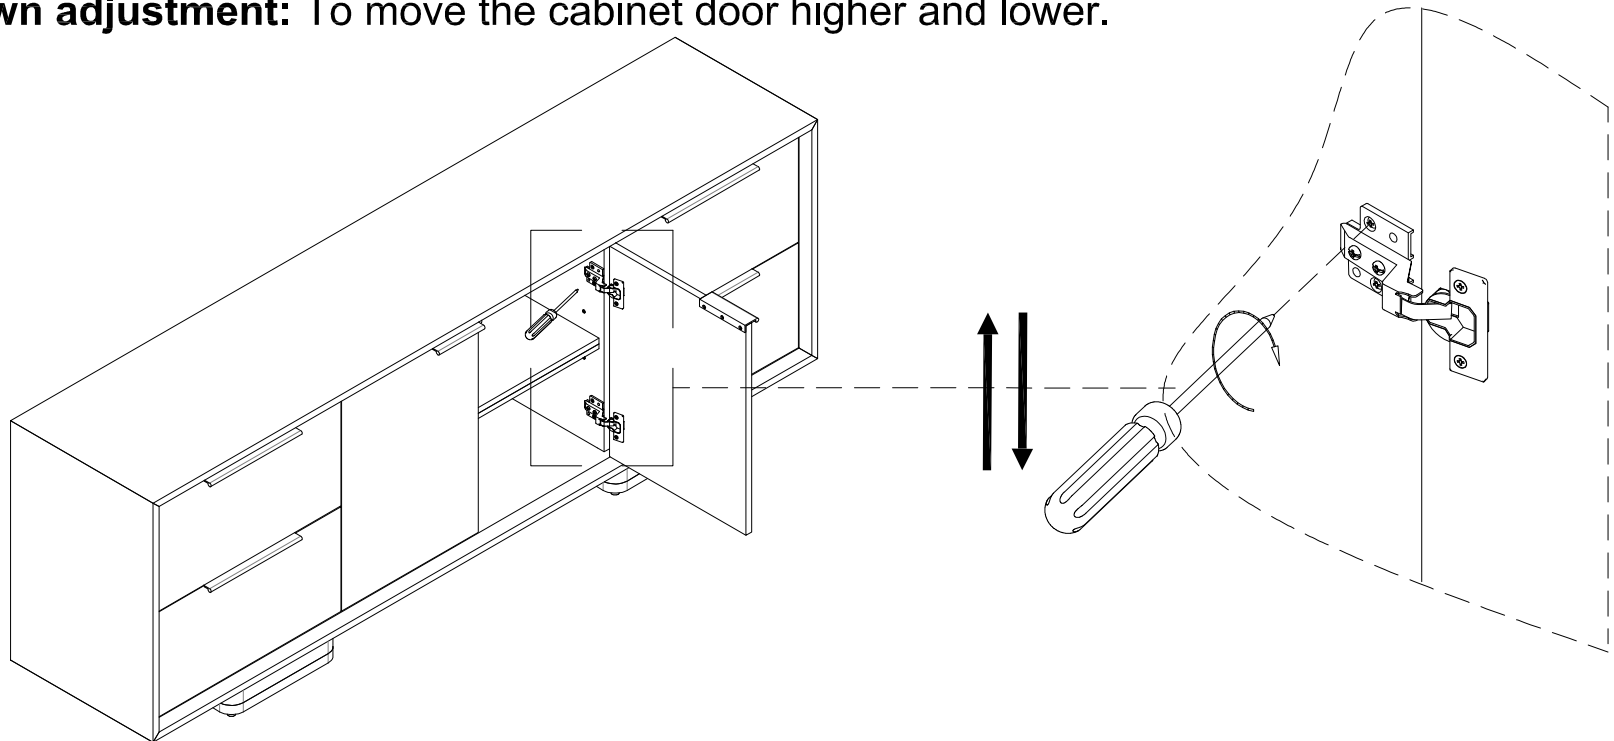

2. Left and right adjustment: To shift the cabinet door sideways for alignment.

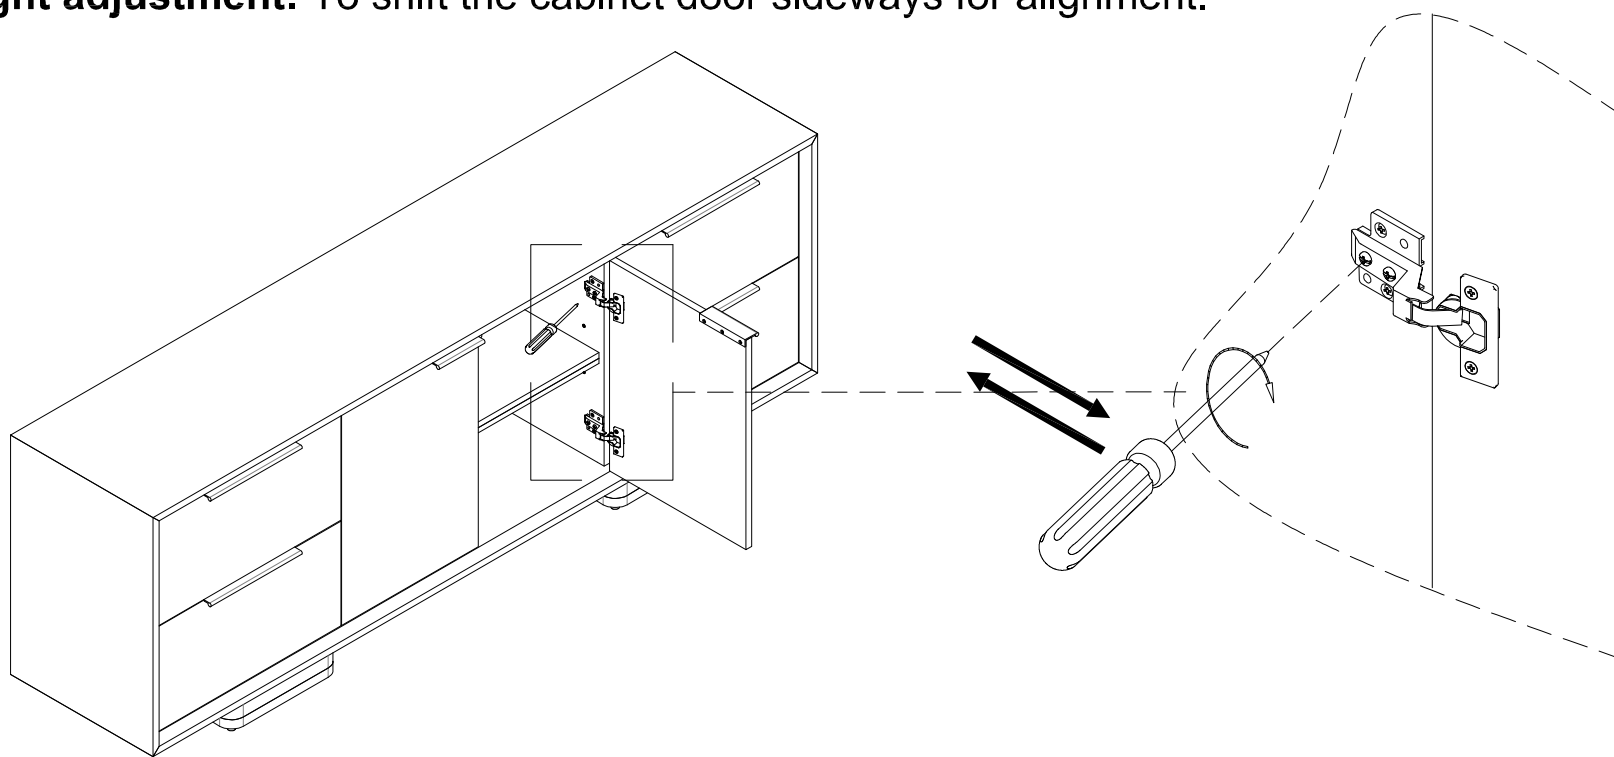

3. Back and forth adjustment: To move the cabinet door closer to or farther from the cabinet frame.

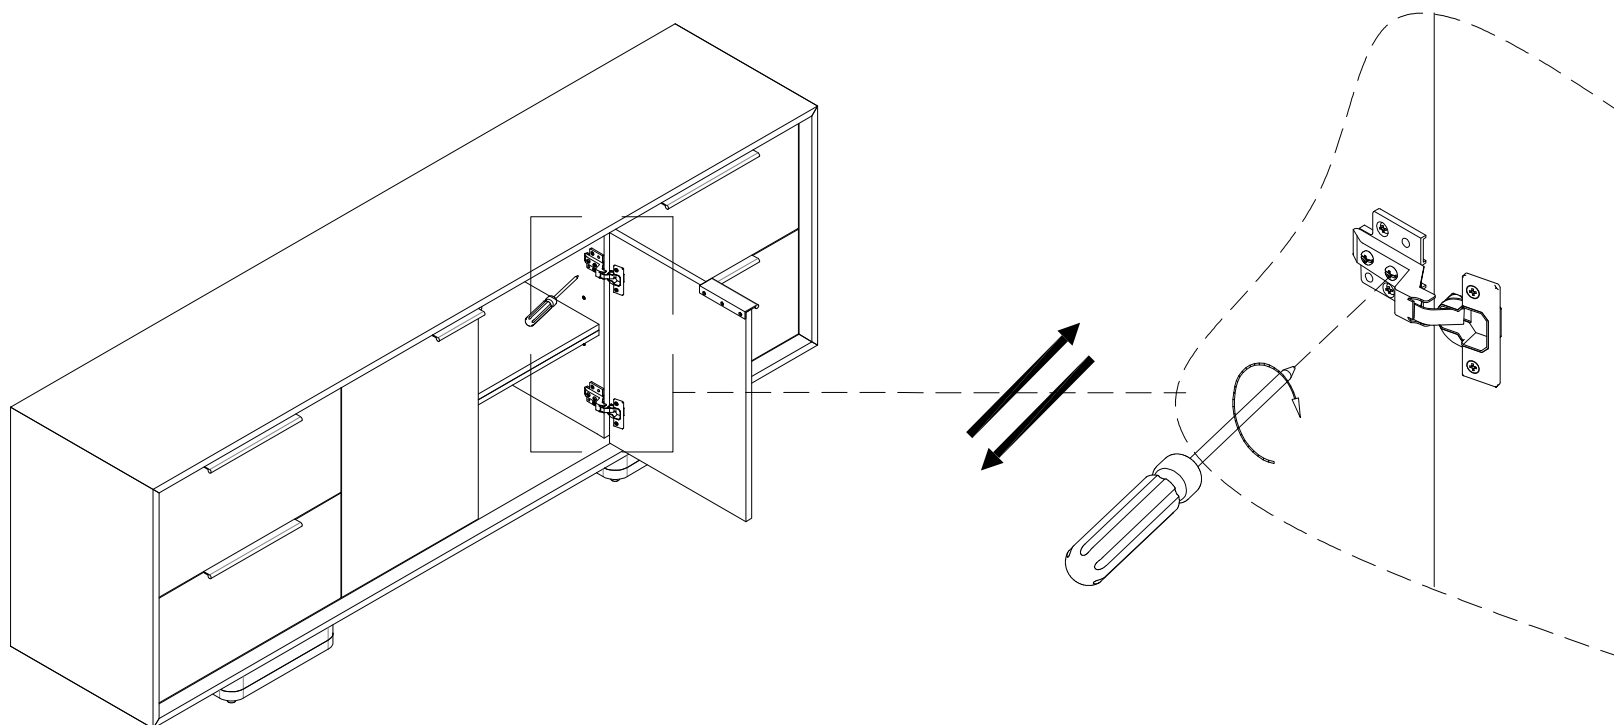

Important notes:

While adjusting the hinges, firmly hold the door in place to prevent it from falling and getting damaged.

Repeatedly tightening and loosening the hinge screws can cause the screw holes to widen. To avoid this, minimize adjustments and avoid overtightening.



ASSEMBLY INSTRUCTION FOR

MODEL: SALTA MEDIA CONSOLE-BROWN OAK THICK VENEER-BROWN OAK THIN OYSTER-DARK ALUMINUM

! WARNING

For use with televisions weighing 175 lbs / 80 (Kg) or less.

Attention : this unit is not rated for use with a CRT type television.

! WARNING

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

! WARNING

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

All other support shelves should not be loaded more than 25 lbs. DO NOT EXCEED RECOMMENDED LOAD. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

Please use caution when using electrical equipment. Improper use could result in the risk of fire, electric shock or injury to

persons associated with the use of this unit during operation, user-maintenance, loading, storage, and, as applicable, electrical issues including grounding or double-insulation.

Electronic components generate heat that may cause damage to the equipment. Please refer to the manufacturer's owner's manual for space and ventilations requirements

Do not allow children under 16 years to move cart.

