



**INSTALLATION GUIDE**

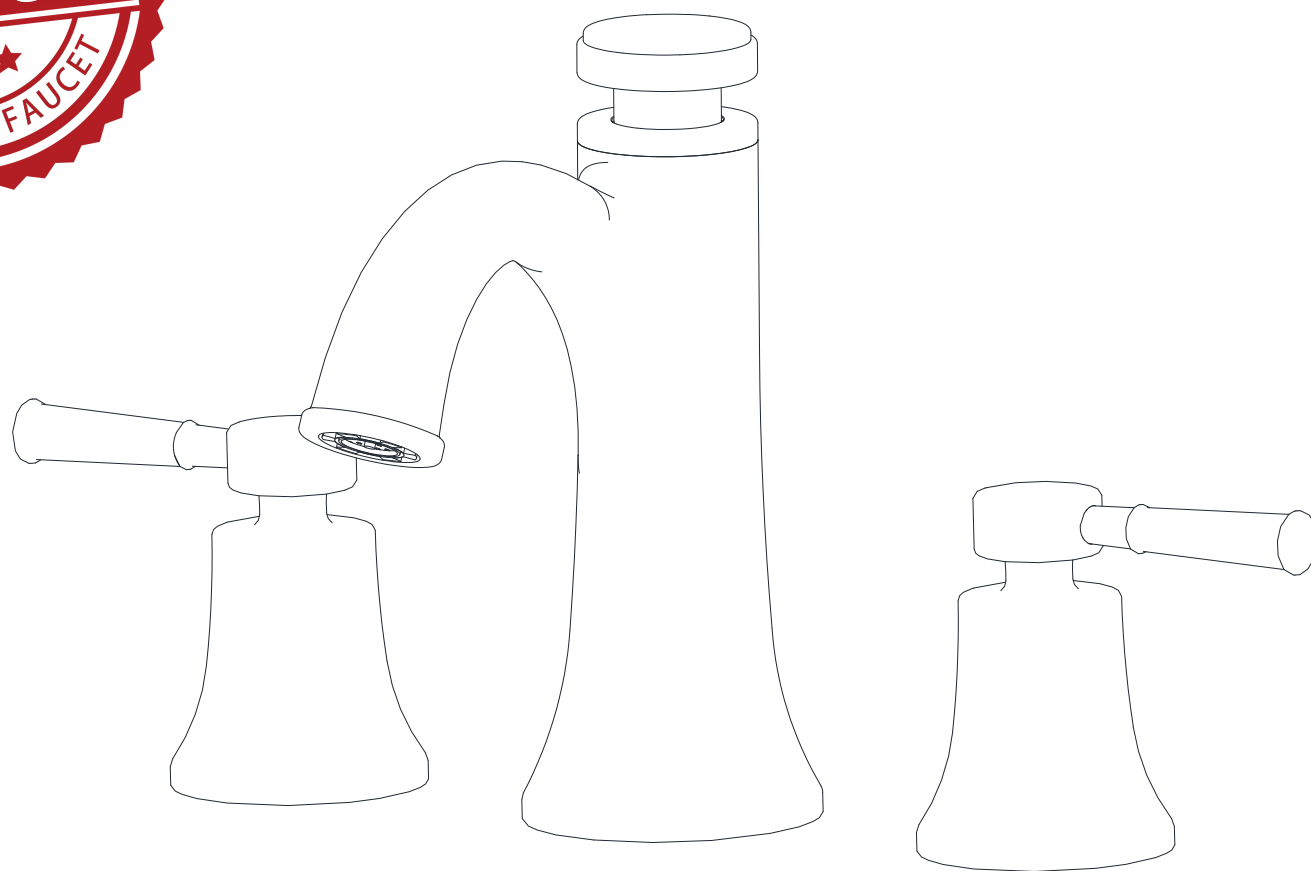


**Temperature Memory Bathroom Faucet**

**CUSTOMER CARE LINE: +1-866-203-0866**


## TOOLS RECOMMENDED

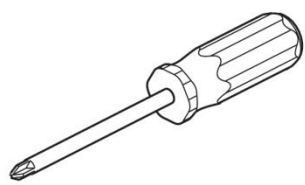


Philips Screwdriver

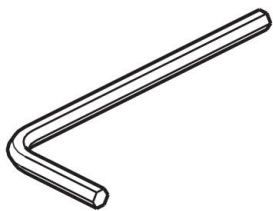


Allen Wrench

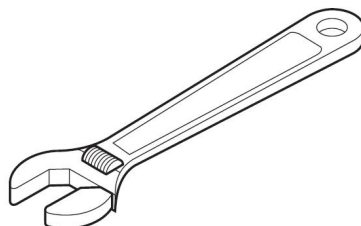

Adjustable Wrench

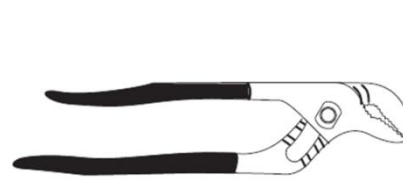

Channel Locks

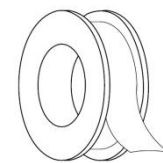

Teflon Tape

### 1. BEFORE PROCEEDING



**WARNING:** Before proceeding with any operation, please read all instructions thoroughly. If you are uncertain about installing this product, please consult a professional! This product should be installed in accordance with all local and state plumbing and building codes. It is recommended to seek professional assistance.

### 2. SHUT OFF WATER SUPPLY

Locate the water supply inlets and shut off the corresponding water supply valves, typically found near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface.


### 3. CHECKING THE CONTENTS OF THE BOX

Upon opening the box, check to ensure that all the following items are included.

### 4. INSTALLATION HOLES INSPECTION


Verify that the hole sizes and positions on the mounting surface are correct. The recommended diameter of the mounting hole is "C", and the maximum thickness of the deck should be "D".

| Code | Dimensions<br>- Inch                  | Dimensions<br>- mm           |
|------|---------------------------------------|------------------------------|
| A    | 4"                                    | 102                          |
| B    | Min Dia: Ø1-1/8"<br>Max Dia: Ø1-3/16" | Min Dia: Ø28<br>Max Dia: Ø30 |
| C    | Min Dia: Ø1-1/4"<br>Max Dia: Ø1-3/8"  | Min Dia: Ø32<br>Max Dia: 35  |
| D    | Max 1-3/8"                            | Max 35                       |

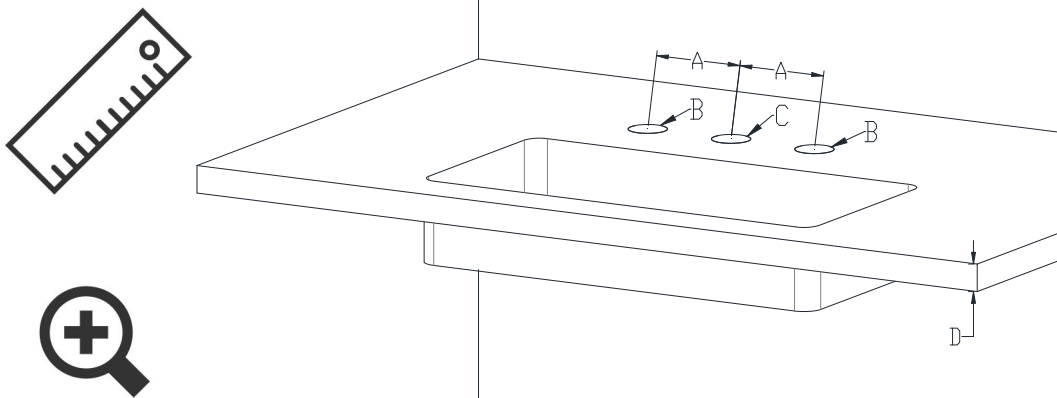


### 5. INSTALLATION


**5.1** Turn on the shut-off valves to flush the hot and cold water supply lines before connecting the faucet. Allow water to run for 3-5 minutes to remove dirt and debris. Turn off the water supply after flushing is complete.

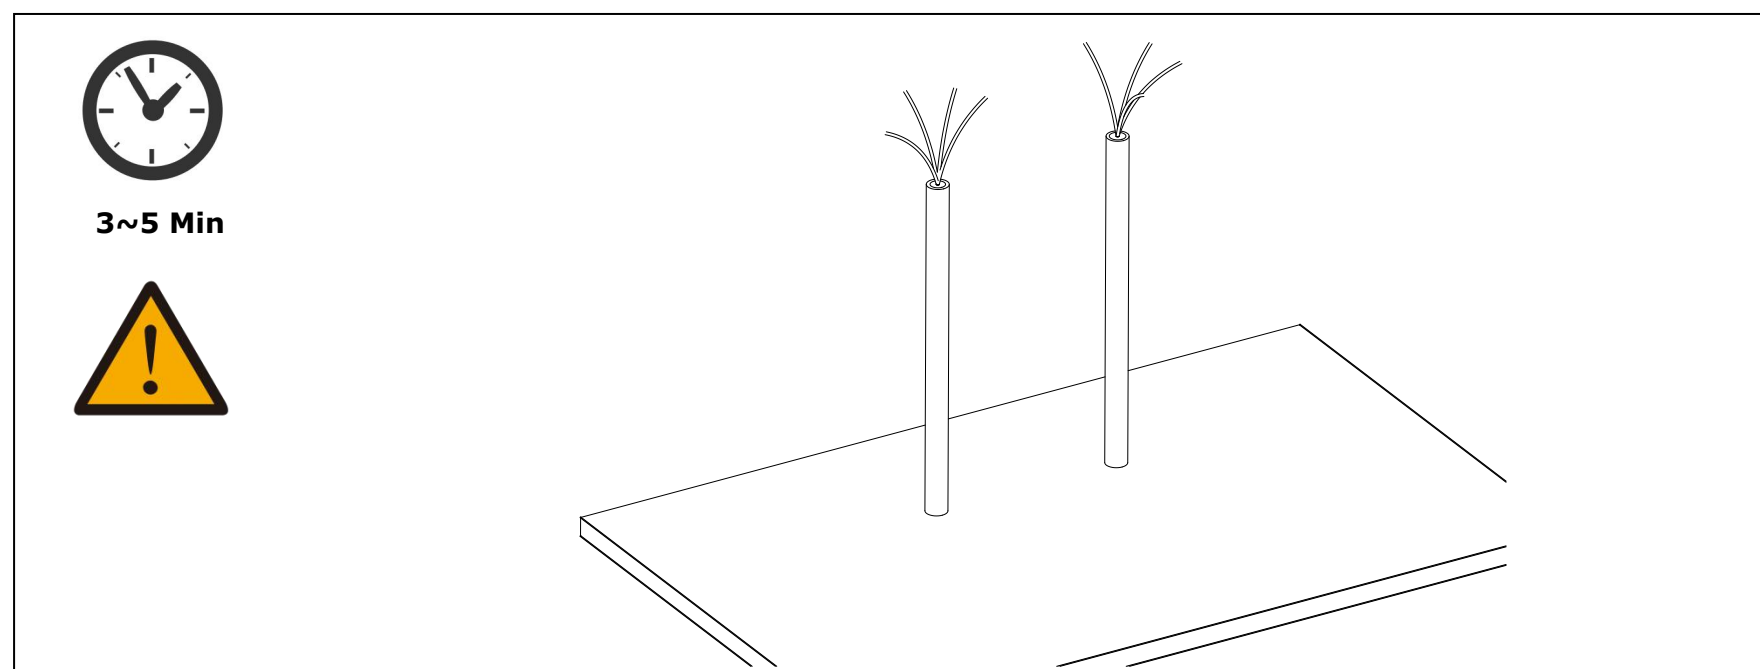


**5.2** Connect the threaded shank to the faucet.

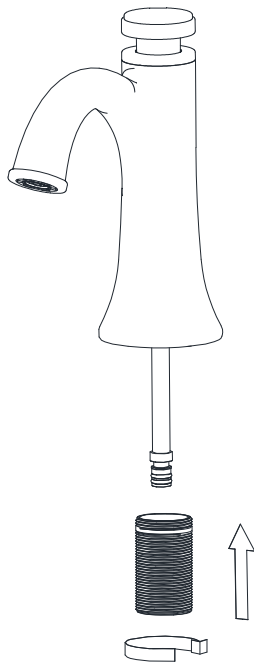


**5.3** Insert the faucet spout into the faucet hole, then slide the rubber washer, metal washer, and lock nut onto the threaded shank from underneath the sink.

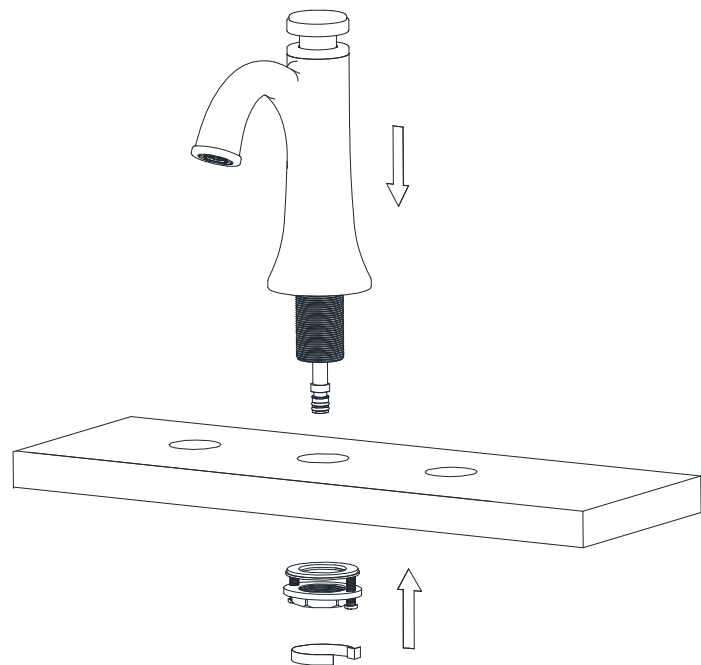


**5.4** Fasten the rough-in valve to the mounting board using screws and a Phillips screwdriver.

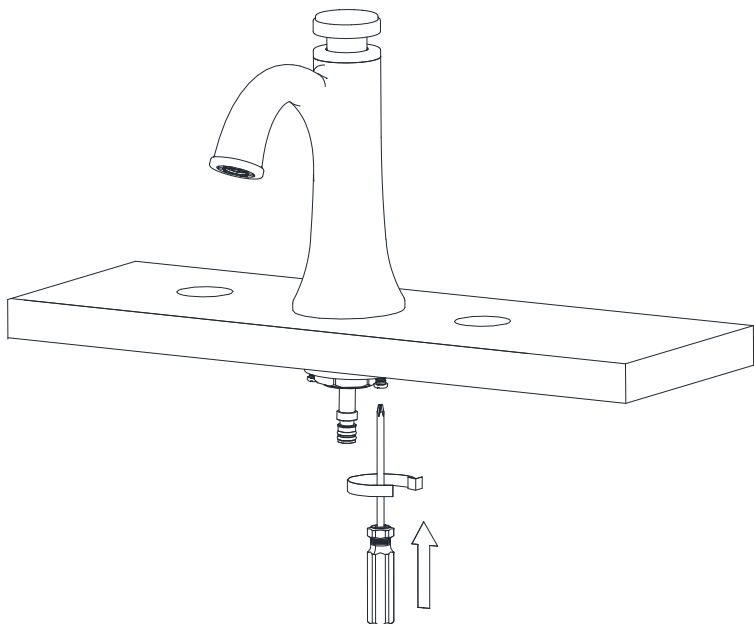


**5.5** Connect the hot and cold water supply hoses to the inlet ports of the valve body.

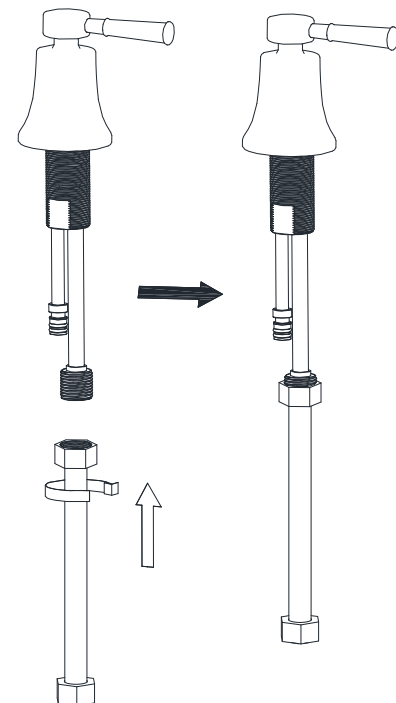


**5.6** Place the hot water control valve body on the mounting surface, attach the rubber washers and lock nuts from underneath the mounting surface. Use a Phillips screwdriver to fasten the pre-installed valve onto the mounting plate with screws. Repeat the same procedure for the cold water valve assembly on the right.

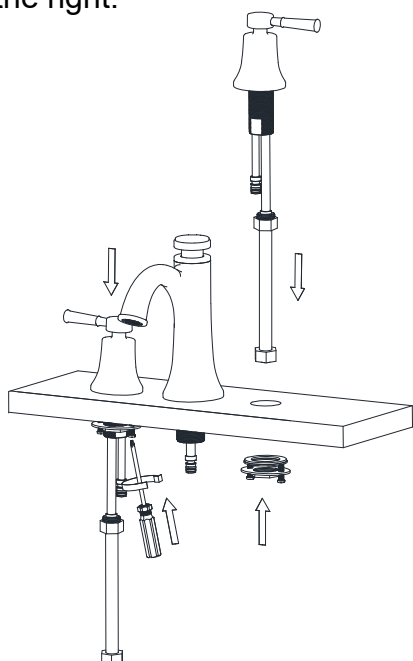

**5.7** Connect the three-way hoses to the hot and cold water control valve bodies and the spout, ensuring all connections are secure and properly aligned.

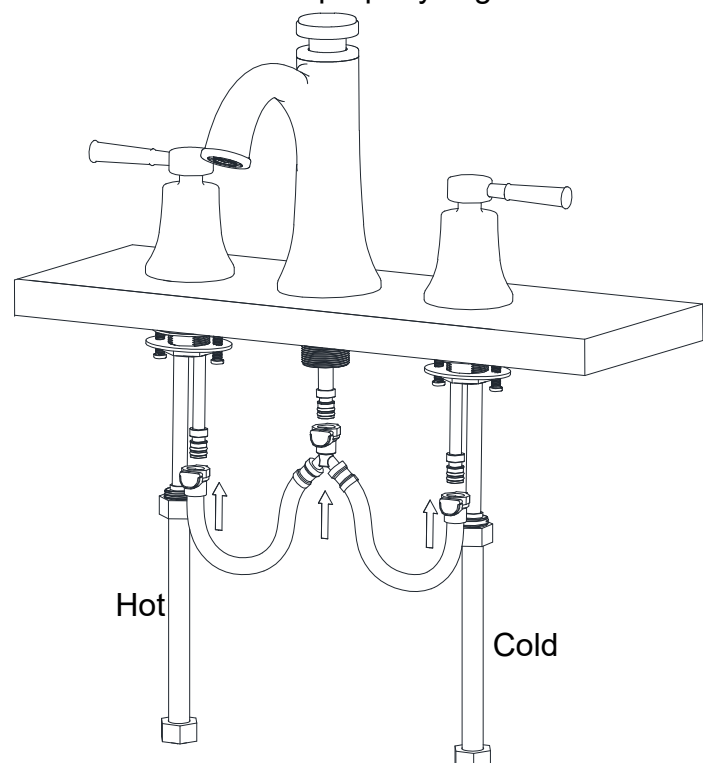

**5.8** Connect the inlet connectors of the hot and cold valve bodies to the stop valves separately using supply hoses. Thread Specifications: Compatible with U.S. and Canada standards, 3/8" compression fitting.

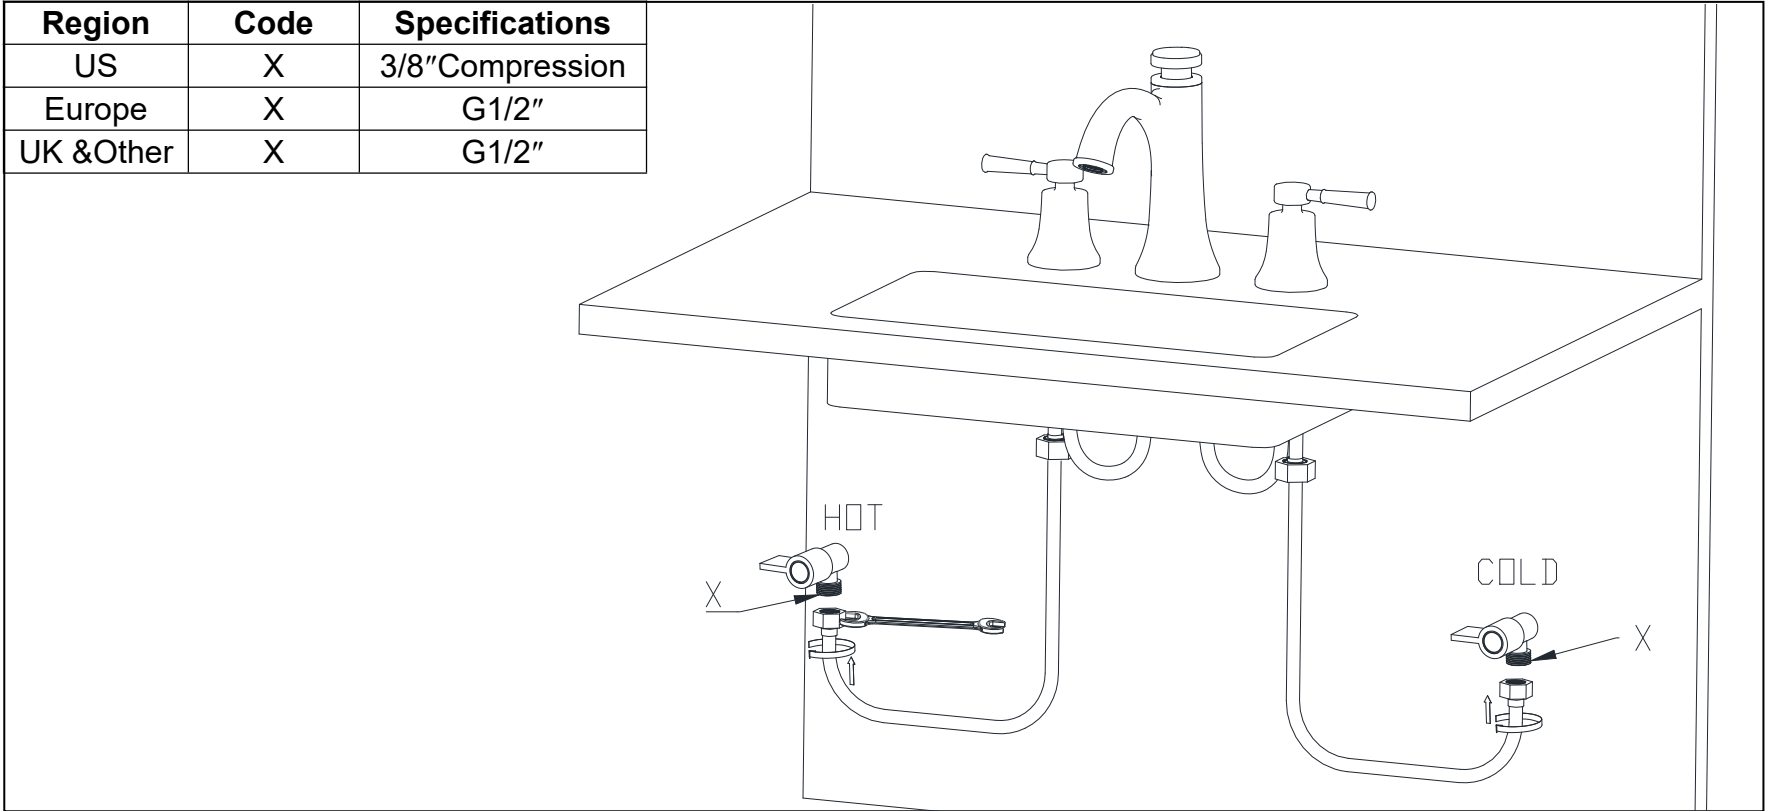

**6. Instructions for Using a Faucet with Temperature Memory Function**

6.1 This faucet integrates an intelligent temperature control and memory system, allowing the user to adjust the flow of cold and hot water independently by rotating the valve core left or right to set the desired mixed water temperature. The water flow is controlled via a top-mounted push-button switch; press down to turn on, and press again to automatically close.

6.2 This product features an innovative flip-top aerator, allowing you to easily switch between two water flow modes by gently tapping and pushing the front end of the spout with your finger. Additionally, the aerator can be conveniently cleaned to remove any dirt or residue.

**7. INSPECTION**

**7.1** Turn on the hot and cold water supplies and check all connections to ensure there are no leaks.

**INSTALLATION COMPLETE**



| North America                                       | Europe                                         | Asia                                                                       |
|-----------------------------------------------------|------------------------------------------------|----------------------------------------------------------------------------|
| SUMERAIN INTERNATIONAL GROUP INC                    | SUMERAIN EUROPE SUPPORT TEAM                   | HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED                           |
| Add: 1400 Summit Ave, Suite A, Plano, TX 75074, USA | Add: Flottwellstr.15 10785 Berlin, Deutschland | Add: ROOM 14 2/F WELLBORNE COMMERCIAL CENTRE NO.8 JAVA ROAD NORTH POINT HK |
| Tel: +1-866-203-0866                                | Tel: +49 (0)30/23975898                        | Tel: +86-750-2731579                                                       |
| E-mail: support@sumerain.com                        | E-mail: support@sumerain.com                   | E-mail: support@sumerain.com                                               |