 


ASSEMBLY INSTRUCTION

Dining Chair

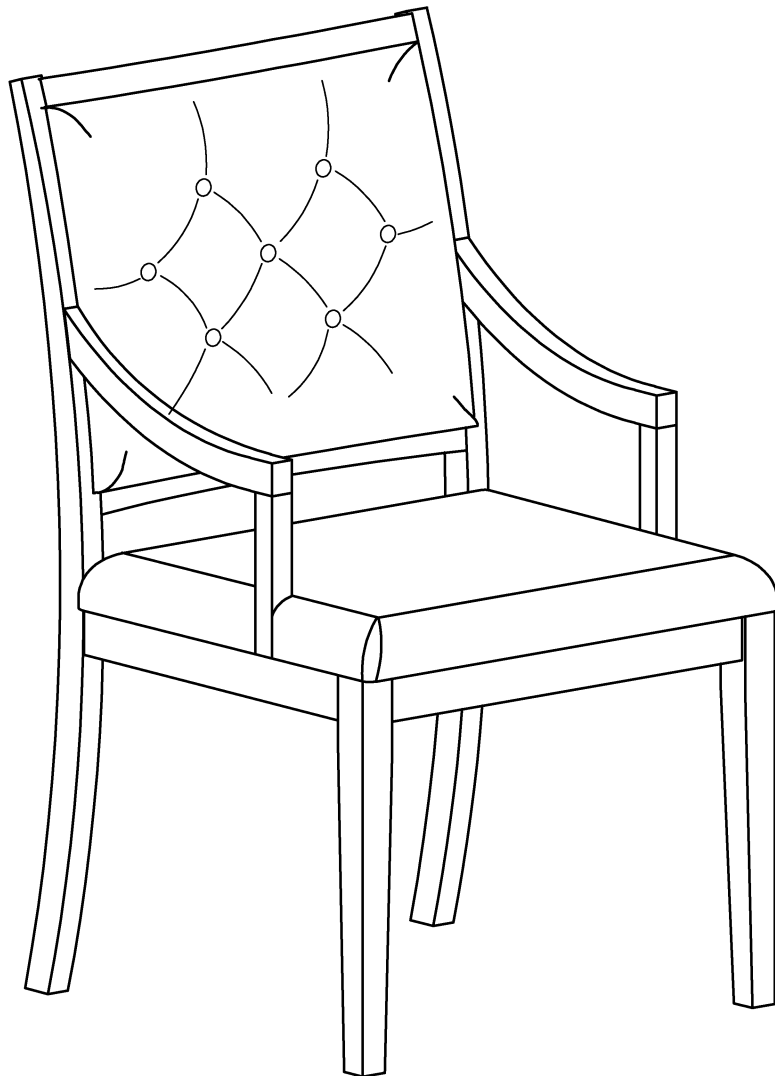

ASSEMBLY INSTRUCTION

 
Please read these instructions fully before starting assembly:

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:






Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

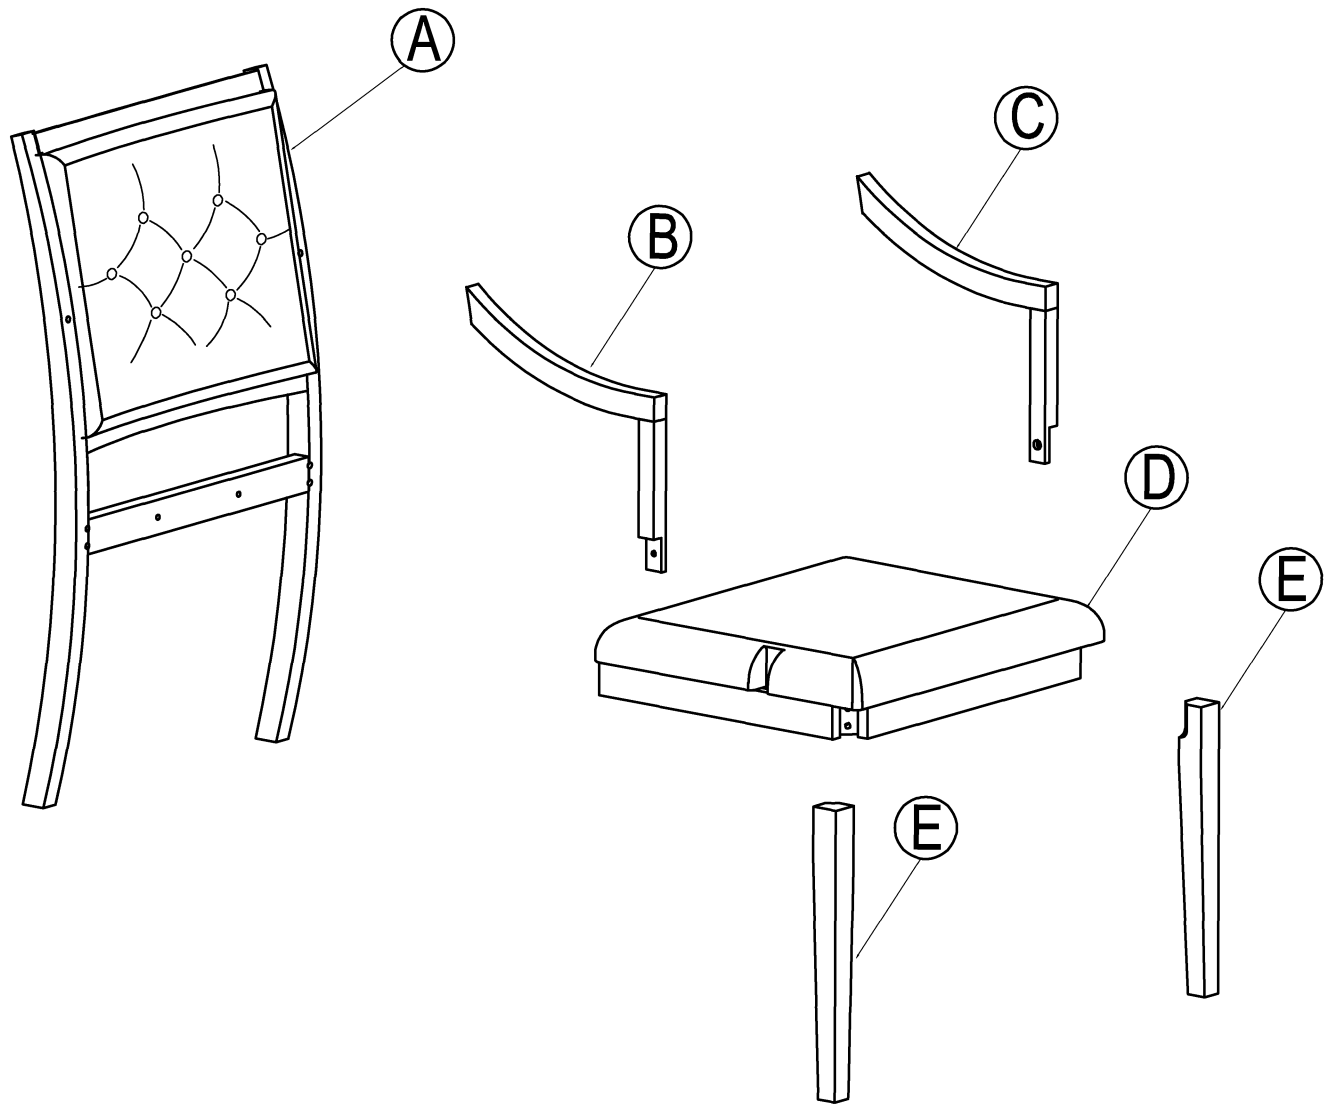

ASSEMBLY INSTRUCTION

     
Part List For 2

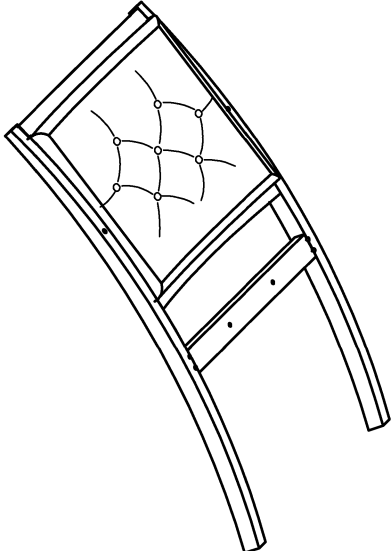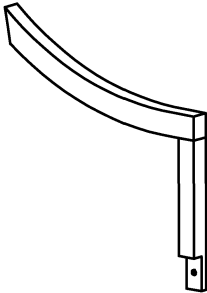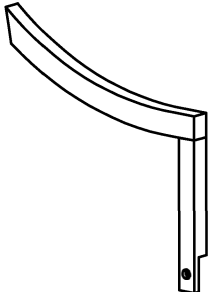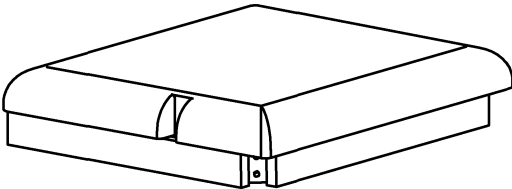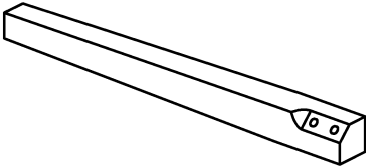(A) 	(B) 
BACK FRAME (2 pcs)	LEFT ARMREST (2 pcs)
(C) 	(D) 
RIGHT ARMREST (2 pcs)	SEAT FRAME (2 pcs)
(E) 	
LEG (4 pcs)	

ASSEMBLY INSTRUCTION

Hardware List For 2

 
①

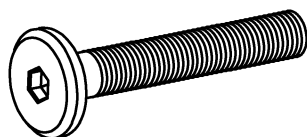

Ø 1/4" x 25 mm

BOLT (4 pcs)

 
②

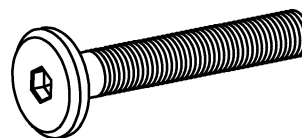

Ø 1/4" x 40 mm

BOLT (4 pcs)

 
③

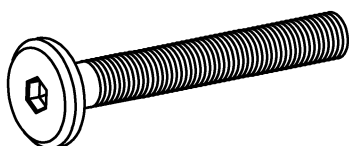

Ø 1/4" x 45 mm

BOLT (4 pcs)

 
④

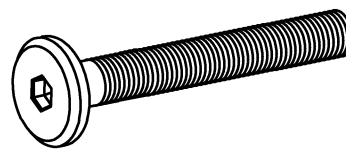

Ø 1/4" x 55 mm

BOLT (8 pcs)

 ⑤

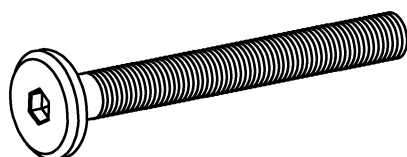

Ø 1/4" x 75 mm

BOLT (8 pcs)

 
⑥



Ø5/16" x 13 mm

LOCK WASHER (28 pcs)

⑦

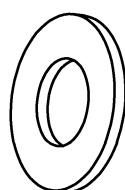

Ø5/16" x 19 x 2 mm

FLAT WASHER (20 pcs)

⑧

 


4 mm

ALLEN KEY (2 pcs)


ASSEMBLY INSTRUCTION

STEP 1:

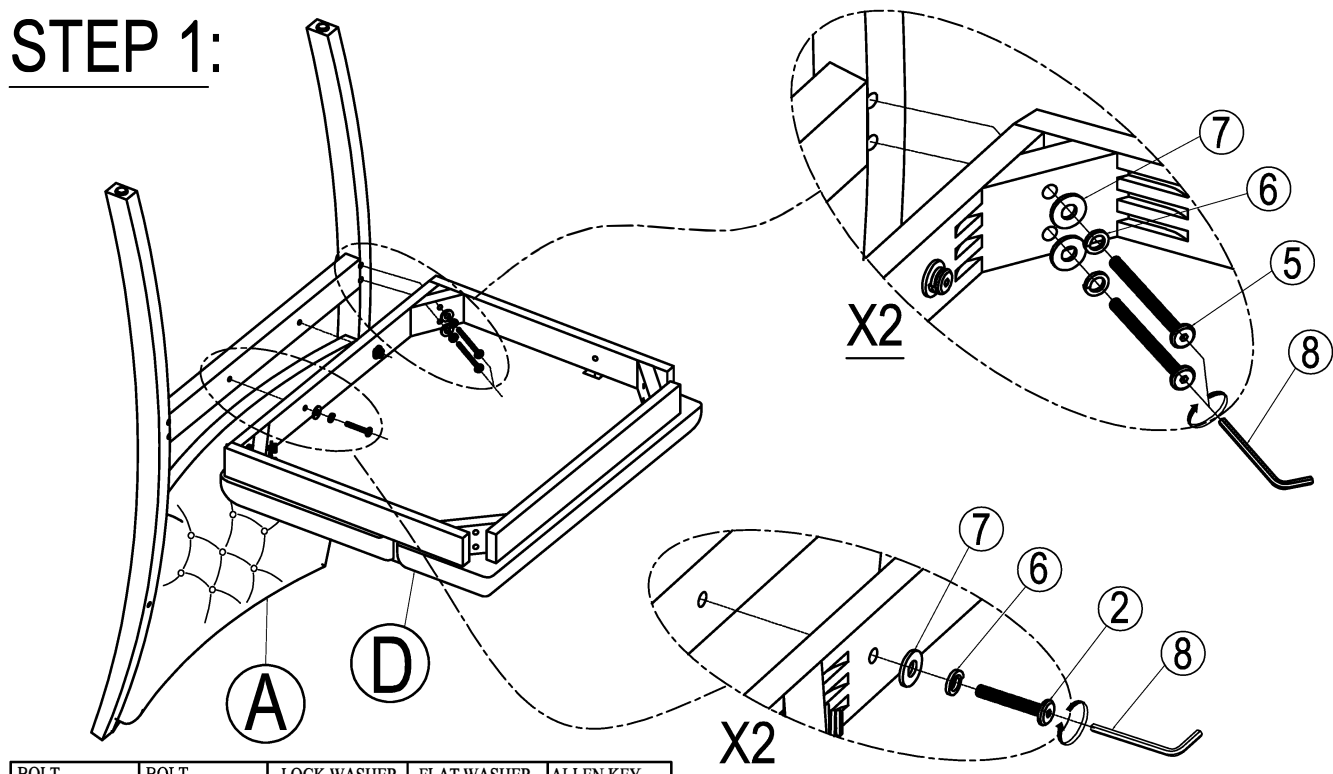

BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2mm	ALLEN KEY 4 mm
② x 4	⑤ x 8	⑥ x 12	⑦ x 12	⑧ x 1

 STEP 2:

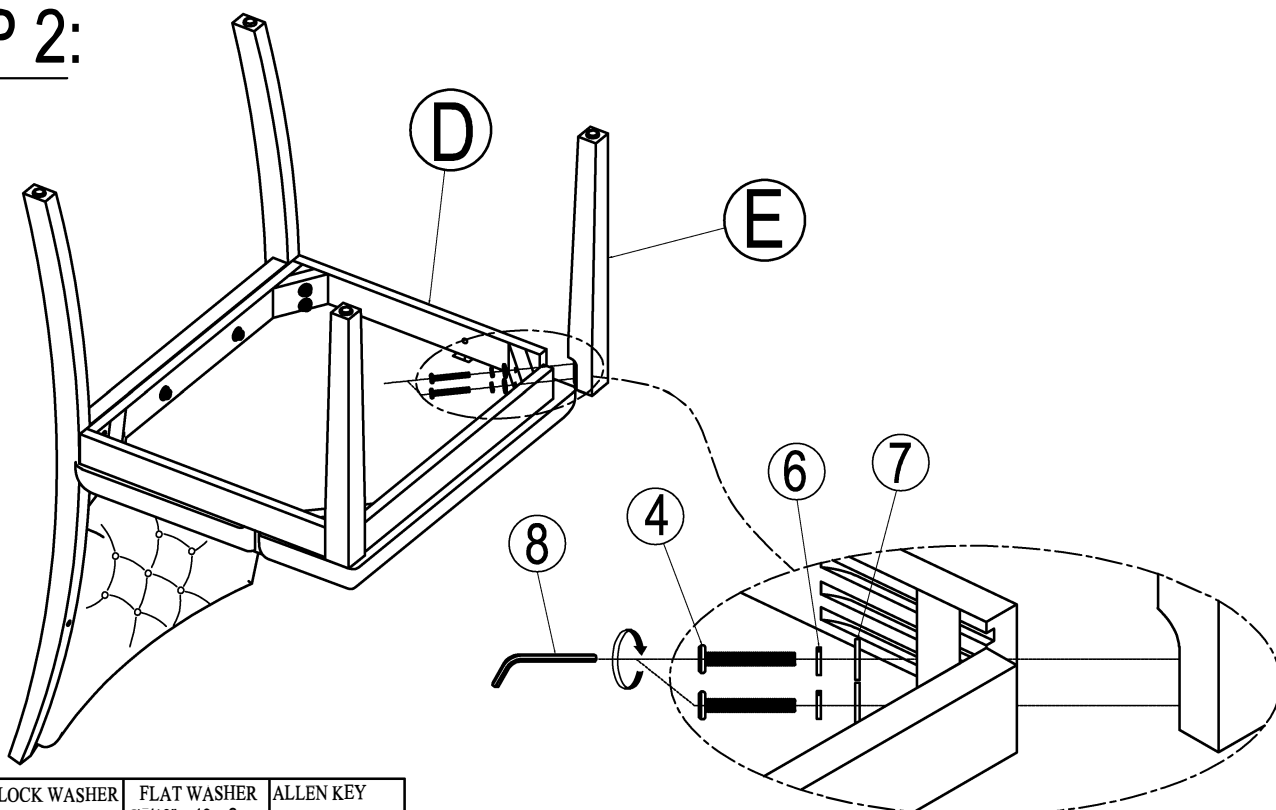


BOLT Ø 1/4" x 55 mm	LOCK WASHER Ø5/16" x 13 mm	FLAT WASHER Ø5/16" x 19 x 2 mm	ALLEN KEY 4 mm
④ x 8	⑥ x 8	⑦ x 8	⑧ x 1

X2

ASSEMBLY INSTRUCTION

 STEP 3:

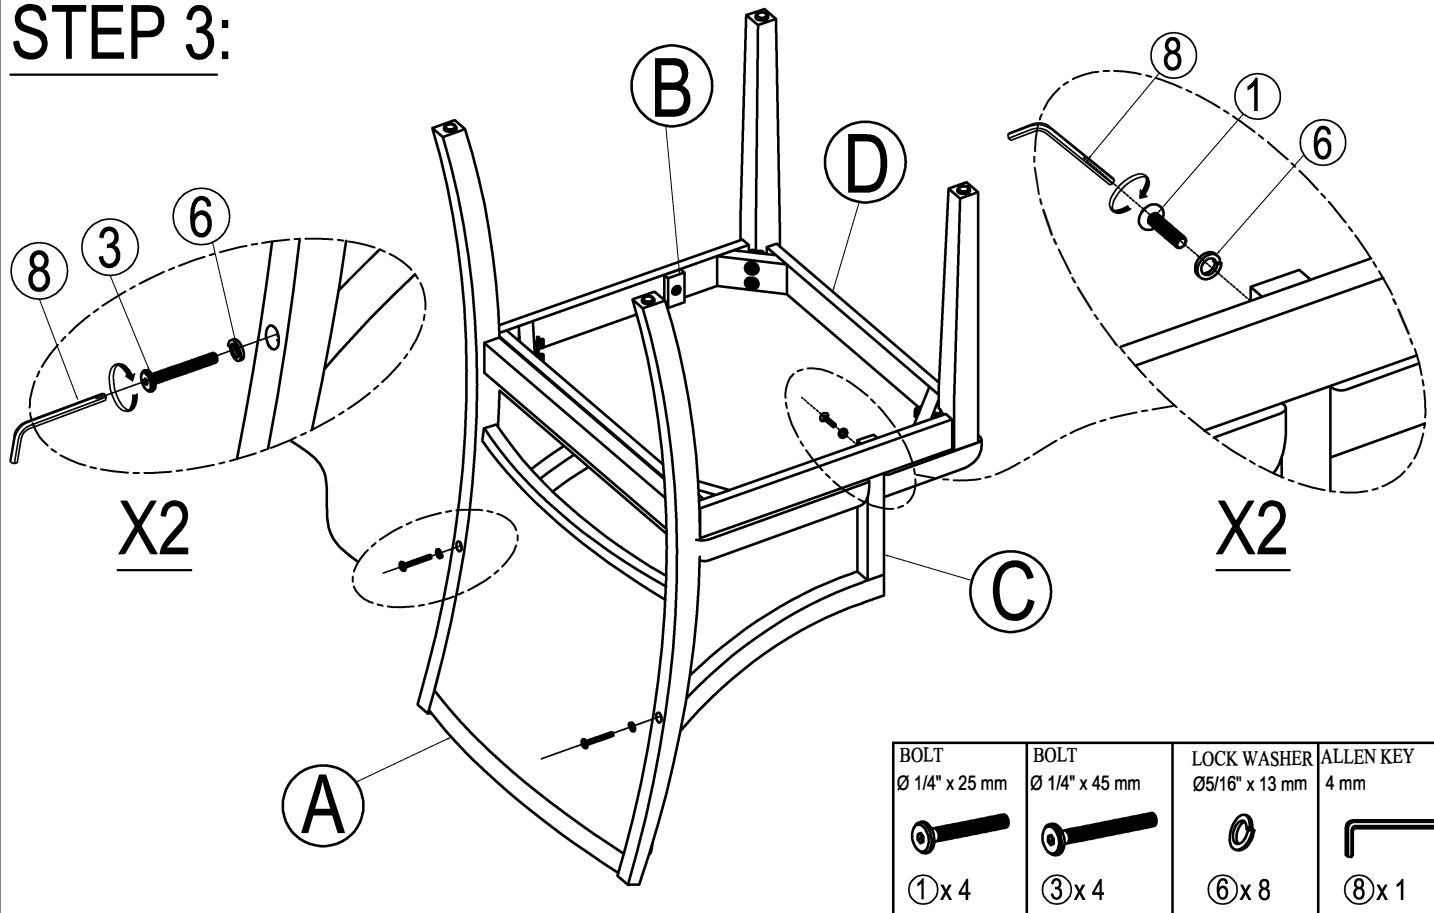

COMPLETE

