 


Assembly Instructions

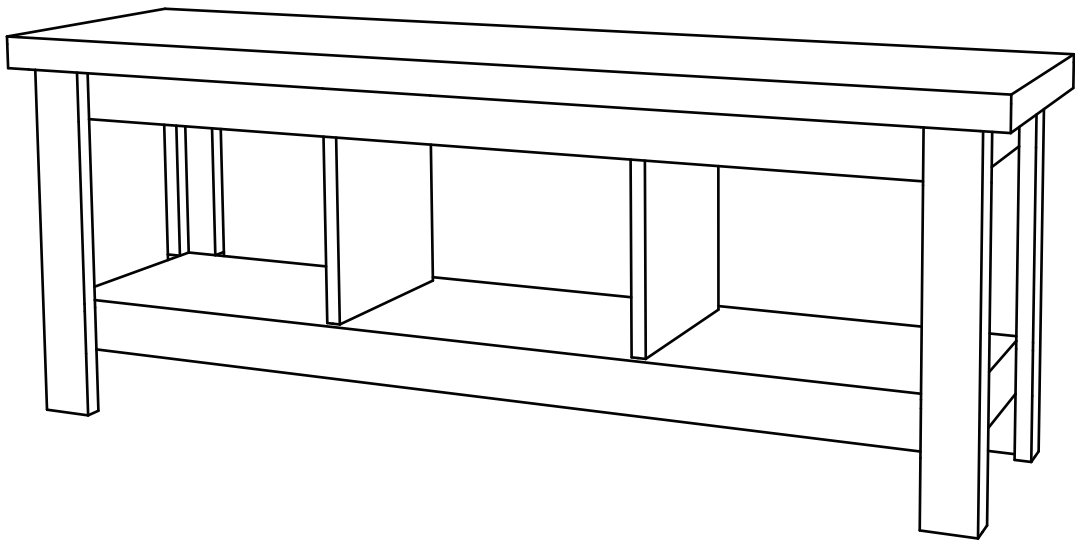 


TV Stand

Model No.
HOGA-F2423

Contact Us




We're here to help you.

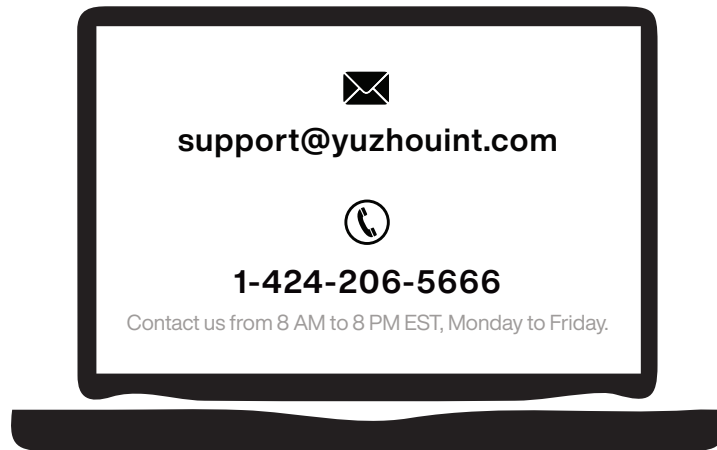

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

   1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

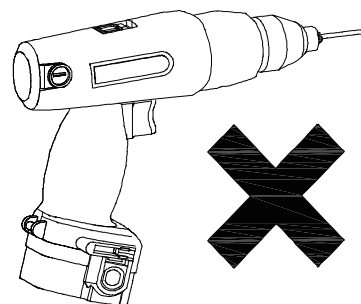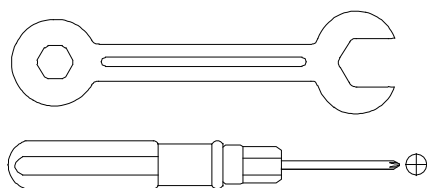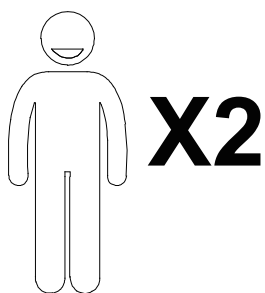



We recommend using hand tools for assembly.

 
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

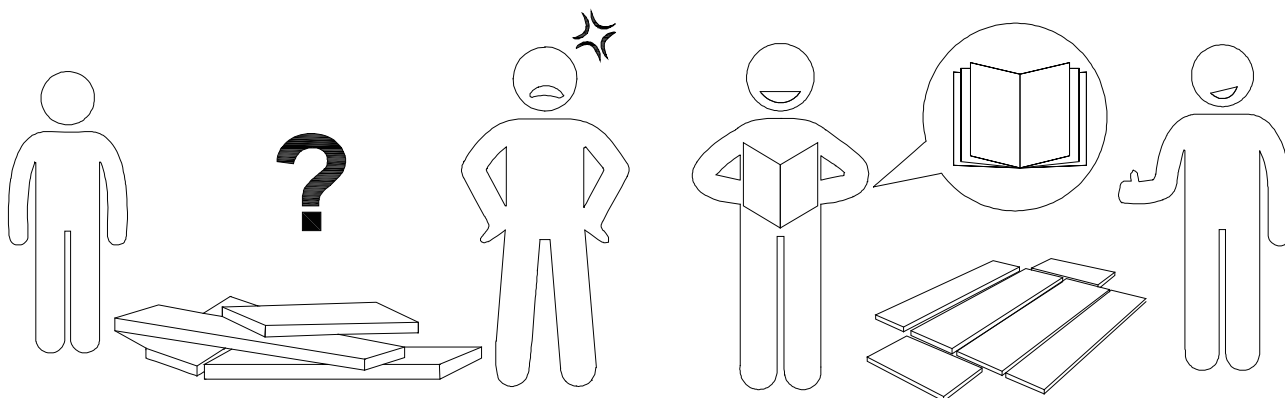

AVOID SCRATCHES

   In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

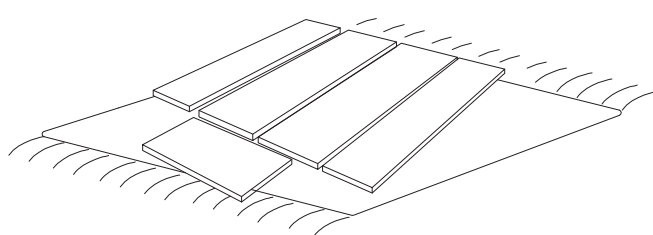
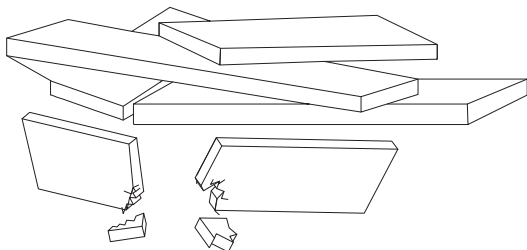


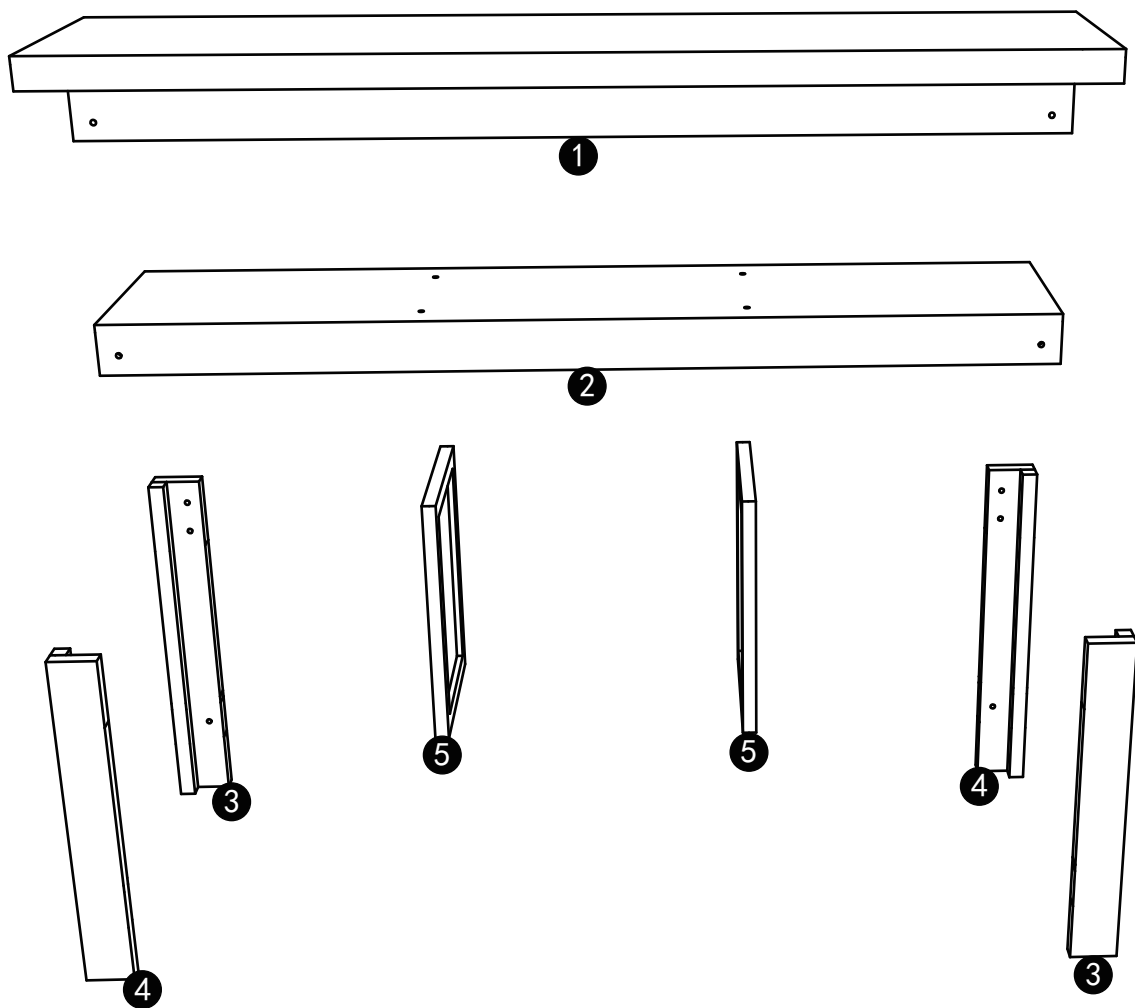





⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

  Parts List


1  1pc	2  1pc	
3  2pcs	4  2pcs	5  2pcs

    Hardware List

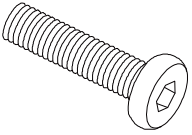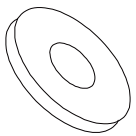
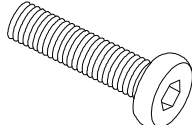
A	B	C	D
 M6x45mm			
12+1pcs	16+1pcs	4pcs	1pc
E	F		
 M4x35mm	 M6x40mm		
4+1pcs	4+1pcs		

1

A	B	D
		
M6X45 mm 8pcs	8pcs	1pc

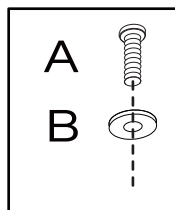 


pre-drill 70%

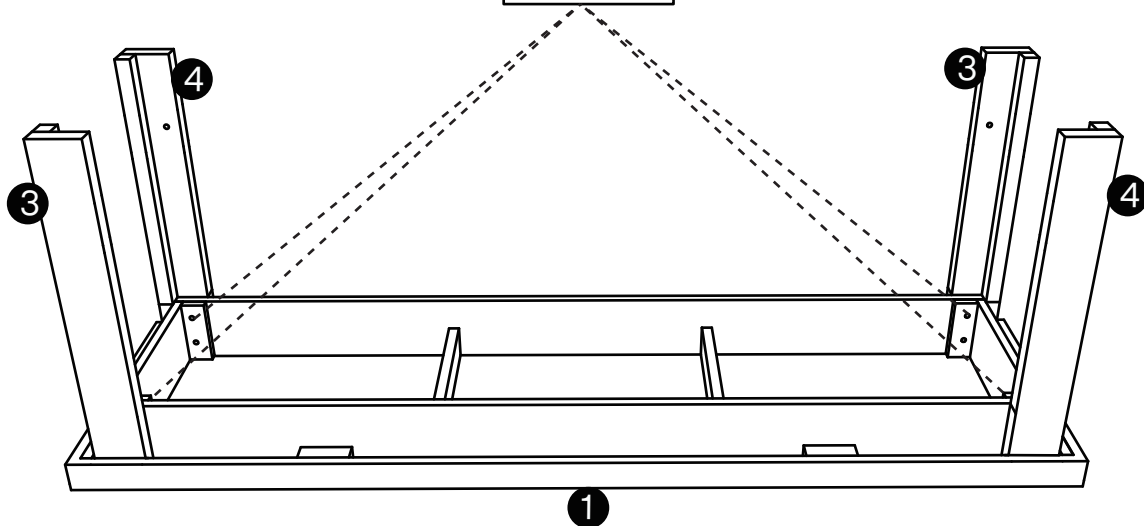 
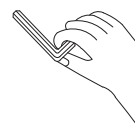 


2

A	B	D
		
M6X45 mm 4pcs	4pcs	1pc

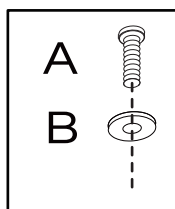 


pre-drill 70%


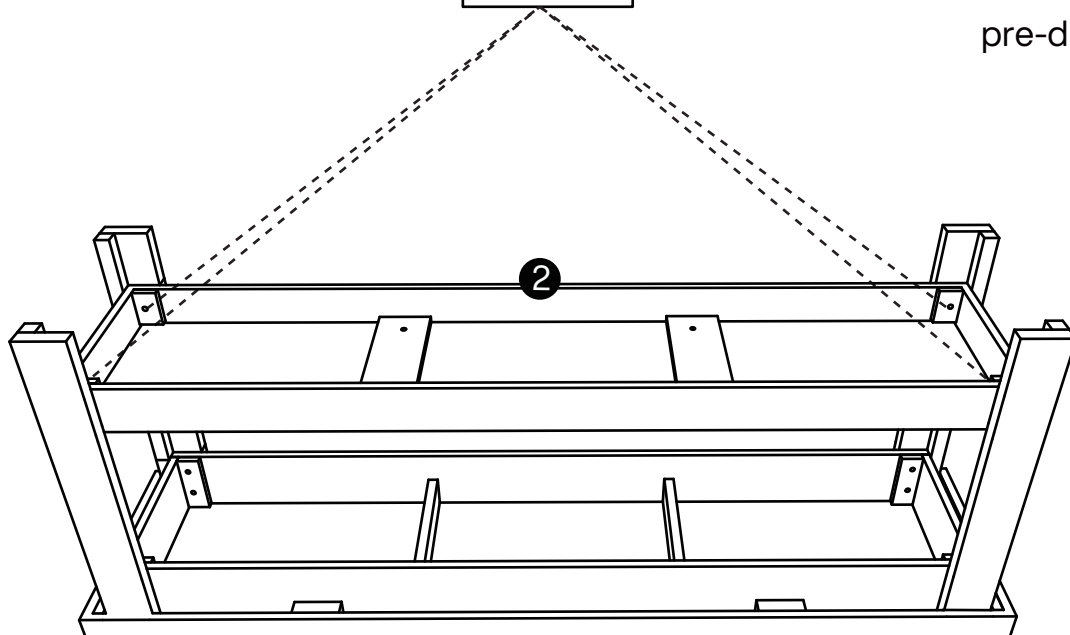 
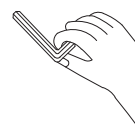 


3

B	D	E	F
		 M4X35 mm	 M6X40 mm
4pcs	1pc	4pcs	4pcs

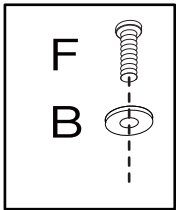 


screw down

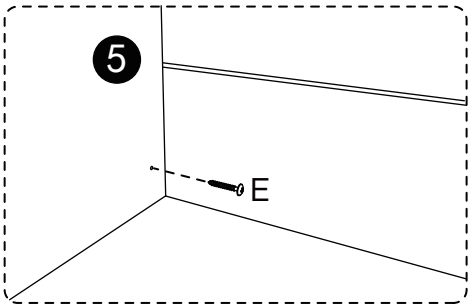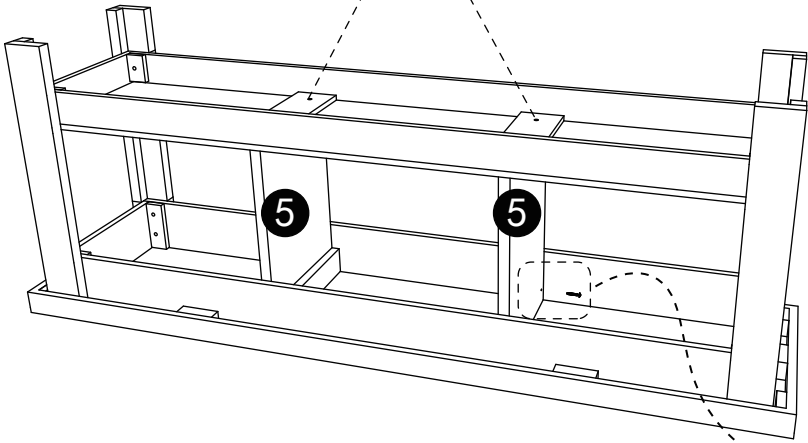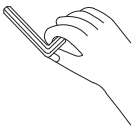   

4

C

 4pcs

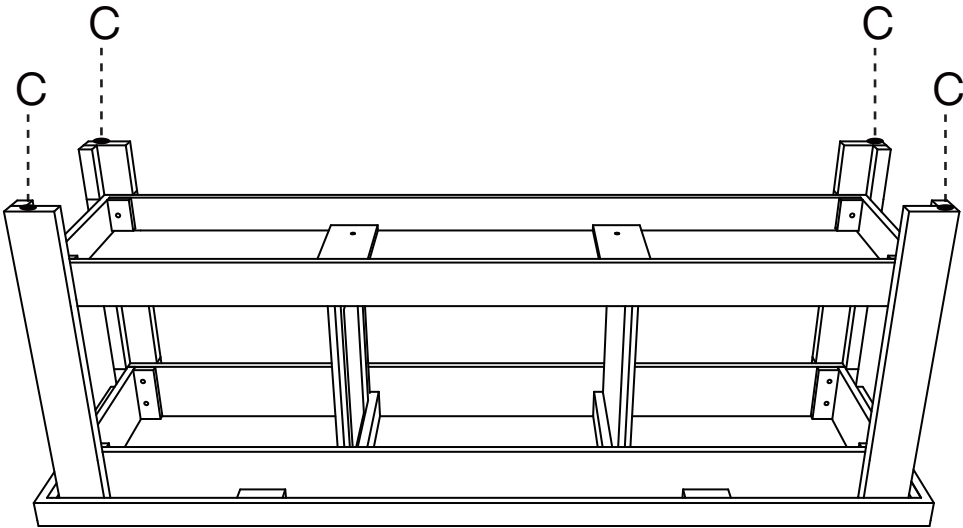

Thank you for your support!

