


Instruction Manual

SKU:AKG5-D

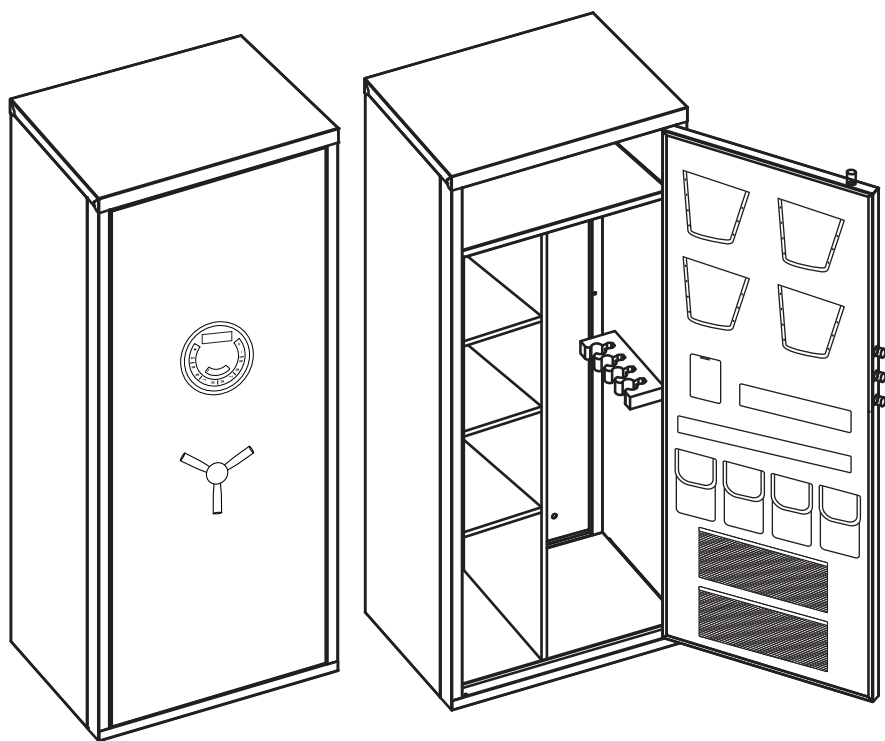

CATALOGUE & WARNING

Cabinet Exploded View & Part List1

Installation 2-6


Cabinet Display7



 




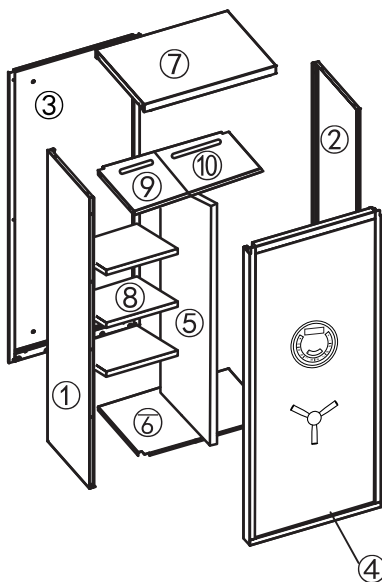


 

Cabinet Settings and Function Introduction8-10









Exploded View & Part List

Tips

1. Please read the complete installation instructions carefully before assembling the gun cabinet.
2. Check the materials to make sure they are normal and not damaged.
3. Refer to the illustrations to identify the parts and accessories of the gun cabinet.
4. Align the holes and tighten the screws during installation.
5. Installation requires two people, and keep children away to avoid accidental injury.



					
①	②	③	④	⑤	⑥
(Left Side Plate) 1 PC	(Right Side Plate) 1 PC	(Back Plate) 1 PC	(Door Frame) 1 PC	(Middle Vertical Plate) 1 PC	(Bottom Plate) 1 PC
					
⑦	⑧	⑨	⑩	⑪	⑫
(Top Plate) 1 PC	(Small Dividers) 3 PCS	(Left Compartment Divider) 1 PC	(Right Compartment Divider) 1 PC	(Gun Stock) 2 PCS	(Gun Stock) 1 PC

							
A	B	C	D	E	F	G	H
(Expansion Screw) 4 PCS	(Screw) 10 PCS	(Screw) 40 PCS	(Metal piece) 4 PCS	(Screwdriver) 1 PC	(Sensor light) 1 PC	(Top Buckle) 12 PCS	(Bottom Buckle) 12 PCS


Installation Instructions

⚠ WARNING



- Tip over hazard: Secure the cabinet! The cabinet can be tipped over by children or adults, please make sure the cabinet is mounted on the wall.
- Keep the keys in a secure place away from children.
- Do not move this cabinet using its handle.


1

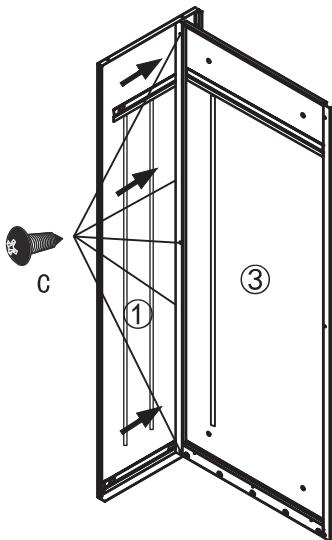

Step 1 Left Plate Installation


Fix ① and ③ with five C's.

2

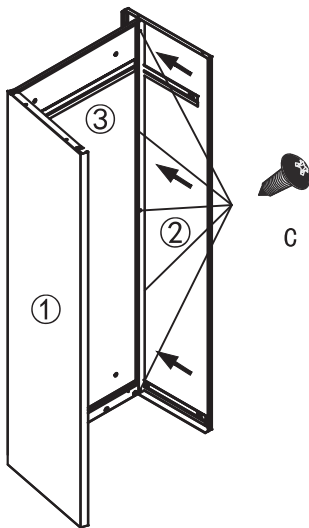


Step 2 Right Plate Installation

Fix ② and ③ with five C's.

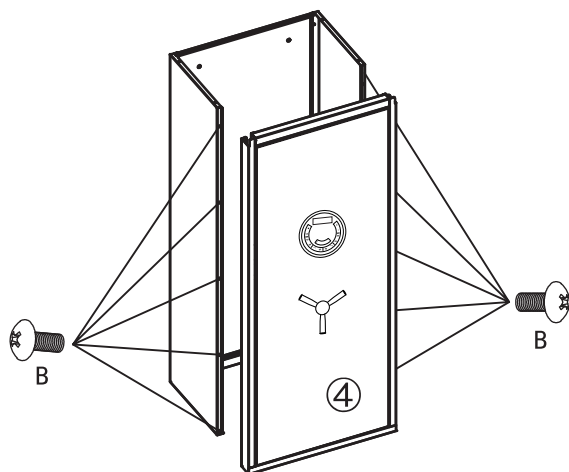
3**Step 3 Door Installation**

Fix ④ on both sides with ten B's.

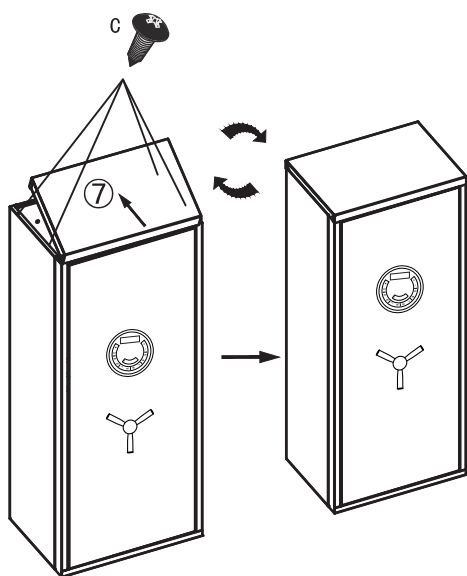4**Step 4 Top Plate Installation**

Install the ⑦ by inserting it from front to back and secure with four C's from inside.

5

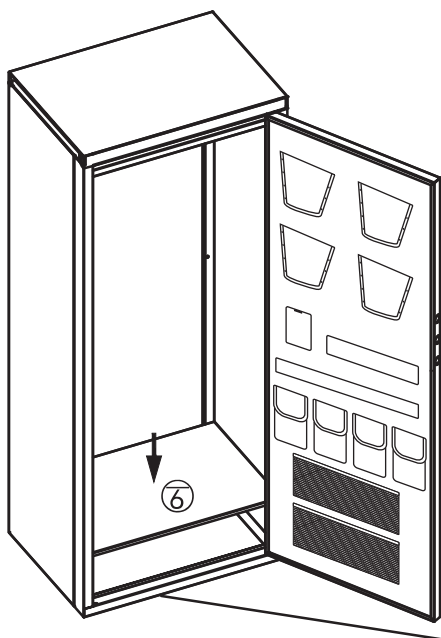

Step 5 Bottom Plate Installation


Put ⑦ on the bottom.

NOTICE:

Please lay the cabinet flat and adjust the feet to the same height as the surrounding area to increase the bearing capacity of the cabinet.



6

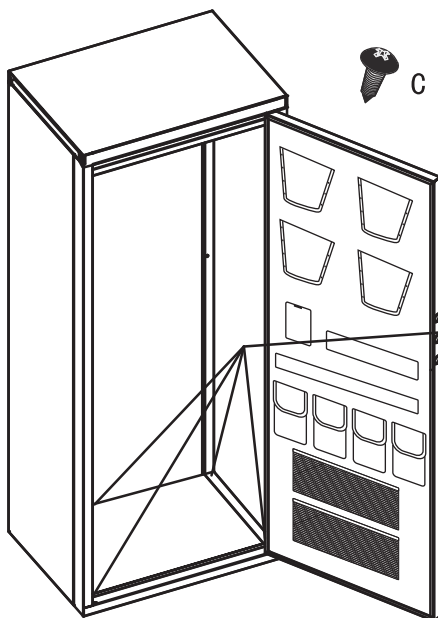


Step 6 Fix the Bottom Plate

At the four corners of the interior bottom plate, there are eight pre-drilled holes. Fix the bottom plate with eight C's and four D's, as the picture shows.



7

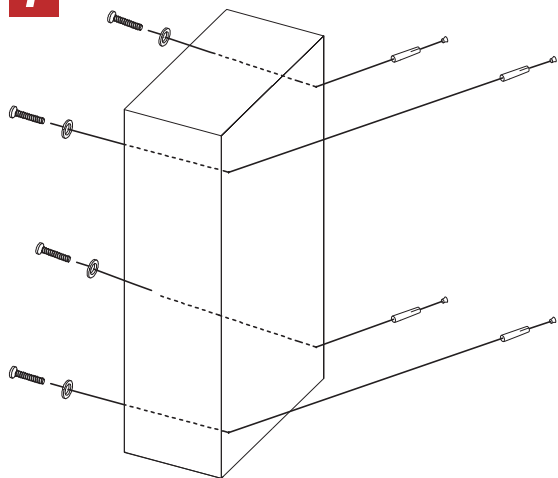


Step 7 Mount the Cabinet


Fix the cabinet on the wall with four A's.

NOTICE:

 We suggest that you could mount the cabinet on the wall to prevent it from falling. If you choose to do so, do it in this step.




8

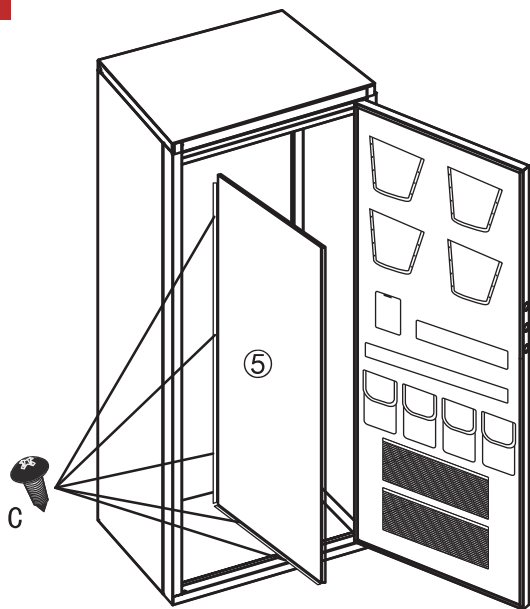

Step 8 Middle Vertical Plate Installation

Install ⑤ and fix it in the back and bottom with five C's.


9

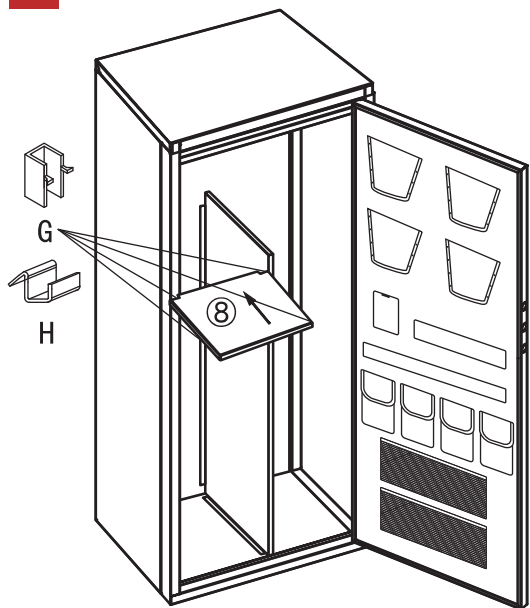

Step 9 Small Dividers Installation

Fix ⑧ on both sides with four G's and H's, "G" on the top and "H" on the bottom, then install ⑧ wherever you want, and you can adjust the position as needed.


10

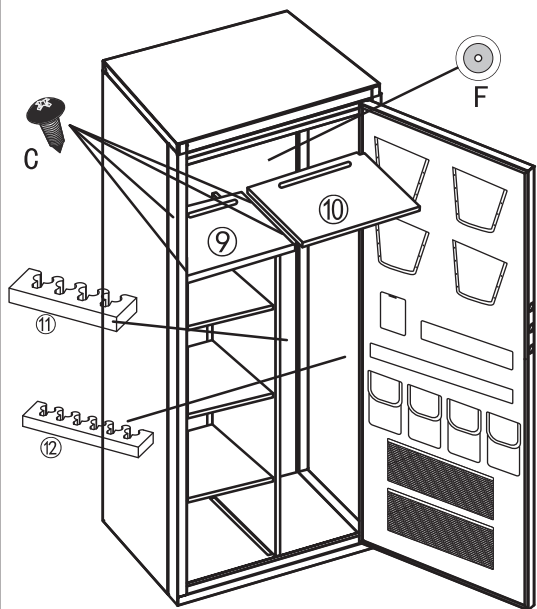

Step 10 Compartment Dividers Installation

- 1) Fix ⑨ on left side with four C's, then place ⑩ on the right side.
- 2) You can install the F's in any position you want (The sensor light requires three AAA batteries, it will light up when the door is open or object sensed).
- 3) Install ⑫ on the right side, ⑪ on the left side and back.

Cabinet Display

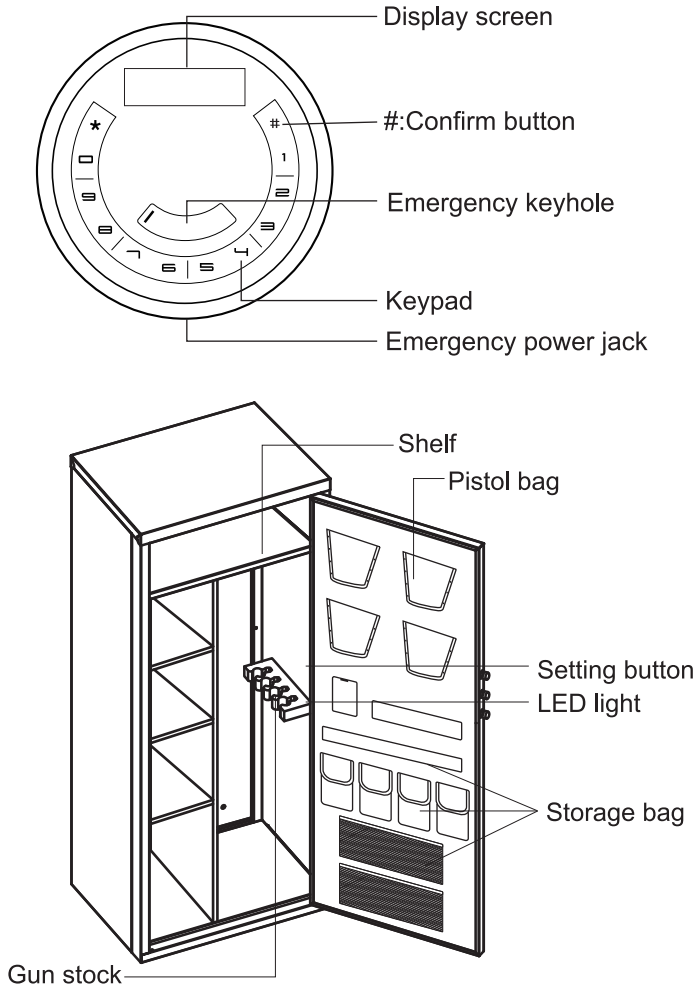


Warnings

- ⚠ 1. Do not lock the emergency key or USB Type-C Cable into the cabinet.
- ⚠ 2. The initial user code is **123456**, which need to be modified.
- ⚠ 3. If the cabinet is not used for a long time, the battery should be removed to prevent leakage of liquid from damaging the electronic system.
- ⚠ 4. Purchase 4 AA batteries in advance, this cabinet does not include batteries.

System Setting

➤ Step1 Opening Your Cabinet For The First Time

⚠ NOTE: Please use the emergency key to open the cabinet for the first time.

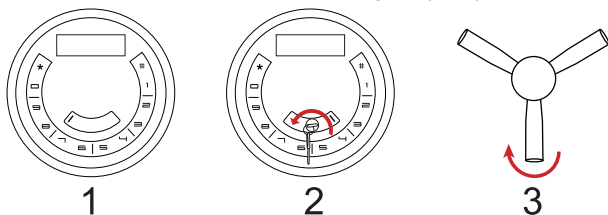

1. Slide the lock hole cover to the right to expose the emergency keyhole.
2. Insert the emergency key, turn it counterclockwise to the limit, and hold on it.
3. Then rotate the door handle clockwise to open the door.

NOTE: 1. When you rotate the door handle to open, you must have the key fully inserted and turned counterclockwise to the limit, keeping the key until the safe unlocked and opened.

2. Use the key to unlock, the led light will not light up.

3. Please keep the keys in a secure place, do not lock the keys inside the safe.

➤ Step2 Insert The Battery

Remove the internal battery case cover. Install 4 AA batteries(not included) and restore battery case cover.

⚠ NOTE: 1.Rechargeable battery is not recommended as it may destroy the internal electronic components of your safe.

2.Please use brand-new batteries, do not mix used batteries with new batteries.

3.After opening the door, if the safe beeps 6 times in a row, it means the batteries are out of power, please replace the batteries.

➤ Step3 Set the First Code

1. Open the safe, keep the safe opening, short press the setting button (on the inner side of the door) , the safe beeps once and keypad light on.

2. Input a new code(3-12 digits),then press **#** to confirm. The buzzer plays a chord, and the screen will display "SUCCESS" to indicate successful setup.

3. Testing the code before you close the door.

➤ Step4 Set the Second Code

1.Open the safe, keep the safe opening, press **#** , enter 0 twice, then short press the setting button (on the inner side of the door), buzzer "beep" will sound.

2.Input new code(3-12 digits),then press **#** to confirm. The buzzer plays a chord, and the screen will display "SUCCESS" to indicate successful setup.

3.Testing the code before you close the door.

- ! NOTE:** 1. The user can set 2 codes for the cabinet.
2. The initial user code is **123456**, need to be modified. (After you set the new different user code successfully, the initial user code will be covered automatically.)
3. The ***** button is delete button. After pressing the ***** key, the entered code will be cleared.

Three Ways to Open the Door

1. The first unlocking method: Use the emergency key

Insert the emergency key into the keyhole, turn it counterclockwise to the limit. Then turn the door handle clockwise to open the safe door. (Suitable for the first opening, forgetting the code or when the battery is dead)

2. The second unlocking method: Use the code

After installing the battery, press the **#** button, then enter your code and press the **#** button again, the word "OPEN" will be displayed on the screen, then turn the door handle clockwise to open the door.

3. The third unlocking method: Use the USB type-C cable + code

When the battery of your safe is weak and you can't find the keys, please plug one end of USB type-C cable into the emergency power jack and plug the other end to the portable charger (not included), then enter the correct code to open the door (Suitable for the battery is out of power and the key can not be found).

Under-voltage Warning

When the voltage is around 4.8V, after opening the door, the buzzer will beep 6 times in a row, reminding the user that the battery power is low and the batteries need to be replaced.

Dual Alarm System

1. After 5 consecutive wrong code, your safe will activate the alarm system, the alarm will sound for 30 seconds, enter the correct code and the alarm will be canceled.
2. In standby state, press **#** to wake up the keypad, then press *****, there is a beep and the keypad lights are off, the vibration alarm mode is turned on. If the box is shaken or hit violently, it will give an alarm immediately for 30 seconds, at this point, enter the correct code to stop the alarm.

NOTE:

1. When power on, the system default for alarm is off.
2. After the cabinet is opened with code, the vibration alarm will be turned off and needs to be turned on again.
3. The alarm beeps can be stopped by use the key to open the safe and remove the battery to cut off the power.
4. Vibration alarm mode is one-off, If necessary, please reset each time after opening.

Mute Function

In standby state, press **#** to wake up the keypad, press 1 twice and **#**, there is a long beep , indicate the mute function is turned on/off.

NOTE:

Under the mute function, the wrong code alarm and vibration alarm still work, and the alarm will sound when triggered.

Reset the System

1. Press and hold the setting button until you hear a chord, indicating the reset successful. (In this state, all codes will be deleted and you must reset your codes).
2. The initial code is **123456**, need to be modified.