# **Anti-Tipping Device Manual**

#### Introduction

Thank you for purchasing our Anti-Tipping Device. This device is designed to prevent furniture from tipping over, ensuring the safety of your household, especially for children and pets. Please read this manual carefully before installation and use.

## **Package Contents**

- Anti-Tipping Straps (2 pcs)
- Wall Anchors (4 pcs)
- Screws (4 pcs)
- Adjustable Buckles (2 pcs)
- Installation Manual

## **Safety Precautions**

- 1. Ensure the furniture is placed on a flat and stable surface.
- 2. Do not overload the furniture as it may compromise the effectiveness of the anti-tipping device.
- 3. Regularly check the straps and hardware for any signs of wear or damage.
- 4. Keep small parts out of reach of children.

#### **Installation Instructions**

Step 1: Determine the Installation Points

- 1. Place the furniture in its desired location against the wall.
- 2. Identify the solid wood or metal frame on the back of the furniture for attaching the straps.
- 3. Mark the corresponding points on the wall where the straps will be anchored.

Step 2: Install the Wall Anchors

1. Use a drill to make holes at the marked points on the wall.

- 2. Insert the wall anchors into the drilled holes.
- 3. Secure the anchors by gently tapping them into place with a hammer.

Step 3: Attach the Straps to the Furniture

- 1. Align the straps with the pre-identified installation points on the furniture.
- 2. Use the provided screws to attach the straps securely to the furniture.

Step 4: Secure the Straps to the Wall

- 1. Position the furniture against the wall.
- 2. Extend the straps to the wall anchors and attach them using the provided screws.
- 3. Adjust the length of the straps using the adjustable buckles to ensure a snug fit.

#### **Maintenance and Care**

- 1. Periodically check the tightness of the screws and straps.
- 2. Clean the straps with a damp cloth and mild detergent. Do not use abrasive cleaners.
- 3. Replace any damaged or worn parts immediately to maintain safety.

#### **Troubleshooting**

- 1. If the furniture still wobbles or tips, check if the straps are properly tightened and if the wall anchors are securely installed.
- 2. Ensure that the furniture is not overloaded and is evenly distributed.

### **Warranty Information**

This Anti-Tipping Device comes with a one-year limited warranty. The warranty covers defects in materials and workmanship under normal use. For any warranty claims, please contact our customer service with proof of purchase.