



STEP 4

- 4.1 Attach Panel (G) to Panel (E), as shown.
- 4.2 Combine the assembled parts of Panel (C) (F) & (D) (F) to the unit using Screw (1).

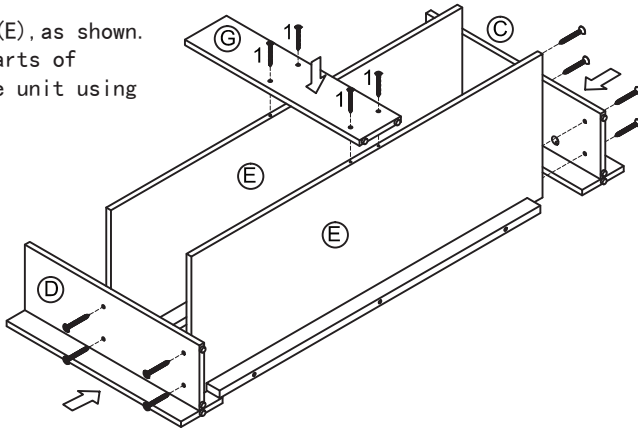


STEP 5

- 5.1 Upright the unit and attach Panel (A) on top.
- 5.2 Tighten Cam-Lock Nut (4) and cover it with Sticker (7).

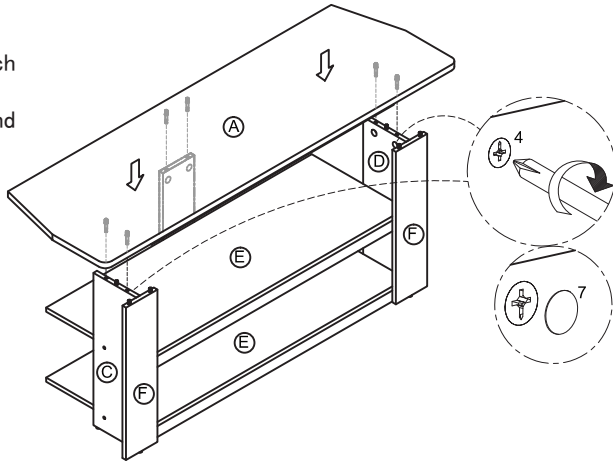

Recommended Maximum Weight

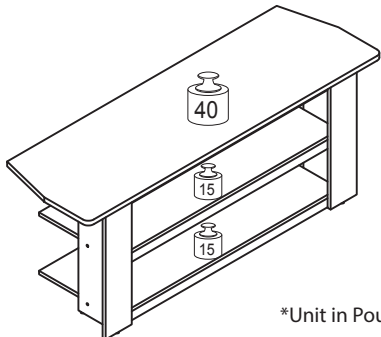

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.

Assembly Instruction

 
42-in TV Entertainment Center

00:30


Approx. 30 minutes



Recomm. 2 Person




Tool Required

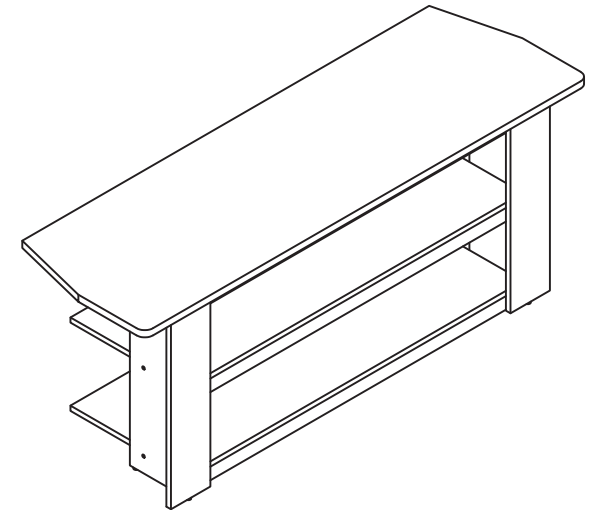

No	Hardware List	Qty
1	Screw	21pcs
2	Dowel	10pcs
3	Cam-Lock Screw	8pcs
4	Cam-Lock Nut	8pcs
5	Nail Leg	8pcs
6	Screw Plastic Cover	12pcs
7	Round Sticker	8pcs

No	Parts List	Qty
A	Top Panel	1pcs
B	Apron Panel	3pcs
C	Left Side Panel	1pcs
D	Right Side Panel	1pcs
E	Shelf Panel	2pcs
F	Front Panel	2pcs
G	Back Panel	1pcs

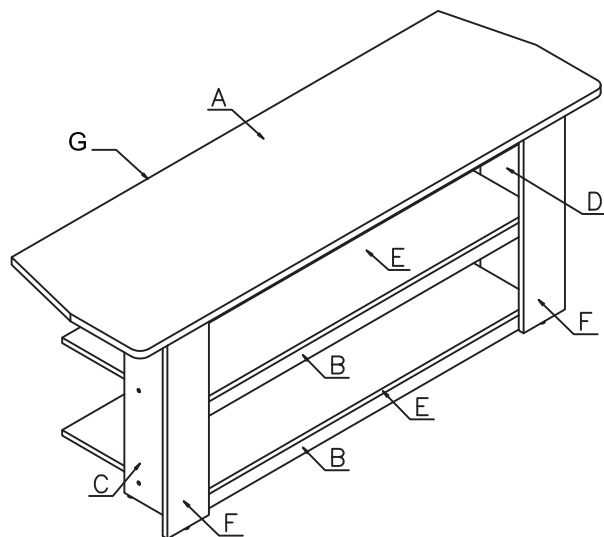


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


STEP 1

- 1.1 Insert Cam-Lock Screw(3) to Panel (A) & (F).
- 1.2 Insert Dowel (2) to Panel (C) (D) & (F).
- 1.3 Insert Cam-Lock Nut (4) to Panel (C) (D) & (G).
- 1.4 Insert Nail Leg (5) to Panel (C) (D) (F) & (G).
- 1.5 Attach Panel (B) to Panel (A) using Screw(1), as shown.

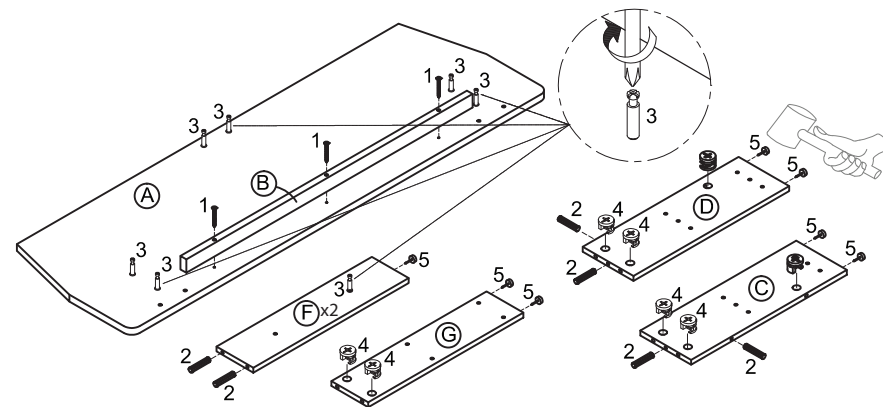

STEP 2

- 2.1 Insert Dowel (2) to Panel (E), as shown.
- 2.2 Attach Panel (B) to Panel (E) using Screw(1).

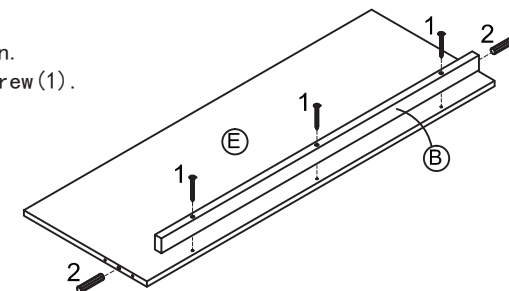

STEP 3

- 3.1 Attach Panel (D) to Panel (F).
- 3.2 Attach Panel (C) to Panel (F).
- 3.3 Tighten Cam-Lock Nut (4) and cover it with Sticker (7).

