



ATTENTION

1. Carefully lay the item on scratch-free surface, such as carpet or rug.
2. Two or more adult assembly is recommended.
3. Do not fully tighten all bolts until all parts are in place.

Failure to follow these instructions may cause the bolts to misalign during assembly.

ASSEMBLY INSTRUCTION

1. Using screws to assemble “Side Panel” with 2pcs of “Shelf” and 1pc of Bottom Panel. Not to fasten screws entirely yet.
2. Fasten all screws to ensure side panels could attach to center holders tightly.

PARTS

A. SIDE PANELS.....	2 PCS
B. SHELF	2 PCS
C. BOTTOM PANEL	1 PC
D. SCREW.....	24 PCS
E. ALLEN KEY.....	1 PC

CARE OF ACRYLIC FURNITURE

Please use the following procedure in caring for acrylic furniture:

- Dust with soft dry cloth.
- Do not leave spills unattended.
- Do not use abrasive cleaner.
- Protect from heat and liquids.
- Keep out of direct sunlight to prevent fading.

DIMENSIONS

34-1/4W x 18D x 32-1/2H

FINISH NAME Clear Acrylic