 
 

AKT203-RH

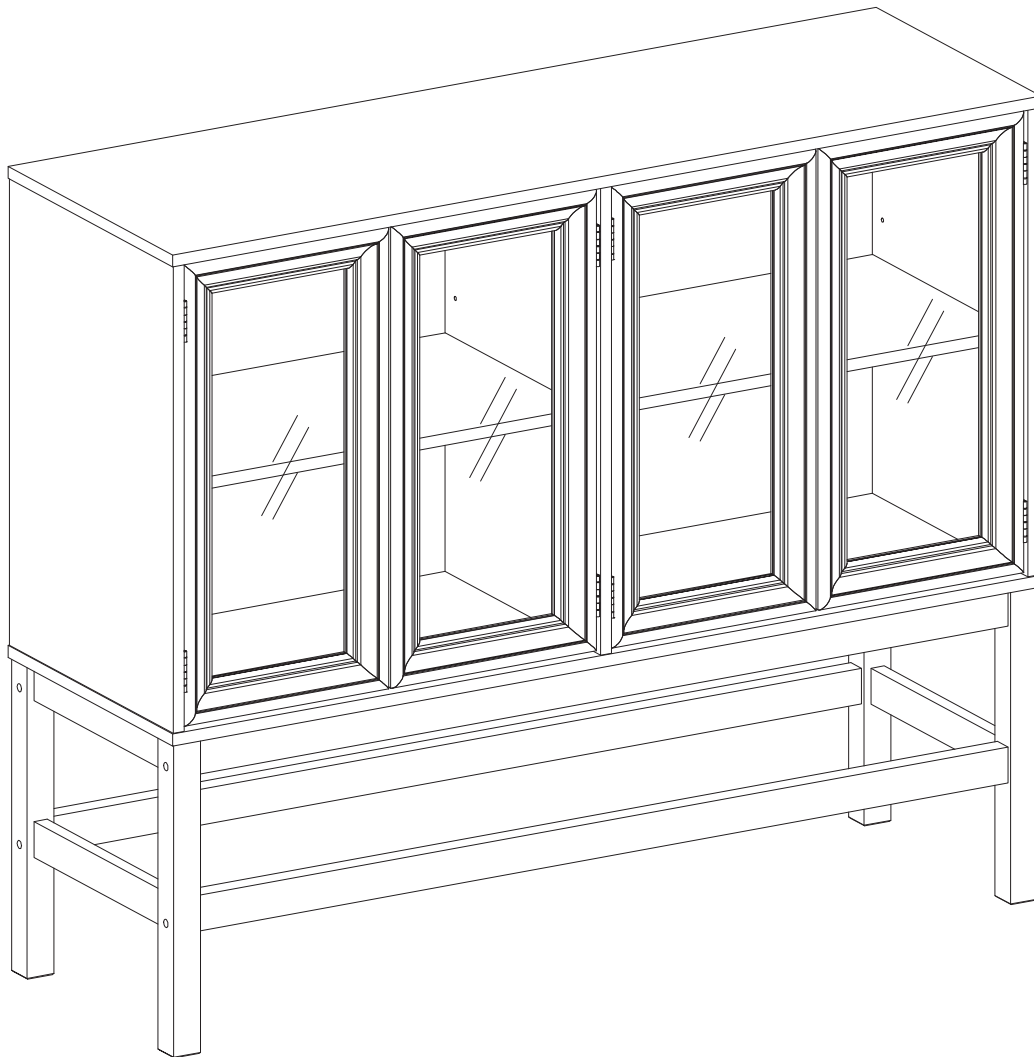

Please thoroughly review the installation instructions prior to commencing the installation process. Ensure that all tools are utilized appropriately and with due care. Should you encounter any questions regarding the product or the installation procedure, do not hesitate to contact us. We will make every effort to assist you in resolving any issues.

We aim to provide you with a distinctive experience.

Before You Start

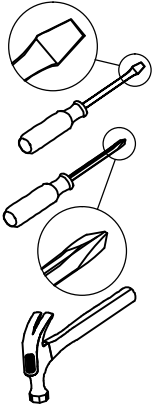 


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

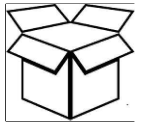


Board Identification

 
Not actual size

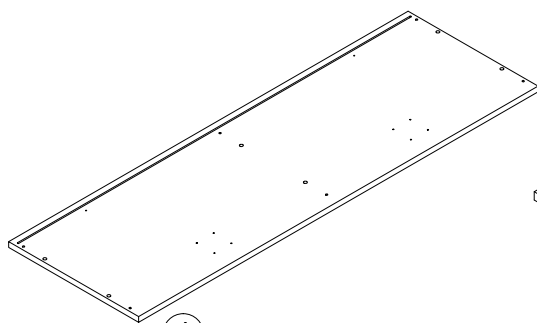


①
TOP
Qty:1

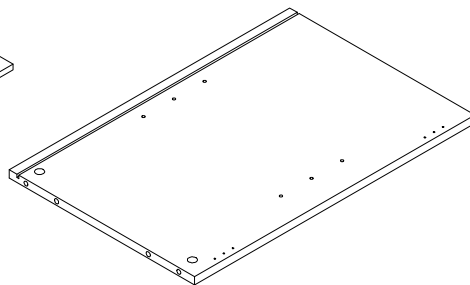 


②
LEFT SIDE PANEL
Qty:1

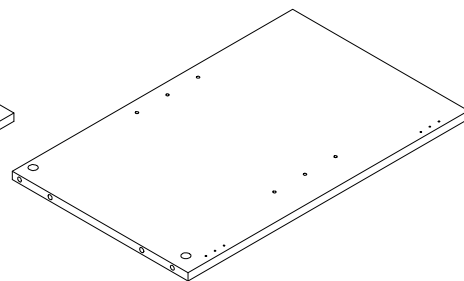 


③
MIDDLE PANEL
Qty:1

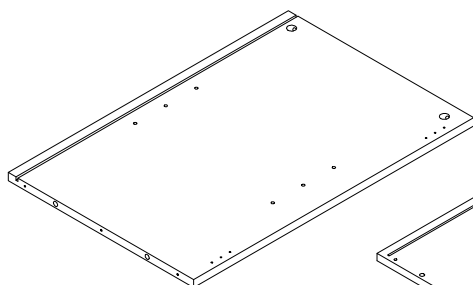 


④
RIGHT SIDE PANEL
Qty:1

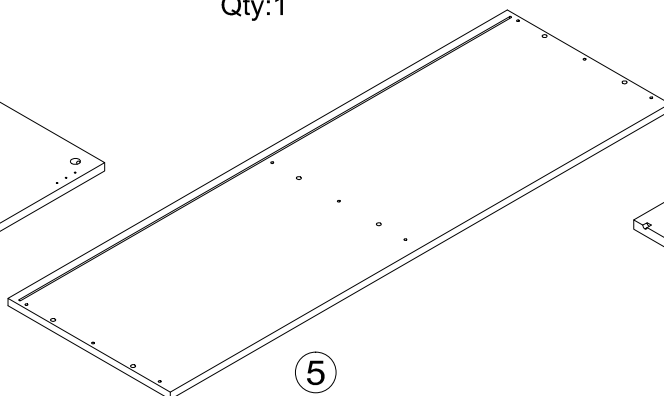 


⑤
BOTTOM
Qty:1

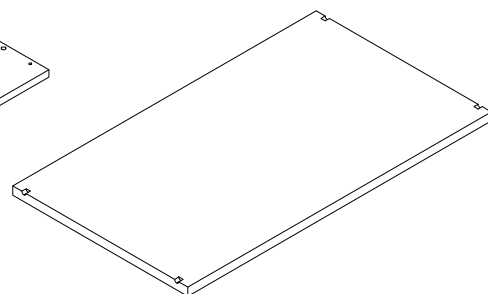 


⑥
ADJUSTABLE SHELF
Qty:2

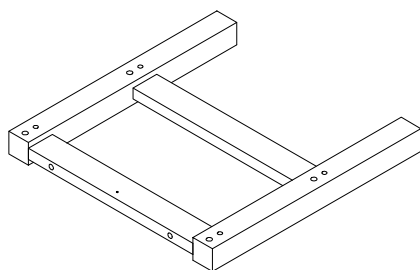 


⑦
SUPPORT FOOT
Qty:2

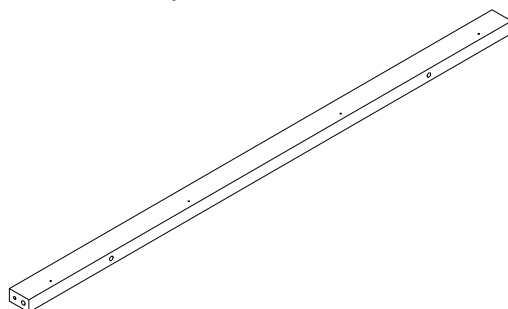 


⑧
RAIL
Qty:1

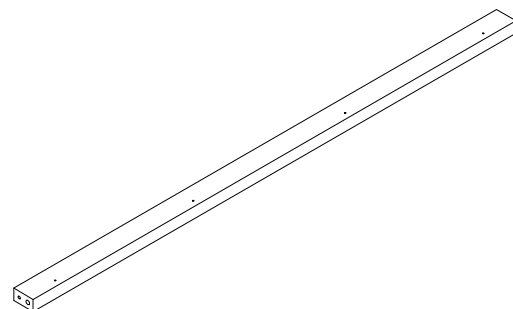 


⑨
RAIL
Qty:1

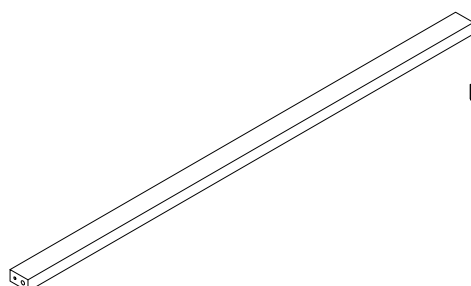 

⑩
RAIL
Qty:2

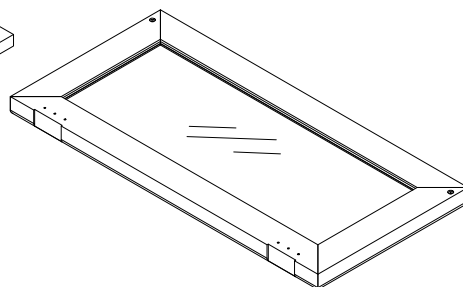 


⑪
DOOR
Qty:2

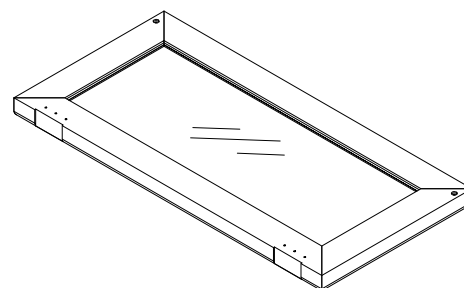 

⑫
DOOR
Qty:2

Board Identification

 
Not actual size

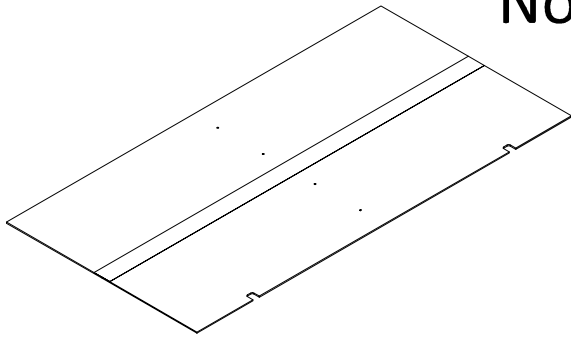

13

BACK PANEL
Qty:1

 Part List




Ø15X11mm

A

X6

 CAM LOCK
spare:1




Ø6.5X35mm

B

X6

 CAM BOLT
spare:1




Ø8X30mm

C

X26

 WOODEN DOWEL
spare:3




Ø4X40mm

D

X9

 SCREW
spare:1




20X20X16mm

E

X10

 L-SHAPED IRON




Ø4X14mm

F

X20

 SCREW
spare:2




Ø3X14mm

G

X4

 SCREW
spare:1




Ø3.5X14mm

H

X56

 SCREW
spare:3




Ø6.3X50mm

I

X8

 SCREW
spare:1




4X65mm

J

X1

 HEX KEY




Ø5X17mm

K

X8

 SHELF SUPPORT
spare:1




Ø3.5X16mm

L


X10

BACKBOARD BUCKLE

 
Part List

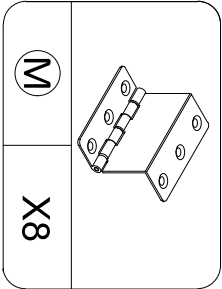


HINGE

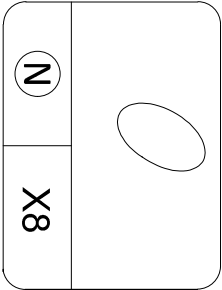 

HOLE COVER
spare:1

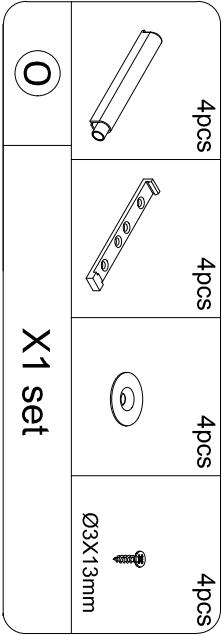 


MAGNETIC COLLISION

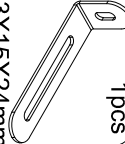 1pcs	1pcs	1pcs	1pcs
			
Ø4X40mm	Ø4X14mm	Ø8X29mm	73X15X24mm
(P)	X2 set		

ANTI-TIPPING HARDWARE


Cam Lock Fastening System

 Insert the cam bolt into the
hole first, then insert the
cam lock and lock it.





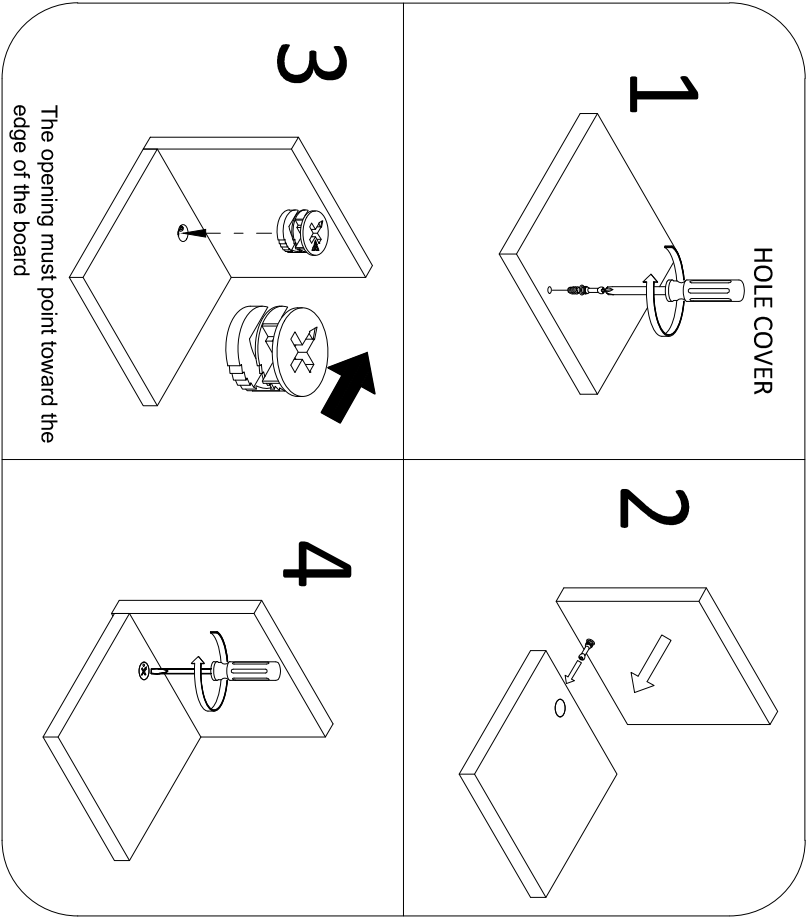


Board Identification



 
Not actual size

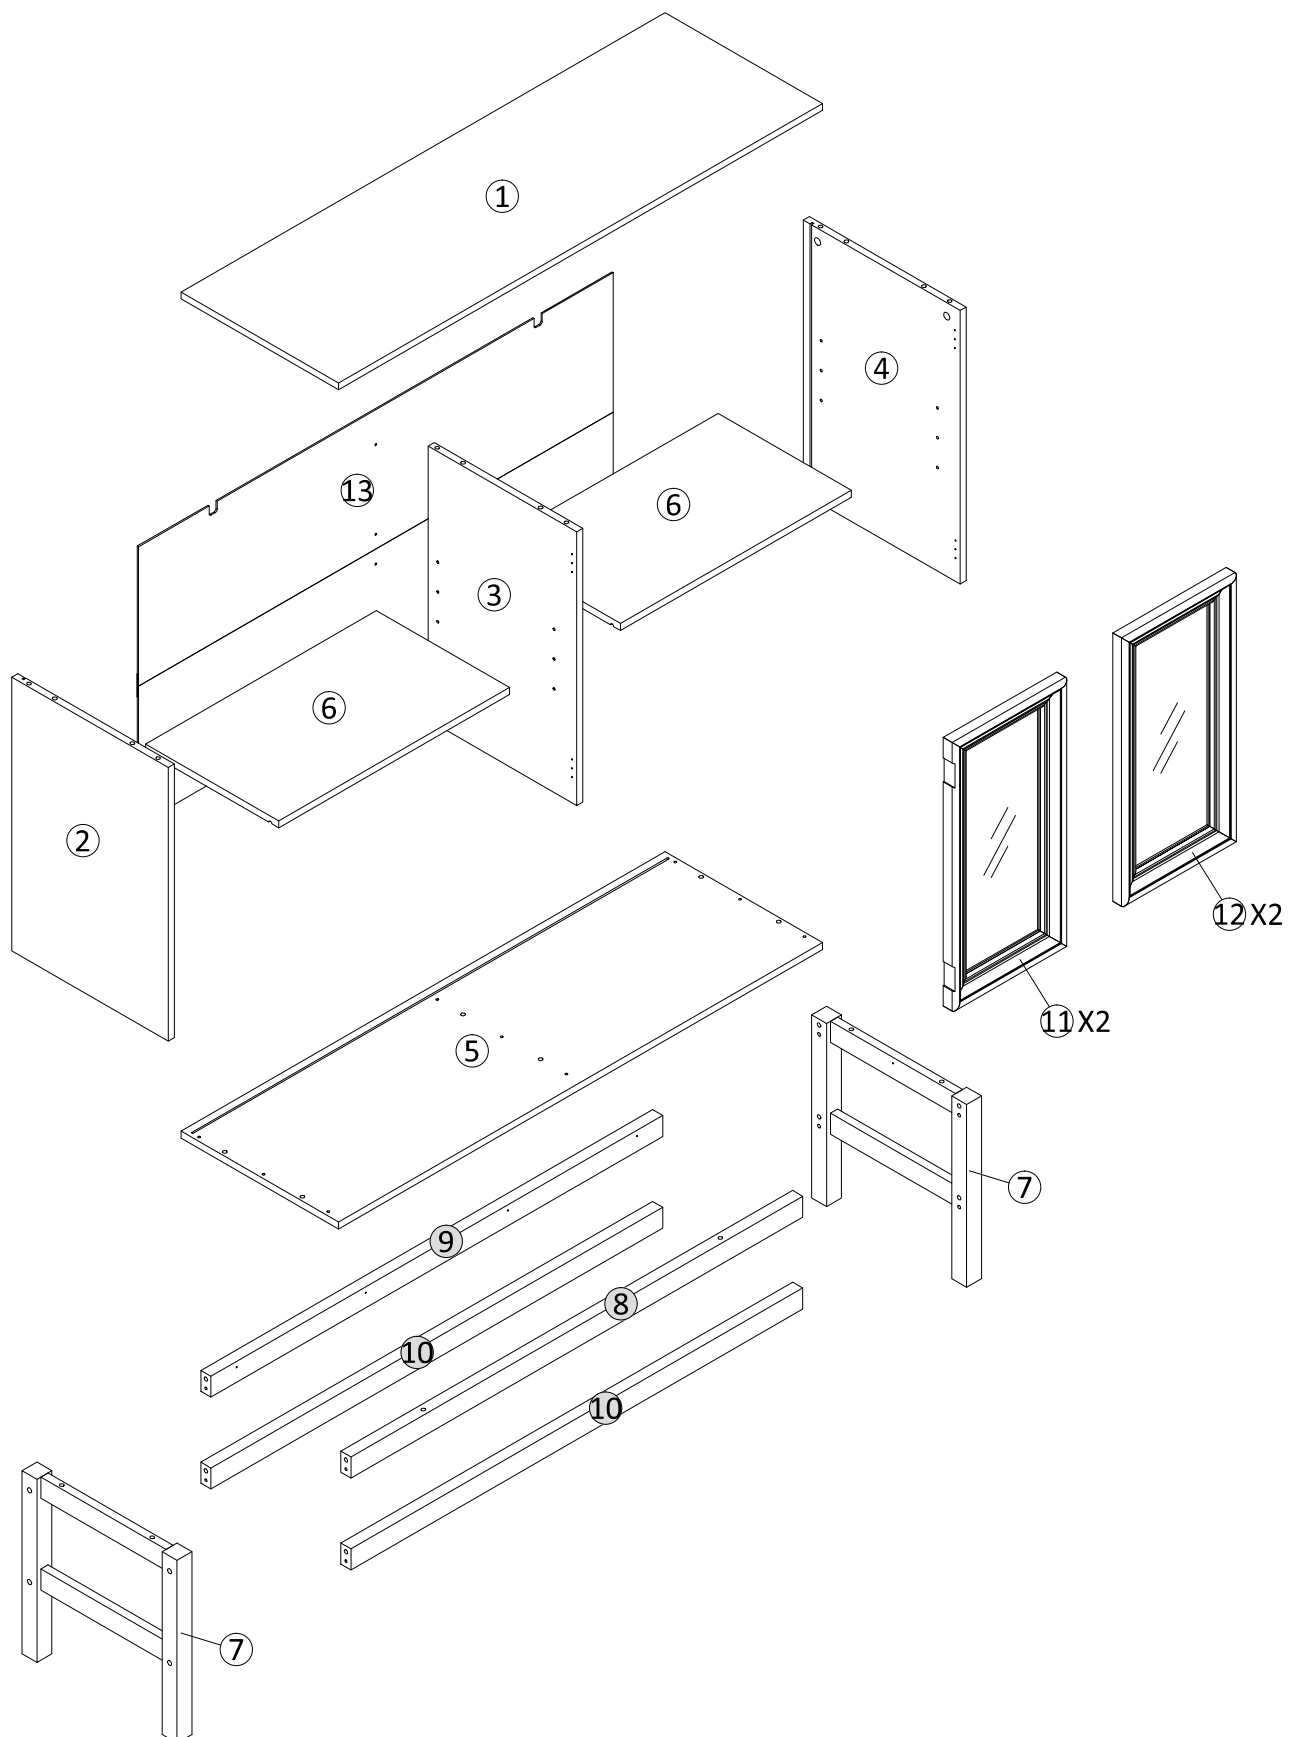

     STEP1

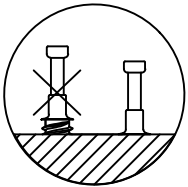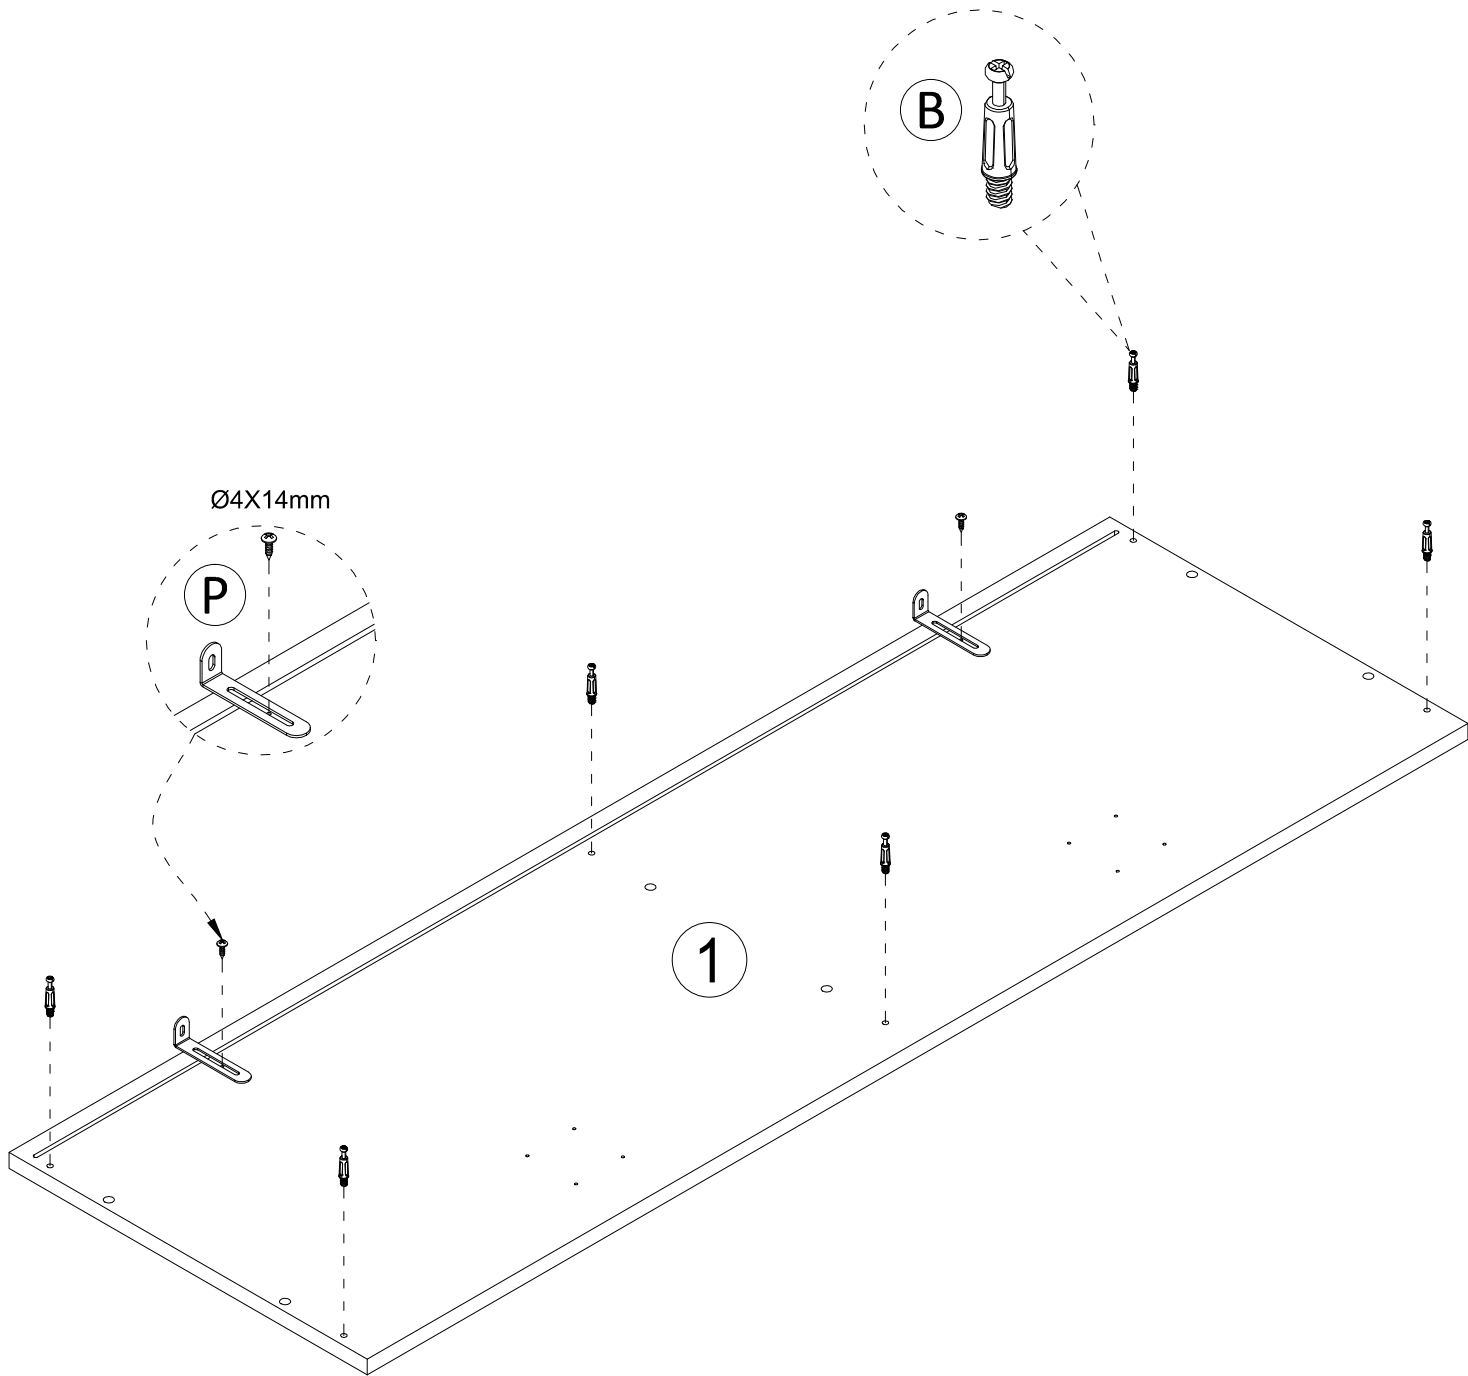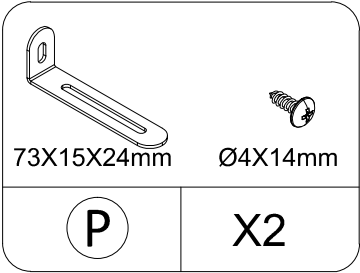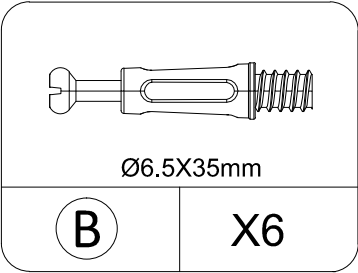
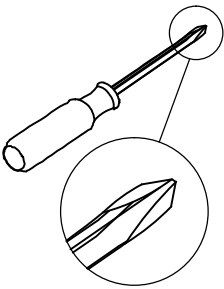


   STEP2

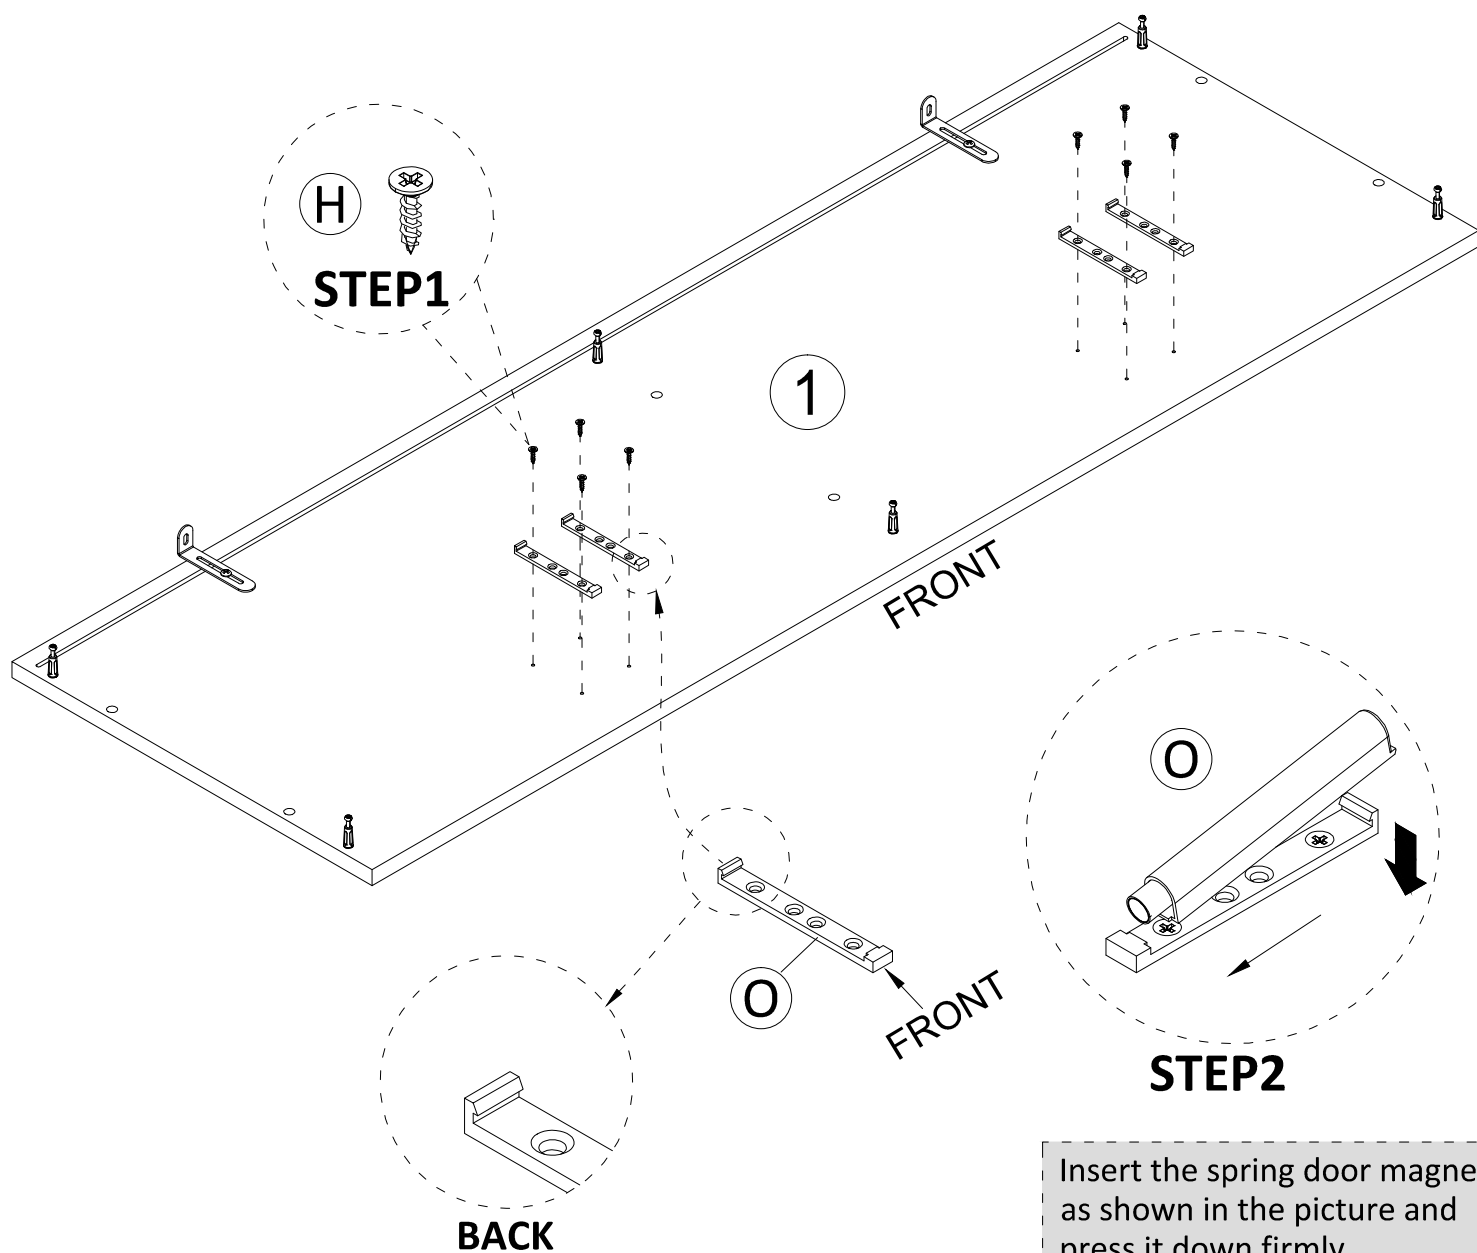
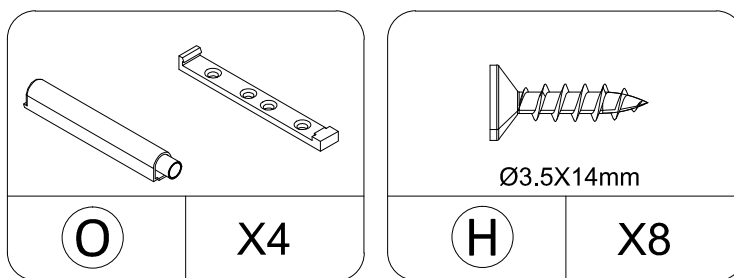
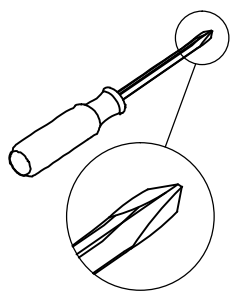


Insert the spring door magnet as shown in the picture and press it down firmly.

  
STEP3

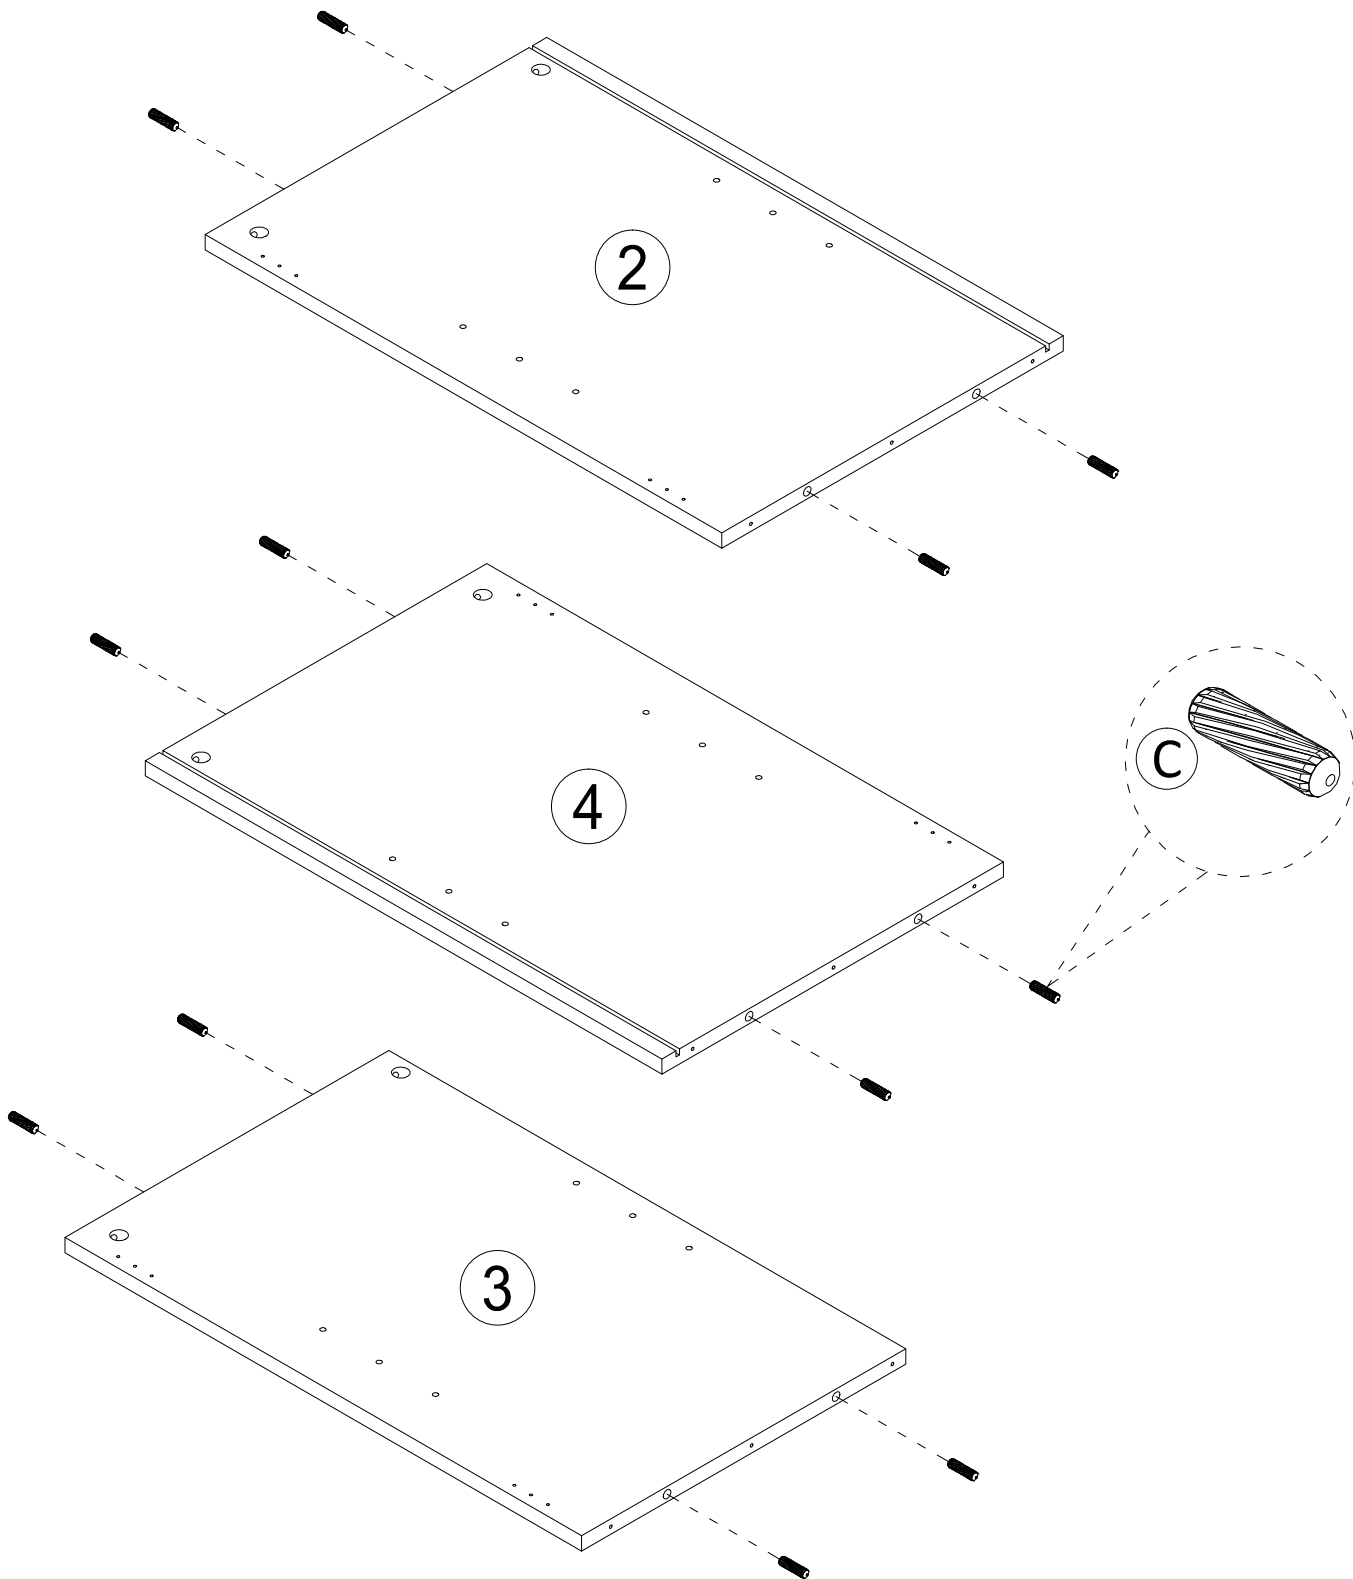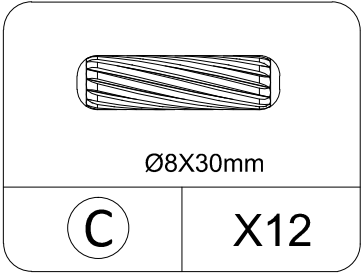

   STEP4

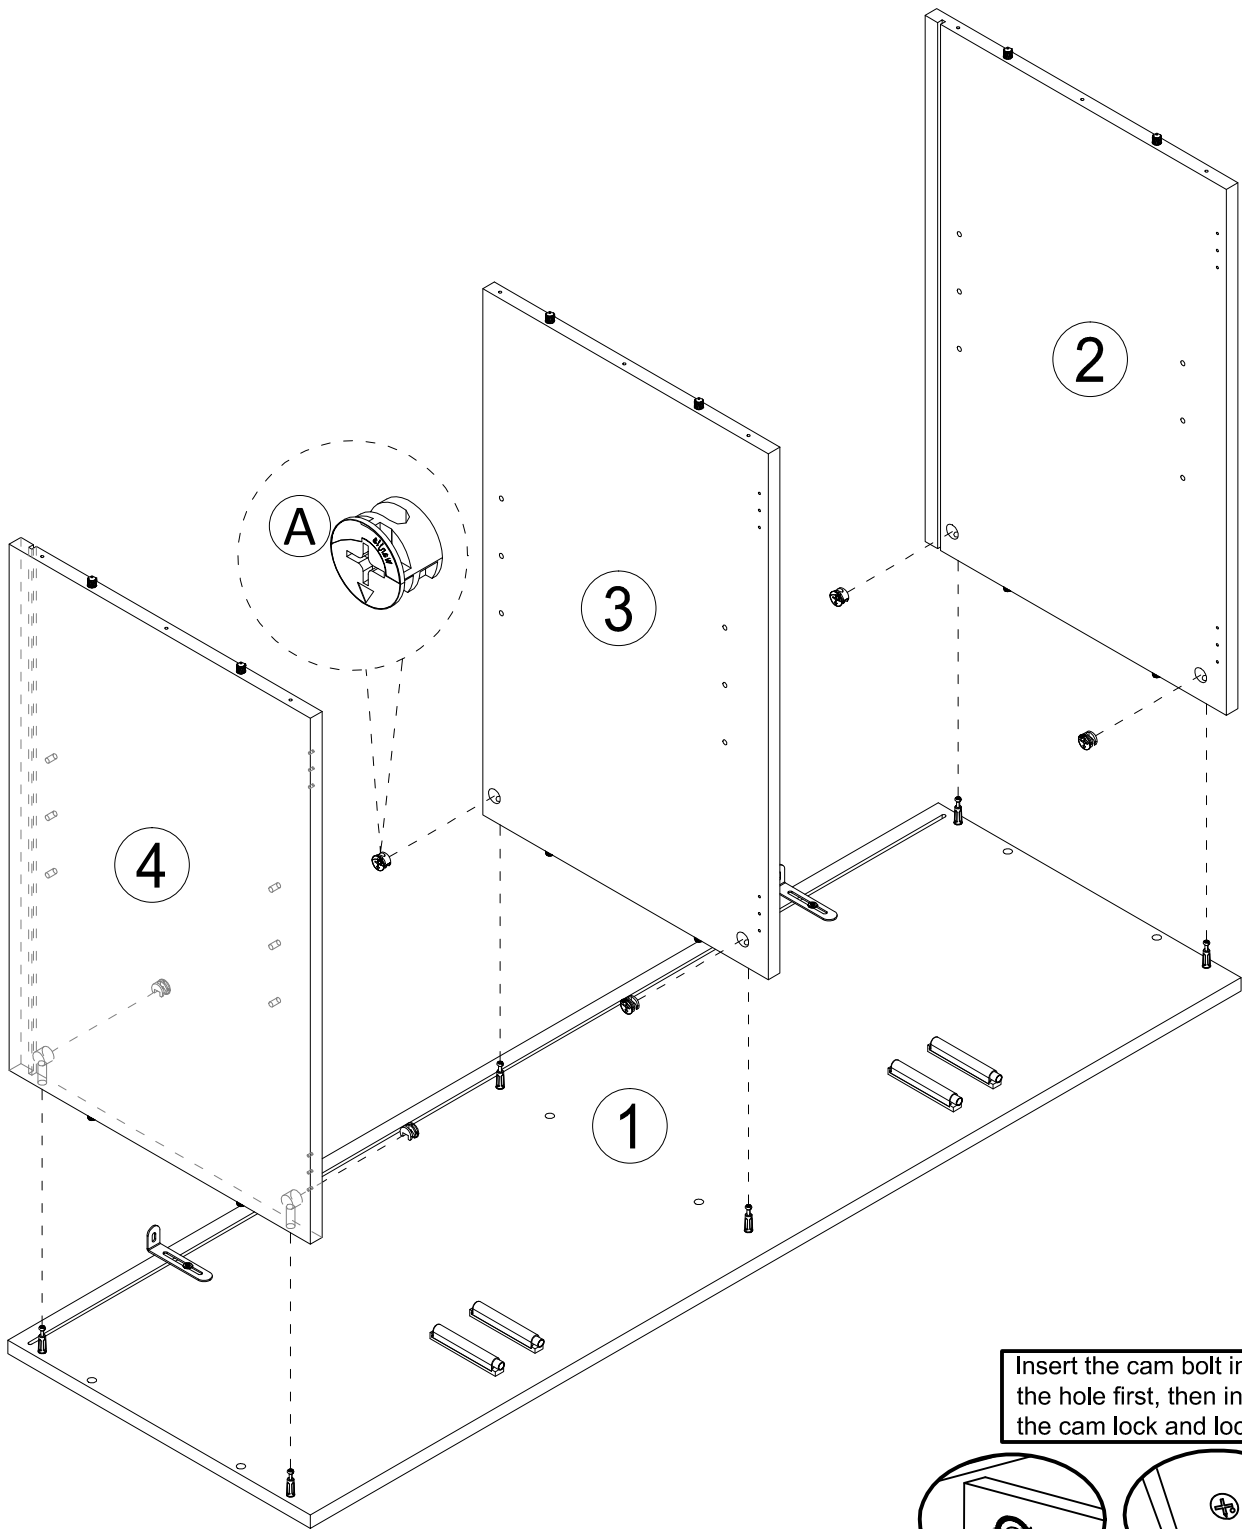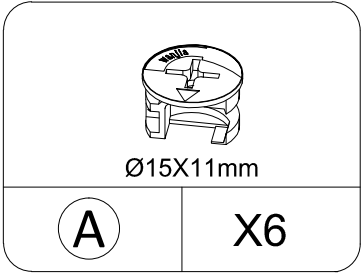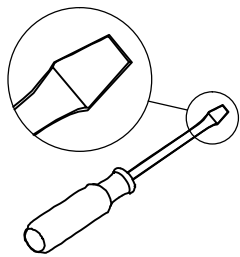


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.



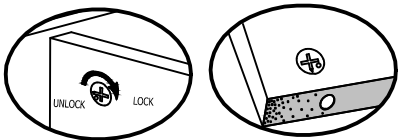


Proper orientation of CAM LOCK





 
STEP5

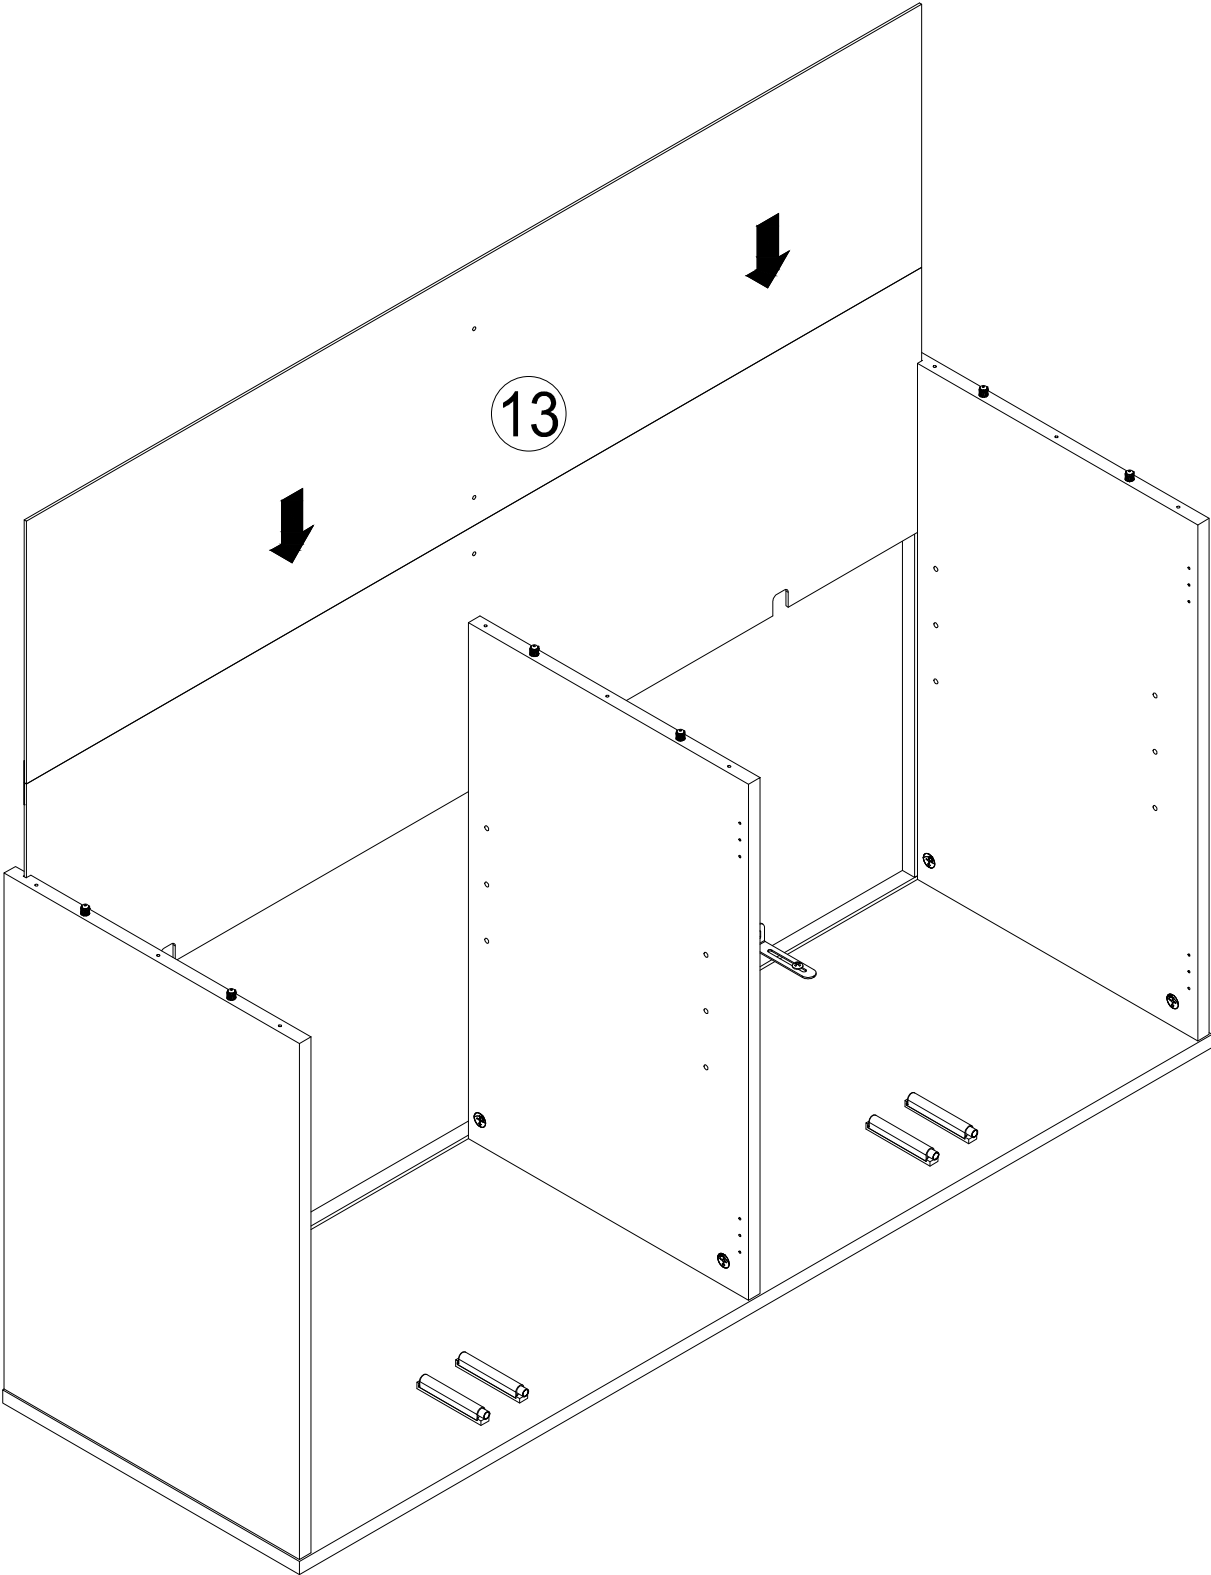

 
 
 
STEP6

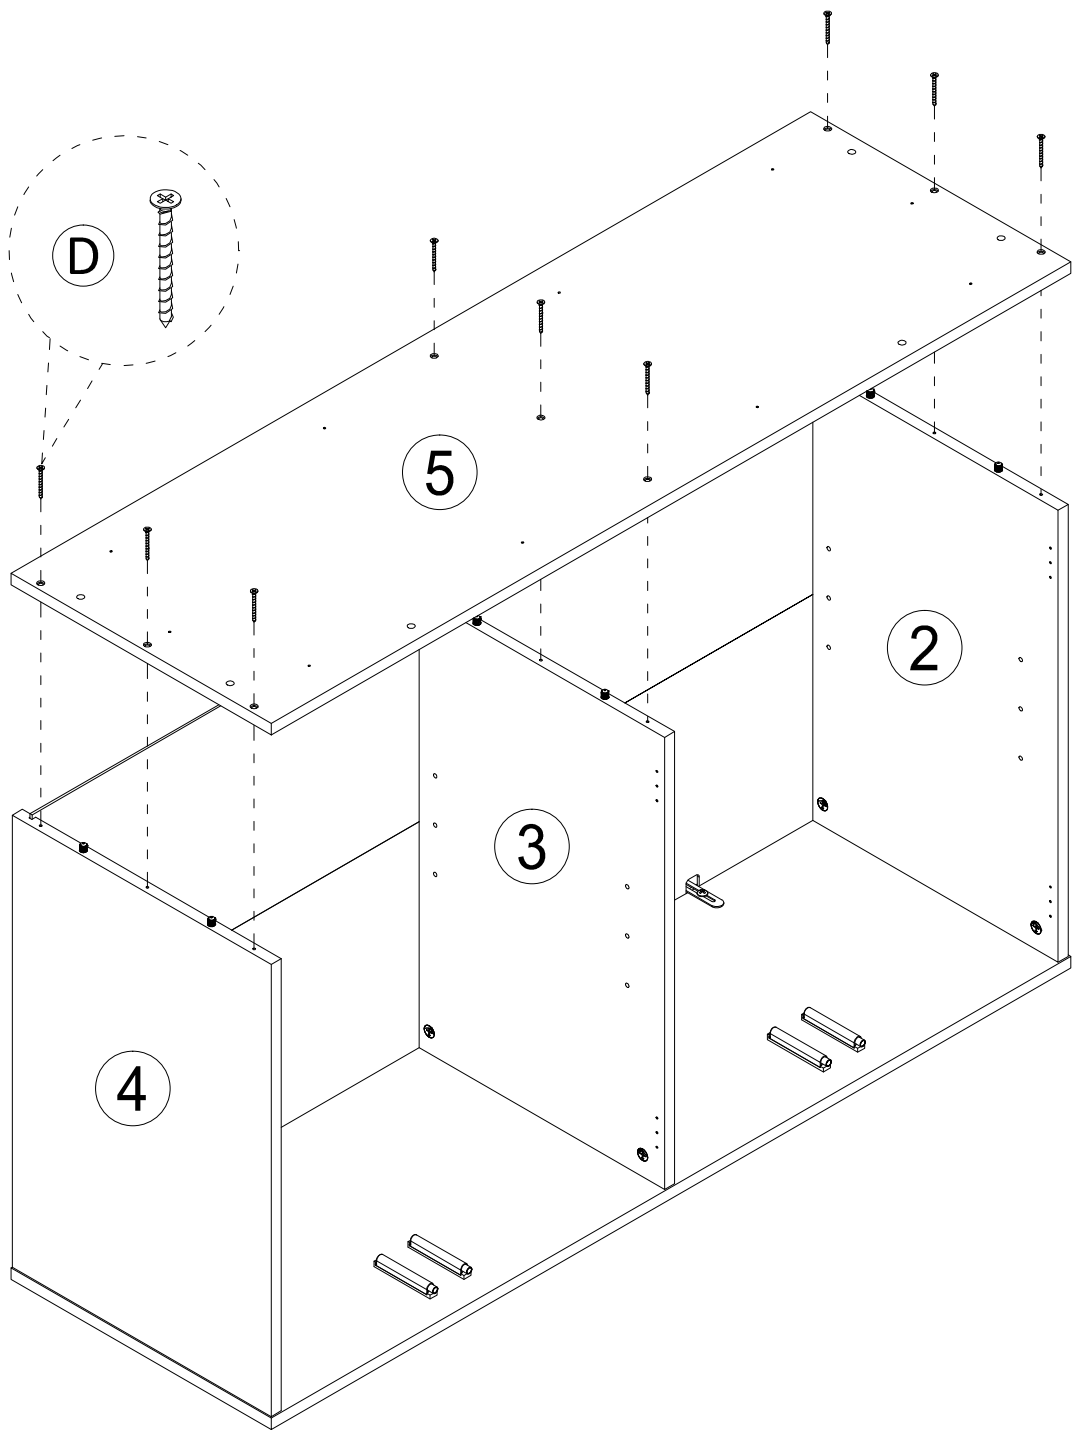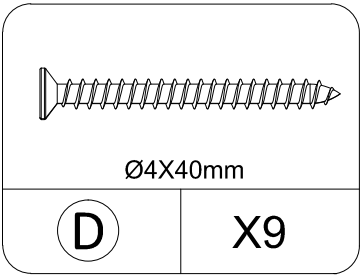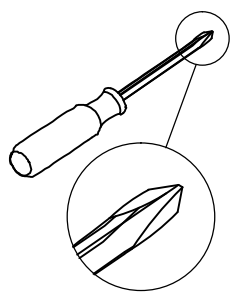

     
STEP7

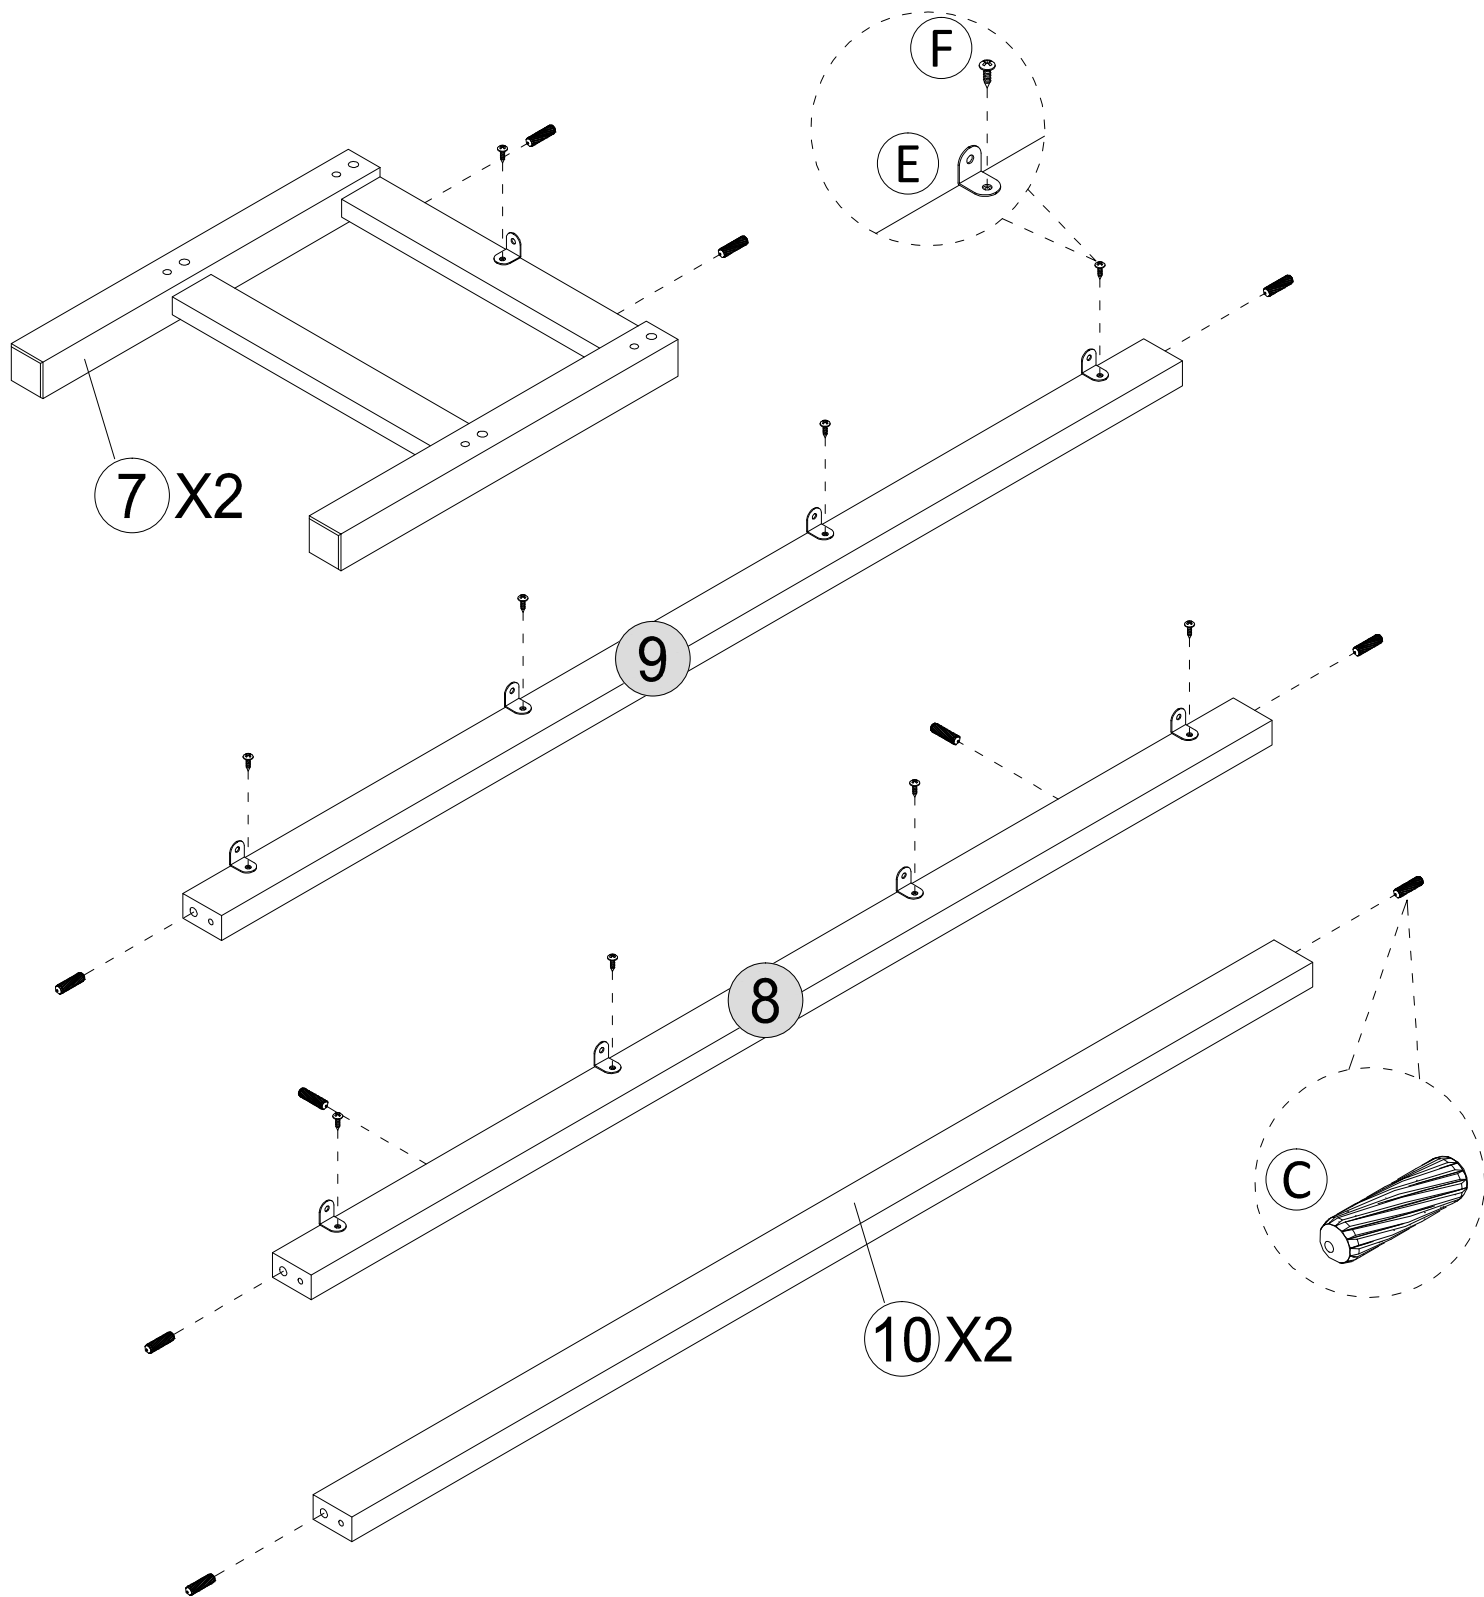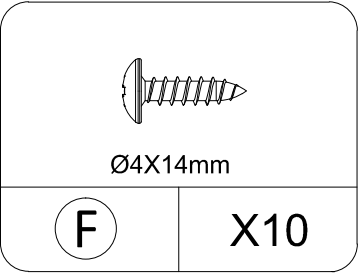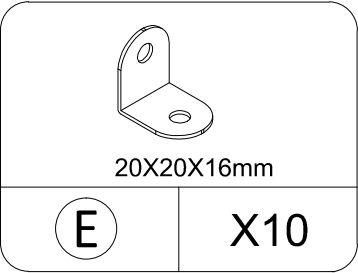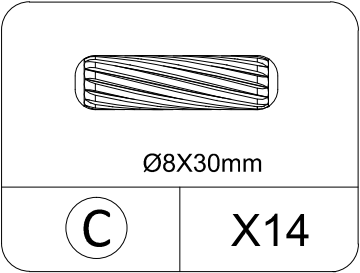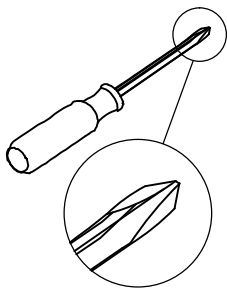

 
 
 
STEP8

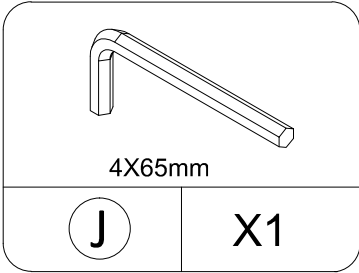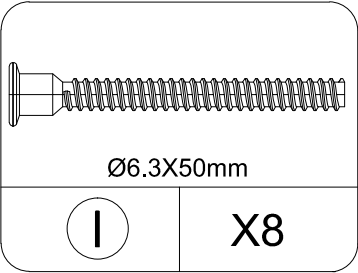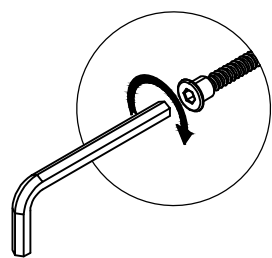


THIS STEP REQUIRES 2 PEOPLE

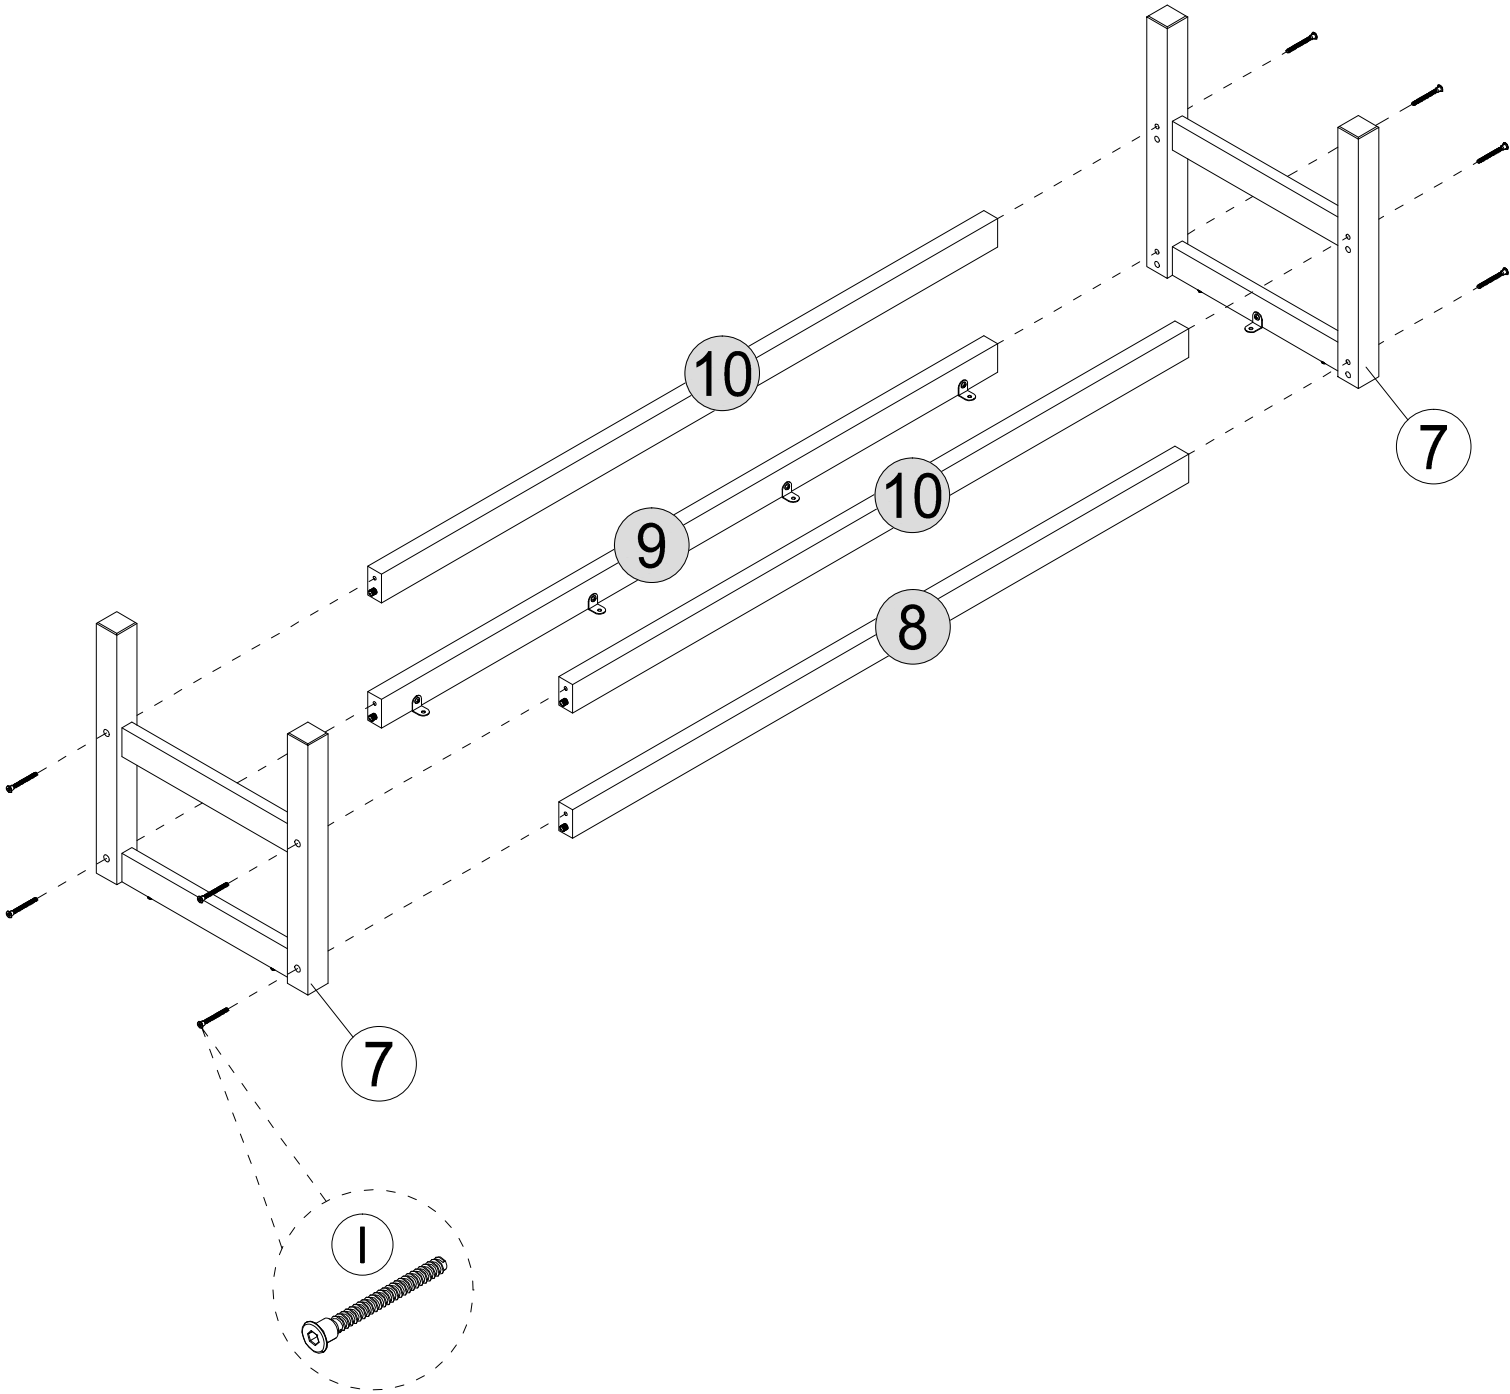 


   
STEP9

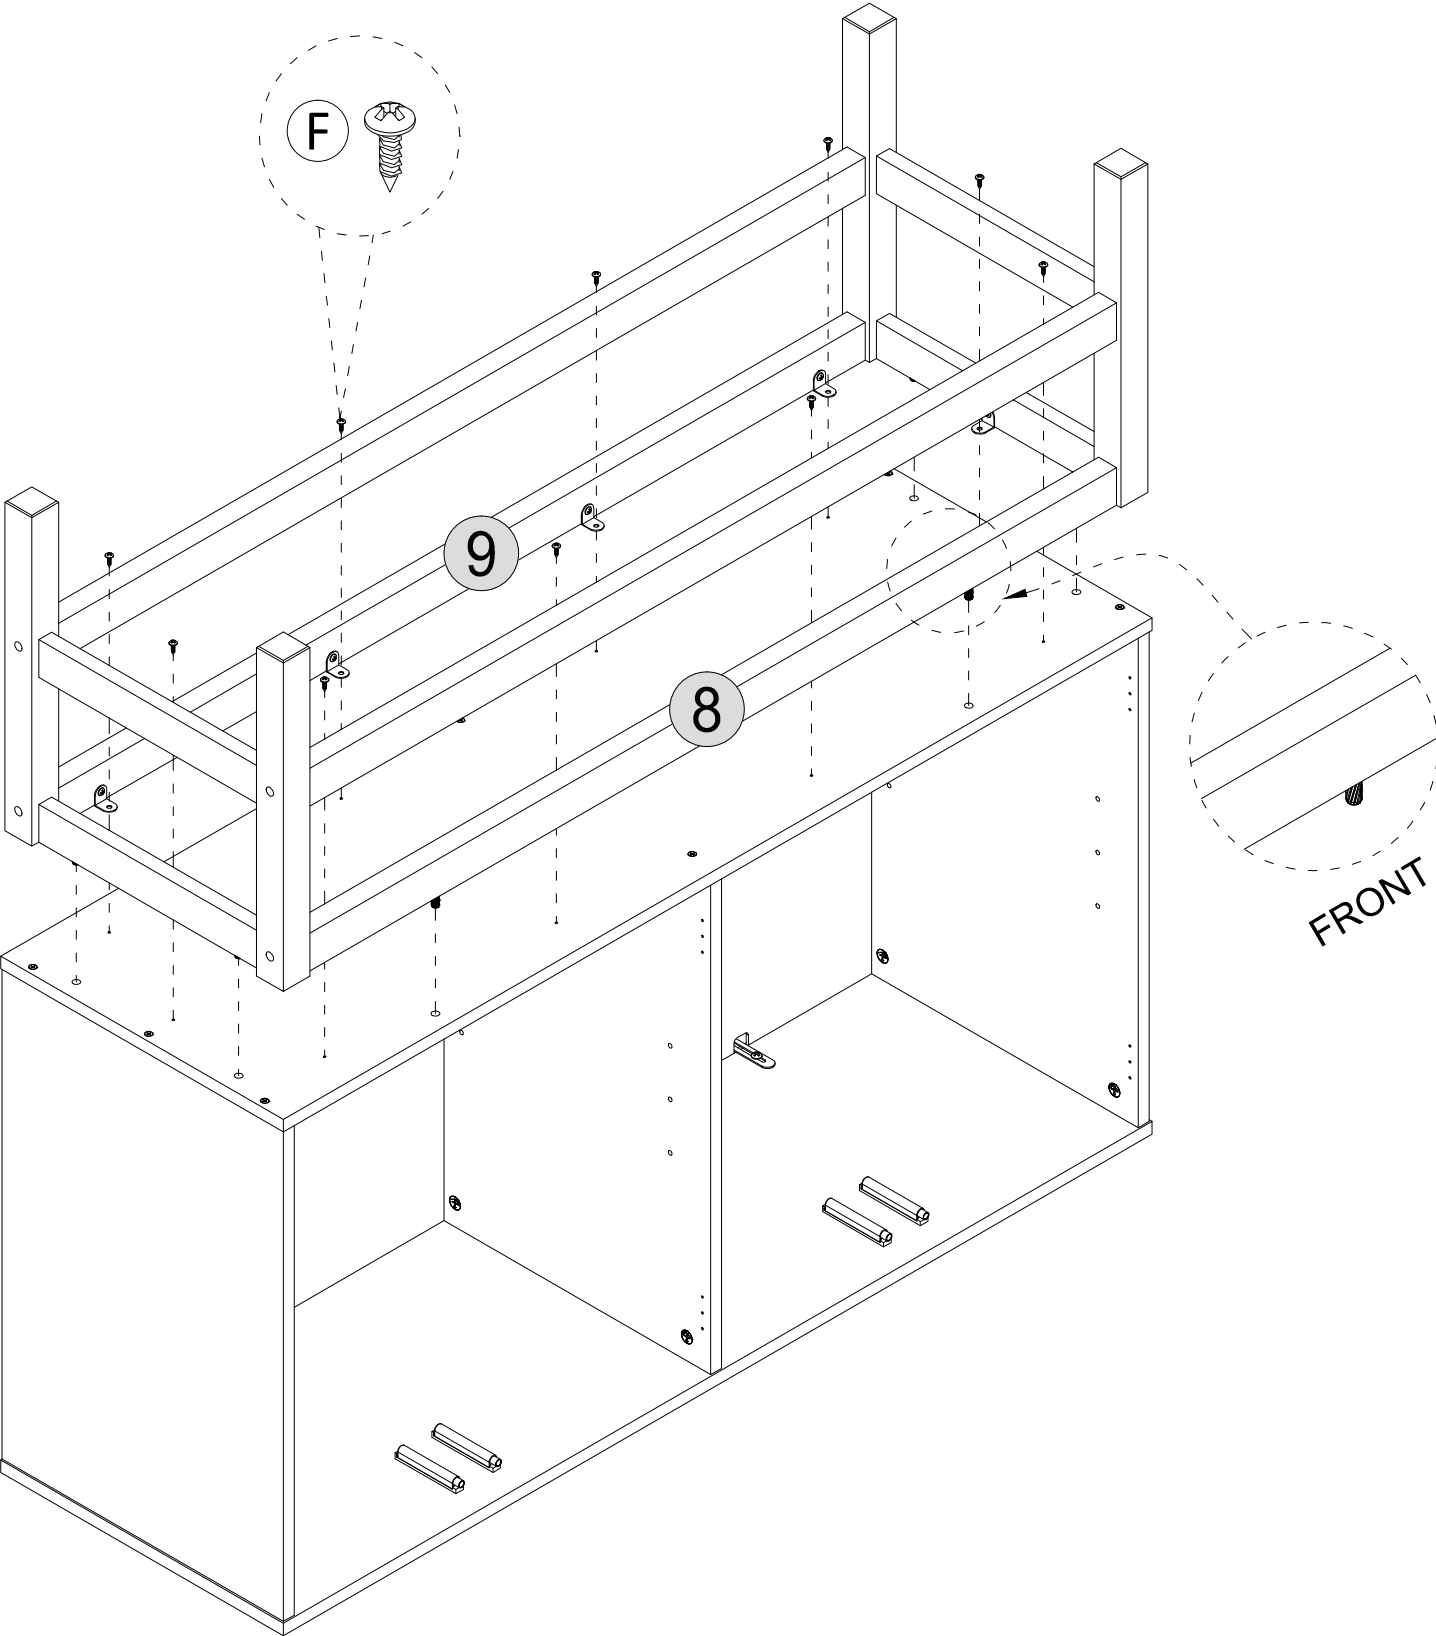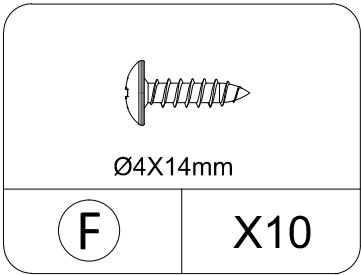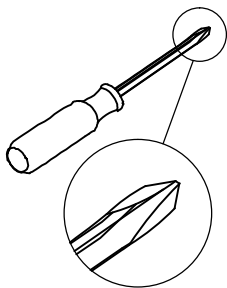


  STEP10

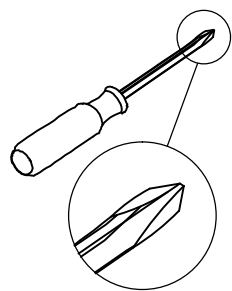


 Ø3.5X16mm	
L	X10


 
 Ø3X14mm	
G	X4

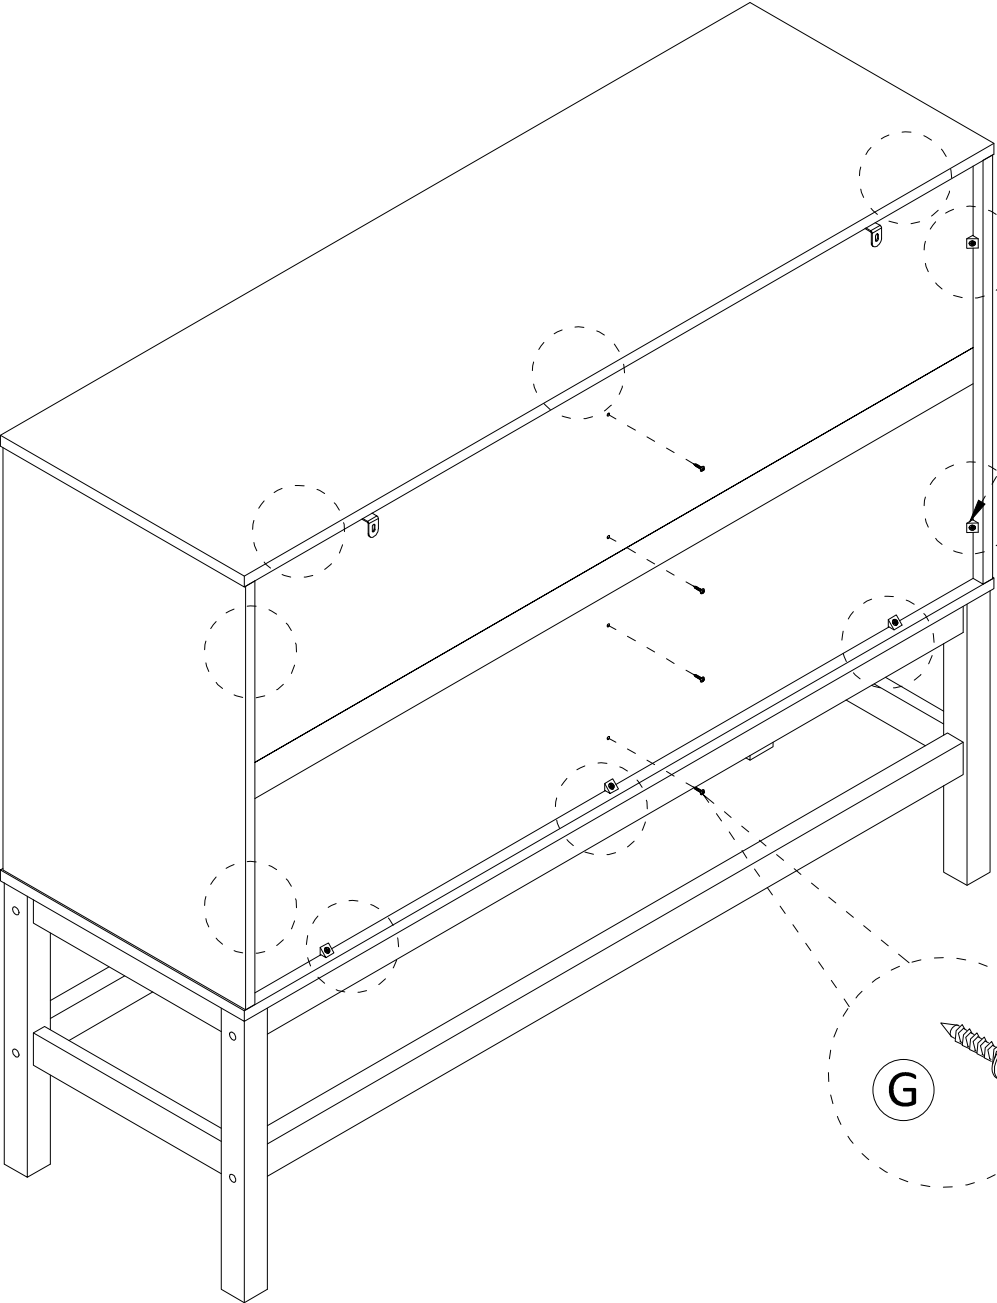 

 
STEP1


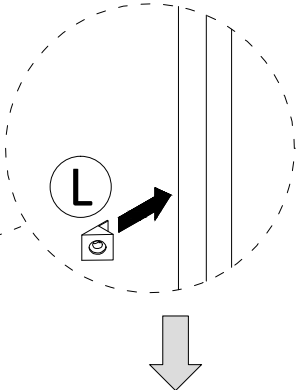


  STEP2

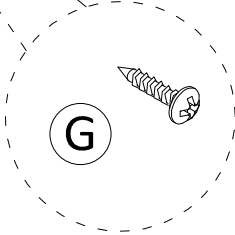
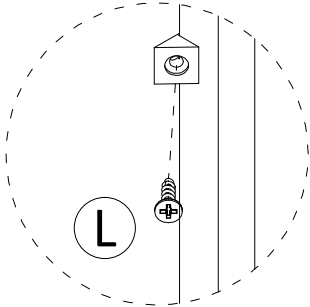


   STEP11

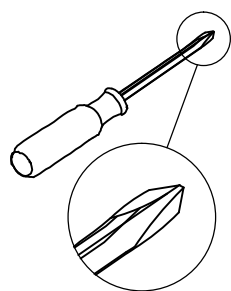


1pcs  Ø4X40mm (P)	1pcs  Ø8X29mm X2 set
--	---

  1. Put the cabinet against the wall and mark the hole locked against the wall with a marker.

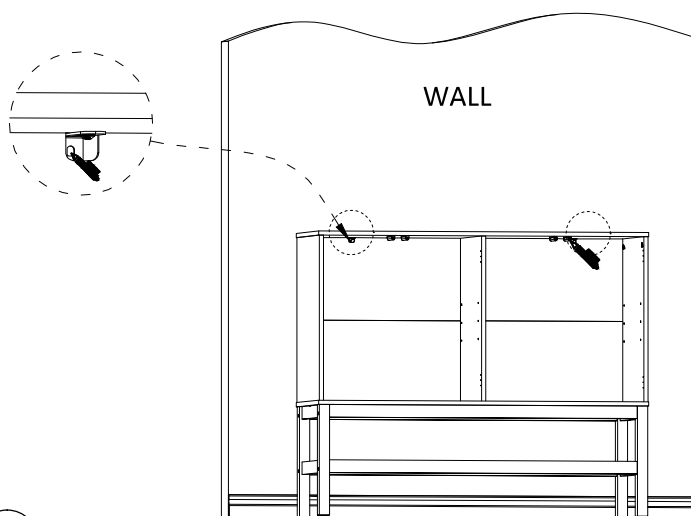


1

 2. Use an electric drill to drill 2 holes with a diameter of Ø 6 and a depth of 45mm at the marked location.

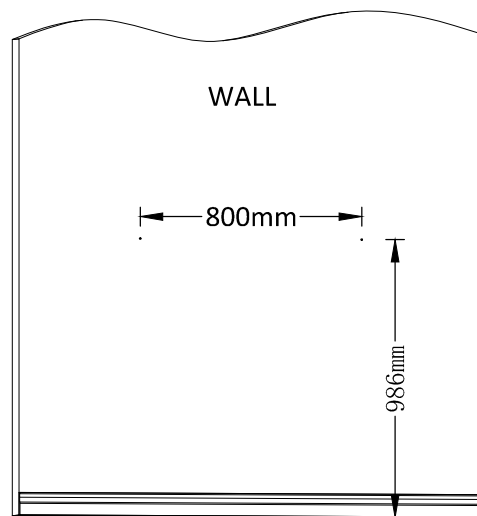



2

 3. Place anchors (P) into the hole.

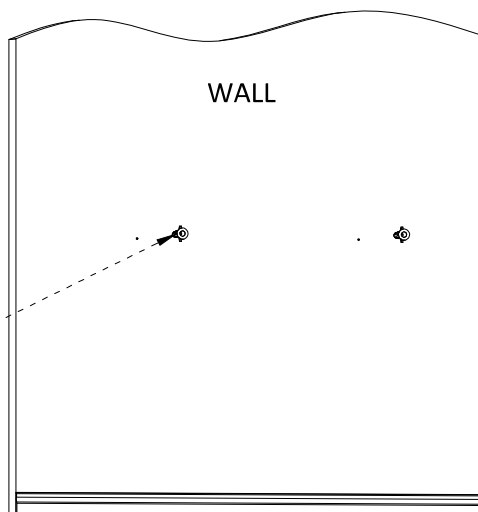





3

  4. Push the cabinet close to the wall, align it with the holes, and then tighten it with screws (P).

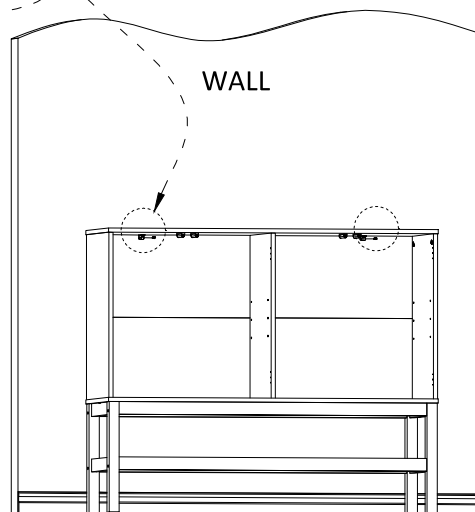
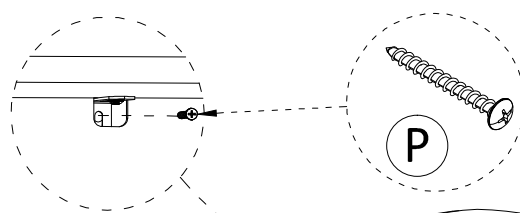


4

    
STEP12

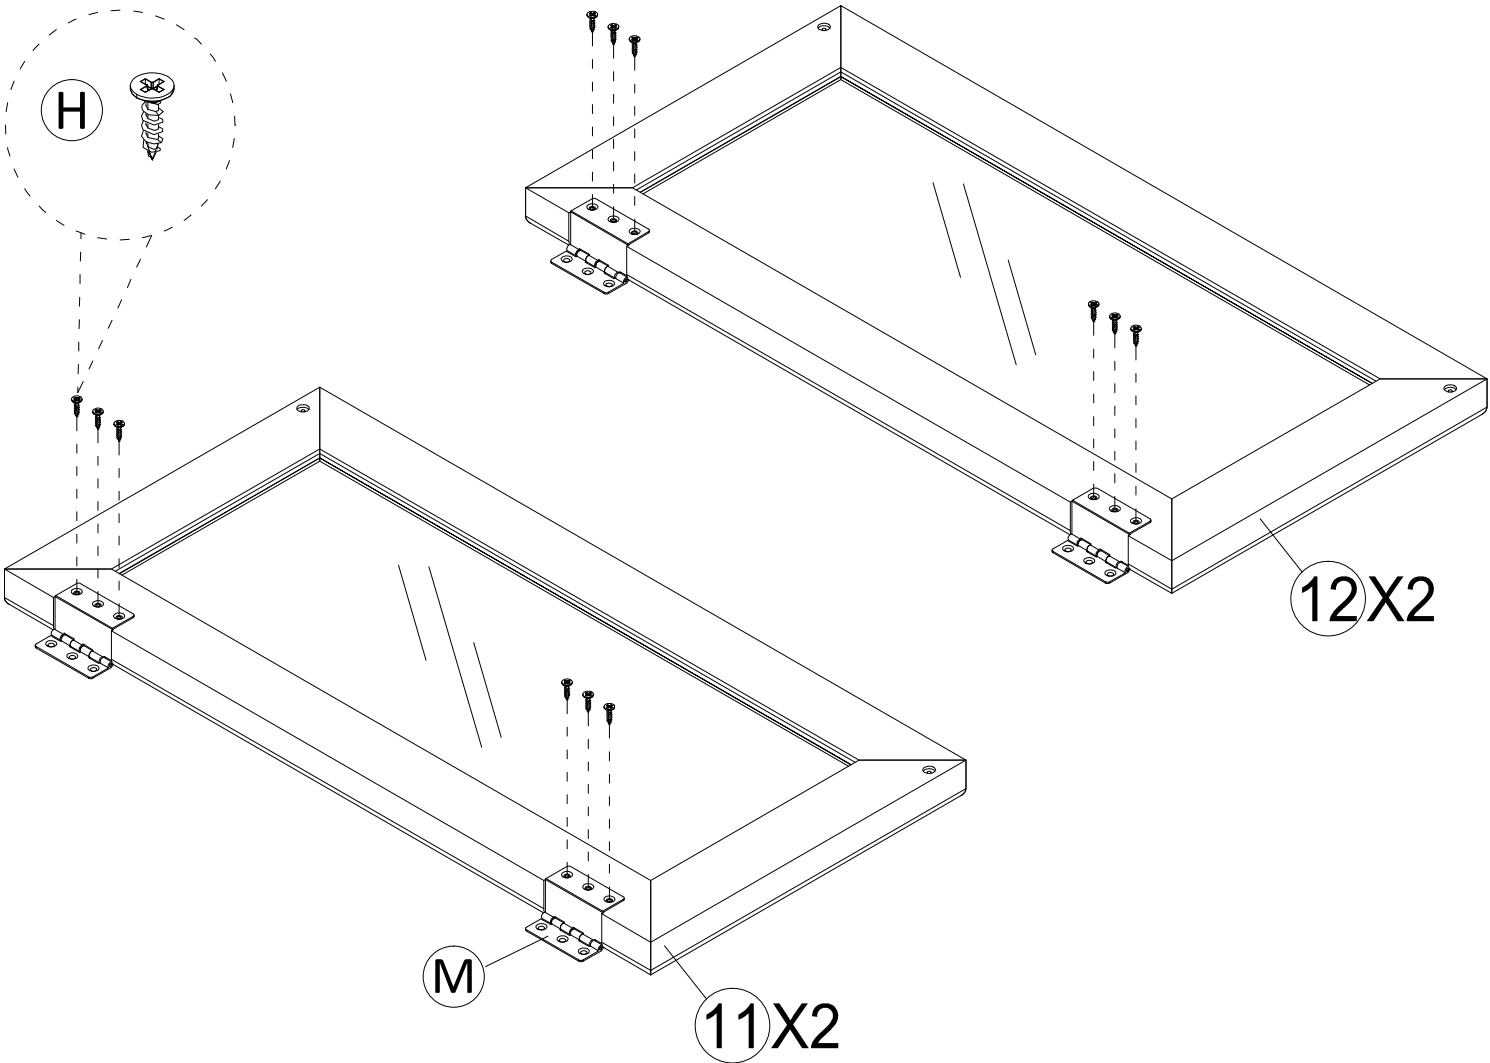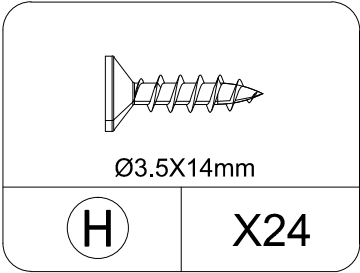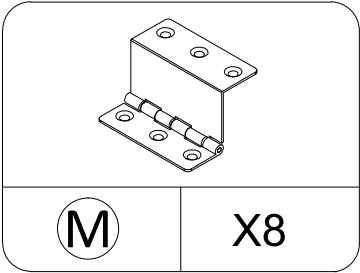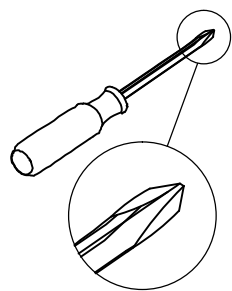

 
 
STEP13

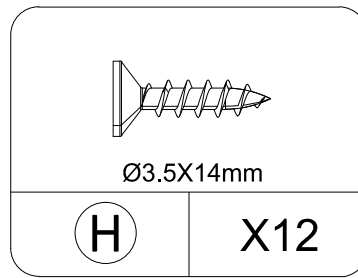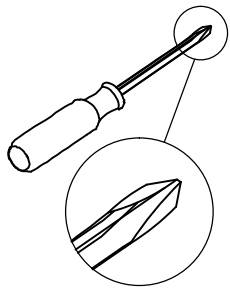



THIS STEP REQUIRES 2 PEOPLE

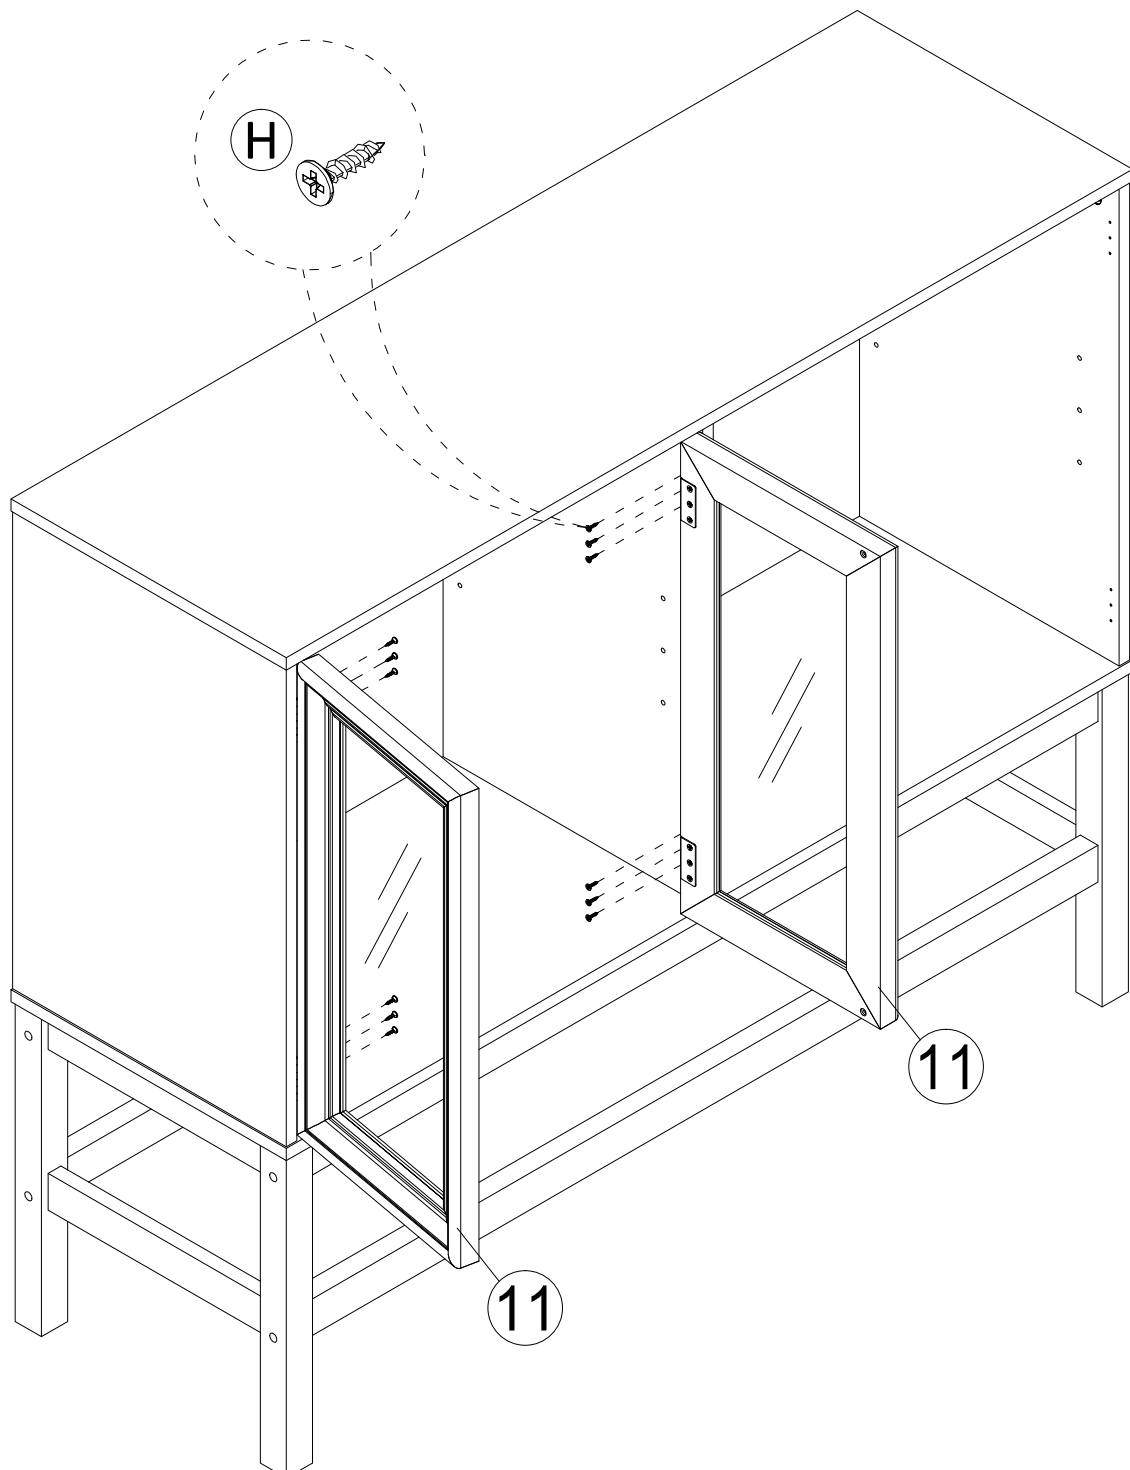 

  
STEP14

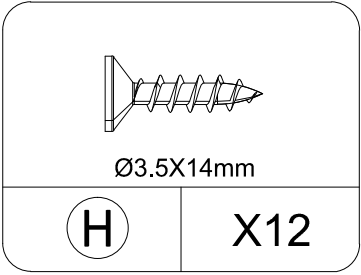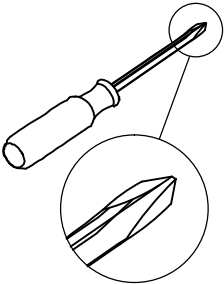

THIS STEP REQUIRES 2 PEOPLE


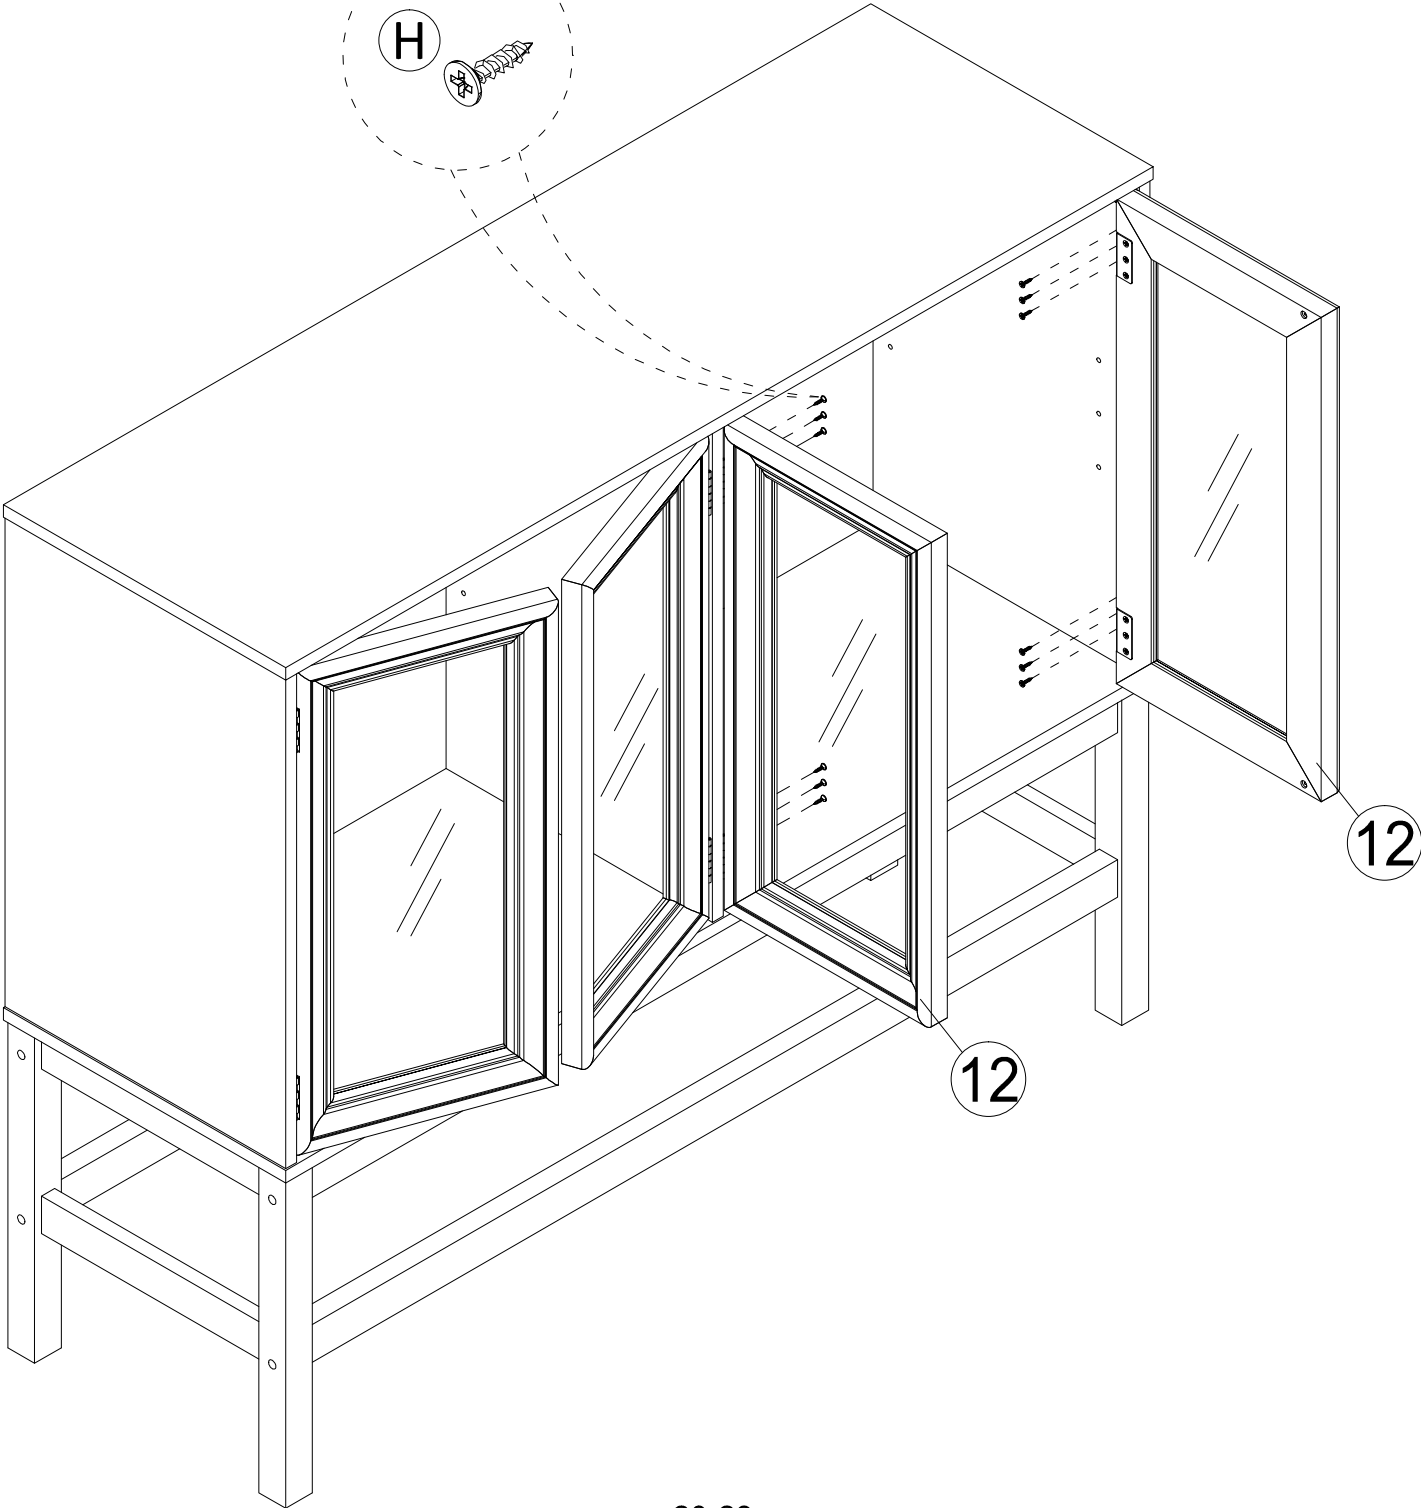 
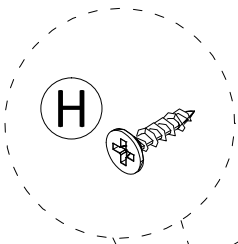 


 STEP15

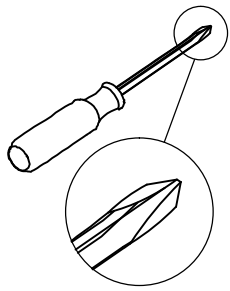


	Ø3X13mm
X1pcs	X1pcs
	X4

   
Press the upper part of the door,
and it will open naturally.

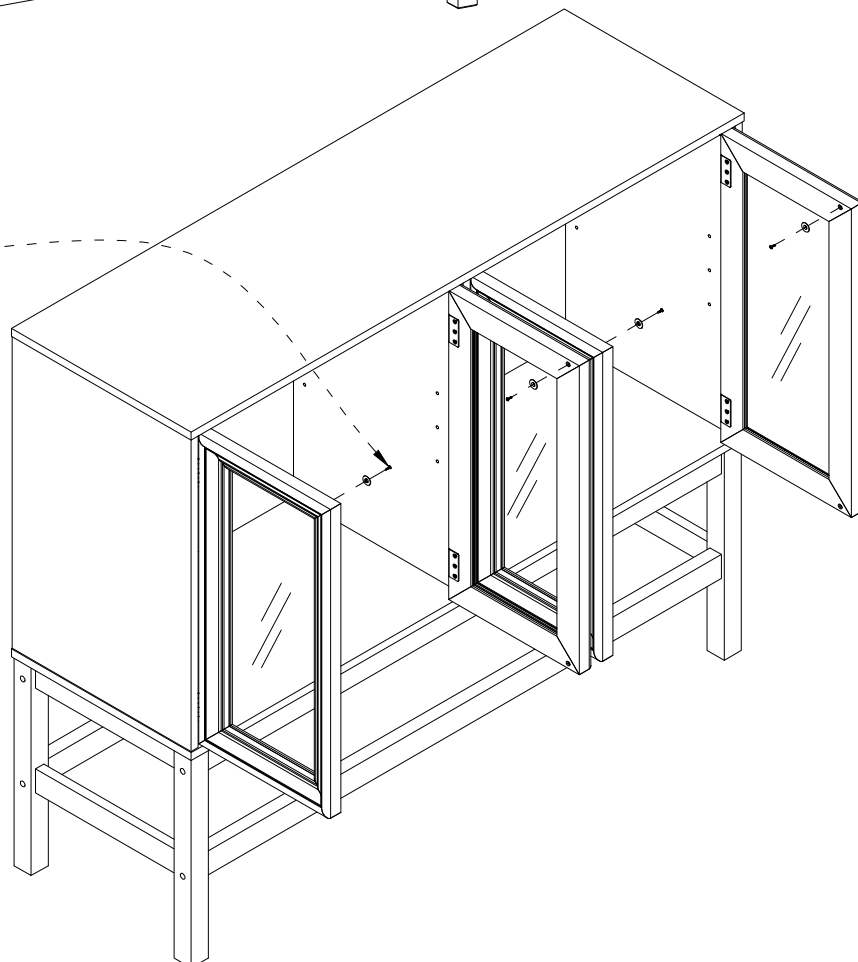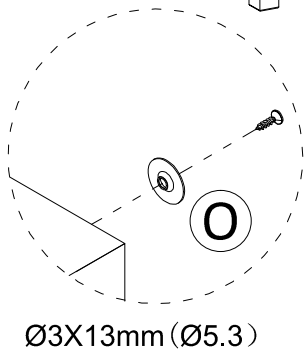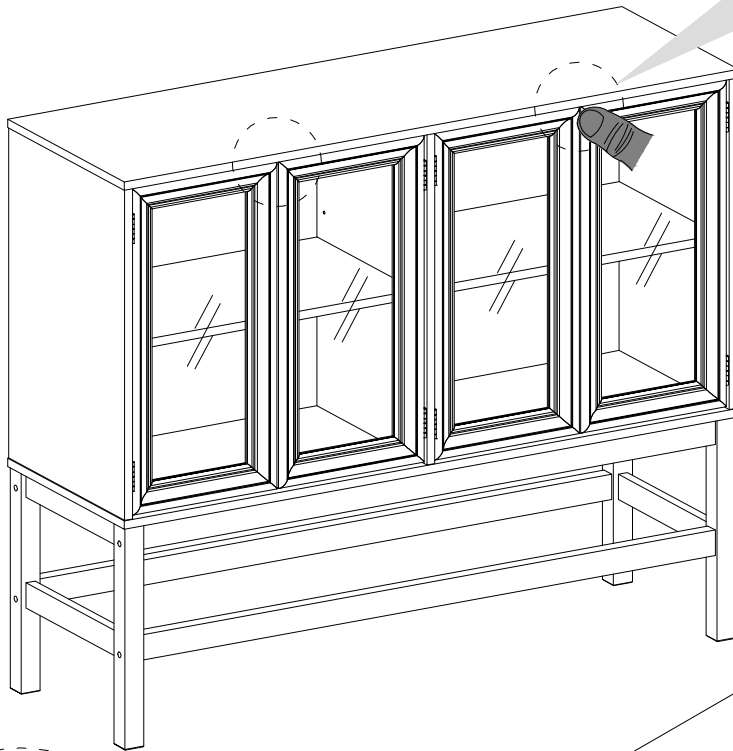

 STEP16

 Ø5x17mm		K	X8
		N	X8

 Place (N) into the hole.

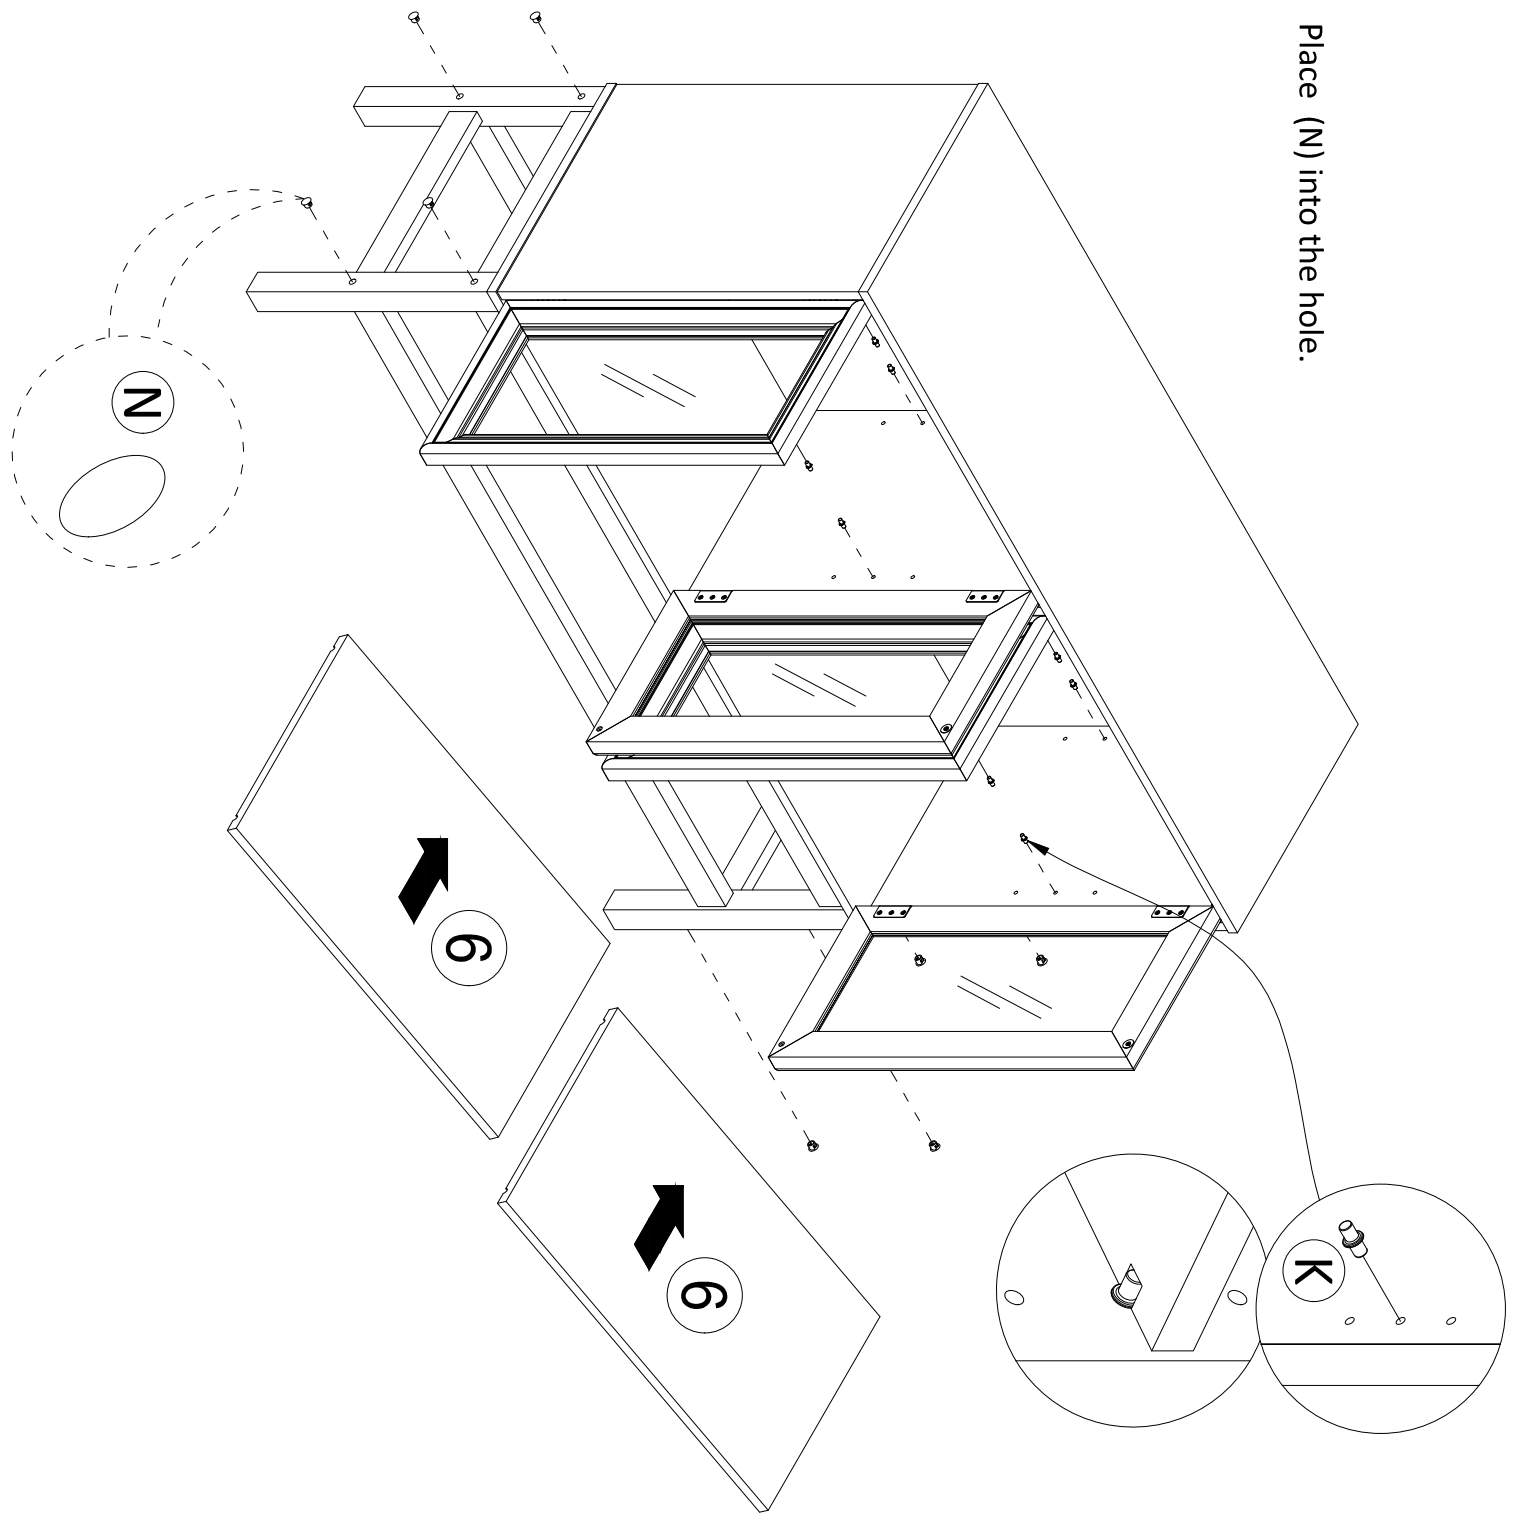

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.

Do not remove!

⚠ AVERTISSEMENT



Des enfants sont décédés à cause du basculement du meuble.

Pour réduire le risque de la chute du meuble :

- TOUJOURS installer le dispositif anti-basculement fourni.
- NE JAMAIS mettre un téléviseur sur ce produit.
- NE JAMAIS laisser les enfants se tenir debout, grimper ni s'accrocher sur les tiroirs, les portes ou les tablettes.
- NE JAMAIS ouvrir plus d'un tiroir à la fois.
- Placer les articles les plus lourds sur les tiroirs inférieurs.

Cette étiquette est permanente.

Ne pas retirer !

⚠ ADVERTENCIA



Los niños han muerto por el vuelco de los muebles. Para reducir el peligro de el mueble se vuelca:

- SIEMPRE instalar el dispositivo anti-volcadura suministrado.
- NUNCA ponga un televisor en este producto.
- NUNCA permita que los niños se paren, se suban o se cuelguen de los cajones, puertas o repisas.
- NUNCA abra más de un cajón a la vez.
- Coloque los artículos más pesados en los cajones inferiores.

Esta es una etiqueta permanente.

¡No quitar!