


AGES 3-8 YEARS

# Instruction Manual & Safety Guide

**CAUTION - ELECTRICALLY OPERATED PRODUCT.**  
OPERATION OF BLOWER FAN UNIT NOT  
RECOMMENDED FOR CHILDREN UNDER 8  
YEARS OF AGE. AS WITH ALL ELECTRONIC  
PRODUCTS, PRECAUTIONS SHOULD BE  
OBSERVED DURING HANDLING AND USE TO  
PREVENT ELECTRIC SHOCK.



 **WARNING: FAILURE  
TO FOLLOW THESE  
INSTRUCTIONS COULD RESULT  
IN SERIOUS INJURY OR  
DEATH.**

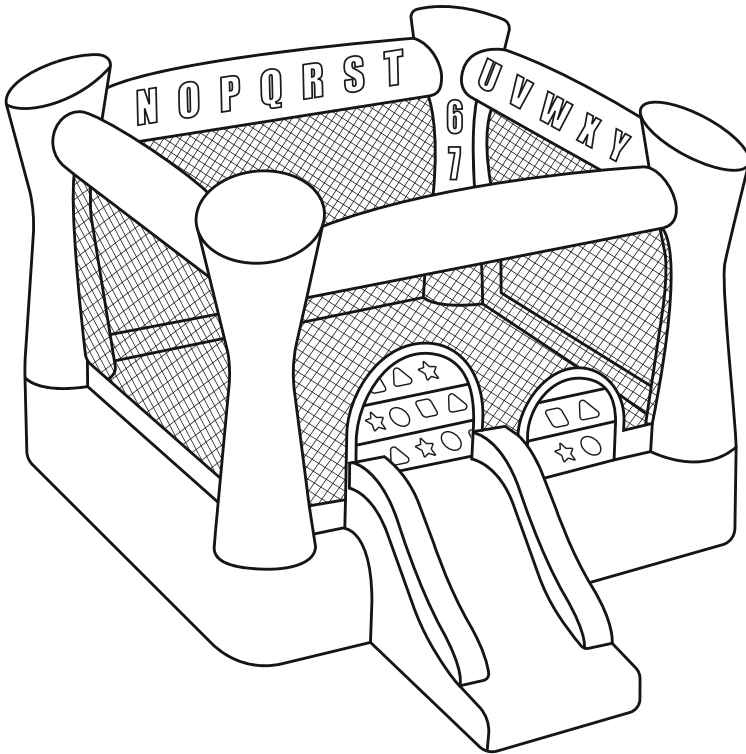

## Bounce N Learn

Version 1

184353BL

**FUNORMOUS**  
WE INFLATE FUN™

**WARNING:** Read thoroughly and understand  
the Instruction Manual & Safety Guide before  
anyone is allowed to enter the inflatable.



WE INFLATE FUN™

## Congratulations on your purchase of a newly manufactured inflatable!

 
You have made a great decision in choosing FUNormous as your source for high quality inflatables. Check out our website for our newest inflatable collection.

This Instruction Manual is your guide to the safe and successful operation of your inflatable. Please READ THE MANUAL IN DETAIL BEFORE USING YOUR INFLATABLE, in order to avoid and/or minimize the risks of accidents and/or injuries. Be sure to review the contents of this manual in detail with, and provide a copy hereof, to anyone who will be using or watching over users of the inflatable.

Please contact FUNormous Customer service at (877) 710-1777 for any questions that may arise about the inflatable or this manual.

## Your Inflatable

3/4 View:

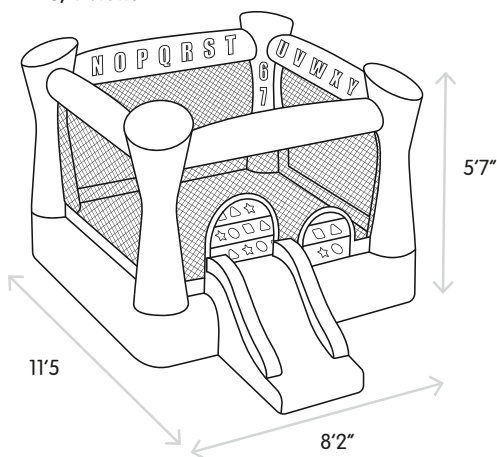

### Bounce N Learn


#### Specifications:

|                         |                      |
|-------------------------|----------------------|
| Item Number             | 184353BL             |
| Weight                  | 23 lbs. (10.5 kg)    |
| Dimensions              | 11'5" x 8'2" x 5'7"  |
| Blowers Required        | 1 (450w Blower)      |
| Sandbags (Indoor Use)   | 7 (50 lbs ea.)       |
| Stakes (Outdoor Use)    | 7                    |
| Operators Required      | 1                    |
| Max Patrons             | 3                    |
| Patron Height (min/max) | 24" / 42"            |
| Weight per Patron       | 60 lbs. each (27 kg) |
| Quantity Per Unit       | 1 Piece              |

#### Description:

This is a bounce house attraction intended for the amusement of children ages 3+. The inflatable bounce surface is soft and allows for safe bouncing. Inside the bounce area is the alphabet, colors, shapes, and numbers.

Use this diagram to easily locate the parts of your inflatable.

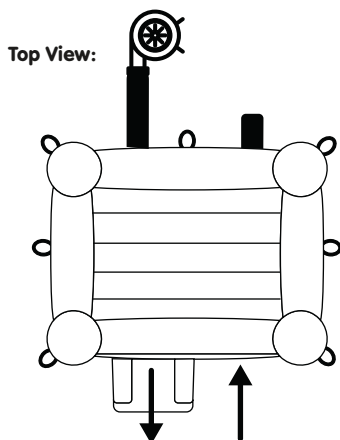 

#### Legend:

|                |                |
|----------------|----------------|
|                |                |
| Anchor Point   | Entrance/Exit  |
|                |                |
| Inflation Tube | Deflation Tube |
|                |                |
|                | Blower         |

# What's Included

## Inflatable Unit

 


## Repair Kit



Easily repair minor damages such as tears and holes  
See page 8 for instructions

## Stakes

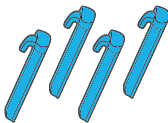

Used to anchor the inflatable

## Manual



Read thoroughly before operating the inflatable

## Blower



450w Air Blower with GFCI Plug

## Safety Warnings | Set-up

### ADULT SUPERVISION AND SET UP REQUIRED.

This product should be inflated or deflated only by a competent adult. Follow all instructions provided.

- **WARNING!** Falls onto hard surfaces can result in head or other serious injuries. Never place on concrete, asphalt, wood, packed earth, grass or other hard surfaces. Carpet over floors may not prevent injury.
- **WARNING!** Only for domestic use. Intended for outdoor domestic family use only. Not for use in public areas or as a rental.
- **Product is heavy.** Use caution when lifting.
- **Product should never be dragged across concrete, pavement or other rough surfaces.**
- **WARNING!** Keep away from fire. Keep fabric clear of all flame and ignition sources.
- **Do not set up in windy or rainy conditions:** sudden gust of wind may lift the product off of the ground.
- Product can be installed in any orientation in relation to the sun, since there are no metal components or surfaces that can absorb excessive solar radiation.
- Set-up in outdoor location only that meets the following criteria:
  - Place on level ground and firm grass or soil to allow proper use of stakes.
  - Placing on slanted or uneven surfaces may cause the product to tip.
  - Stakes should be placed at an angle for better anchorage, should be driven under the ground to prevent tripping.
  - Minimum clearance zones: Place at least 6.6 ft (2m) in any direction from other objects. Objects to be avoided include but are not limited to fences, buildings, trees, overhead branches, laundry lines, electrical wires, walls, or bodies or sources of water.
- Make sure the area around to products is secure by adding safety barriers, if necessary, to keep young children and pets from gaining access.
- Electrical cord must not be passed under the air filled devices (inflatable bouncer) and interfere with its operation.
- The bouncer uses a main powered blower (air pump) to maintain pressure, only to be used by an adult.
- Only the blower supplied should be used for inflation.
- Do not use extension cords with this product. Set up as close to power sources as possible. The blower should be securely anchored to the ground before use.
- CAUTION: the blower is capable of moving large volumes of air very quickly. Place the blower in an area where it will not draw in dirt or leaves. Keep blower and power cord away from children, water and traffic.
- ATTENTION: Blower should remain on and continuously inflate bouncer during use. Airflow through seams is normal. Do not try to seal or repair seams.
- Keep power cord away from water.
- Do not use the product if wind speed exceeds 15mph or in windy conditions as illustrated below:



### WIND SPEED JUDGMENT

# Patron Safety Rules



**WARNING** This inflatable is an amusement device. With all amusement devices, there are inherent risks. If you choose to use this inflatable, note that the manufacturer **DOES NOT WARRANT** its safety or compliance with federal, state, or local inspections or requirements for safety at the time of your choice of its use.

- **BEFORE ENTERING** remove shoes, eyeglasses, jewelry, and loose objects.
- **DO NOT ENTER** unless operators/attendants are on duty.
- **NO** food, gum, drinks, pets, sprays, or sharp objects inside the inflatable.
- **NO** cables, chains, jump ropes, pet leashes, and other items that may cause strangulation.
- **NO** tumbling, flipping, wrestling, chasing, or piling on others.



**WARNING: FAILURE TO FOLLOW THESE WARNINGS WILL RESULT IN INJURIES OR DEATH!**

- **NO** mixing adults, kids, and patrons unevenly matched in weight and height.
- **DO NOT ENTER** if you are pregnant, have mental, or physical impairment.
- **DO NOT** play near the entrance or exit.
- **DO NOT** jump against, climb, or play near the sides or containment walls.
- **DO NOT** jump onto or off the inflatable.
- **DURING INCLEMENT WEATHER** or if the inflatable begins to deflate, stop playing and exit.
- **FOLLOW** operators/attendants instructions and posted safety rules.

## Safety Warnings

- **ADULT SUPERVISION** of patrons is required at all times.
- **MAINTAIN CLEANLINESS** inside and around the inflatable. Make sure it is clear of objects that may cause accidents and/or injuries.
- **CHECK FOR AIR LOSS** before and during use. Make sure the blower is properly connected.
- **PERFORM A MAINTENANCE CHECK** before and after use of inflatable. *See Page 7*
- **CHECK THE PRODUCT AND ALL ITS ANCHOR POINTS** before and during use, and to re-secure as appropriate.
- **DO NOT ALLOW PATRONS TO ENTER THE INFLATABLE UNTIL IT IS FULLY INFLATED.**
- **DO NOT ALLOW USE OF INFLATABLE IF WET.** Thoroughly dry before use. This is not an aquatic toy. It is not to be used in water.
- **THE BLOWER SHOULD RUN CONTINUOUSLY** after inflation, while patrons are playing.
- **TOTAL WEIGHT OF PATRONS** must not exceed 60 lbs. (27 kg)
- **NO MORE THAN 3 PATRONS SHOULD PLAY ON THE INFLATABLE AT THE SAME TIME.**
- **PRIOR TO DEFLATING**, make sure all patrons exit the inflatable.
- **ALWAYS DEFLATE PRODUCT AFTER USE, AND STORE INDOORS.**

## Safety Warnings: Electrical Blower

# DANGER



**CAUTION: ELECTRICALLY OPERATED PRODUCT**



**DANGER - TO PREVENT ELECTRIC SHOCK, DO NOT IMMERSE IN WATER. WIPE CLEAN WITH A DAMP CLOTH.**



**WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH. ADULT SET-UP AND SUPERVISION REQUIRED.**



**CAUTION:** The blower is a high volume blower, and is capable of moving lots of air very quickly. Place the blower in an area where it will not suck in dirt or leaves. Keep away from water and traffic. Keep children away from the blower. Only the blower supplied should be used for inflation.

# Safety Warnings: Electrical Blower

## INSTRUCTIONS FOR BLOWER INSTALLATION

NOTE: Set up as close to power source as possible. The product should be periodically examined for potentially unsafe conditions such as: damaged cord, plug, housing or parts, and that in the event such damage is found, the product should not be used until properly repaired. Never leave the blower outside in the rain or exposed to the elements when not in use. When in use, do not place the cord across traffic areas, water or damp areas. The blower should be placed on a stable surface and anchored per product instructions. The power cord of the blower is equipped with a Ground Faulty Circuit Interrupter (GFCI) plug.

1) Make sure that the blower switch is in the "OFF" position. Plug

the blower into a 110-120V GFCI outlet.

2) If the GFCI has been tripped, press the "RESET" button to restore

power to the blower.

3) Set the power switch of the blower to "ON" to inate. After use,

turn the power to "OFF".

4) To disconnect, have an adult grip it tightly and pull the plug from the wall outlet.



### **WARNING:** FOLLOW ANCHORING INSTRUCTIONS

User must read and follow anchoring instructions to ensure the proper number of anchors used, soil conditions, and stake installation.



### **WARNING:** ELECTROCUTION HAZARD

DO NOT USE EXTENSION CORDS WITH THIS PRODUCT.



### **WARNING: FAILURE TO FOLLOW THESE WARNINGS WILL RESULT IN INJURIES OR DEATH!**

- Cautionary statements which should be read before beginning assembly.
- ADULT SET-UP AND SUPERVISION REQUIRED.
- Use only with Ground Fault Circuit Interrupt (GFCI) receptacle.
- This blower is for residential use only. It is not intended to be used in commercial or industrial settings.
- Never insert ngers, pencils or any other object through the grill at ANY time.
- Do not operate blower with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not operate in the presence of explosive and/or flammable fumes.
- Never connect the blower to any solid - state speed control device.
- To reduce the risk of re or electric shock, do not use this blower with any solid-state speed control device.
- Always unplug the blower before servicing.
- Outdoor use only.

## INSTRUCTIONS FOR BLOWER CLEANING AND STORAGE

Do not immerse the blower in water. Unplug the blower before cleaning.

To clean: wipe with a damp cloth. The blower does not require any lubrication and has no user serviceable parts.

 
Do not attempt to service the blower.

When not in use, store the blower indoors in a dry place. Store the blower upright on a stable surface. Loosely coil the cord and place it beside the blower.



### **CAUTION: USE ONLY ON GFCI PROTECTED RECEPTACLES**

#### **GROUNDING INSTRUCTIONS FOR ALL GROUNDED, CORD-CONNECTED PRODUCTS**

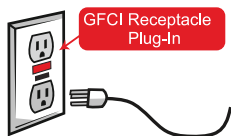

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric circuit. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. This plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances. DANGER - Improper installation of the grounding plug can result in a risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either at blade terminal. The wire with insulation having an outer surface that is green, with or without yellow stripes, is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded. Do not modify the plug provided; if it will not t the outlet, have the proper outlet installed by a qualified electrician. For a grounded, cord-connected product, rated less than 15 amperes and intended for use on a nominal 110-120-volt supply circuit, these instructions should be followed. This product is for use on a nominal 110-120-volt supply circuit, and has a grounding plug that looks like the plug illustrated in sketch A. Temporary adapters should not be used. Do not use product until a properly grounded outlet (sketch A) can be installed by a qualified electrician.

**This blower is not a toy. Use under the direct supervision of a competent adult. Keep away from children.**

**READ AND SAVE THESE INSTRUCTIONS.**

## Step #1: Select a Suitable Location

It is very important to select a suitable location to place the inflatable.

### Follow these easy guidelines:

- Choose a flat and non-abrasive area that has adequate space for the inflatable to fit comfortably allowing for 5 ft. (1.5 m) clearance on all sides. See page 1 for the inflated dimensions of your inflatable.
- Make sure that the area is clear of all protrusions and sharp objects that may damage the inflatable.
- **PREFERRED INDOOR LOCATIONS:** carpeted or hardwood floor
- **IDEAL OUTDOOR LOCATIONS:** flat grassy surface which has well compacted soil and trees or buildings nearby which can provide shade.
- Bystanders should be at a safe distance during setup.

**WARNING:** The inflatable should never be setup or operated during inclement weather or if the winds exceed 15 mph (24 km/h), since serious injury, death, and damage can result. Never setup and operate during rain or snow conditions. It is always wise to check your local weather forecast before installation.

**WARNING:** Check for overhead obstructions such as utility lines before setup. Keep in mind that the inflatable might move during use, and proper clearance should be maintained at all times. Make sure there are no utility lines within 10 ft. (3 m) of the inflatable.



## Step #2: Set-up

 
- 1 Remove inflatable from storage bag.



- 2 Unroll the inflatable.



- 3 Unfold the inflatable until it is completely flat.

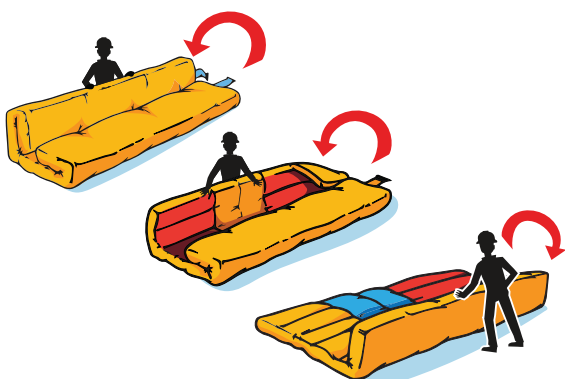

**NOTICE:**

- DO NOT drag the inflatable across the ground and other rough surfaces.
- Always have sufficient personnel and equipment to move the inflatable clear of the ground to the setup location.
- Never leave the inflatable unattended, whether inflated or deflated.

**Tip:** Take particular note of how the inflatable is folded as this will minimize guess work during teardown.



## Step #3: Connect the Blower



### CAUTION

 
Read the blower's manual completely before using.

1

This inflatable requires one blower. Position the blower so that the inflation tube is straight and at a 90° angle to the inflatable allowing for ease of airflow.


**DO NOT switch power on yet.**

2

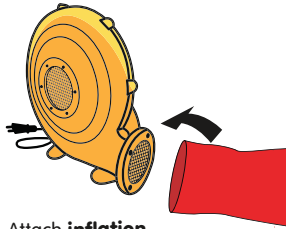


Attach **inflation tube (long tube)** to blower unit making sure the tube is not twisted.

 3

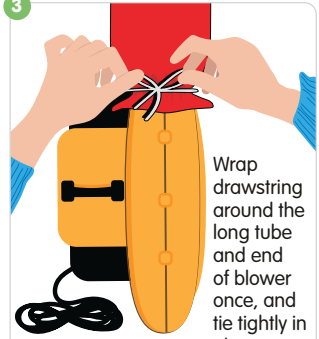


Wrap drawstring around the long tube and end of blower once, and tie tightly in place.

 4

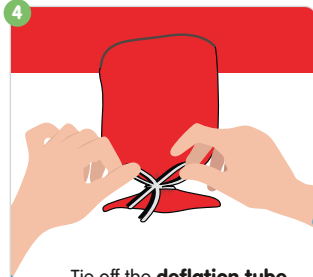

Tie off the **deflation tube (short tube)** as shown.

 5

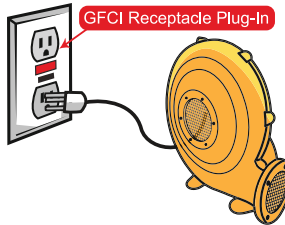

GFCI Receptacle Plug-In

Test the blower AC Adapter.

1. Plug GFCI into receptacle.
2. Press reset button.
3. Press test button.
4. Press reset button to use the product. Do not use if the button fails to disable fan.



**WARNING:** DO NOT USE THE UNIT if the blower remains ON when the test button is pushed. The unit is NOT working properly. Take the unit to a certified electrician immediately.

## Step #4: Inflation & Anchoring

1

Switch the blower's power on. It may take anywhere from 2 to 5 minutes to fully inflate.

2

Blower should remain on and continuously inflate the bouncer during use. Airflow through seams is normal.

3

Anchor your inflatable by using sandbags if indoors and stakes if outdoors.

 


### CAUTION:

DO NOT allow patrons to play in the product until it is fully inflated and anchored to the ground.



**ANCHORING REQUIREMENTS:** This inflatable has several anchoring locations which must ALL be anchored and tethered whenever patrons are using this inflatable, including both indoor and outdoor installation.

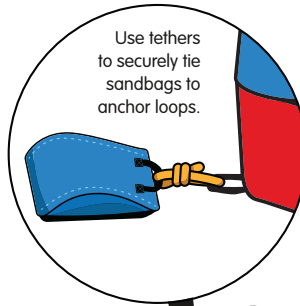

Use tethers to securely tie sandbags to anchor loops.

### ANCHORING INDOORS

Use sandbags (*sold separately*) as anchors when using the inflatable indoors. Check page 1 for correct sandbags weight for your inflatable.



## Step #4: Inflation & Anchoring



 
**CAUTION:** Check with local utility companies and property owner for locations of any water pipes, gas pipes, sewer pipes, and other underground materials before pounding stakes into the ground.

### ANCHORING OUTDOORS

Secure the inflatable to the ground using the provided stakes.

Tightly pull the stake loops away from the inflatable. Use a hammer to drive stakes completely to the ground.


Make sure to anchor at a 90° angle

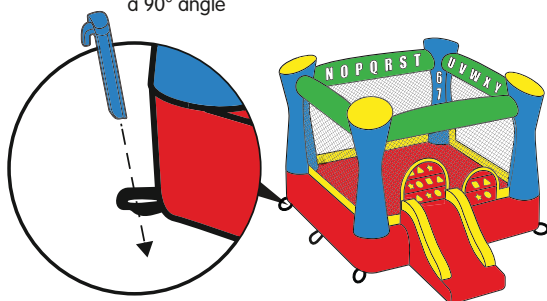

## Step #5: Teardown

- 1 For everyone's safety, ensure everyone has exited the inflatable before teardown.
- 2 Inspect inside the inflatable and ensure to get rid of items that might have been left behind.
- 3 Remove all accessory attachments that were installed.
- 4 It's recommended to perform maintenance again before beginning teardown. Review checklist provided in this manual.
- 5 Before turning the power off, confirm all patrons and bystanders are clear of the no-walk perimeter.
- 6 Switch off the blower and remove the blower from the inflation tube.
- 7 Open all the deflation zippers.
- 8 It takes 3 to 6 minutes for the inflatable to fully deflate. Make sure the inflatable deflates onto itself so the weight is equally distributed.
- 9 Unfasten the tethers and pull all the anchors out.
- 10 Follow the instructions for folding and storage.
 
### HOW TO FOLD YOUR INFLATABLE:

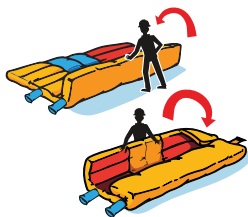

Fold the opposing sides inward, making sure the inflation tubes are not being folded as well.



Step on the folded inflatable opposite the inflation tubes. Begin stomping out the air. Fold in half and continue to push air out until it is completely deflated.




Roll the inflatable towards the inflation tubes. For larger inflatables, one person can roll as a helper continues to stomp air out.



Tie rolled up inflatable with straps and insert into storage bag (optional accessory).

### HOW TO PROPERLY STORE YOUR INFLATABLE:

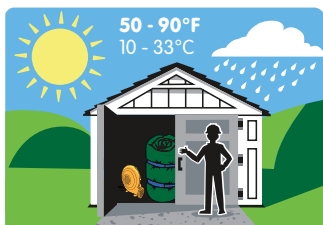 

Proper storage is key to protecting your inflatable.

Store your inflatable in an enclosed location free of rain and extreme heat. Ideal indoor temperature should be between 50 to 90°F (10 to 33°C).

Ensure your storage area is free of rodents as they can chew on the vinyl and damage your inflatable.

## Bouncer Maintenance

- **Inspect for signs of fabric failure; weak or torn surfaces must be repaired promptly.** As an outdoor product, the bouncer is subject to wear and deterioration.
- **To keep the product clean:** wipe the bouncer or blower using a dry cloth or a cloth dampened with a neutral, non-flammable, non-toxic cleaning and sanitizing solution or pure water.
- **Product should be periodically examined for potentially unsafe conditions** such as: damaged cord, plug, housing, or parts, and that in the event such damage is found, the product should not be used until properly repaired. Never leave the fan outside in the rain or elements when not in use. Minor repairs can be made using the enclosed repair patches.

## Blower Maintenance

- Blower must be unplugged before servicing.
- Product should be periodically examined for potentially unsafe conditions such as damaged cord, plug, housing, or parts, and that in the event such damage is found, the product should not be used until properly repaired. If these checks are not carried out, the product could overturn or otherwise become a hazard.
- The blower does not require any lubrication and has no user serviceable parts. Do not attempt to service the blower.
- Do not immerse the fan in water. To clean, wipe with a damp cloth.
- Regularly check the intake and output openings and keep free of dirt, leaves, etc.
- When not in use, store the blower indoors in a dry place.
- Store the blower upright on a stable surface.
- Loosely coil the cord and place it beside the blower.
- When in use, do not place the cord across traffic areas, water, or damp areas.
- The blower is a high volume blower, and is capable of moving large volumes of air very quickly. Place the blower in an area where it will not draw in dirt or leaves.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rug, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

## Cleaning the Inflatable

**Keep your inflatable looking and performing like new by cleaning it thoroughly.** If inflatable is wet, DO NOT store away for an extended period, as this will cause mildew. Make sure to dry wet inflatable within three days after use. Follow the steps below:

 
- 1 Clean inside debris/trash with a shop vacuum.
- 2 Clean inside and outside using damp rag. If inflatable has stains, use cleaning solution.
- 3 Disinfect the inflatable after every use. Simple Green Pro D 5 or D 3 are great cleaning solutions that kill bacteria and disinfects without deteriorating the vinyl or color.

## Repair Kit Instructions



**WARNING: NOT A TOY. ADULT USE ONLY.**  
Keep away from children.

Small cuts and tears on your inflatable can be patched using the repair kit provided. For cuts or tears larger than 6 in (15 cm), and/or stitching that has come undone, professional repairs are required. All professional repairs should be performed by FUNormous, or any FUNormous authorized repair center. To perform minor patches with the repair kit provided, follow the steps below.

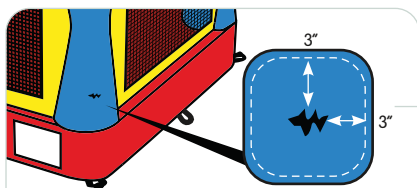


- 1 Deflate the inflatable, clean the area on inflatable that is to be patched, and dry thoroughly.
- 2 Find the matching material from your repair kit. Cut a patch of material that is 3 in (7.6 cm) larger than the size of the damaged area, from all sides. Round the corners.




Correct round corners



 Incorrect sharp corners

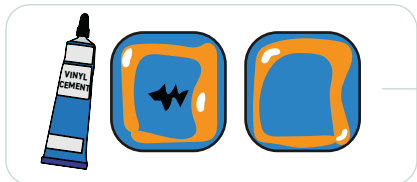

 - 3 Apply an even coat of vinyl cement to the patch and the inflatable. Let it dry for about 2-5 minutes.

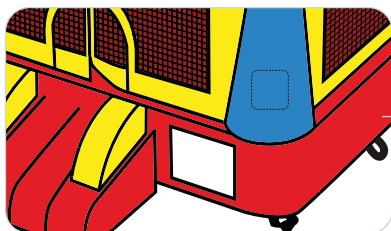

- 4 Press the patch on the inflatable, ensuring there is no air bubbles. Bond strength increases with age as cements sets.

## Disposal

**DISPOSAL OF INFLATABLE:** We recommend finding a recycling facility that will accept PVC. If no facility is available to you, dismantle and dispose of the inflatable in a way that no hazardous conditions exist at the time you do so.

**DISPOSAL OF BLOWER:** Take the blower to a collection facility capable of processing electrical/electronic waste.

# Troubleshooting

The chart below provides some of the common problems that occur with the operation of the inflatable. In most cases a problem can easily be solved by the operator.

| Common Problems                              | Possible Cause                                     | Solution                                                                                                                            |
|----------------------------------------------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Inflatable deflates or loses pressure</b> | Insufficient power supply                          | Check power outlet, circuit breakers or generator.                                                                                  |
|                                              | Inflation tube connected to blower                 | If kinked, entangled, or loose: adjust and tighten.                                                                                 |
|                                              | Blower air intake blocked                          | Clear all debris from blower intake. Ensure nothing is blocking blower air intake.                                                  |
|                                              | Blower device malfunction                          | Check blower manual for solution or possibly replace.                                                                               |
|                                              | Damage to inflatable                               | Remove all patrons and deflate inflatable. Minor repairs can be done on location. Major repairs must be performed by repair center. |
| <b>Inflatable moves from setup location</b>  | Tethers have become loose                          | Remove all patrons and adjust tethers.                                                                                              |
|                                              | Damaged anchor points, tethers, stakes or sandbags | Remove all patrons. Repair or replace damaged equipment.                                                                            |

If you are not able to solve a problem call FUNormous Customer Service at (877) 710-1777. Be prepared with the following information:

1. The inflatable serial number and model.

2. The owners manual.

3. All calls should be made by the same person to avoid confusion. Be sure to get the name of the person to whom he/she is speaking to at FUNormous. All calls should then be directed to that person.
4. A phone number ready at which you can be reached.

5. The maintenance log and repair record.

6. The person calling the factory must be familiar with the problem and be able to describe the problems of the inflatable. (i.e.; Was the problem gradual? Are there any noises occurring that are not normal? Was it a one time problem, or does it occur regularly?)

Many times the problem that completely stops an inflatable from working is one of the many simple things that are forgotten or overlooked. It can save several phone calls or a more expensive repair, as well as valuable time to double check everything.

## Emergency Procedures

Emergencies can arise for various reasons. It is important that the operator/attendant be trained to implement emergency procedures should the need rise. The following are examples of emergencies and how they can be handled.

### WEATHER:

Inclement weather can be rain, lightning, or strong wind which makes usage unsafe for patrons. In each case the operator/ attendant should evacuate the inflatable as quickly and safely as possible. After everyone has exited the inflatable, the operator/attendant must follow the procedures for shutting down the inflatable.

### LOSS OF ELECTRIC POWER:

 
When a loss of power occurs, the inflatable will slowly start to deflate. The operator/attendant will have to assist patrons to quickly and safely exit the inflatable. The property owner, supervisor or maintenance person should be notified to check the problem. Do not leave the inflatable unattended. When the problem is corrected, inspection and maintenance should be performed before the inflatable is put back in service.

### INJURIES:

If the injury is minor, the owner/attendant can assist the injured patron to exit the inflatable and the parent or guardian can give needed assistance. If a major injury has occurred, the owner/attendant should evacuate patrons from inflatable and assist the injured patron out of the inflatable. The owner/attendant should contact appropriate first aid personnel or emergency. The owner/attendant should assist in crowd control to make way for emergency personnel and vehicles. The owner/attendant should fill out an incident report as soon as possible while the incident is still fresh in their mind. The manufacturer should be notified of an incident that resulted in serious injury.

### DAMAGE TO INFLATABLE:

Should the inflatable receive damages during use, the owner/attendant should immediately evacuate patrons. The inflatable should not be operated until the damage can be assessed and professionally repaired. When the problem is corrected, inspection and maintenance should be performed before the inflatable is put back in service.

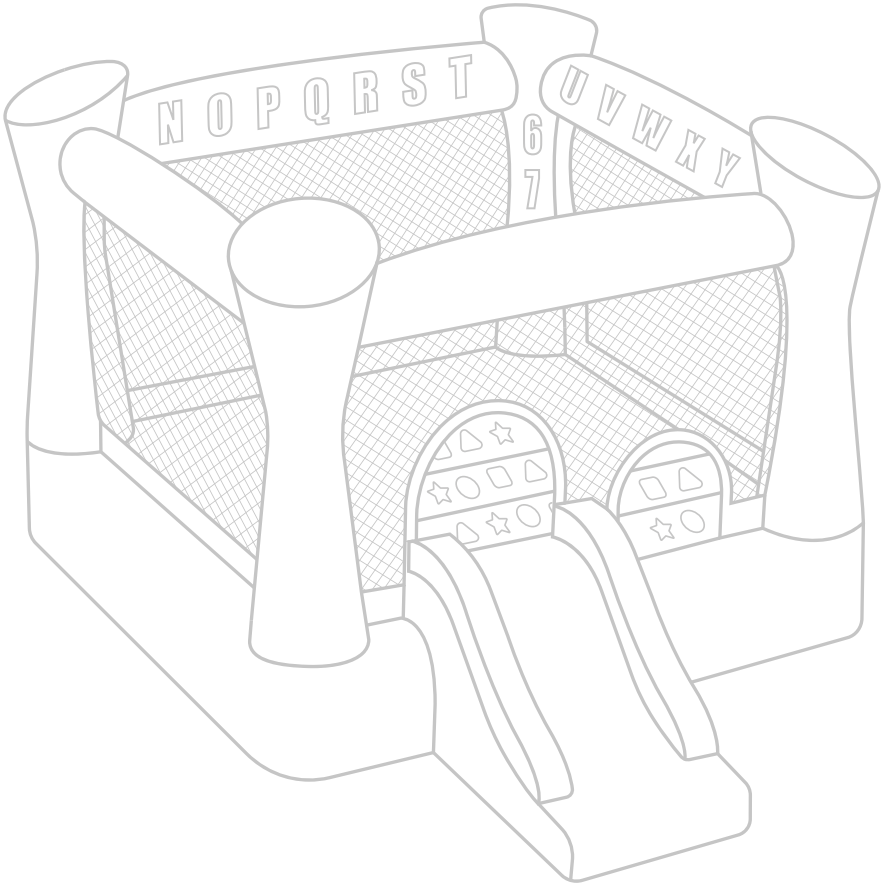

**FUNormous.com**

**(877) 710-1777**

© 2021 FUNormous, All Rights Reserved.

All content included in this manual, such as text, graphics, product design, icons, images and trademarks, is the exclusive property of FUNormous and protected by U.S. and international copyright laws. Any use, including the reproduction, modification, distribution, transmission, republication, display or performance, of the content in this manual is strictly prohibited, except with the express written permission of FUNormous.