

WARNING

** READ ALL INSTRUCTIONS AND WARNING TAGS INCLUDED WITH THIS TREE.

CARE AND MAINTENANCE

- * Make sure to set up your tree in a cool, dry place, away from direct heat or sunlight.
- * While the tree is on display, lightly dust its tips at least once a week to prevent build-up. You can use a duster or a clean, dry cloth. Be careful as you work around the lights.
- * Avoid spraying water, soap, or other cleaning agents which may affect the quality of your tree.
- * Before storing your tree for the off-season, make sure to clean it properly. Place your tree in a durable storage bag and seal it securely. Store your tree in a cool, dry location to protect from moisture and odor.







NOTICE& IMPORTANT SAFETY INSTRUCTIONS: To reduce risk of fire and electric shock.

- * For Indoor Use Only.
- * Do not place near gas or electric heaters, radiators, fireplaces, candles, or other similar sources of heat.
- * Place on a level, hard, flat surface; do not place where tree is likely to wobble due to uneven floors or thick carpeting.
- * Do not use candles on tree.
- * After assembling the tree and adding decorations, make sure the tree is stable. If tree is not stable, shift the weight of the decorations, and use support wires to walls and/or window frames (make sure they are secure also).
- * Do not overload extension cords or power strips, see ratings on those devices and check the rating label of the tree for compatibility.
- * Do not install near fountains, bathtubs, sinks, or other wet areas.
- * Insert lighting string plugs fully into the female socket and insert the leading power plug fully into wall/extension cord.
- * Disconnect the decorative item from the power source before performing any maintenance or cleaning.
- * Disconnect the product when leaving the house, going to sleep or if left unattended.
- * Do not hang ornaments or other objects to the cord, cable or lighting chain.
- * Do not cover the decorative item with cloth, paper or any other material that is not part of the product when in use.
- * Do not install the chain in a manner that may cut or damage the wire insulation

Product Dimensions: 60"L x 60"W x 7.5FT H

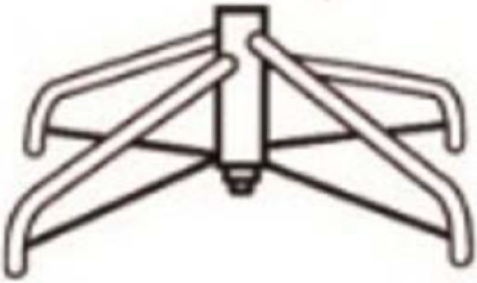
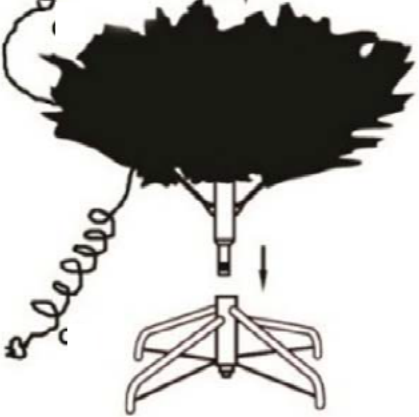
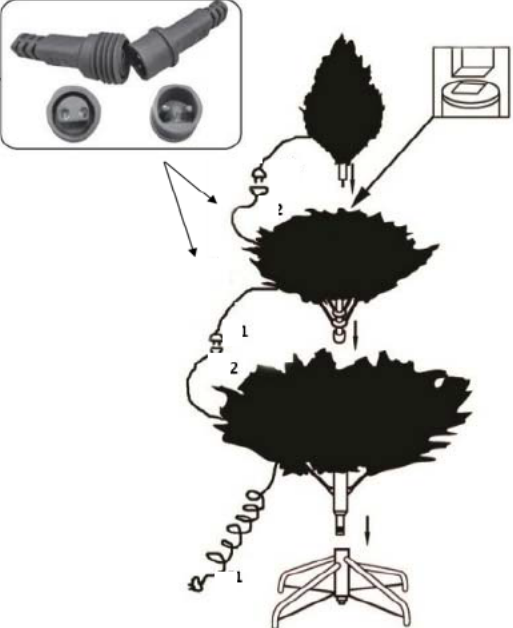


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	SECTION A OF THE TREE		1X	D	METAL STAND		1X
B	SECTION B OF THE TREE		1X	E	Remote		1X
C	SECTION C OF THE TREE		1X	F	TREE BAG		1X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 15 minutes.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
<p>Step 1: Before you start to assemble your tree, choose a location near a wall outlet. Assemble the tree stand and place on a level surface.</p> <p>Pull apart the legs of the stand so that they are "X" shaped. Lock the stand in position with the single eye bolt on the outside metal tab.</p>	<p>Step2: Carefully insert the bottom section (C) of the tree into the assembled stand, make sure the pole is firmly inserted into stand and turn screws so they touch tree trunk. Stand tree up and straighten by adjusting screws in or out then tighten screws.</p>	<p>Step3: Insert the middle tree section (B) into the bottom tree section(C). Insert tree top section (A) into section(B).</p> <p>Connect the plug(s) securely between each tree section. Connect the bottom light string connector located at the bottom of the tree to the adaptor. Plug the adaptor into the wall outlet. The button on adaptor has 10 different light functions, and the function will be changed each time the button is pressed.</p>

IR RECEIVER ↑

1. Combination
2. Led1 steady on
3. Led2 steady on
4. Led1 Slo-Glo
5. Led2 Slo-Glo
6. Led1&Led2 sequential
7. Led1&Led2 twinkle
8. Led1&Led2 slow fade
9. Slo-Glo
10. Off



1. Control Button: Press button to change between 10 different modes

2. To set and reset timer press button for 3 seconds, Green light ON means timer is ON (6H ON/18H OFF)



Top view



Side view



Step 4: When using remote, point directly at adaptor, Then press **BUTTON** to choice the function:

- | | |
|-----------------------|--------------------------|
| 1) Combination | 2) LED1 steady on |
| 3) LED2 steady on | 4) LED1 Slo-Glo |
| 5) LED2 Slo-Glo | 6) LED1 &LED2 sequential |
| 7) LED1 &LED2 Twinkle | 8) LED1 &LED2 slow fade |
| 9) Slo-Glo | 10) Off |

There is clear PVC sheet on bottom of remote to block the battery, please remove this PVC sheet before using the remote

Step5: Shape the branches by working from the bottom of the tree upwards. Fan out the tips in a pattern of one to the right, one to the left, and one to the centre of the main stem. Tips at the center position should be alternately placed so that they do not line up one after the other. Repeat pattern for each branch. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Slightly upsweep all branch tips for a uniform look. Your tree is now ready to decorate and enjoy

Step6: STORAGE :

Unplug cord from the wall outlet and remove all ornaments and decorations.
Unplug each section cord.
Gently lift off the top and middle sections, and remove the bottom section from the tree stand.
Carefully place the tree in its box or in TREE BAG and tape it shut. **DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 37° C (100° F)**

TROUBLE SHOOTING INSTRUCTIONS

If lights do not work:

1. Check whether the cord is properly plugged into the outlet.
2. Be sure there is power to the outlet.
3. Check whether all plugs within the tree are securely connected.

Replacing Remote Control Battery:

* When the unit does not respond to the signal from the remote control, replace the original battery with a new Lithium battery CR20253V.

Note: For festive use only, not intended for consecutive use over 90 days each season.

This decorative item is not intended for individuals (including children) whose physical or mental capacities are different or reduced, lack experience or understanding, unless said individuals receive supervision.

Children must be supervised to ensure that the items are not used as toys.

Electrical Specifications: Includes: AC Adaptor 30Vcc 0.3 A

Input: 120V~ 60 Hz, 0.3A **Output:** 30Vcc 0.3 A

CAUTION: Use only power adaptor that was provided with this product. Using a different power adaptor will damage the lights and cause fire, electrical shock hazard.