

Material: Food-safe Solid Composite
Size: 17-1/8" (length) x 7-1/8" (width) x 3/8" (thick)

Compatible Ruvati Sinks:

RVH8003, RVH8023, RVH8030, RVH8035, RVH8222, RVH8300, RVH8301, RVH8307, RVH8308, RVH8309, RVH8310, RVH8333, RVH8345, RVH8350, RVH8351, RVH8356, RVH8555, RVH9020, RVH9050, RVH9100, RVH9200, RVH9201, RVH9222, RVH9300, RVH9301, RVH9333.

CARE INSTRUCTIONS



Cleaning: Hand wash the plastic cutting board with soap and hot water or run it through the dishwasher.



Disinfecting: You can disinfect the board by soaking it for 2 minutes in a solution of two teaspoons of bleach and one gallon of water.



Deodorize: Wet the board and sprinkle it with baking soda. Let it stand for a few minutes then rinse it in water.



Scratches: It is normal for plastic cutting boards to take knife marks. The scratches will be noticeable when the board is new. Over time, they will blend in.



Heat: Do not expose the cutting board to hot surfaces, or put in an oven or microwave. It can cause the board to melt.

