

# INSTRUCTIONS:

## EXTRA WIDE GATE EXTENSIONS

**Important: Keep instructions for future reference.**

**Read INSTRUCTIONS thoroughly before assembling and installing gate.**

Complies with Standards: ASTM F1004-07, BS EN1930:2000.

### ! WARNING

- To prevent serious injury or death, securely install gate/extension and use according to manufacturer's instructions.
- This product is intended for use with children 6 - 24 months.
- Never leave child unattended. This product may not prevent all accidents.
- Never use with a child who is able to open, dislodge or climb over the gate.
- The surfaces that the safety gate / extension are to be fixed to must be suitable for the purpose and must be structurally sound.  
NOTE: Do not use this gate / extension if it can't be installed to walls, door frames or posts - tightly and flatly.
- This safety gate / extension shall not be fitted across window openings and the like.
- Never use without Mounting Cups.


- Securely install and operate the gate / extension according to instructions to help prevent accidental injury.
- Do not use the safety gate / extension if any components are damaged or missing.
- Install this gate / extension away from heaters and other sources of heat.
- This gate / extension is intended for indoor use and is not to be exposed to outdoor elements.
- This safety barrier is not meant to replace proper adult supervision.
- If the gate / extension are used at the bottom of the stairs to prevent the child from climbing up the stairs, they must be placed on the lowest stair.
- If the gate / extension are to be used at the top of the stairs to prevent the child from falling down the stairs, they must not be placed on any stair below the level of the top stair.

**WARNING - The position of the safety barrier in relation to the stairs may have an adverse effect on your child's safety.**

**WARNING: Incorrect fitting or positioning of this safety barrier can be dangerous.**


### PARTS LIST

- ⑪ Upper Metal Clamp x 2
- ⑫ Lower Metal Clamp x 2
- ⑬ Round Head Screws (set) x 2
- ⑭ Flat Head Screws x 4
- ⑮ Washers x 4
- ⑯ Extension Pin x 4

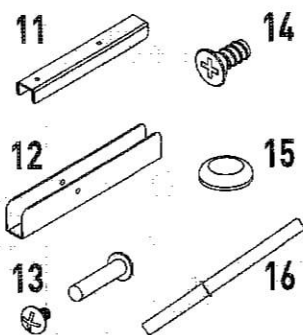


## INSTALLATION


1. Measure the width of the opening of where you intend to install the gate. For wider openings select the appropriate Gate Extension(s). Some examples are shown below. Range of Gate Extensions and dimensions listed.

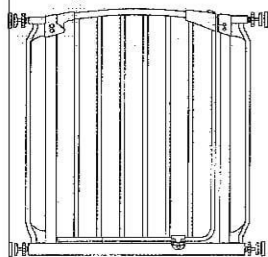

71-82cm (28.3-32")

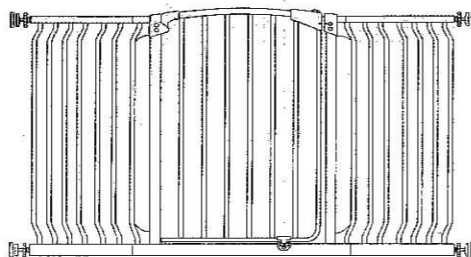

1.61m-1.72m (63.3-67")

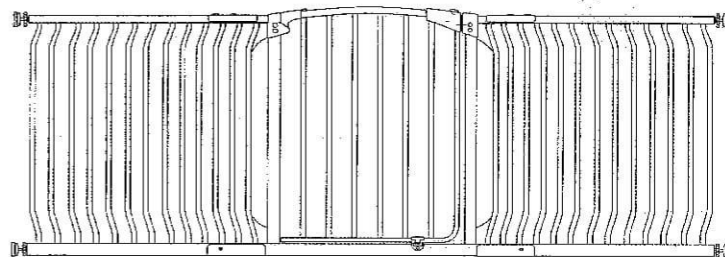


2.61m-2.82m (107"-111")


97-108cm (38.2-42.5")

1.87-1.98m (73.2-77.5")

2.97m - 3.08m (107" - 121")

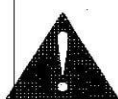

**WARNING:** A maximum of 2 Gate Extensions can be used, one on either side of gate. Do NOT install 2 Gate Extensions on the same side of gate.

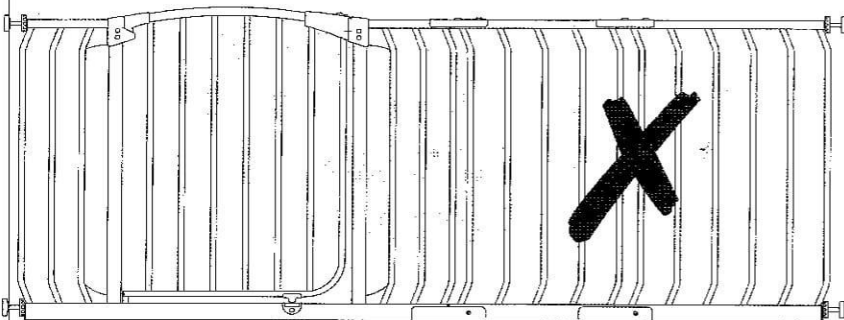


### Gate Extensions

9cm	(3.5")
18cm	(7")
27cm	(10.5")
36cm	(14")
45cm	(17.5")
54cm	(21")
63cm	(24.5")
100cm	(39")


\*Wider Gate Extensions

2. When using wider Gate Extension (36cm or wider), please follow these installation steps.  
First screw the Lower Metal Clamp with Round Head Screws (supplied) to the bottom of the Gate Extension [2A].  
Then insert the Long Extension Pins into the holes on the outside of the Gate Frame [2B].  
Note: The "long end" of the Extension Pins fit into the Gate and the "short end" fits into the Gate Extension.  
Slip the Gate Extension over the pins. Please make sure that Extension Pins are properly inserted and connecting the Gate and Gate Extension.

2A

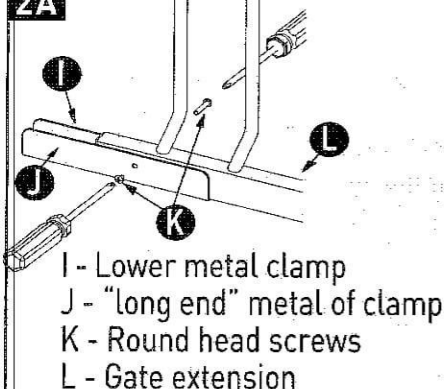

2B

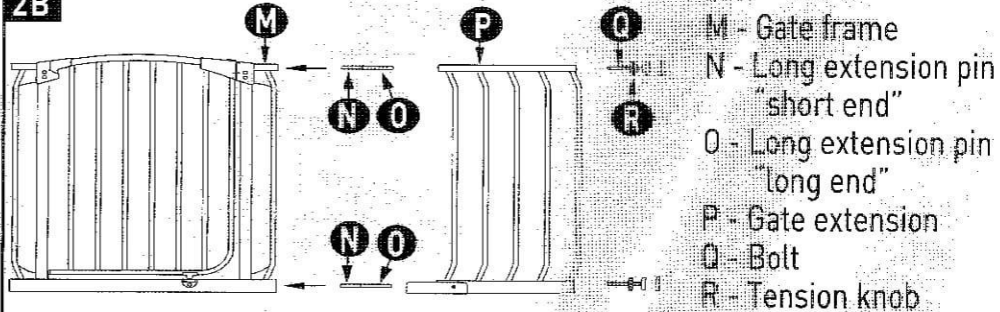






**NOTE:** Insert the "short end" of long extension pin into the gate frame

# INSTALLATION



- Place the Gate and Gate Extension into opening so that the bottom of the Gate frame is completely flat on the floor (3A), and it is perpendicular to the opening and the floor (3B).

Then fasten the Mounting Cups to the wall (3C) with screws or double-sided adhesive tape.

Note: Ensure that they are aligned vertically, so that the mounting cups at the top are directly above the ones at the bottom.

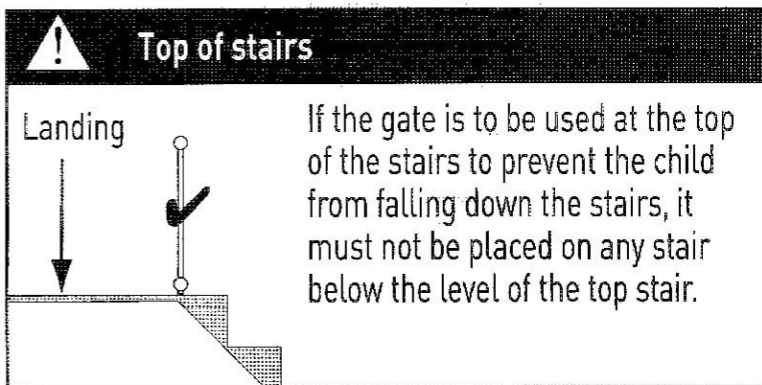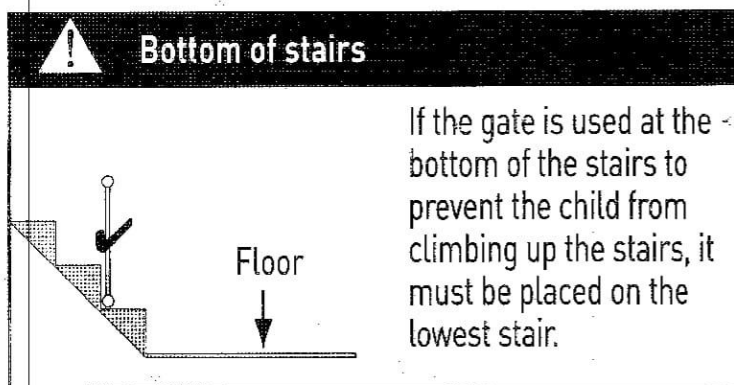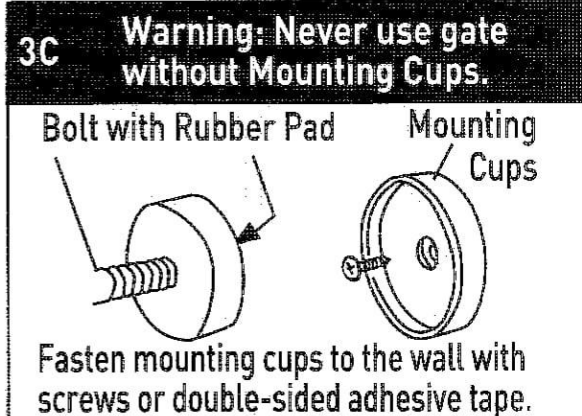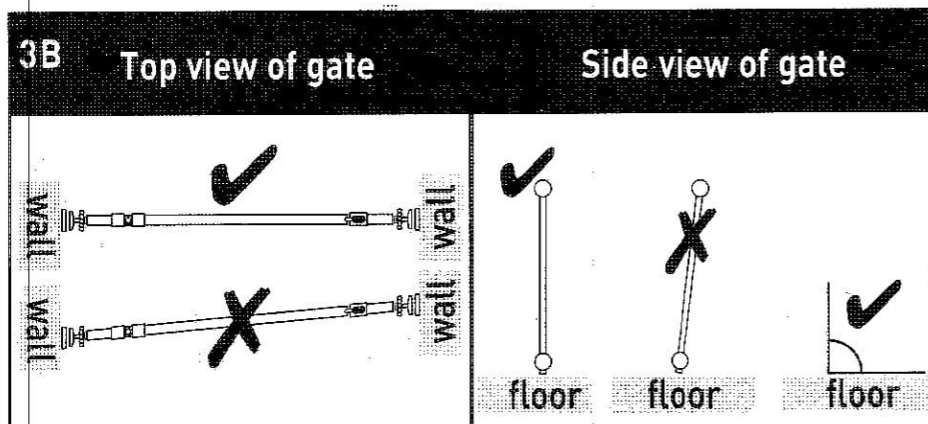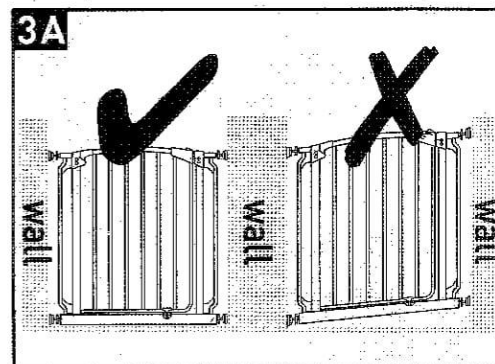


- Fit the Upper Metal Clamp onto the top of the Gate and Gate Extension [4A] and then fasten the Washers with the supplied Flat Head Screws [4B]. Slide the Tension Bolts with rubber pads completely into the holes on the outside of the Gate Extensions [4C].

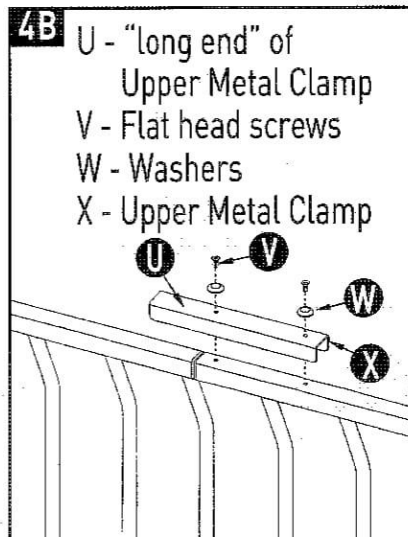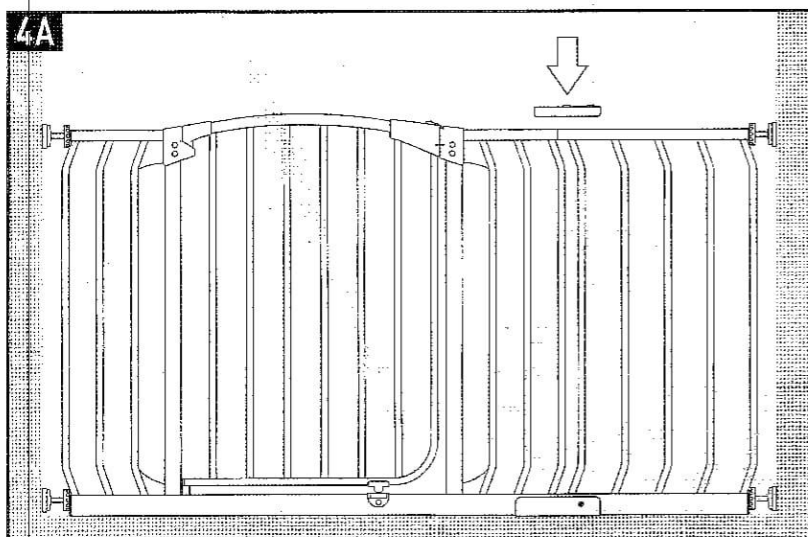


5. Tighten the Tension Knobs equally by turning them clockwise (5A).

Note: make sure that the bottom of the Gate Frame / Gate Extension remains completely flat on the floor. Ensure that Tension Knobs are securely fastened at both top and bottom into to the Mounting Cups.

The distance between the Gate to the walls should be equal on both sides (5B).

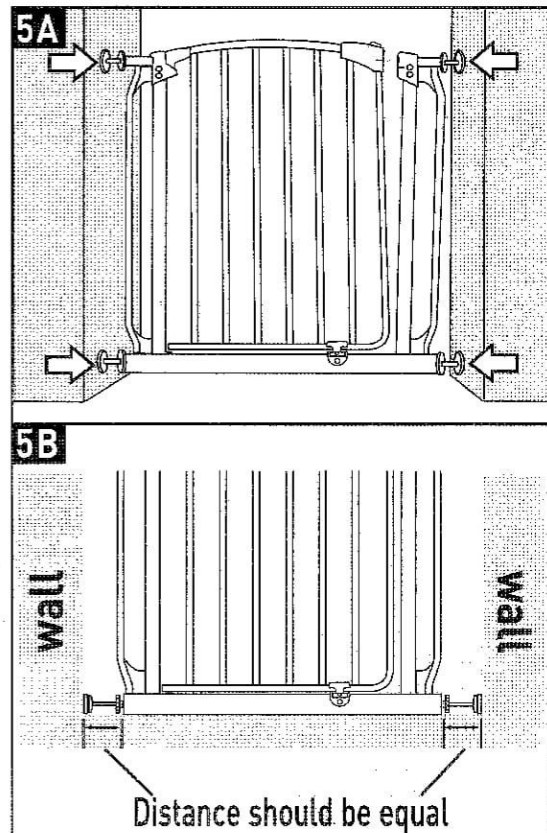

6. Tighten the Tension Knobs until the 2 Indicator Lines align horizontally (6). Keep 1mm (0.04") gap between Upper Locking Set and Upper Right Corner (6).

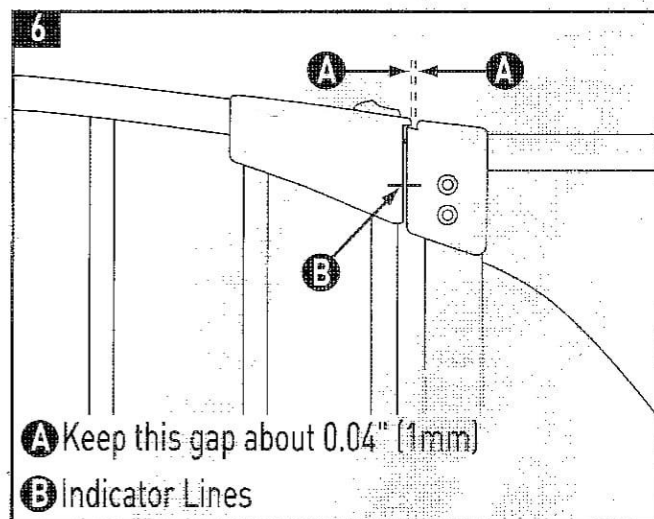

## MAINTENANCE & CARE

- Gate extension and safety gate must be fitted according to manufacturer's instructions, to ensure it works correctly.
- Regularly check gate extension and gate to ensure it is fitted properly and securely. Adjust as required.
- Do not use the gate or gate extension if any components are damaged or missing.
- To clean, wipe surface with a damp cloth or sponge using mild detergent and warm water. Never clean with abrasive, ammonia based bleach based or spirit type cleaners.
- Any additional and replacement parts should be obtained

## CONTACT DETAILS