 


Side Table

Assembly Instruction - Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessories shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

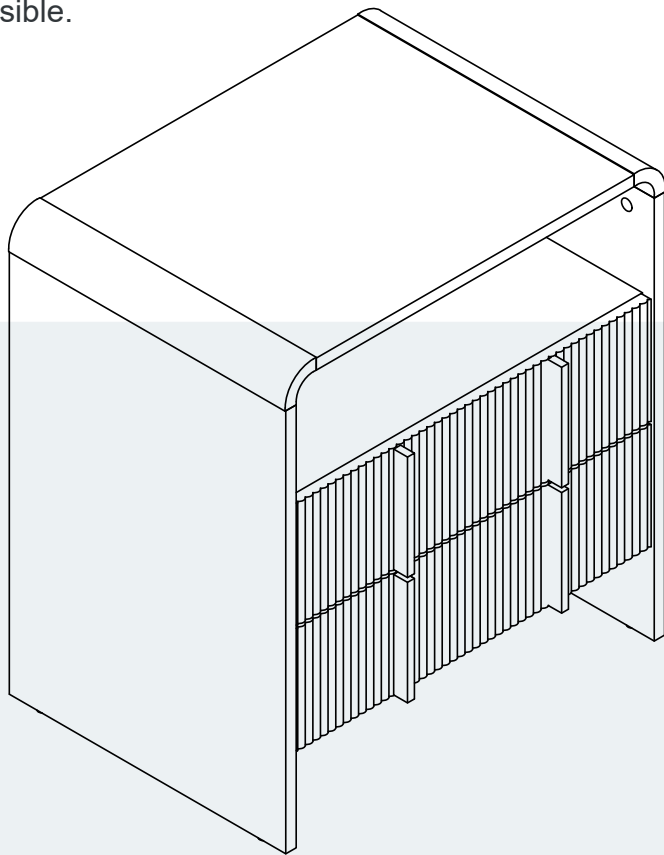

CONTACT US

- In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

EN

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps. Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice



Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, as small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, as this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product, please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti-tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti-tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, the quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

Contact Us:

By Email:

Send an email with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list
- Order details (order number, purchase platform, purchase date)

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team.
2. Provide a description of the damage and include relevant photos or videos

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

 
Customer Service Email

Helpful Tips


To process your issue efficiently, please prepare the following information:

- Order details (order number, purchase platform, purchase date)
- Clear photos or videos
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.


Thank you for your trust and support!
We hope you enjoy using our product!

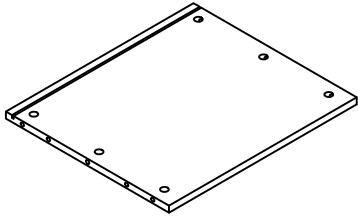


① (460x400x15mm)X1

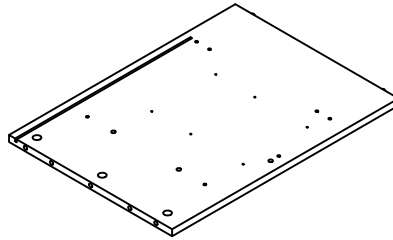 


② (555x400x15mm)X1

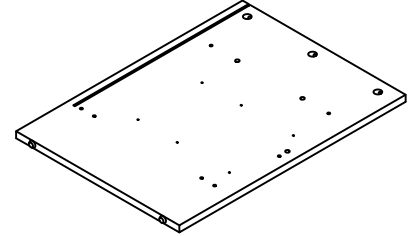 


③ (555x400x15mm)X1

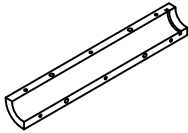 


④ (400x64x27mm)X2

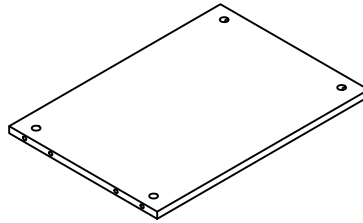 


⑤ (518x363x15mm)X1

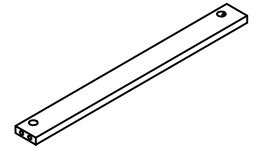 


⑥ (518x50x15mm)X1

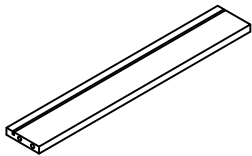 


⑦ (518x80x15mm)X1

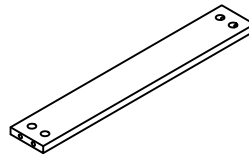 


⑧ (518x80x15mm)X1

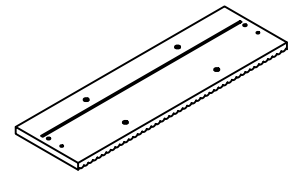 


⑨ (512x153x15mm)X2

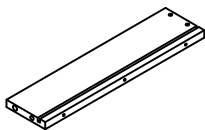 


⑩ (300x73x12mm)X2

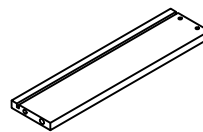 


⑪ (300x73x12mm)X2

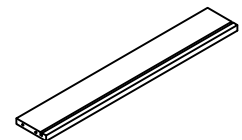 


⑫ (469x73x12mm)X2

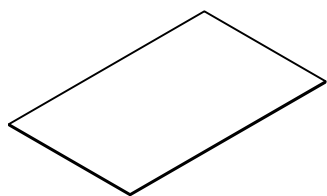 









⑬(479x297x3mm)X2

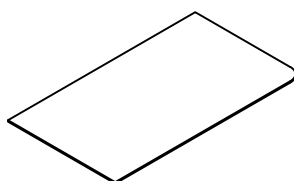 



⑭(459x263x3mm)X2

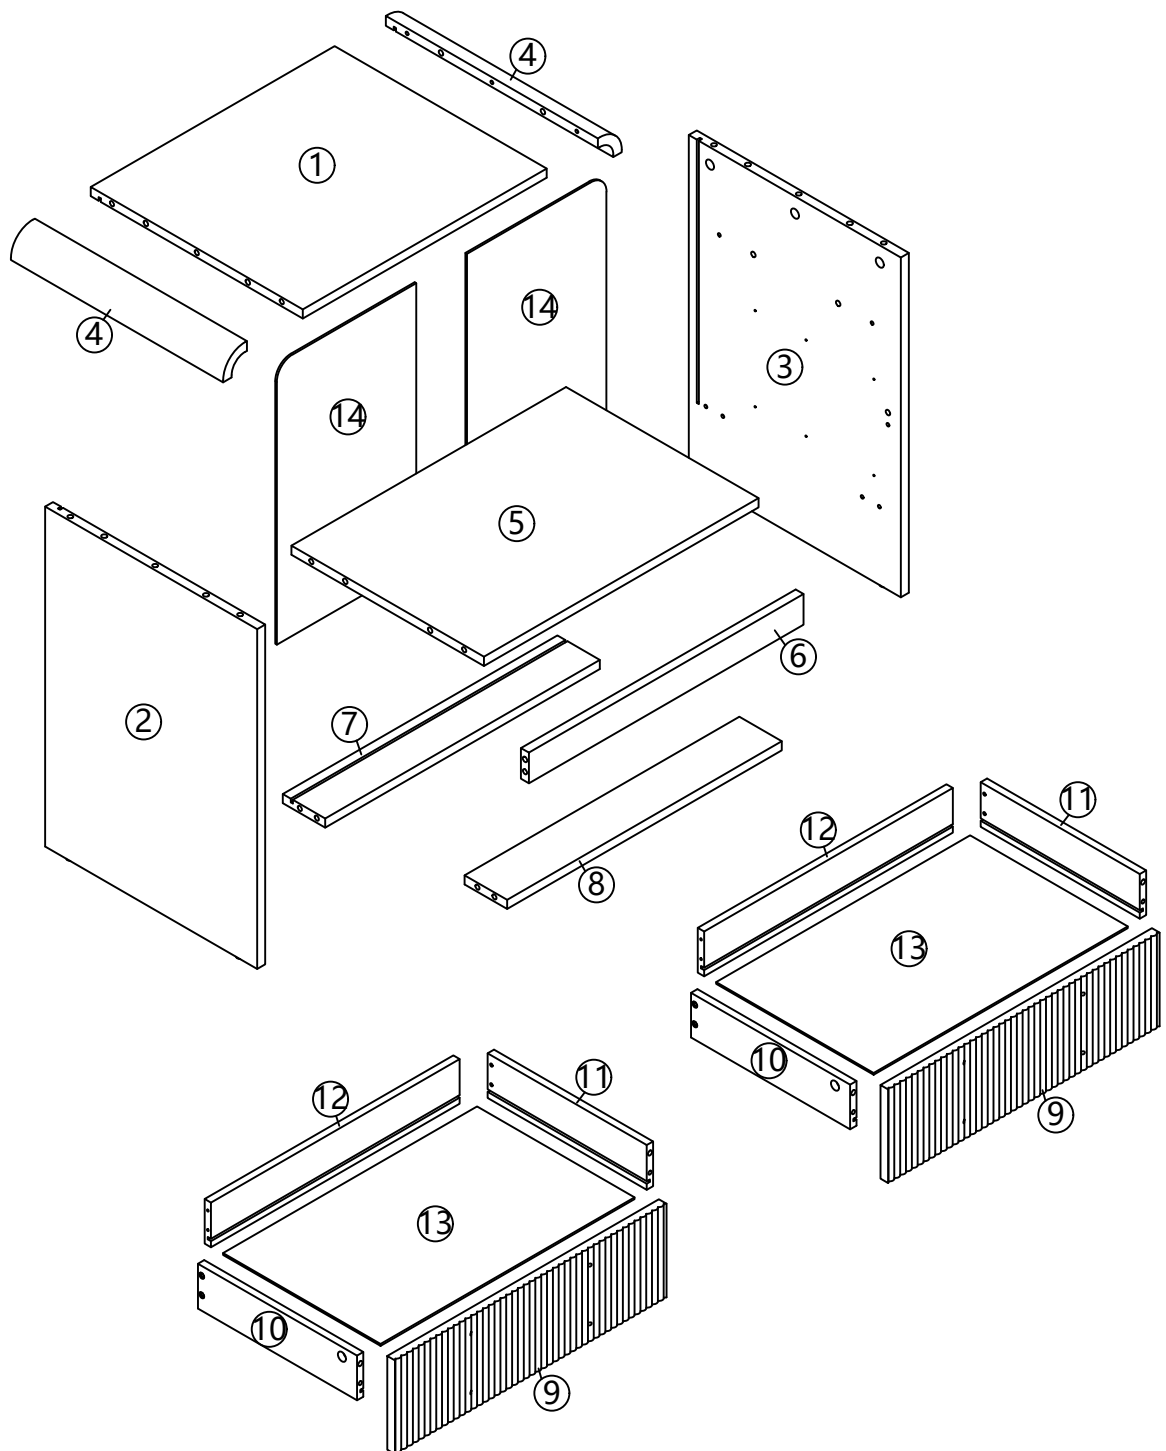 

HARDWARE PART LIST

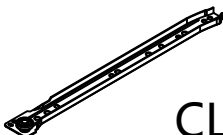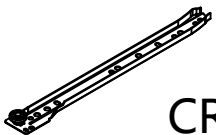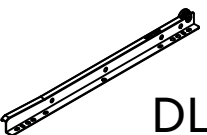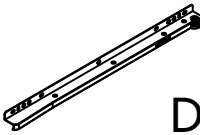        
Ⓐ X30+3  ø15*9.5	Ⓑ X30+3  ø6.5*35	Ⓒ X14+1  ø8*30	Ⓓ X4+1  ø6*30
Ⓔ X24+2  ø3.5*14	Ⓕ X8+1  ø4*35	Ⓖ X8+1  ø4*25	Ⓗ X2  CL L=300
Ⓗ X2  CR L=300	Ⓗ X2  DL L=300	Ⓗ X2  DR L=300	Ⓘ X8+1  ø3*14

  HARDWARE PART LIST


ⓐ X1 	ⓑ X1  70*30*5	ⓒ X4  151*20*10	ⓓ X24+2  ø21
ⓔ X1 			

Cam Lock Fastening System

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

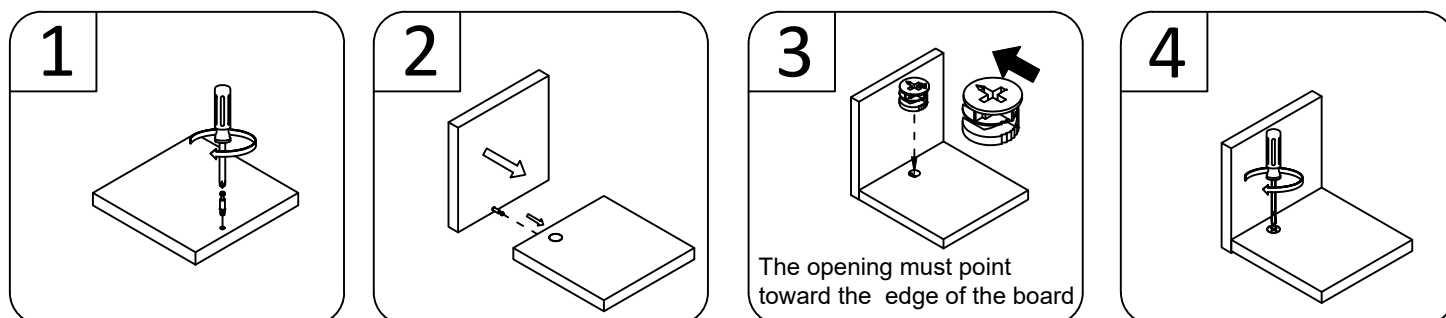


 STEP 1

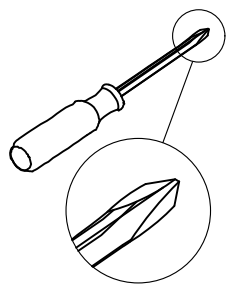


(E)	X12
	
Ø3.5*14	



(H)	X2
	
CL	
L=300	

 (H)	X2
	
CR	
L=300	




 
Fix the fitting H on the plates 2 and 3 with screw E as shown in the figure.

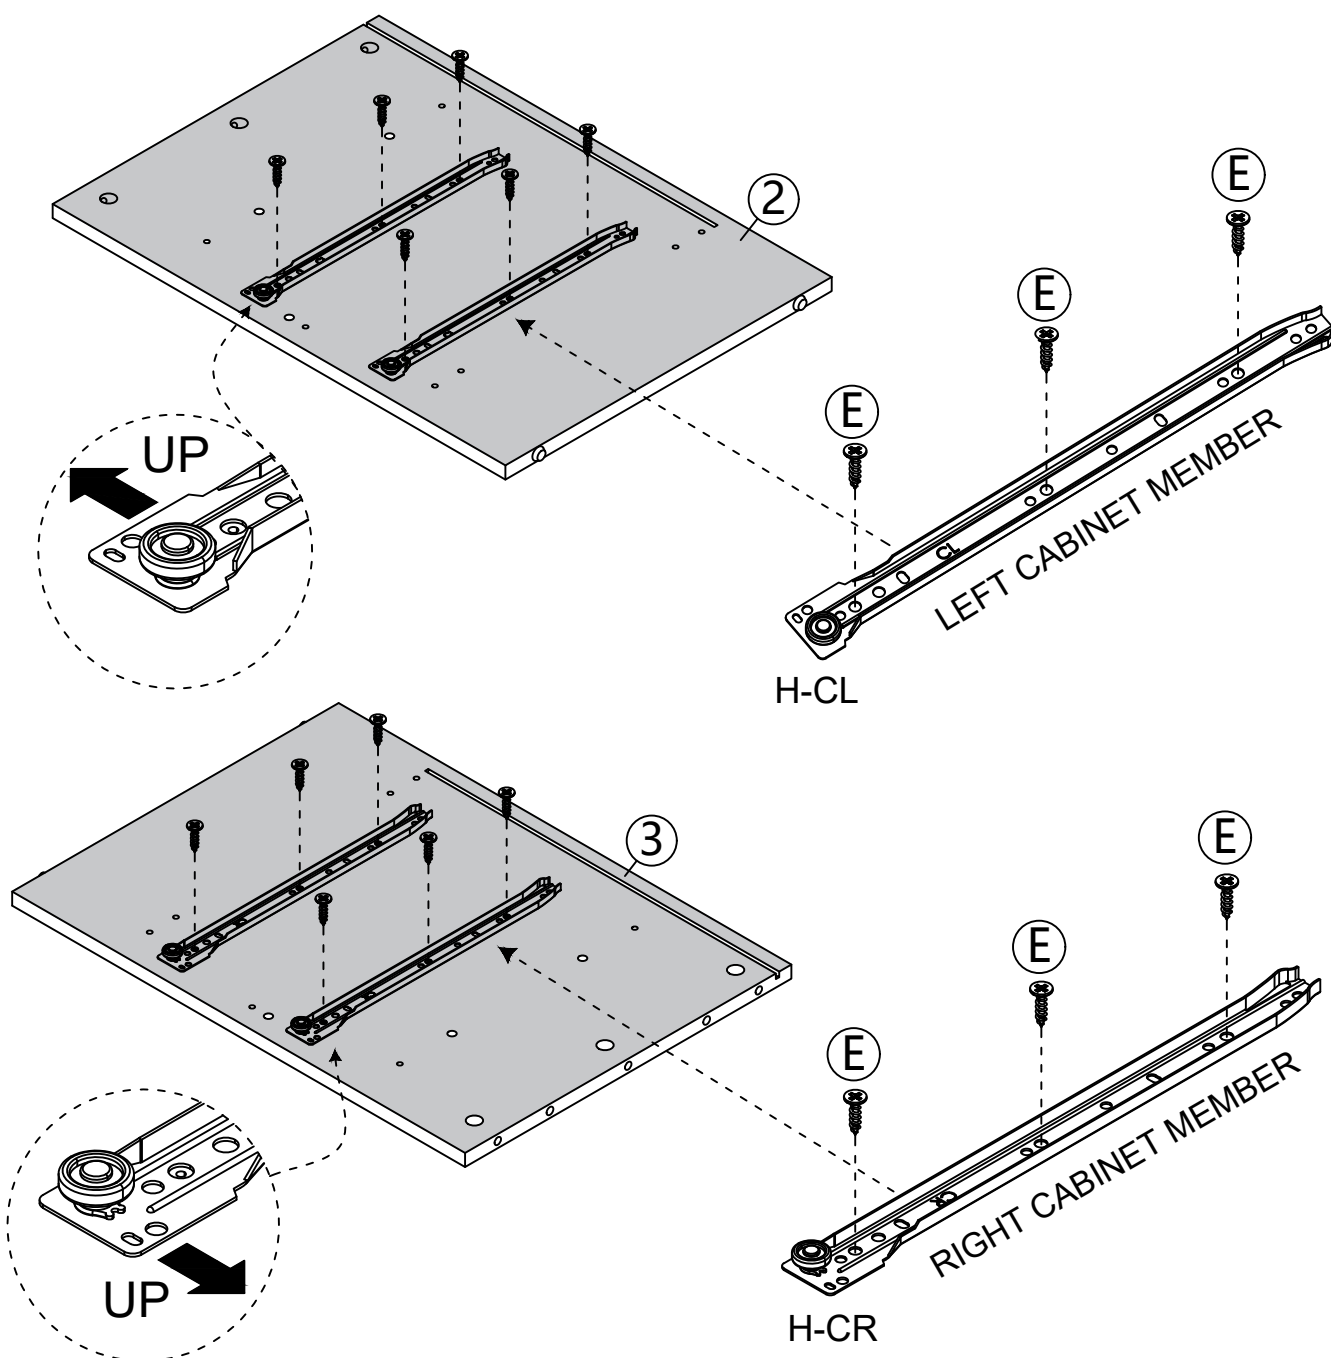



 
 
STEP 2

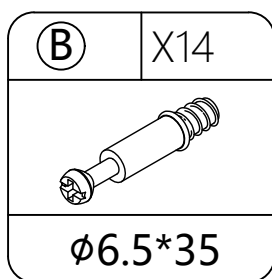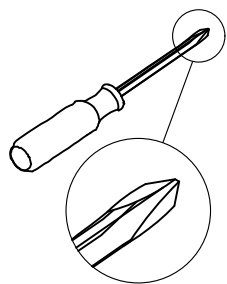


Secure Fittings B to Plates 2 and 3.

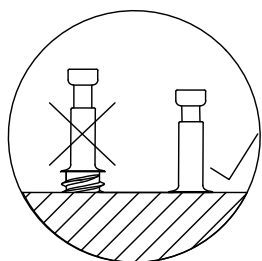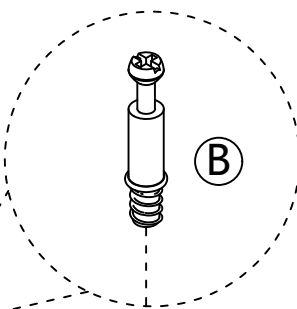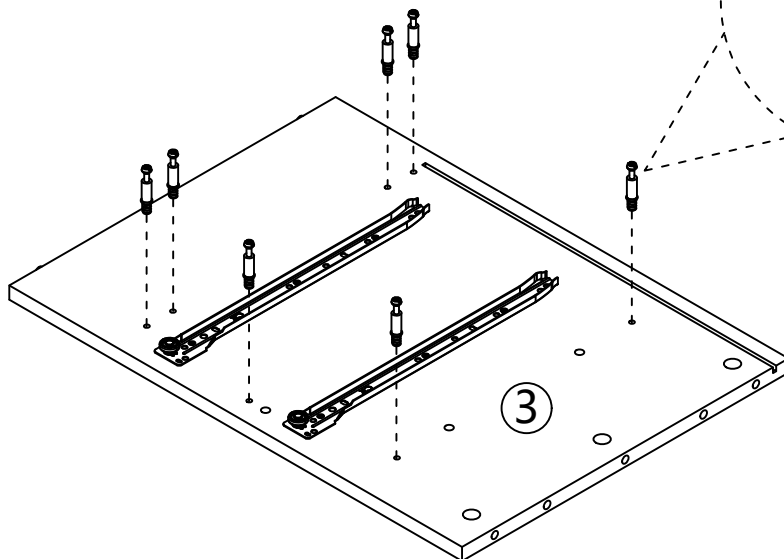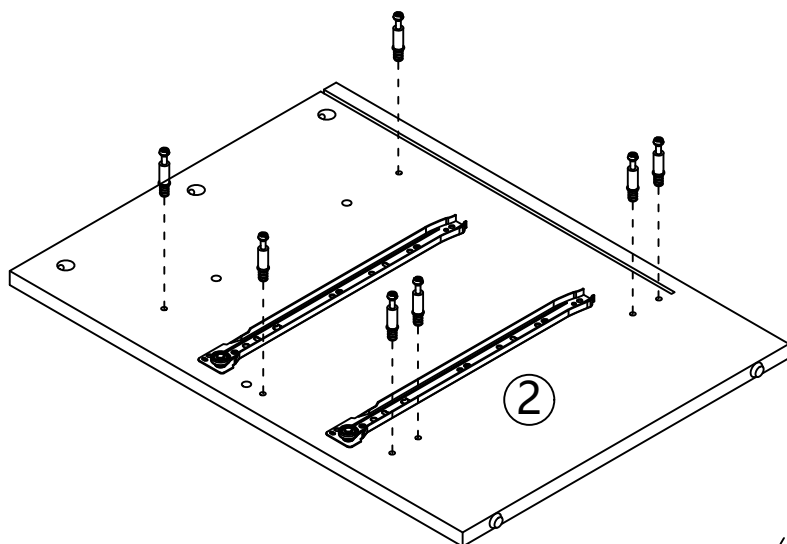    

    
STEP 3

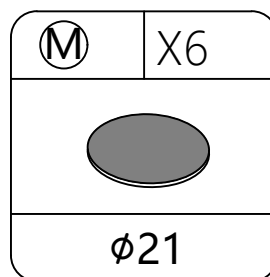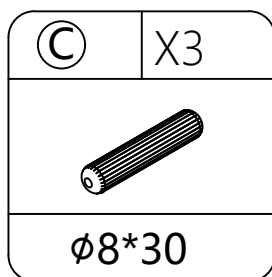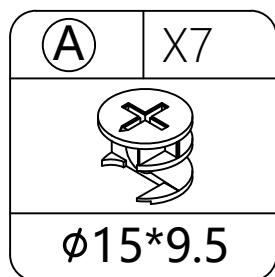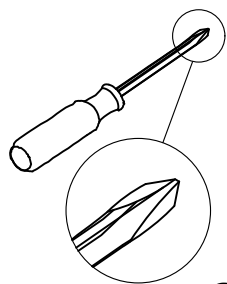

 Connect the plates 5 and 6 with the plate 3 with accessory C, and fix the plates 7 and 8 with accessory A on the insertion plate 3, and then attach the accessory M to the hole.




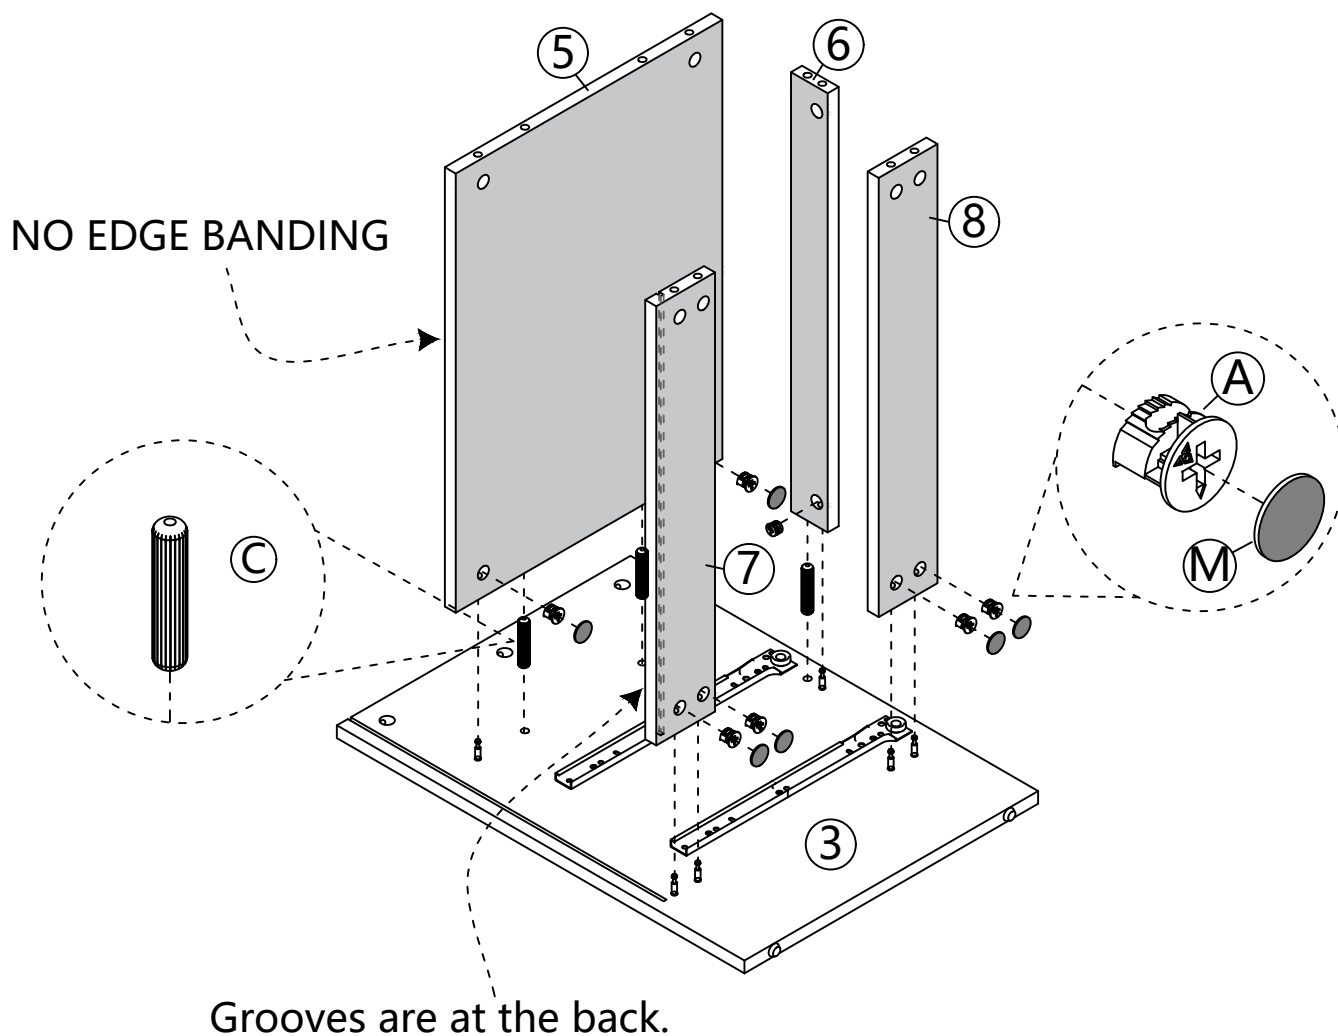


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

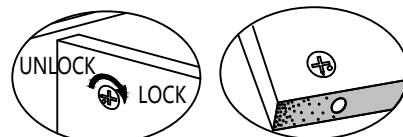


Proper orientation of CAM LOCK

    
STEP 4

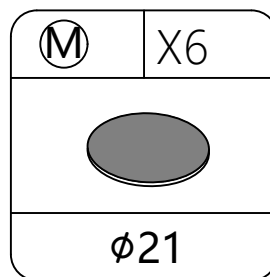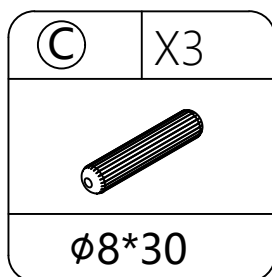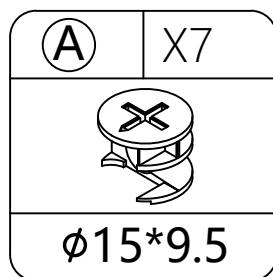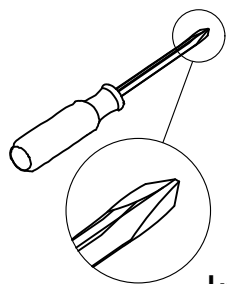

 Insert accessory C into panels 5 and 6. Align panel 2 with the holes in panels 5, 6, 7, and 8 (note: the groove on panel 2 should be at the back). Secure it using accessory A, then attach M to the hole.

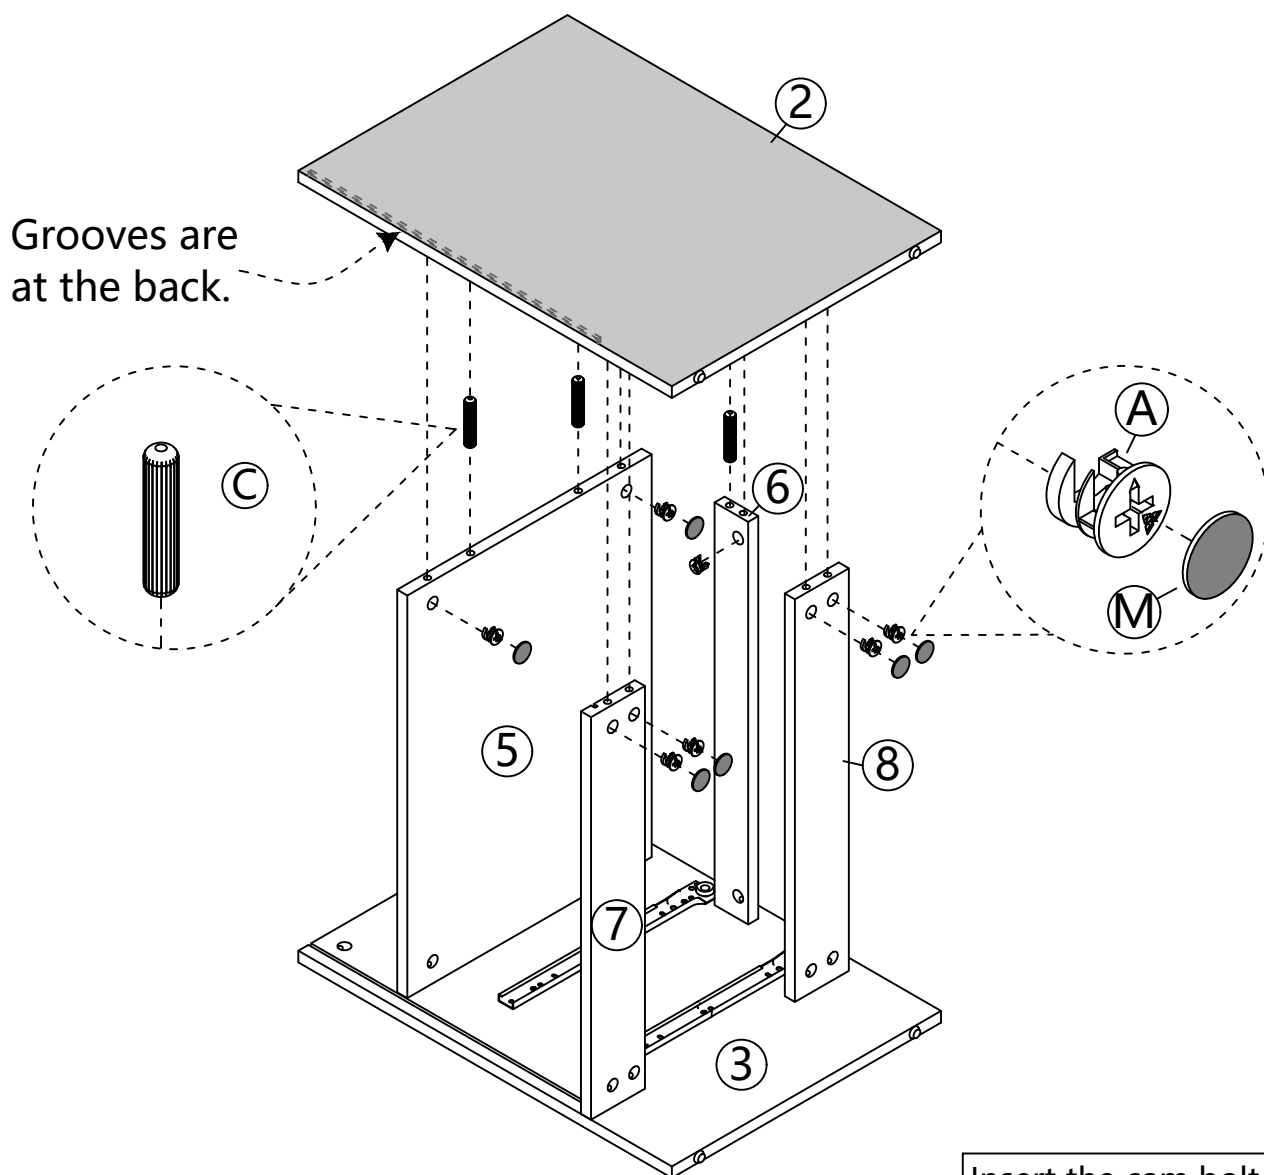


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

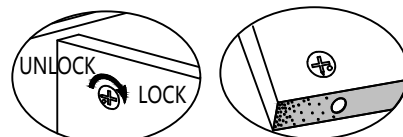


Proper orientation of CAM LOCK





 
STEP 5

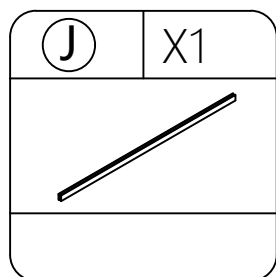


 
Connect plates 14 together with fitting J and insert them into the grooves of plates 2 and 3.

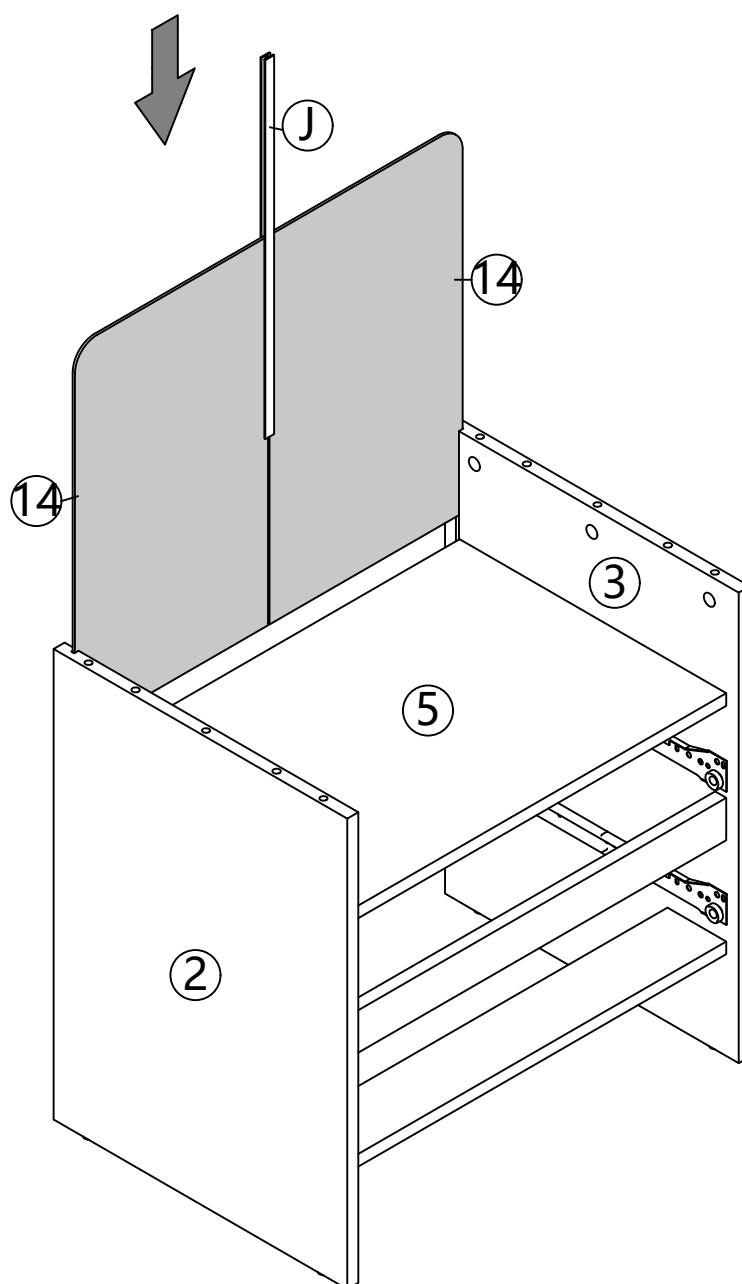

     
STEP 6

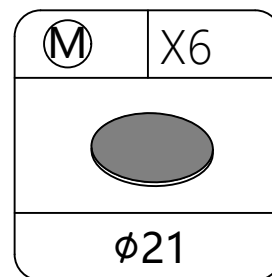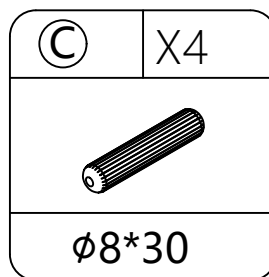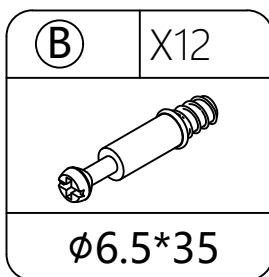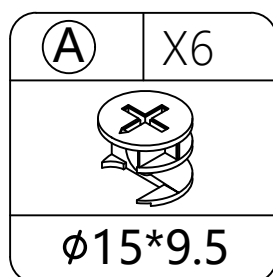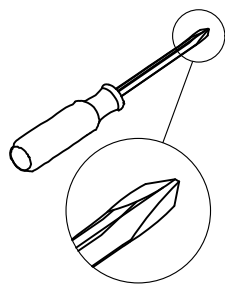

  Fix accessory B to plate 4, then attach accessory C to plate 4 and plate 1 holes, and secure with accessory A. Attach Fitting M to the plate 1 hole.



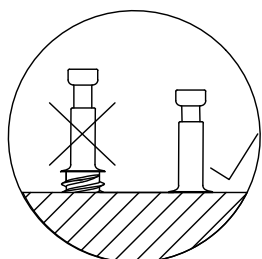
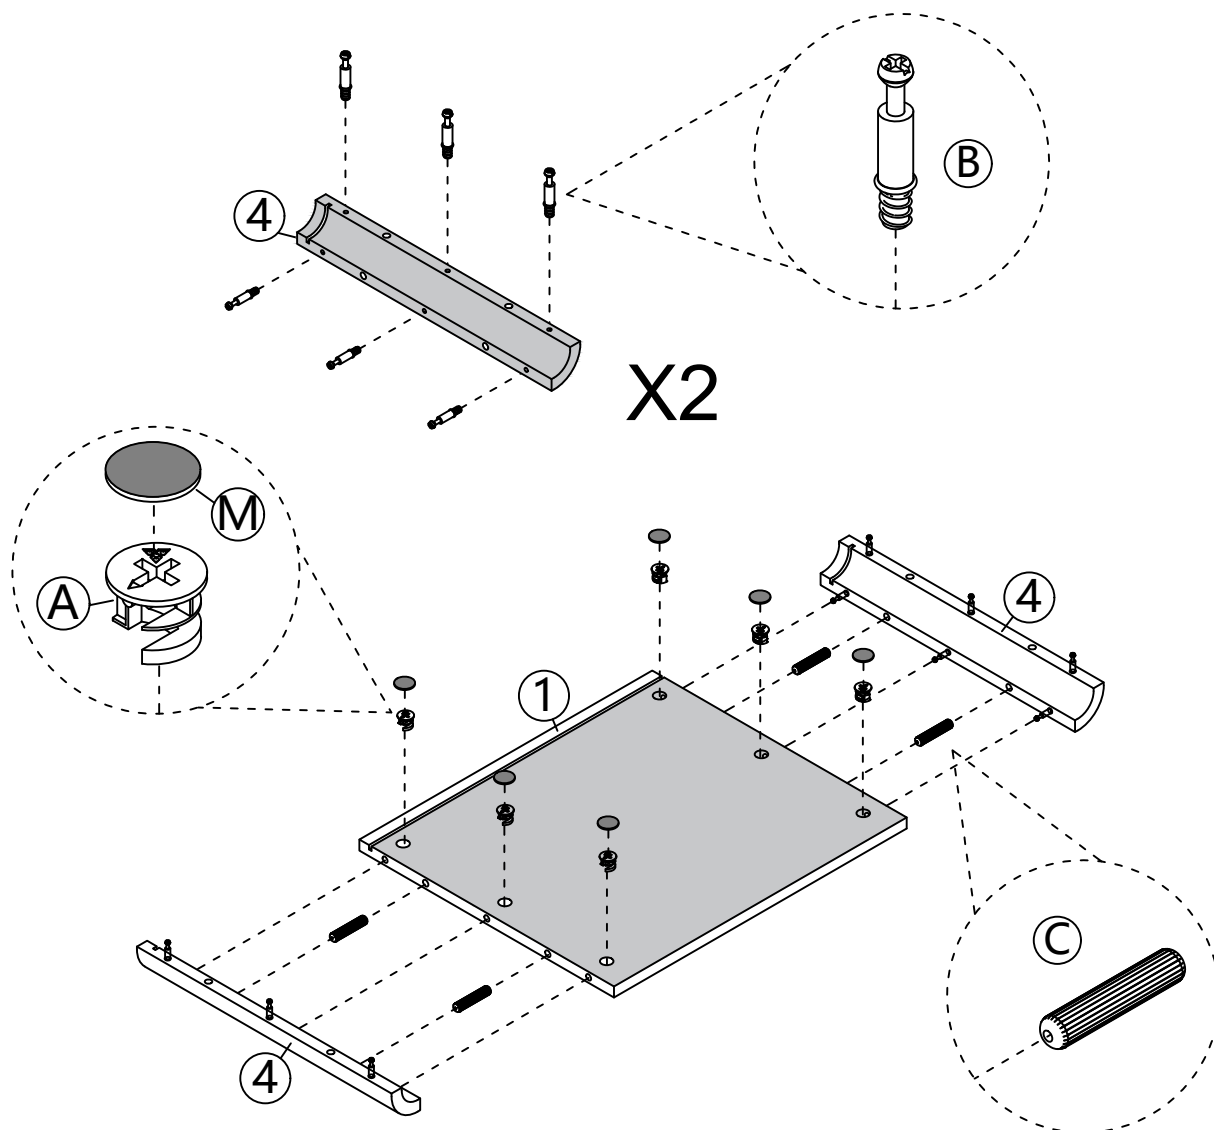


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

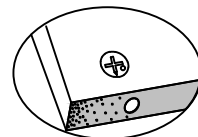


Proper orientation of CAM LOCK

    
STEP 7

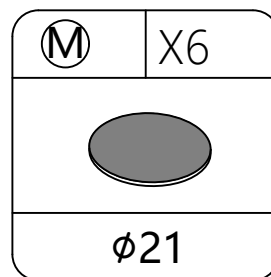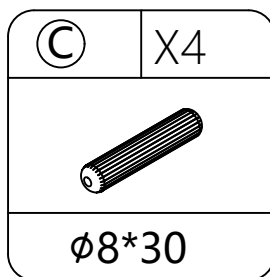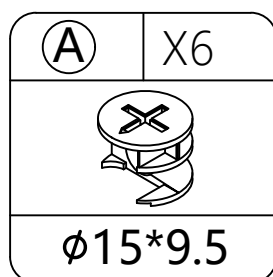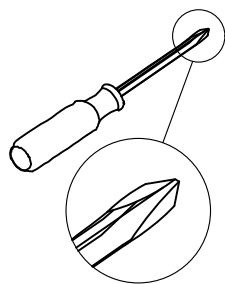

 Put the groove of plate 1 at the back, insert the hole on the alignment plate C with plate 2 and 3, fix it with accessory A, and attach accessory M to the hole in plate 2 and 3.

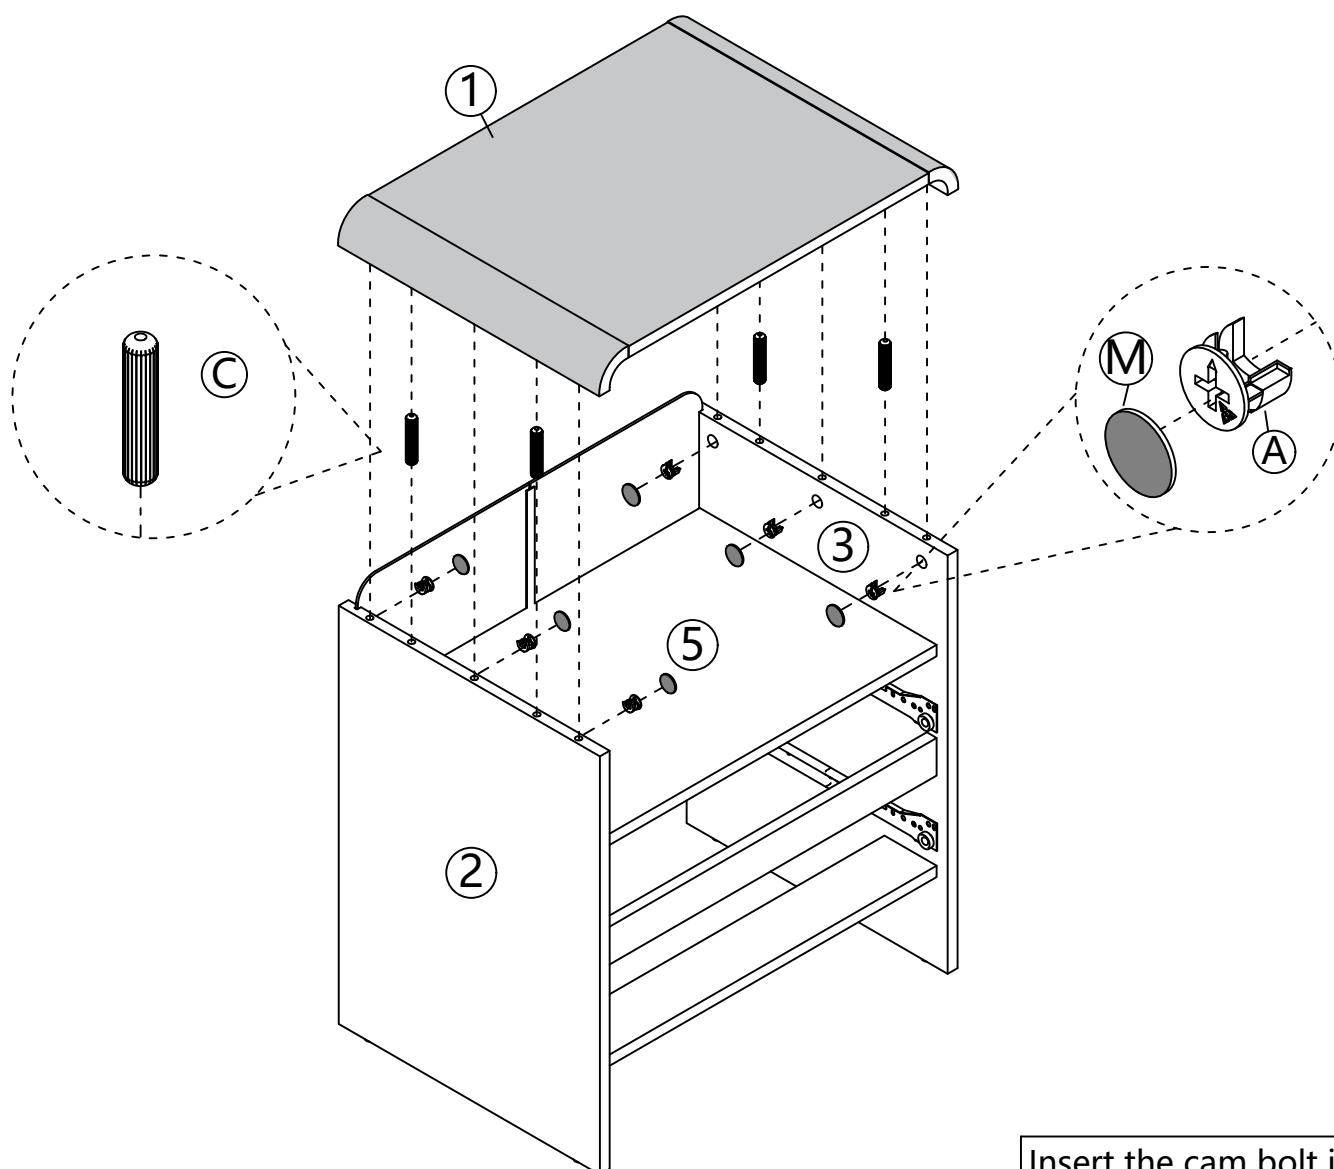


 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

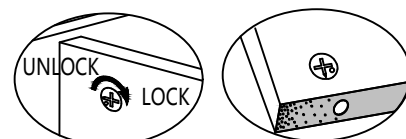

Proper orientation of CAM LOCK

  
STEP 8

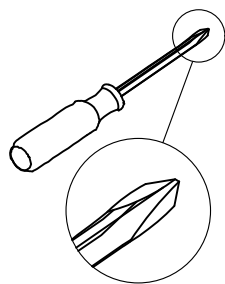

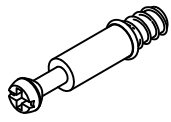
(B)	X4
	
ø6.5*35	

(F)	X8
	
ø4*35	


(G)	X8
	
ø4*25	

 (L)	X4
	
151*20*10	

 
Fix plates 10, 11, and 12 together with screw F, and insert plate 13 as shown in the figure. Fix Fitting B on Plate 9, and then connect with Fitting L through Board 9 with screw G.

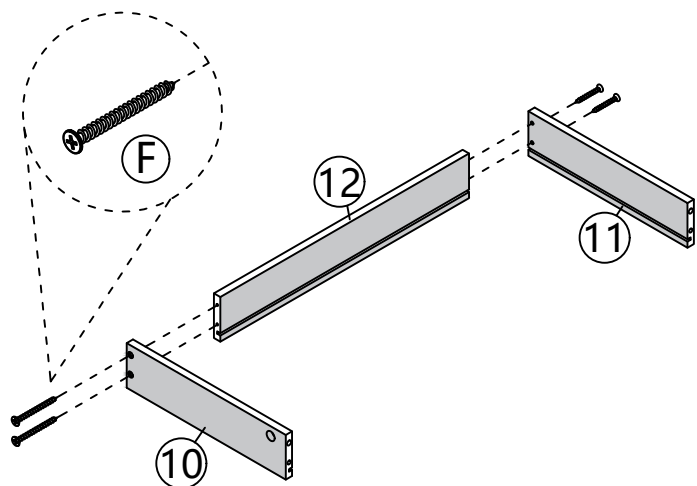

 
Step 1

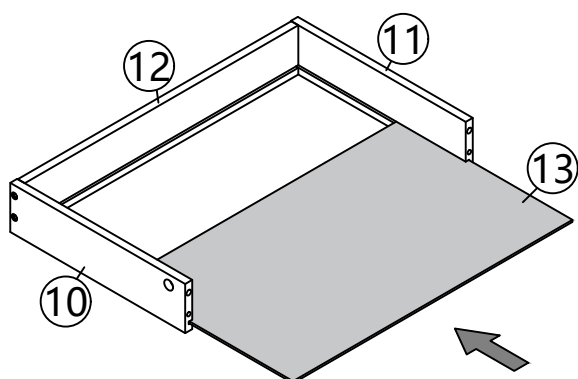

 Step 2



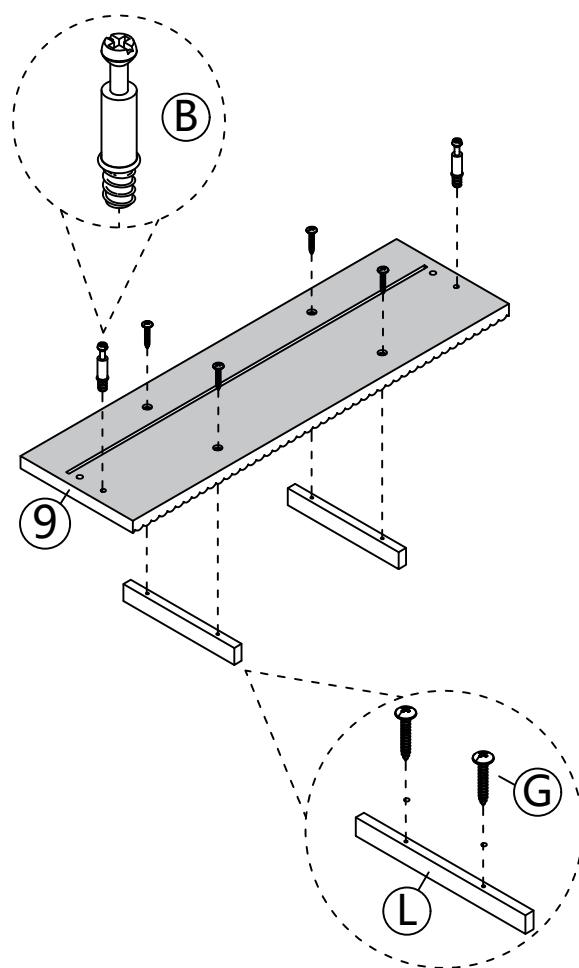


 Step 3

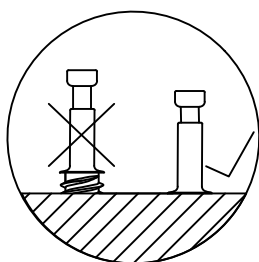


X2

   
STEP 9

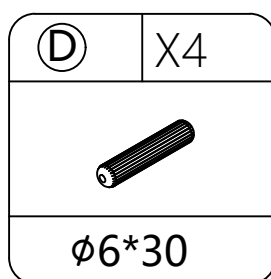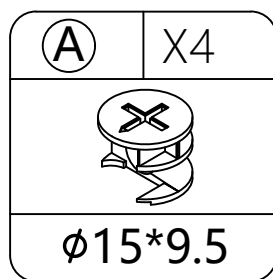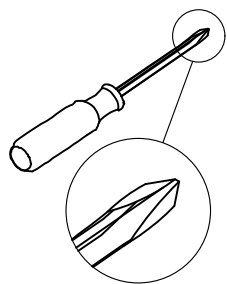

 Note that the groove of plate 9 is below, insert accessory D into the hole, and fix plate 10 and 11 with plate 9 with accessory A.

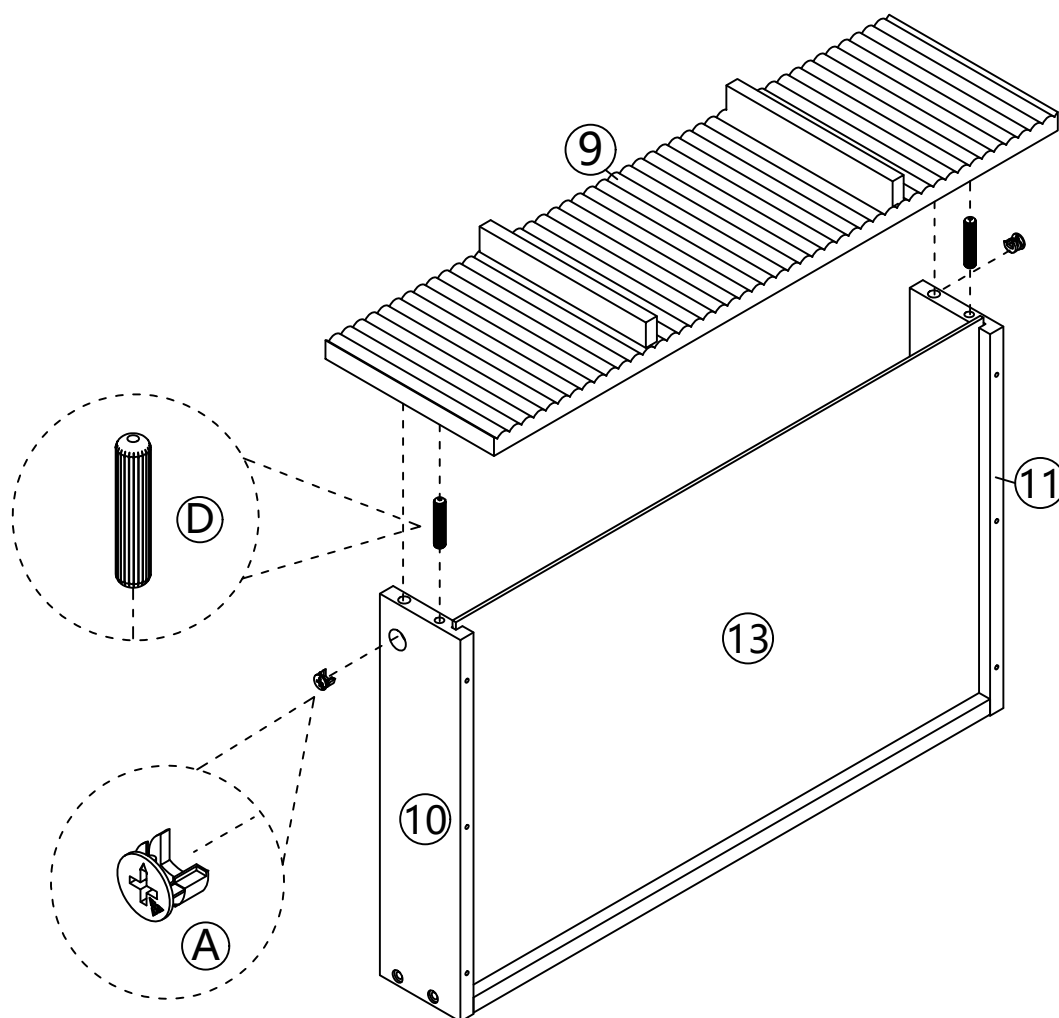

 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

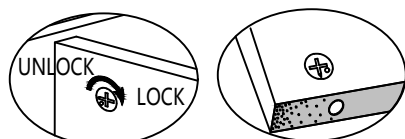


Proper orientation of CAM LOCK


X2

 STEP 10

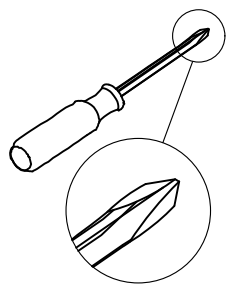


(E)	X12
	
ø3.5*14	

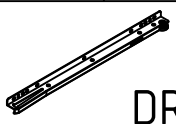 (H)	X2
	
DR L=300	



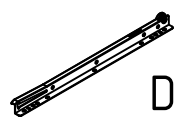 
(H)	X2
	
DL L=300	

 Fix the accessory H on the plate 10 and 11 with screw E, as shown in the figure.

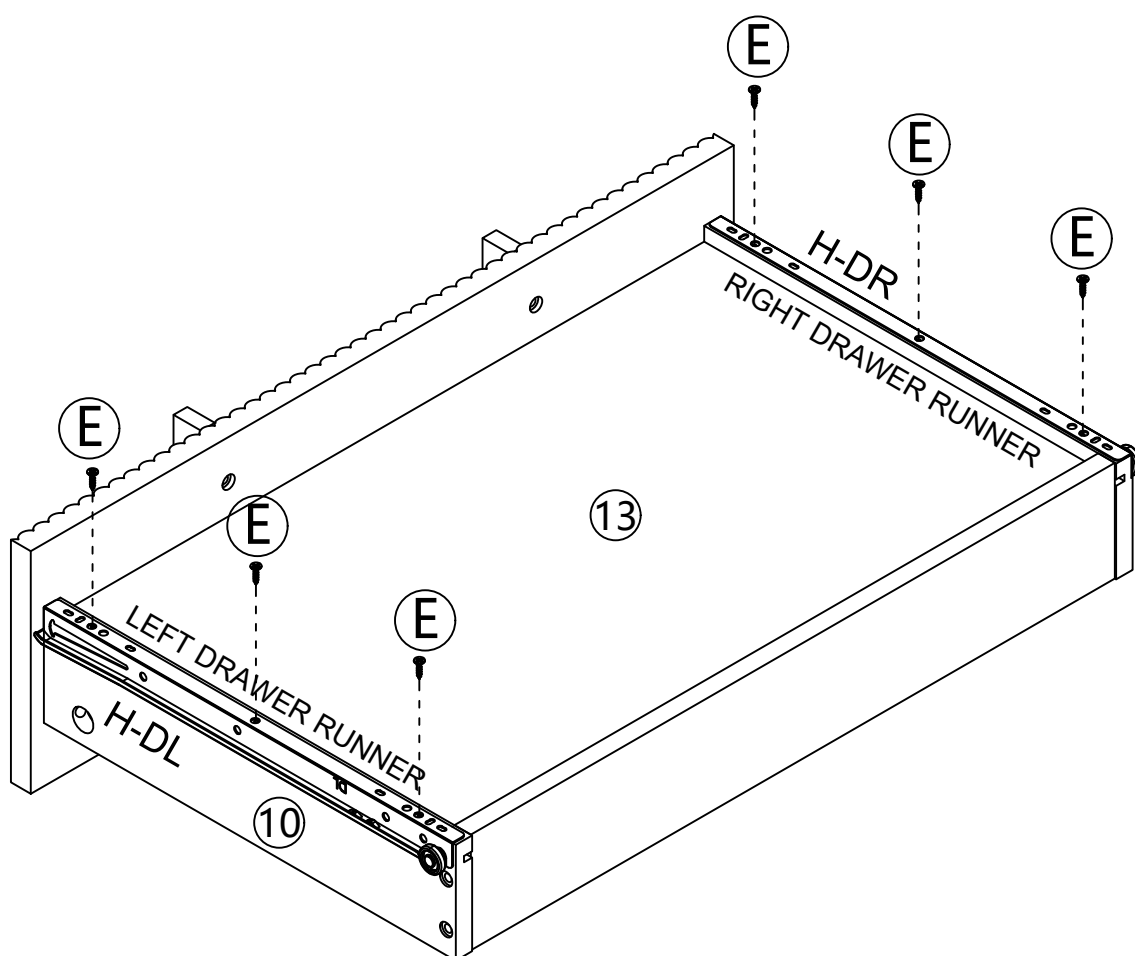


X2

   STEP 11

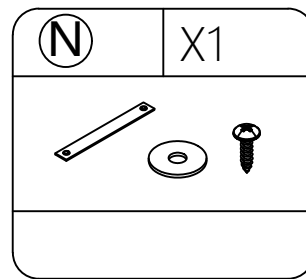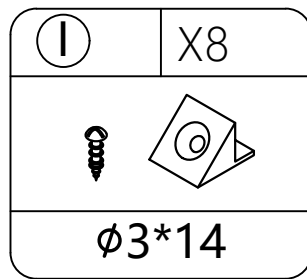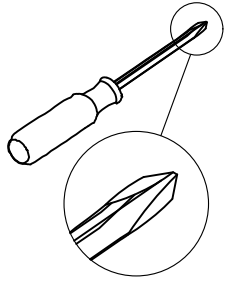

 
Install part N on board 1, then install part I at the back.

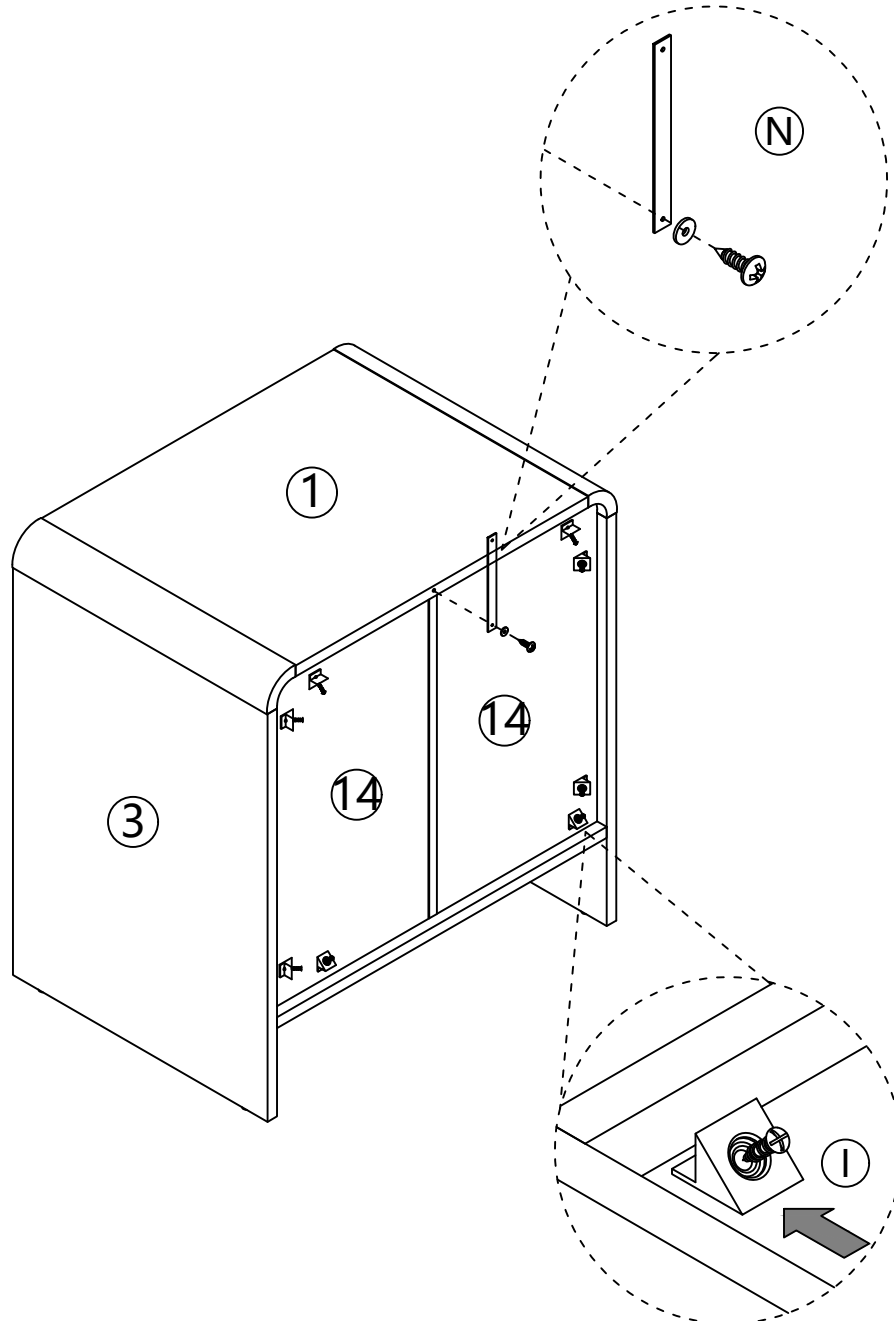



Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP 12

 Insert drawer 9 into the slide groove in turn, and the cabinet installation is completed.

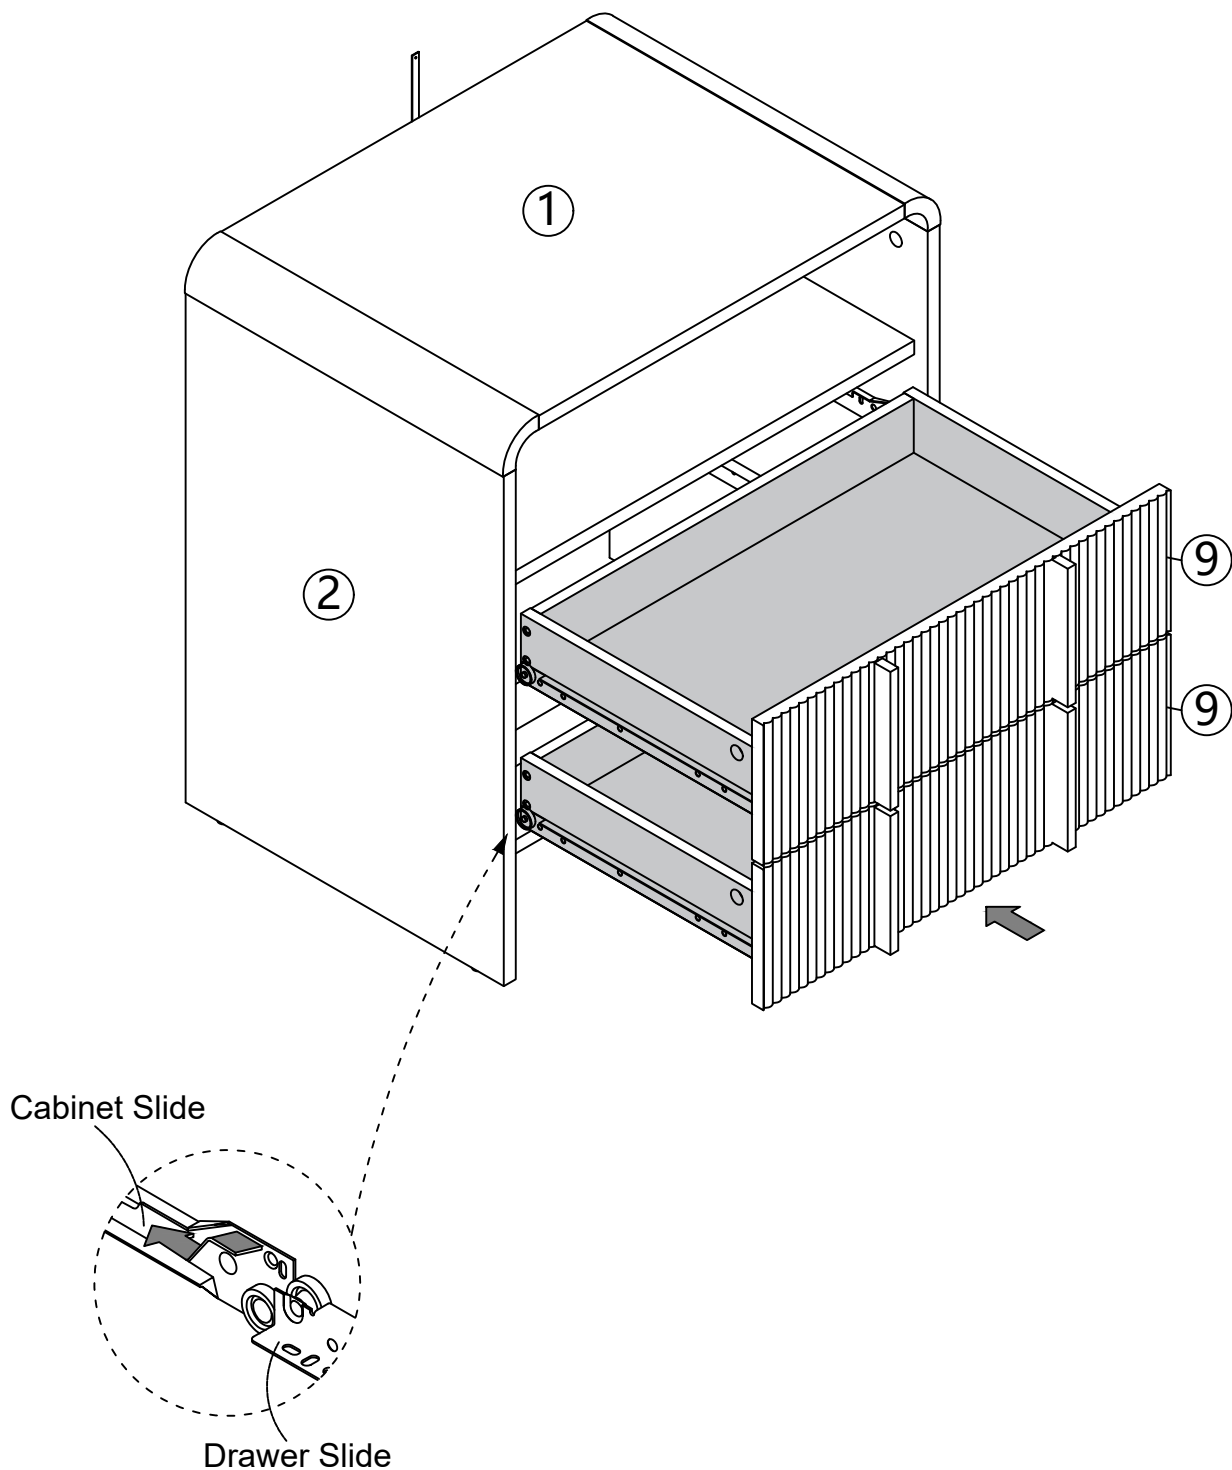

  STEP 13

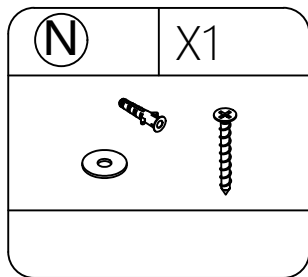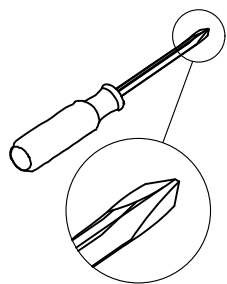

⚠ WARNING



 
Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install the tipover restraint provided.
- NEVER put a TV on this product. NEVER allow children to stand, climb or hang on drawers, doors, or shelves. NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




*This is a permanent label.
Do not remove !*


Install the tipping restraint hardware

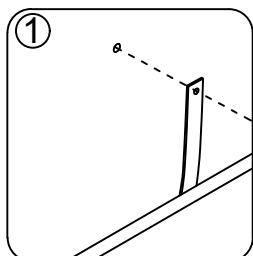

 
1. make mark on the wall.

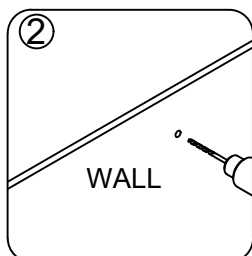

 2. drill two Ø6 holes on the wall.

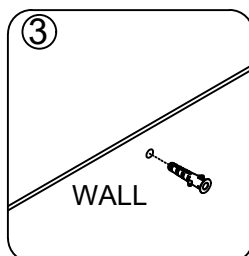

 3. put two anchors in the holes.

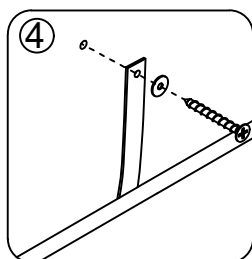

4. fix the device on the wall by the long screws.

