

# **Wooden Cart Plant / Display Stand with Chalkboard**



## LIMITED WARRANTY INFORMATION

Thank you for choosing this product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

- **Water Damage**  
Products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage, is considered negligence, and will not be covered under this warranty. The use of "hard water," and/or caustic cleaners, can affect the painted or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation.
- **Paint & Color (Retention and/or Loss)**  
The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading, within the first year from date of purchase, with the above exclusion.
- **Procedure/Service**  
Should a warranty/claim be needed, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. ***Item is covered under one year limited warranty from the date of purchase. When requesting replacement parts due to a warranty claim after 30 days of purchase, credit card information will be requested for shipping charges.***
- **Not Covered Under Warranty**  
The limited warranty will NOT cover cases of damages due to:
  1. Damages caused in Transit
  2. Inadequate care and/or neglect
  3. Environmental and/or natural elements
  4. Immersion in water, unless specified
  5. Improper Installation/Storage and/or Maintenance

*This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.*

## CONTENTS

Contents .....	1
What's Included.....	2
Features.....	3
Specifications.....	3
Assembling & Using Your Product.....	4
Warranty.....	8

## WHAT'S INCLUDED



Wheels  
x2



4-Tier Display  
x1



Chalkboard  
x1



Base Support  
x1



Handles  
x2



Front Legs  
x2



Axle  
x1

## Screws



Rear Legs  
x2



H1  
25mm  
x4



H2  
30mm  
x14




H3  
60mm  
x2



Screwdriver  
x1

- Finally add the Handles by inserting four H1 (25mm) Screws through the handle into the top tier of the display.

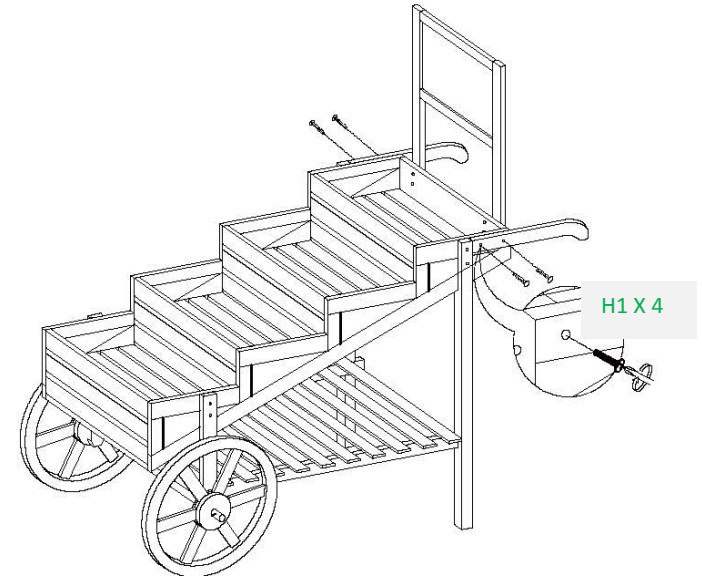


- Congratulations, your 4-Tier Display Planter is now complete.


## ASSEMBLING & USING YOUR PRODUCT

Unpack all components carefully. Please check to ensure all parts have been removed from the packaging.


1. Place the front legs on the outer edges of the base and attach an H2 (30mm) screw just above each axle hole from the inside of the Base.

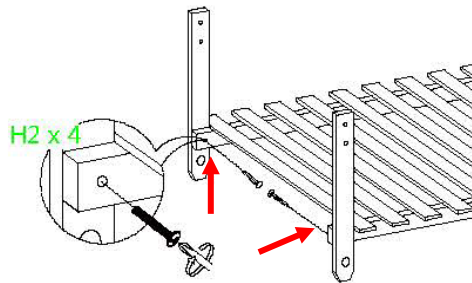


2. Now attach the Rear Legs to the opposite end of the Base by using an H2 (30mm) screw on each side. The notched section of the Rear legs should be facing up.

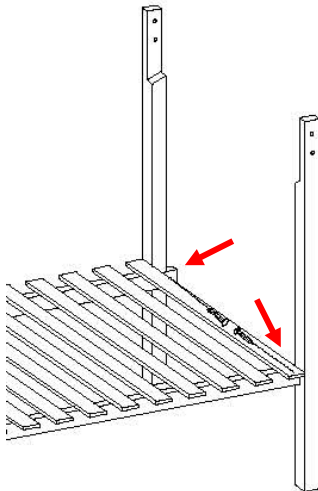


3. Insert the Axle into the Front Legs. It should pass through both Front Legs.

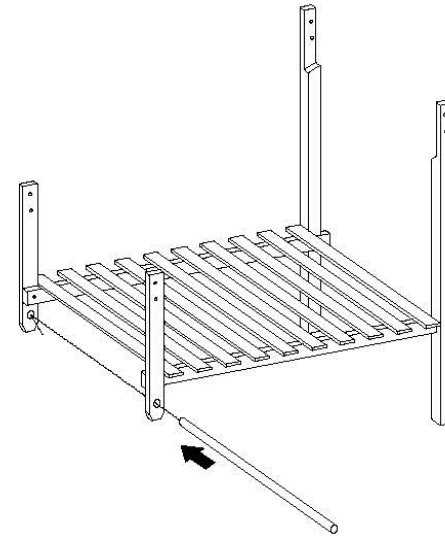

4. Add the Wheels by placing one on each end of the axle and securing with an H3 (60mm) Screw on each end of the axle.

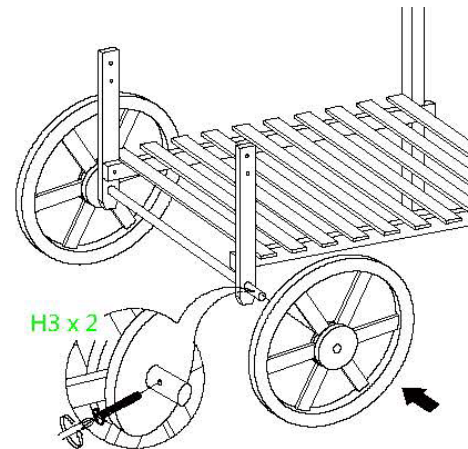


5. Take the 4-Tier Display and align it with the top of the Front and Rear Legs. The Display should rest in the Rear Leg notches. Attach with two H2 (30mm) Screws per leg.

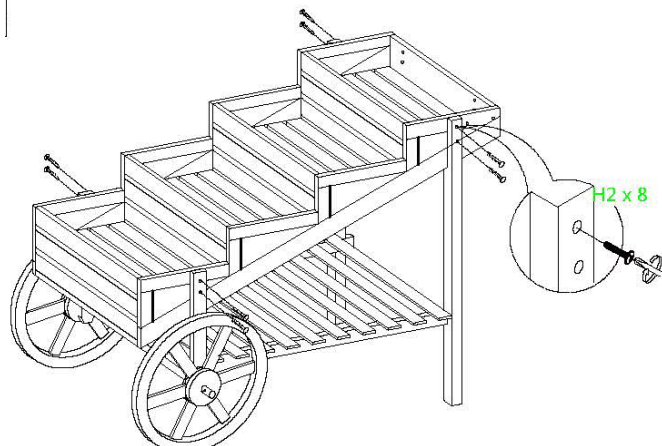

#### Quick Tip


Start each screw by hand. Once aligned, tighten each screw tight. Make sure to tighten them on a smooth level surface.

6. Attach the Chalkboard by inserting four H2 (30mm) Screws through the top tier of the Display.

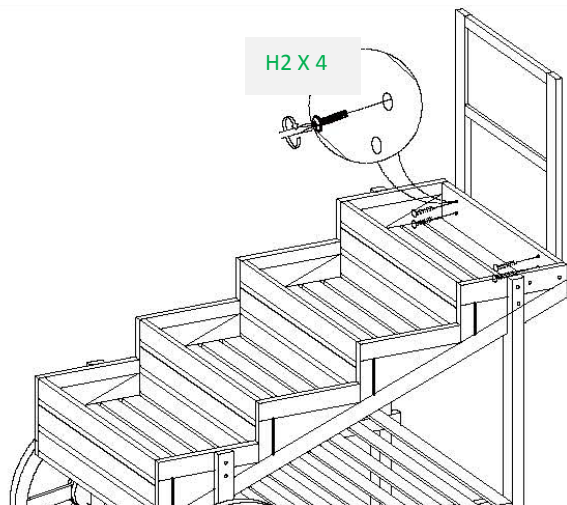

## FEATURES

- Chalkboard for easy messaging

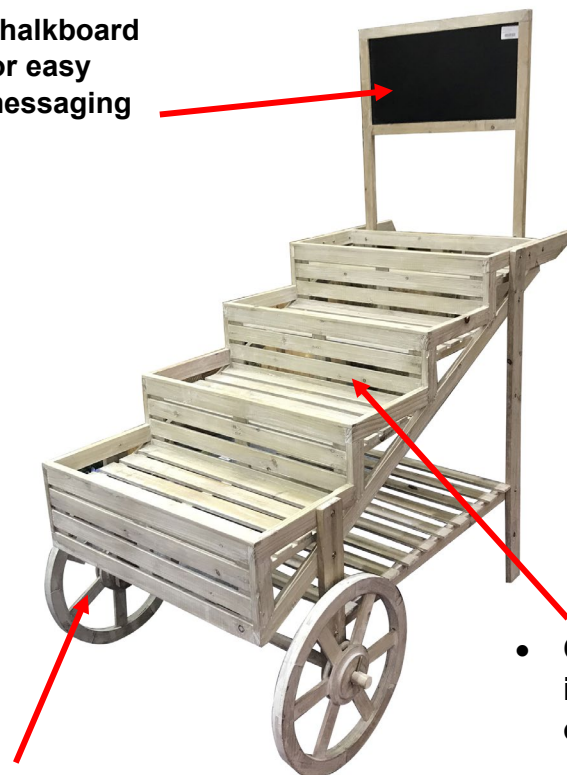

- Can be used indoors or outdoors

- Made of durable wood, for years of enjoyment.

## SPECIFICATIONS

Dimensions.....32"L x55"W x59"H