


USER MANUAL




WARDROBE


TOOLS REQUIRED

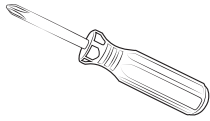


Phillips screwdriver
(Not included)

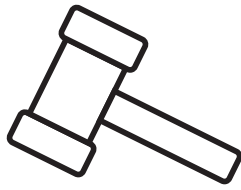

Hammer
(Not included)

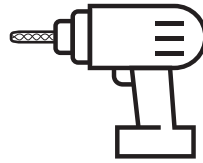

Drill
(Not included)

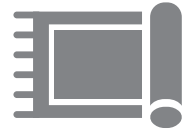

Protective blanket
(Not included)



ATTENTION


Keep children and pets away while assembling.




How to use cam locks

CAM LOCK FASTENING SYSTEM


This Cam Lock Fastening System will be used throughout the assembly process.

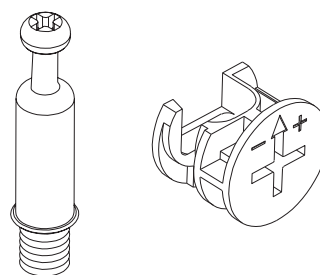


1

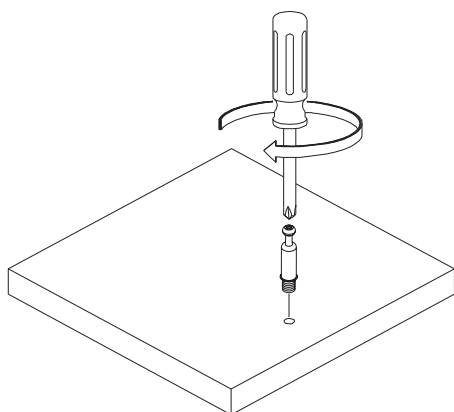





2

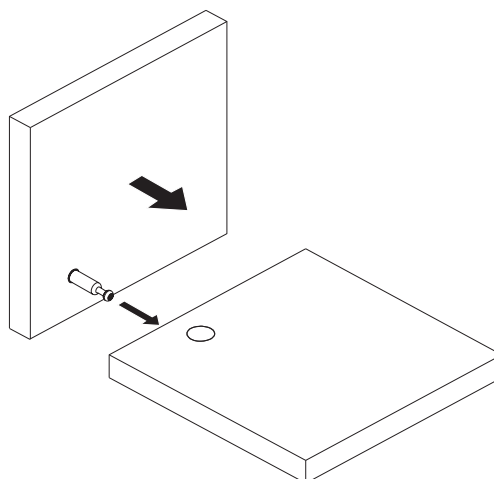

3

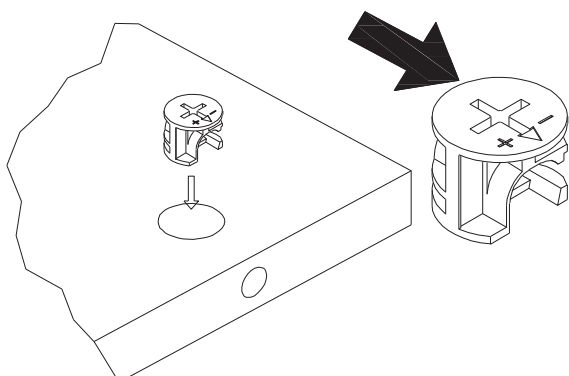

4

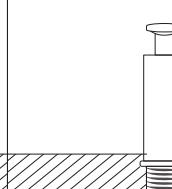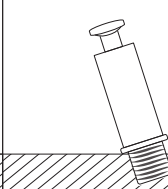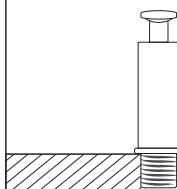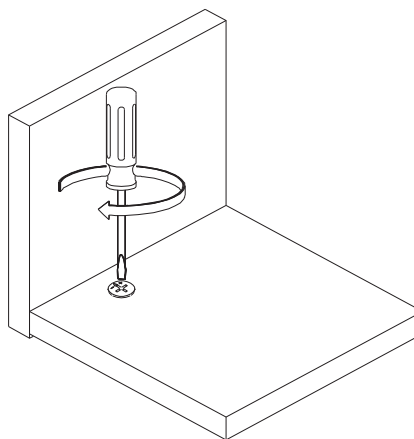

INTRODUCTION

Thank you for choosing our products. Please read the instructions carefully and keep them for future reference. If you need further assistance, please contact our customer service online via email.


PRECAUTIONS





1. When installing the product, use a soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Please try to use a manual screwdriver instead of electric screw driver. A manual screwdriver can be used to better control the tightness of the screws.
3. Do not use any glue.
4. The product is unstable before it is assembled. Please pay attention to the product installation sequence.
5. The structure of this product can not meet the requirements of the placement of heavy items and children climbing.

WARRANTY

We provides an **18 Month** Warranty on all products starting from the date of original purchase. If the product has any manufacturing defect, please contact customer service via email with your order number and other details to the problem. We will send you further information about the return or exchange.















PACKAGE CONTAINS

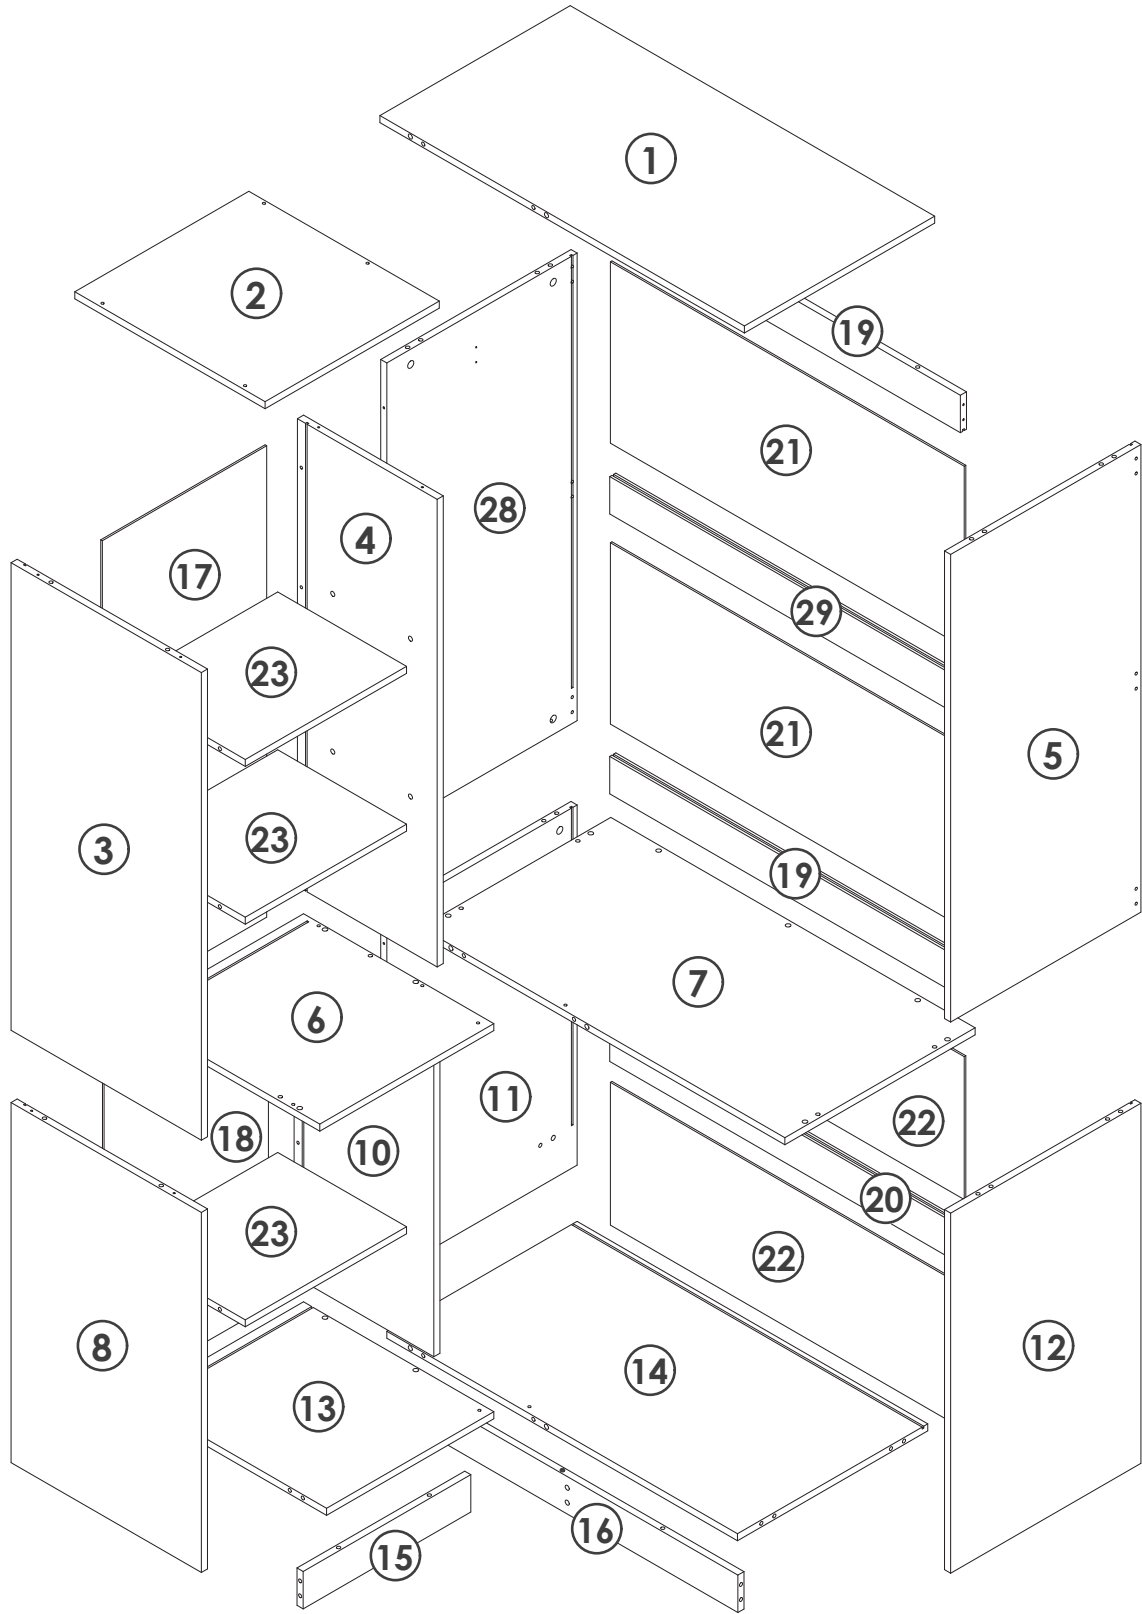

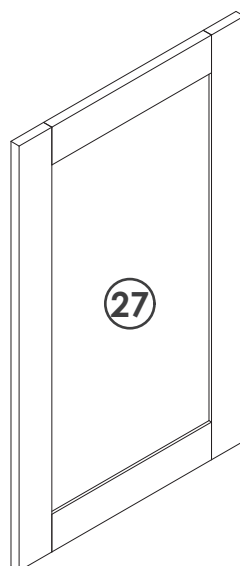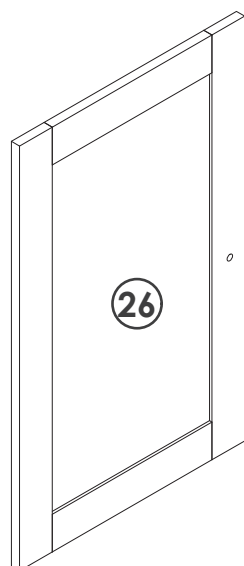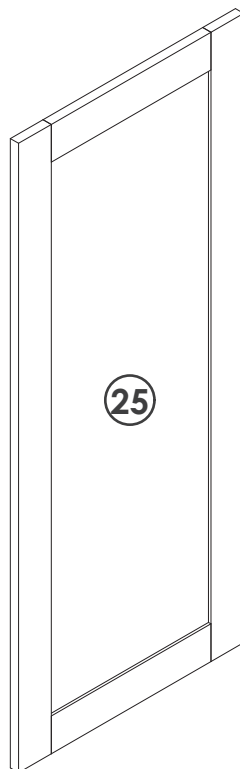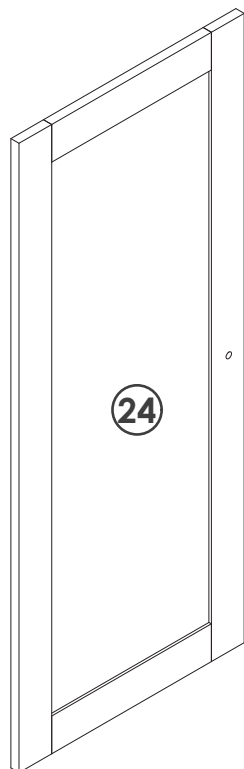















PARTS LIST » **A** BOX

Unit: (mm)




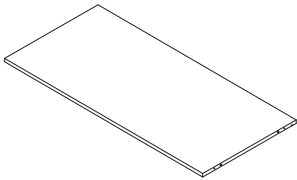
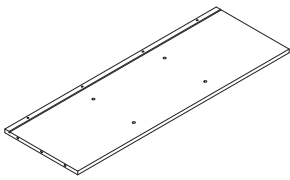
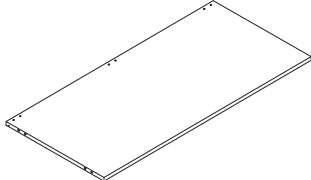
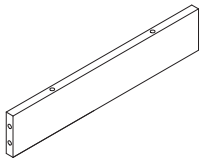
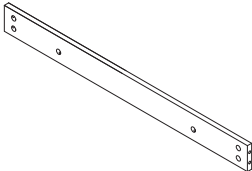
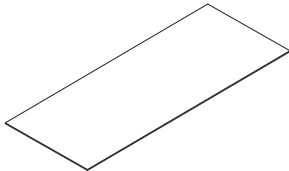
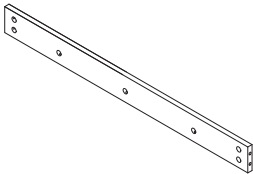
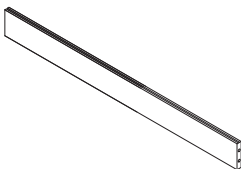
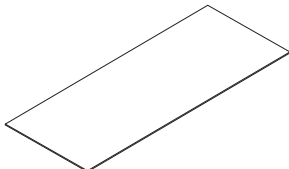
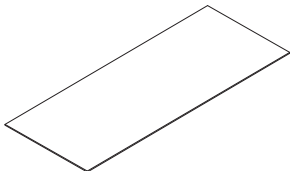
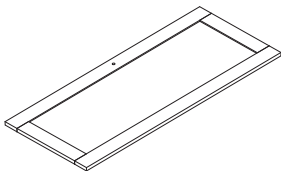
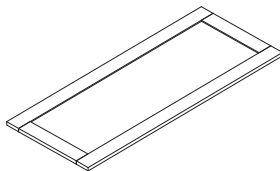
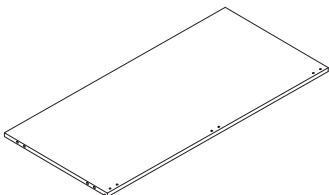
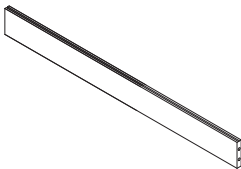
3 x1  1000*470*15mm	4 x1  1000*345*15mm	5 x1  1000*470*15mm
15 x1  414*80*15mm	16 x1  866*80*15mm	17 x1  1008*406*3mm
19 x2  866*80*15mm	20 x1  866*80*15mm	21 x2  874*388*3mm
22 x2  874*305.5*3mm	24 x1  996*409*15mm	25 x1  996*425*15mm
28 x1  1000*470*15mm	29 x1  866*80*15mm	

PARTS LIST » **B** BOX

Unit: (mm)

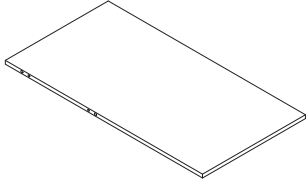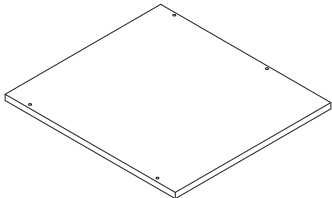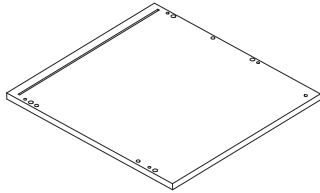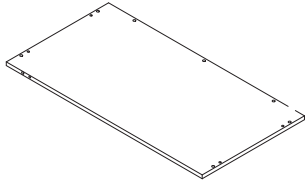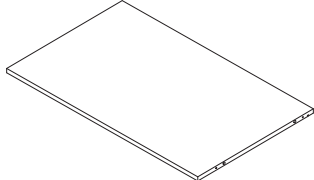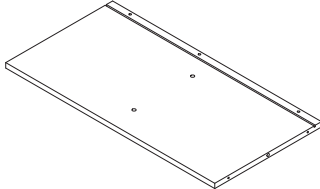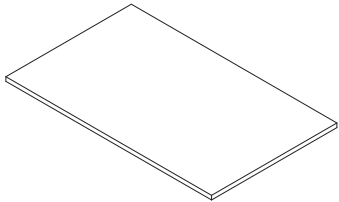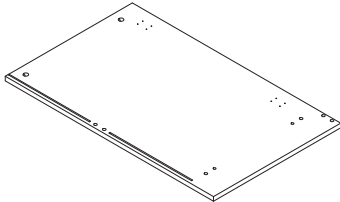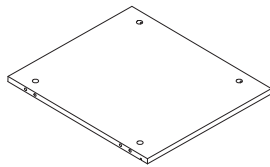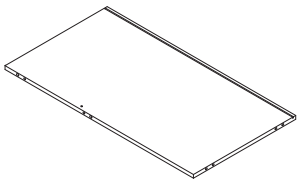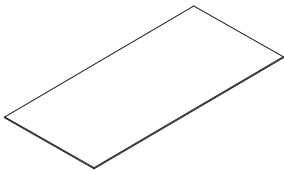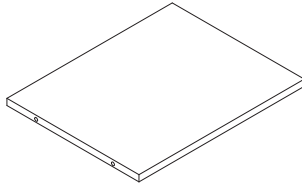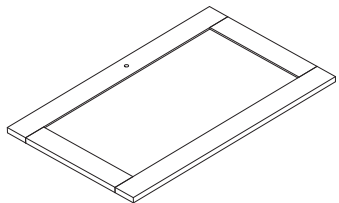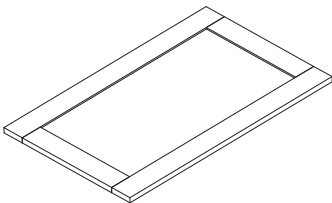1 x1  1000*470*15mm	2 x1  1000*345*15mm	6 x1  1000*470*15mm
7 x1  414*80*15mm	8 x1  866*80*15mm	10 x1  1008*406*3mm
11 x1  866*80*15mm	12 x1  866*80*15mm	13 x1  874*388*3mm
14 x1  874*305.5*3mm	18 x1  996*409*15mm	23 x3  996*425*15mm
26 x1  1000*470*15mm	27 x1  866*80*15mm	

         HARDWARES LIST

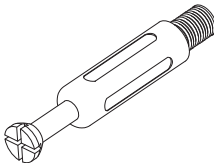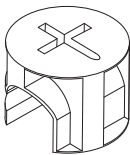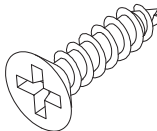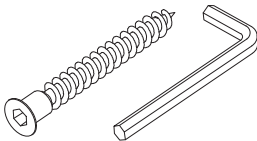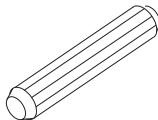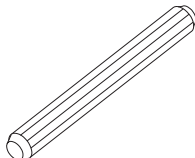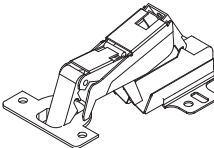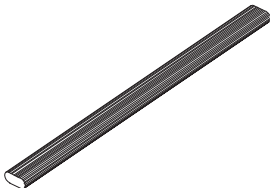A x62  M6*40mm	B x62  M15*11mm	C x52  M3.5*14mm	D x27  M5*40mm
E x8 	F x29  M8*40mm	G x2 	H x3  M8*60mm
J x8 	K x2  M4*20mm	L x2  L1  L2  L3  L4  L5	
N x1 	P x2 	Q x8 	R x58 
T x40  T1  T2 M3*16mm			


INSTALLATION INSTRUCTION

01

A x2pcs



F x4pcs

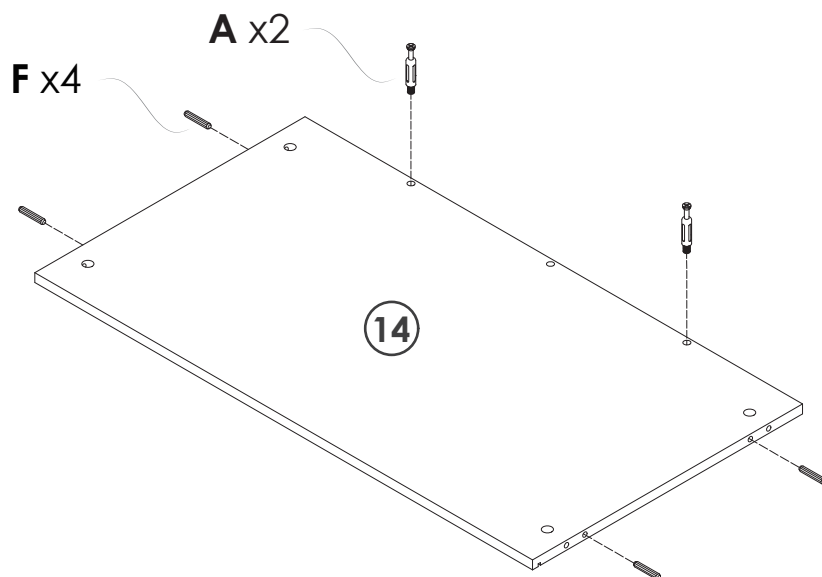


02



B x2pcs





F x1pc

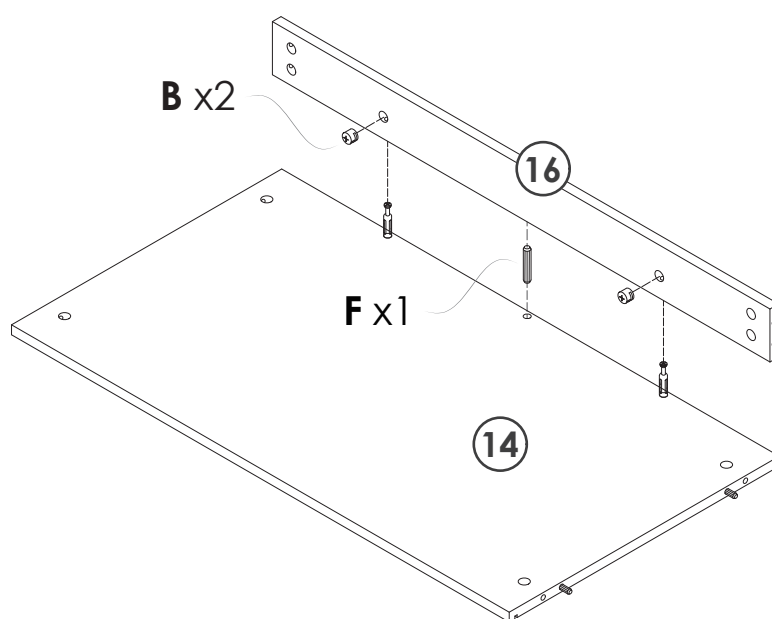


03

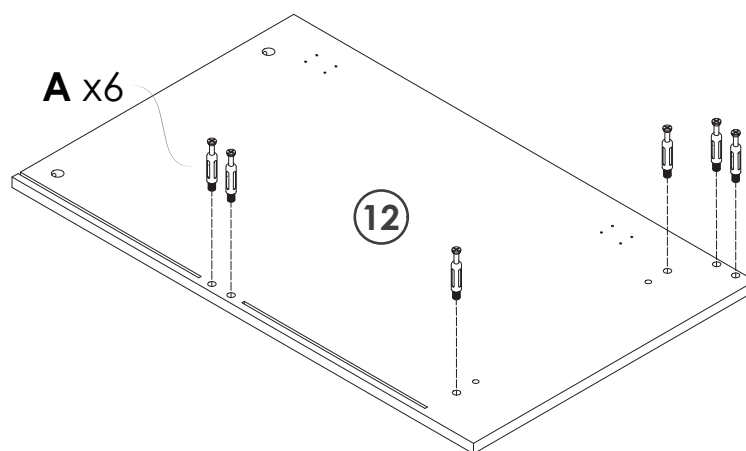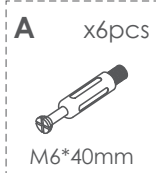



04

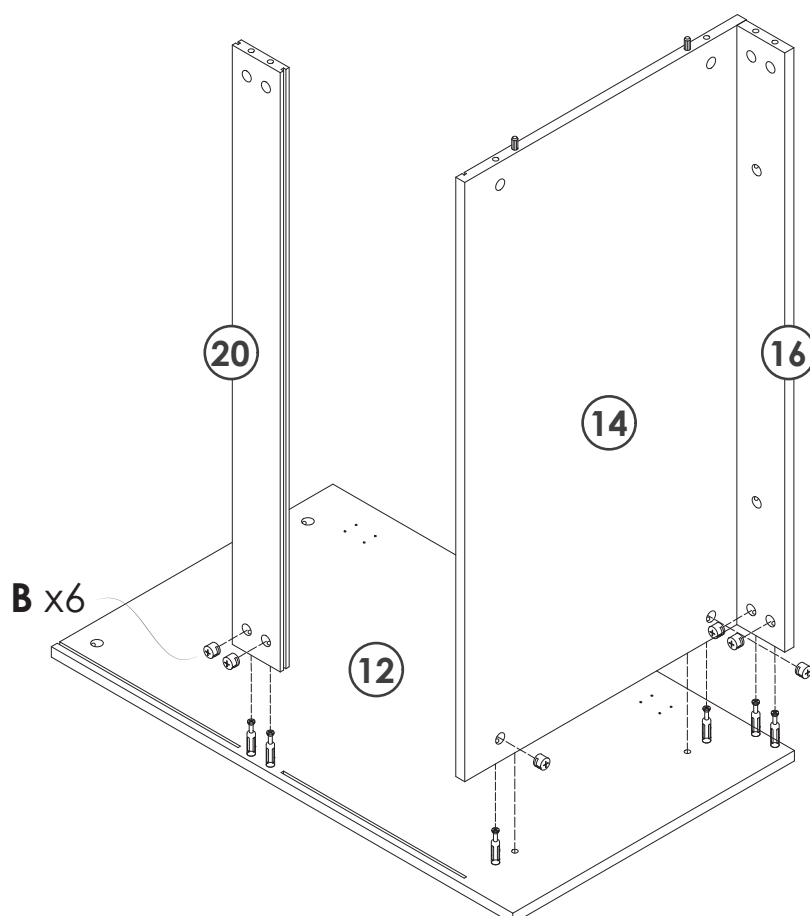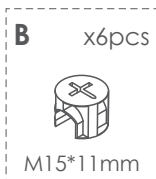



05

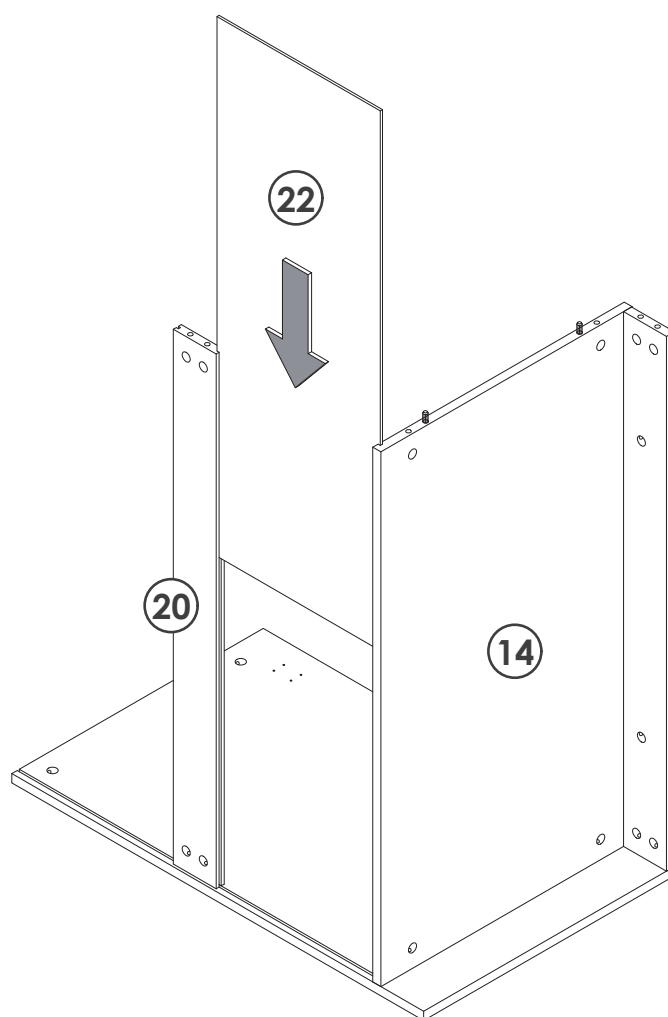


06

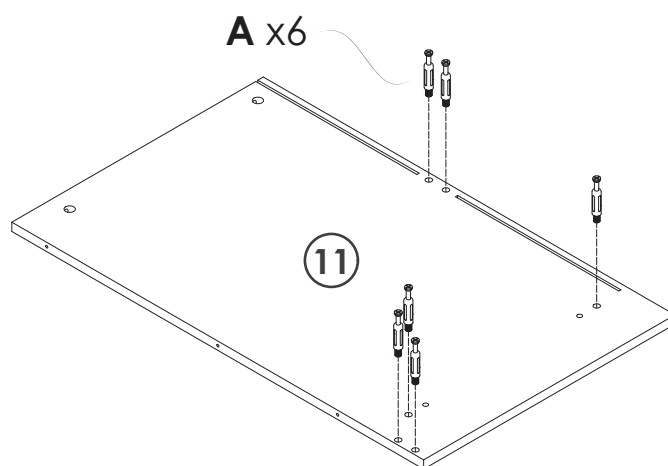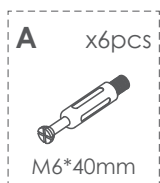



07

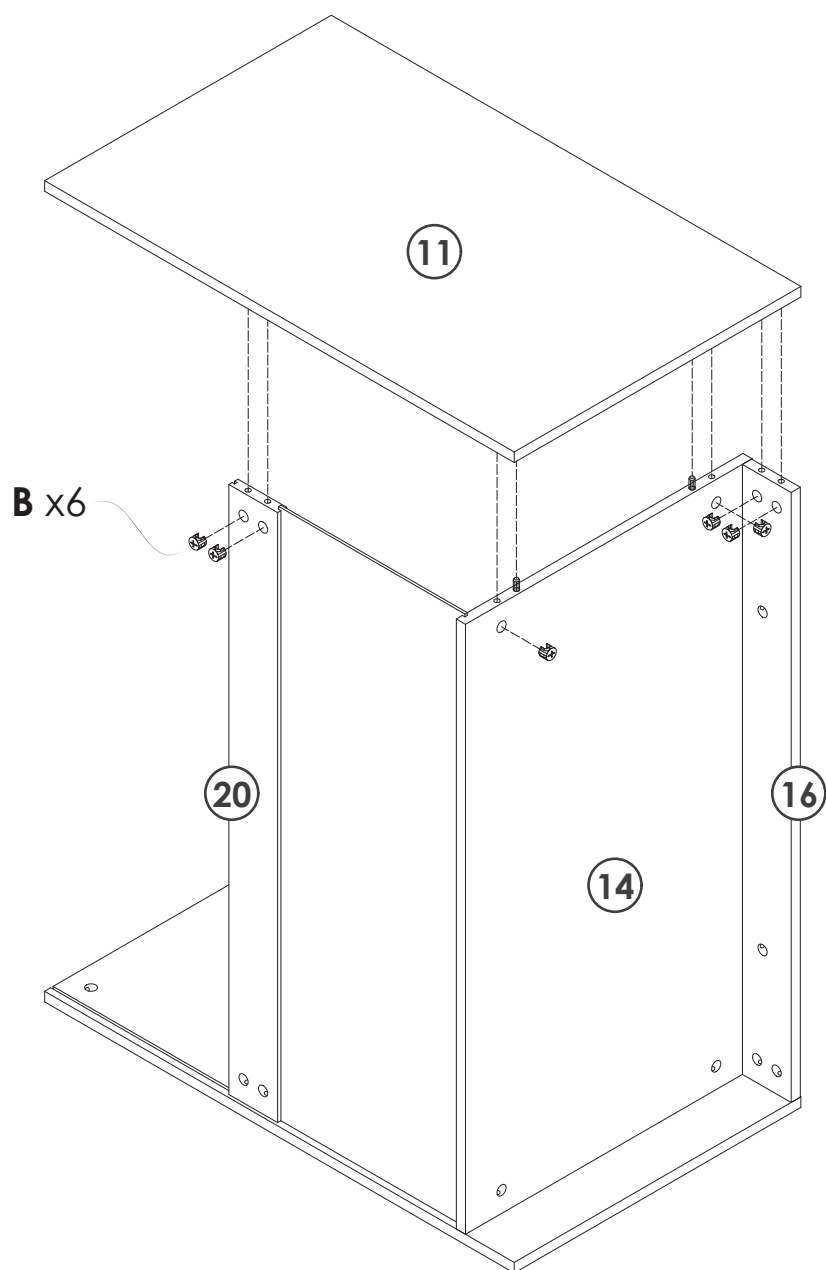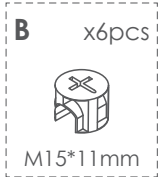



08

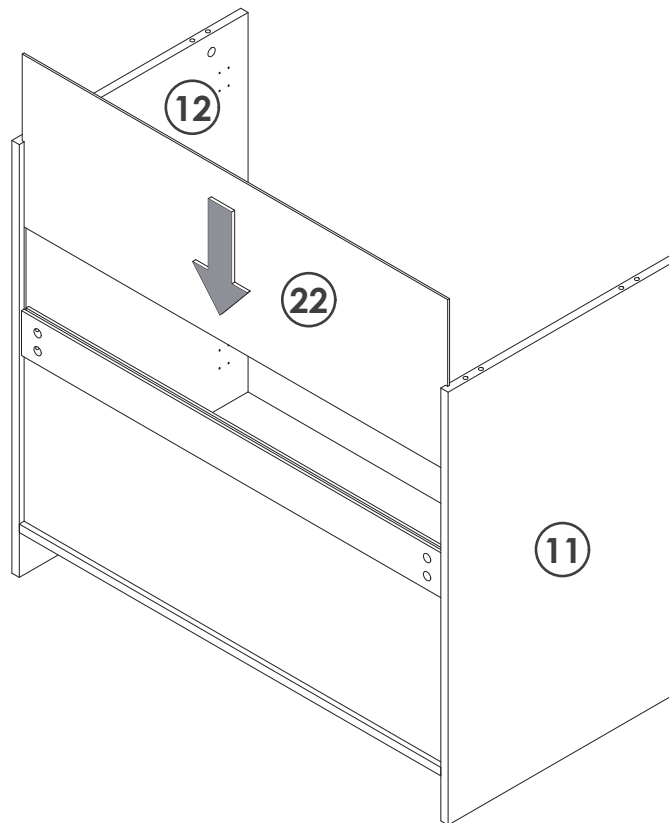



09

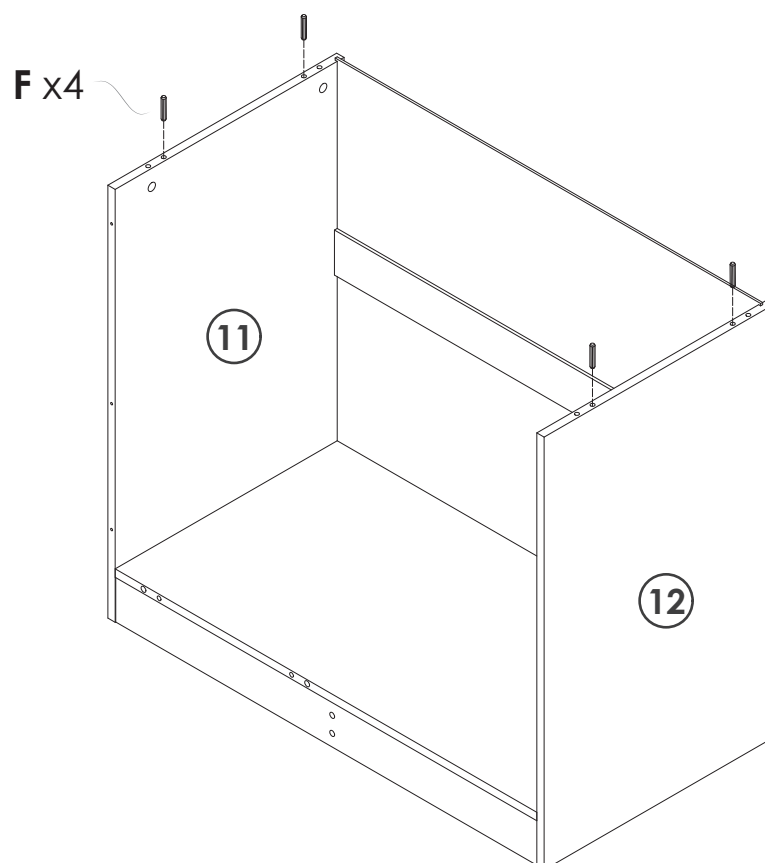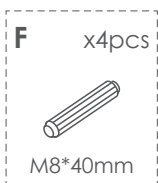



10

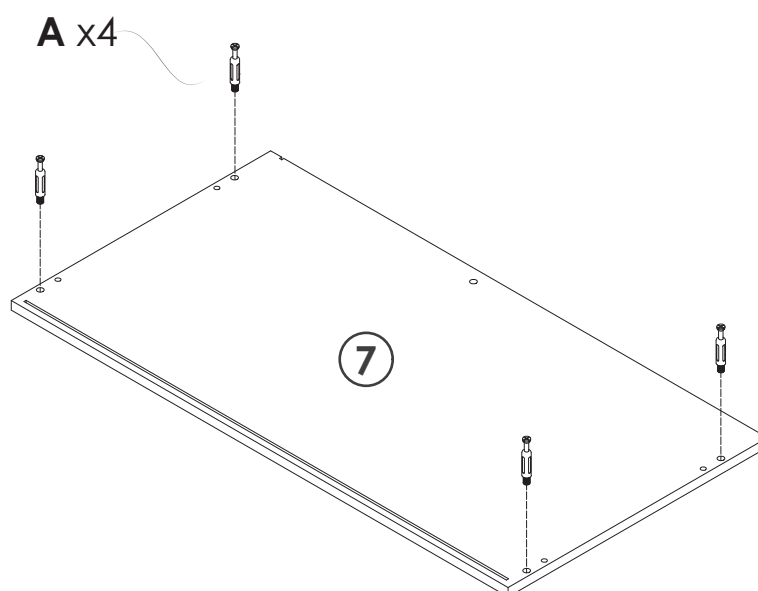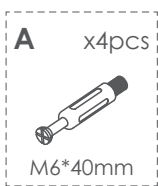



11

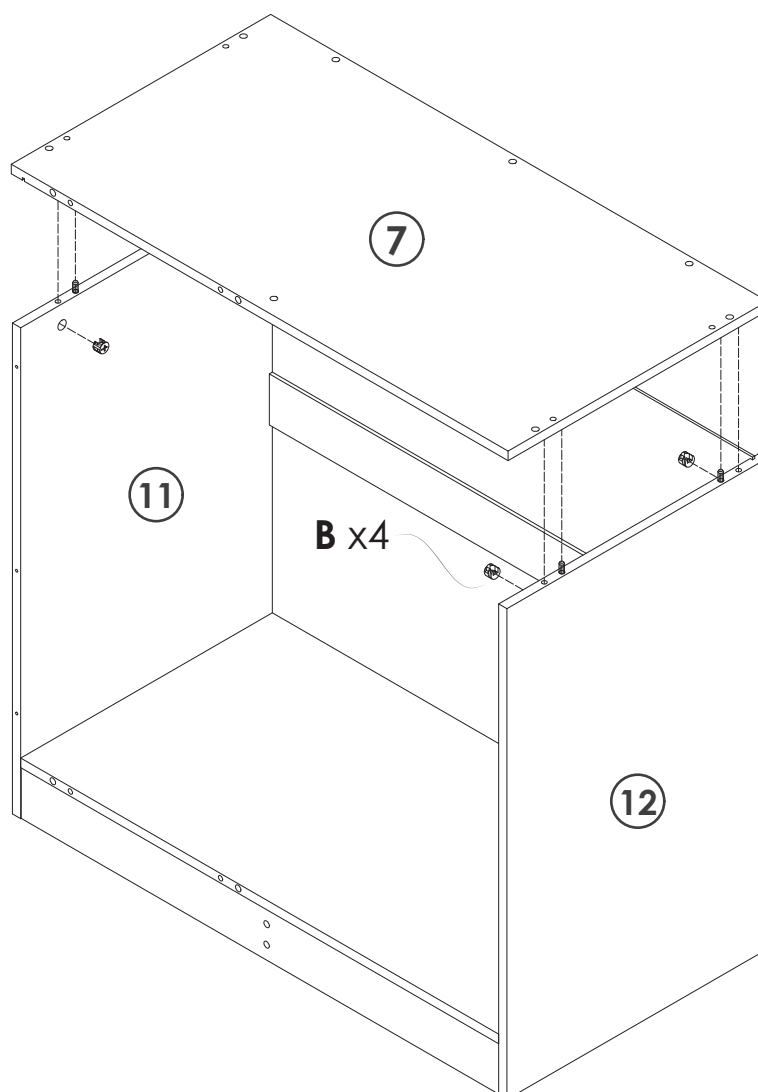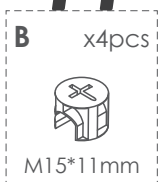



12

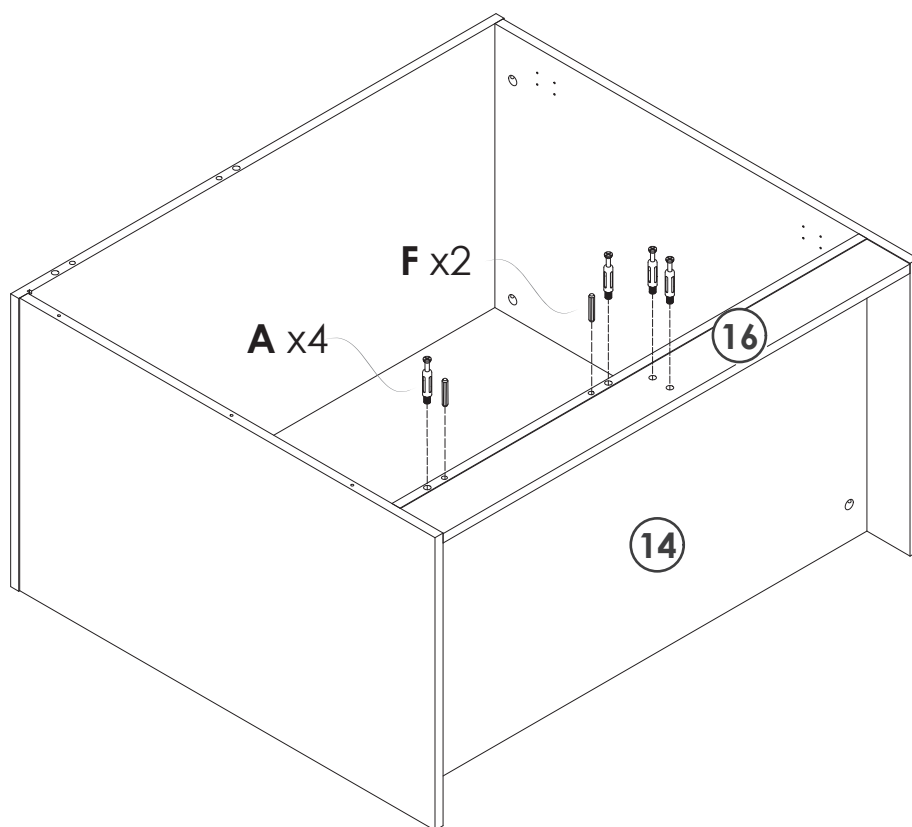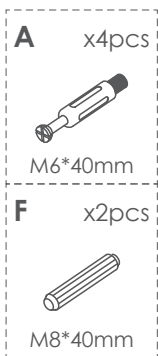



13

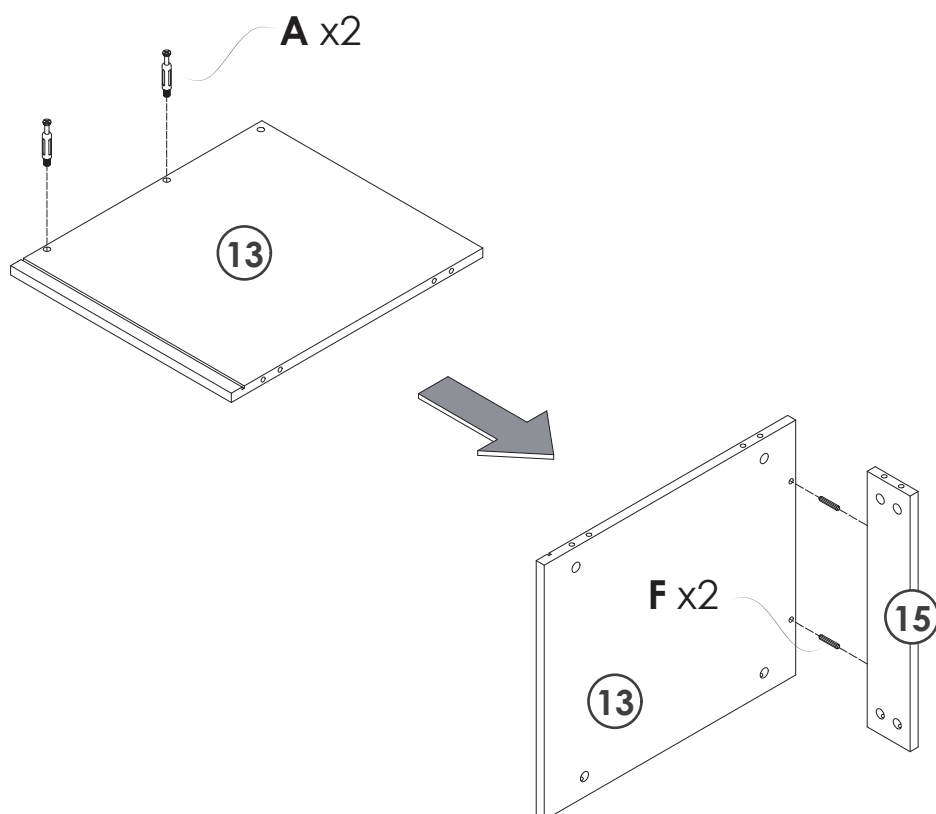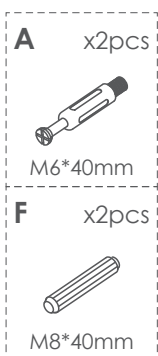



14

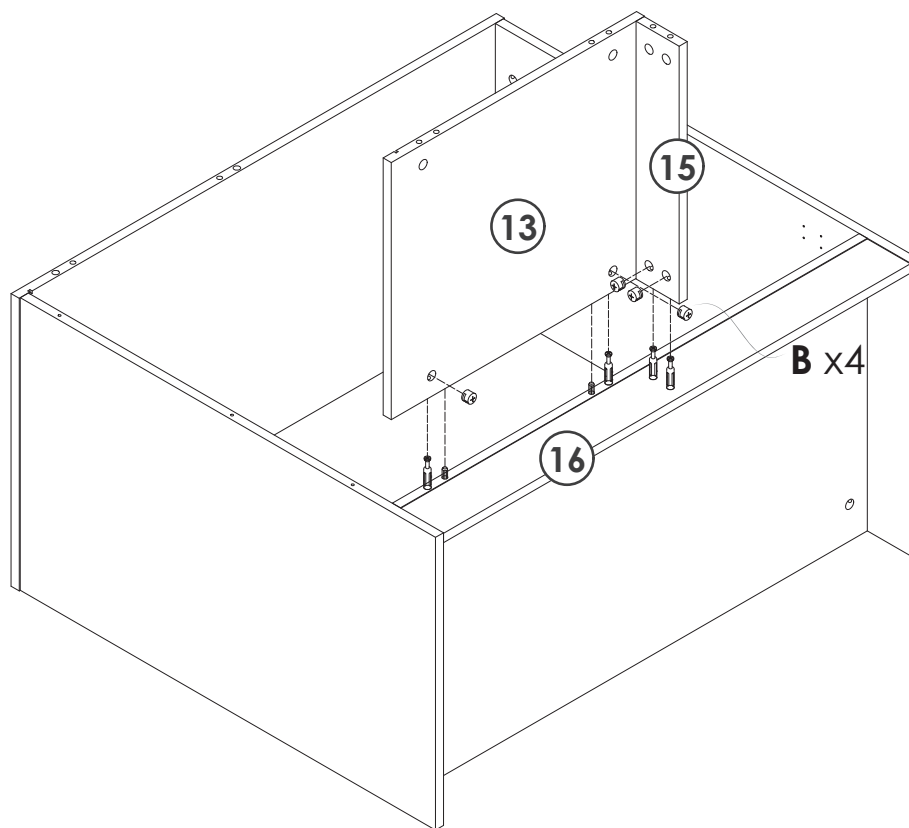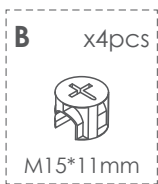



15

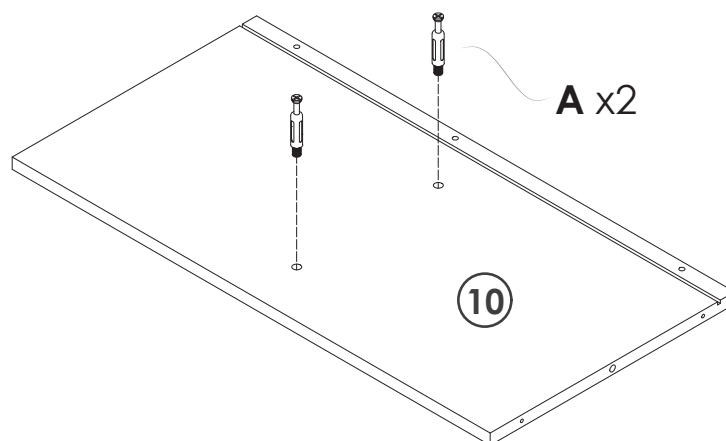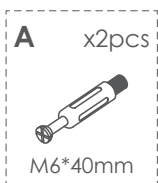



16

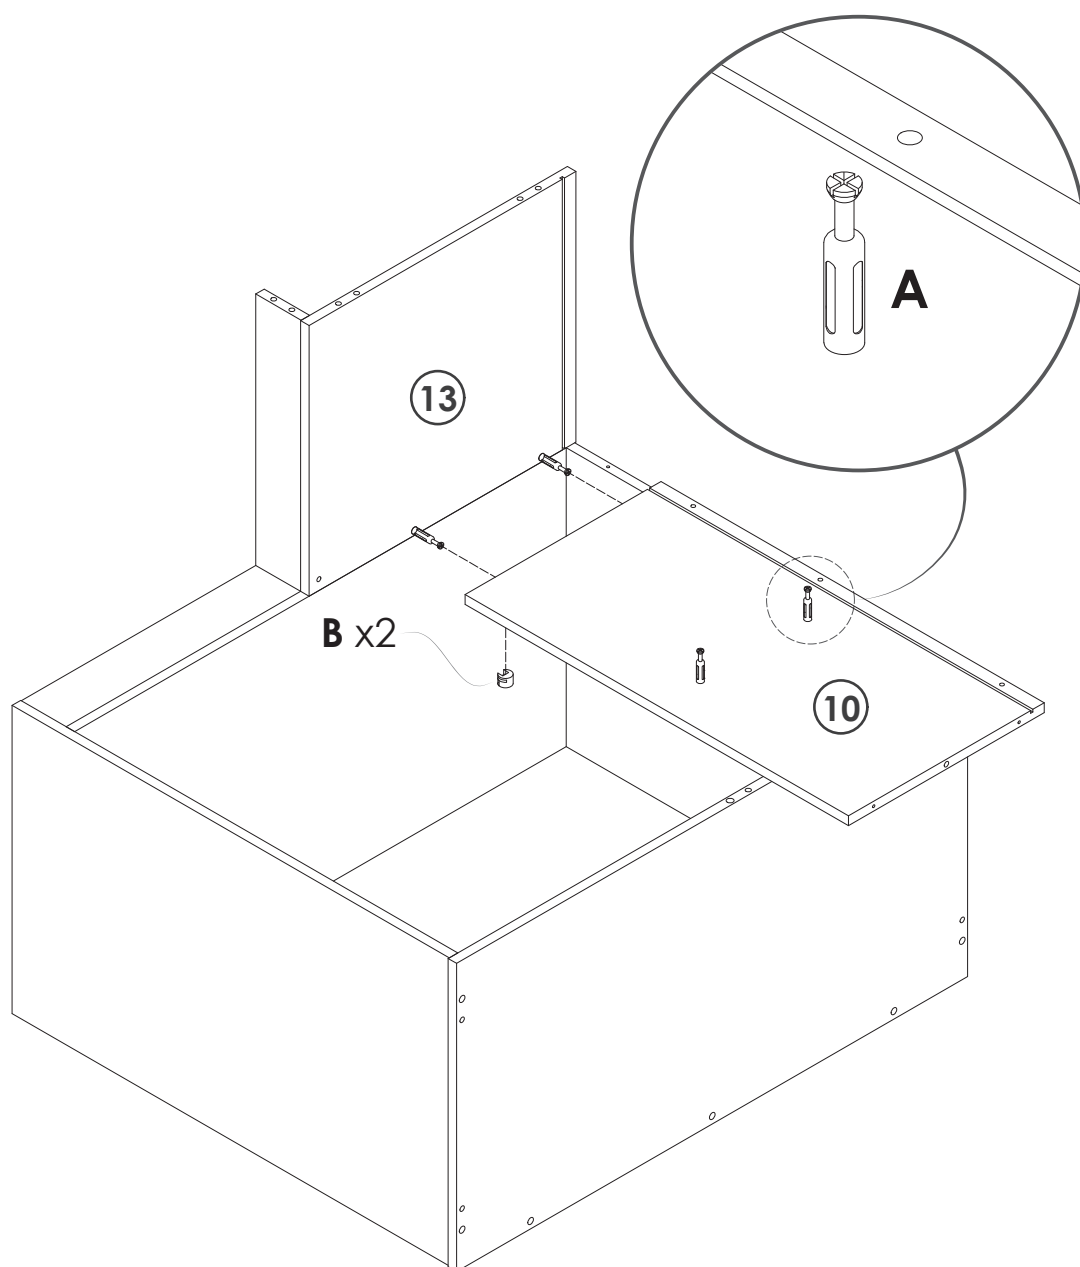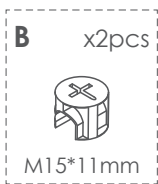



17

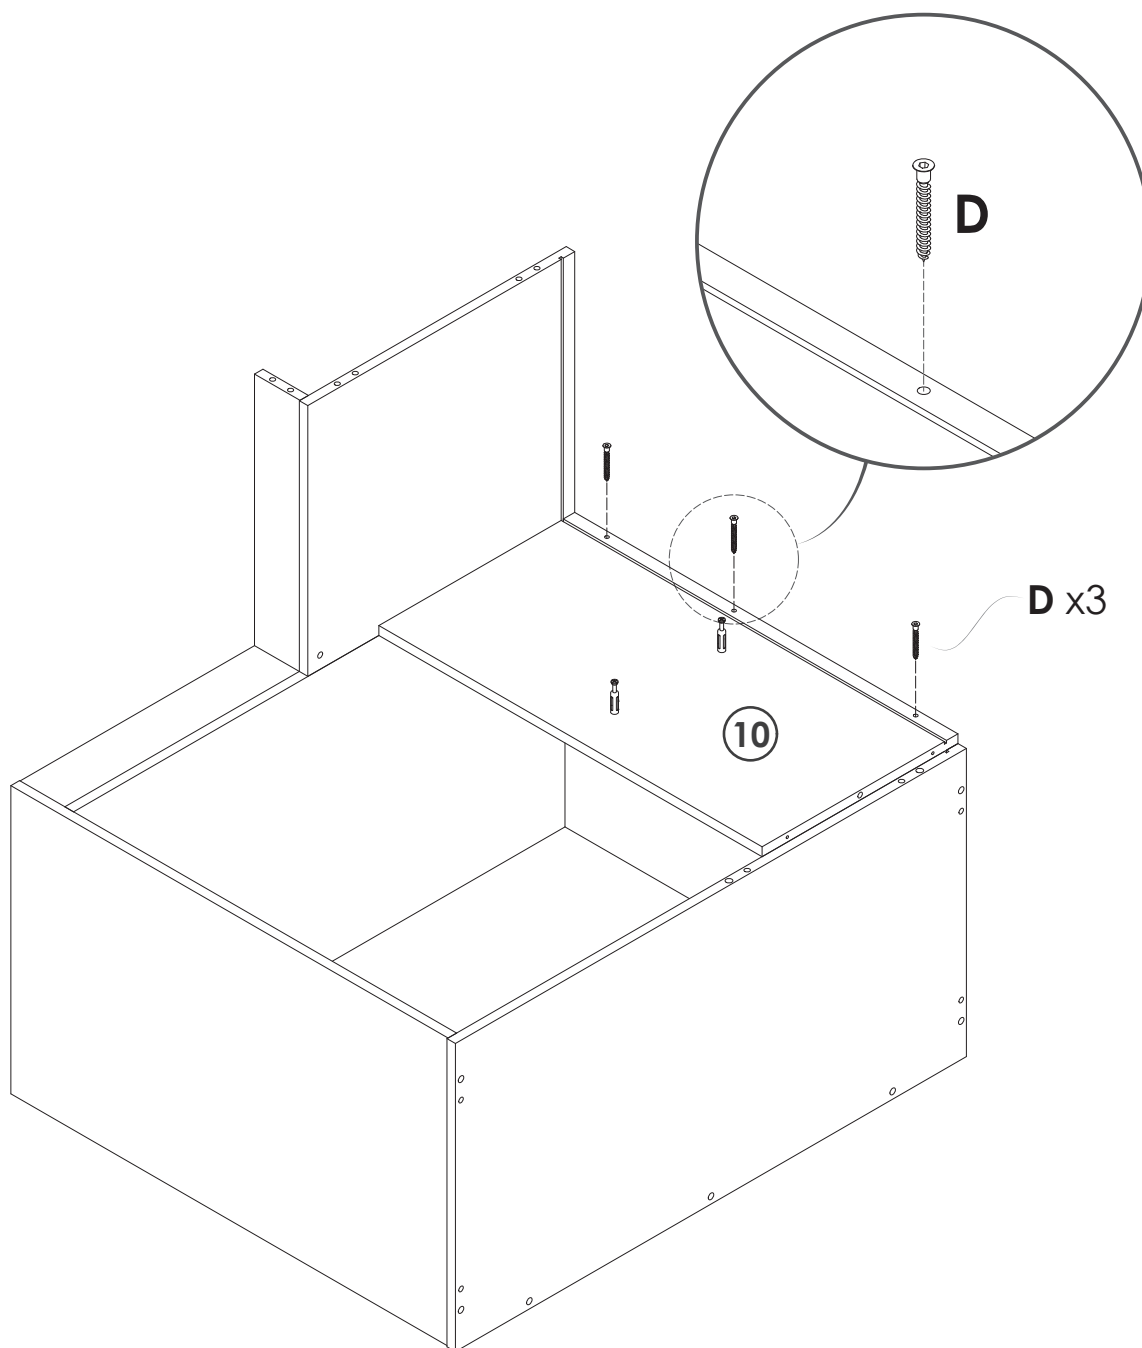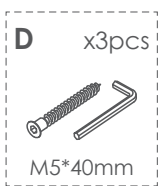



18

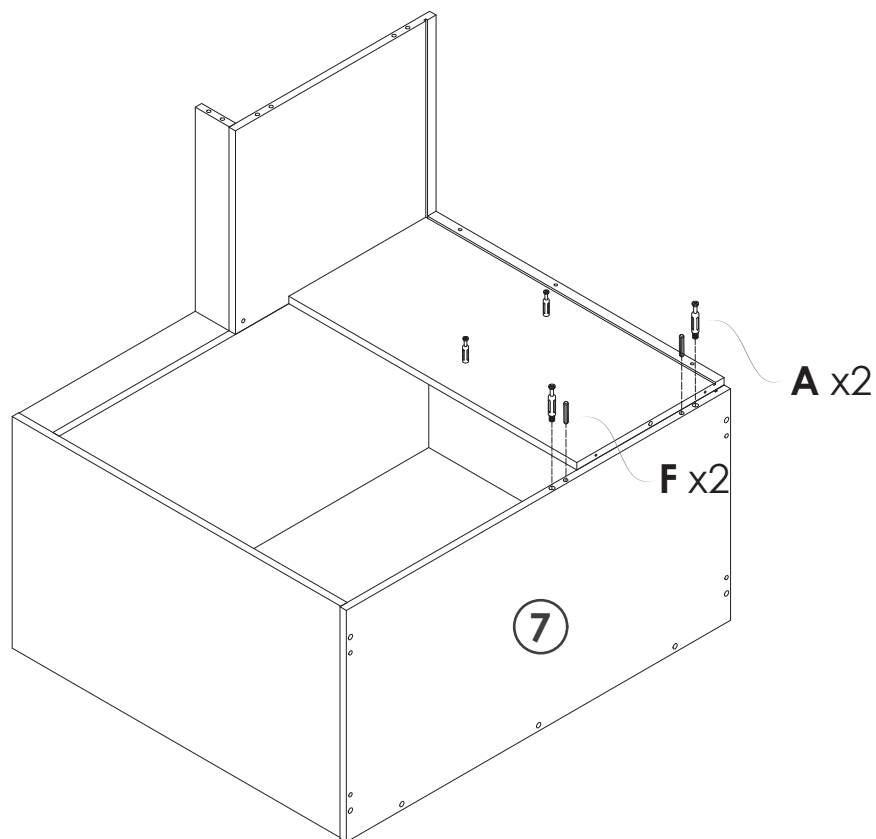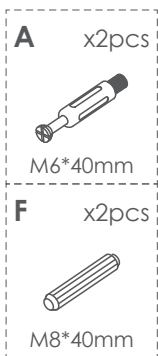



19

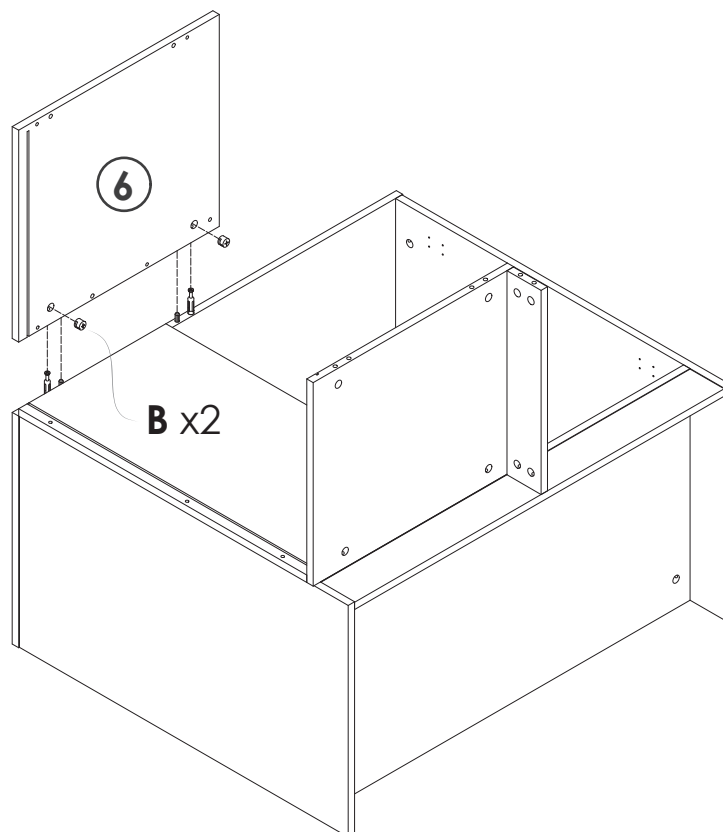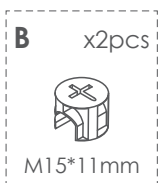



20

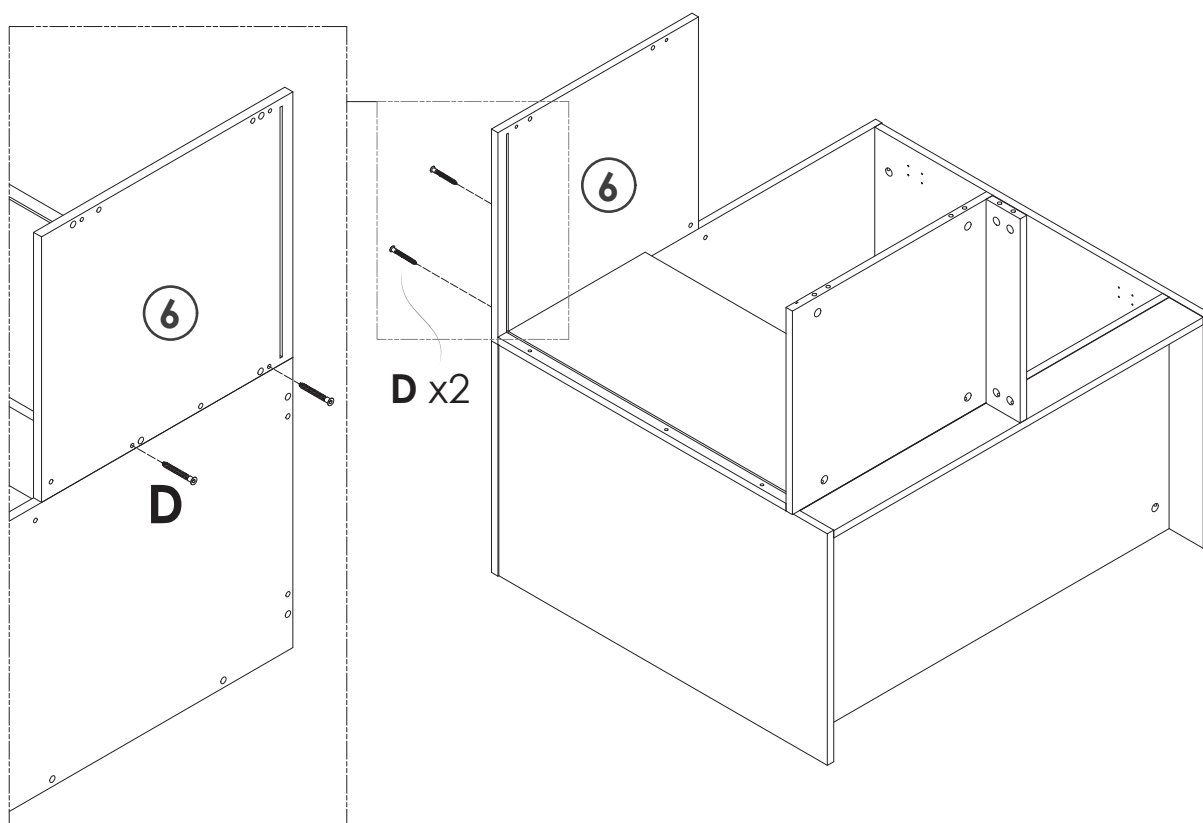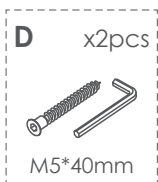



21

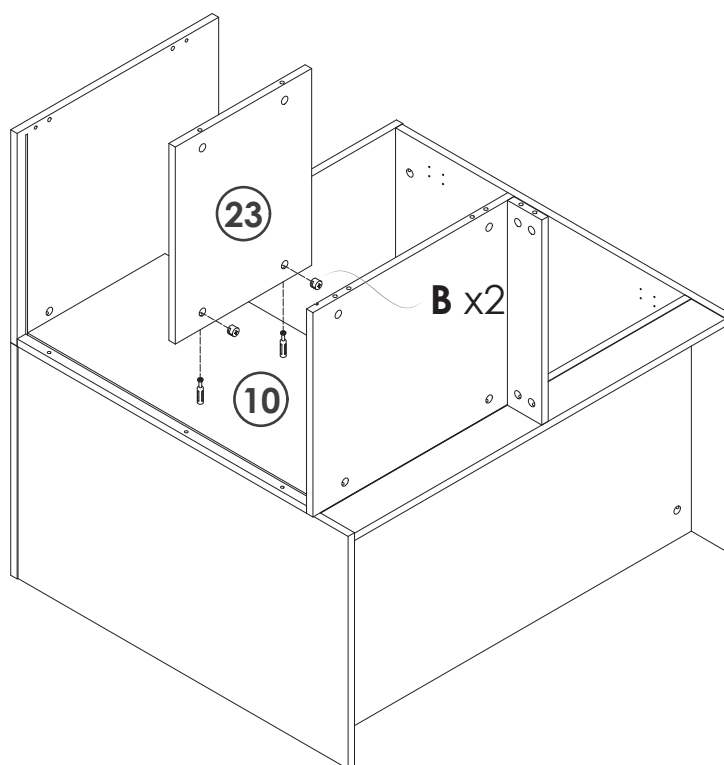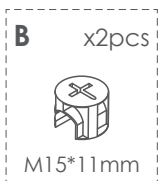



22

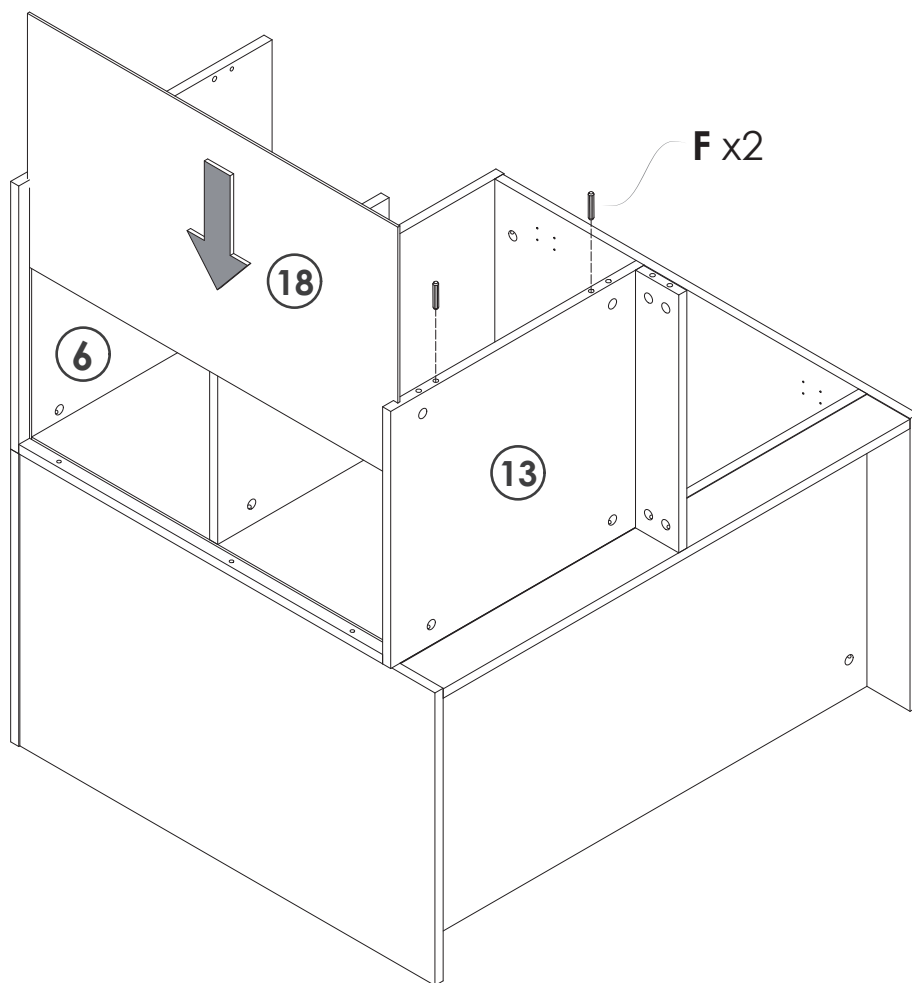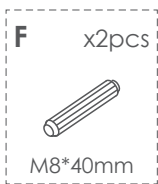



23

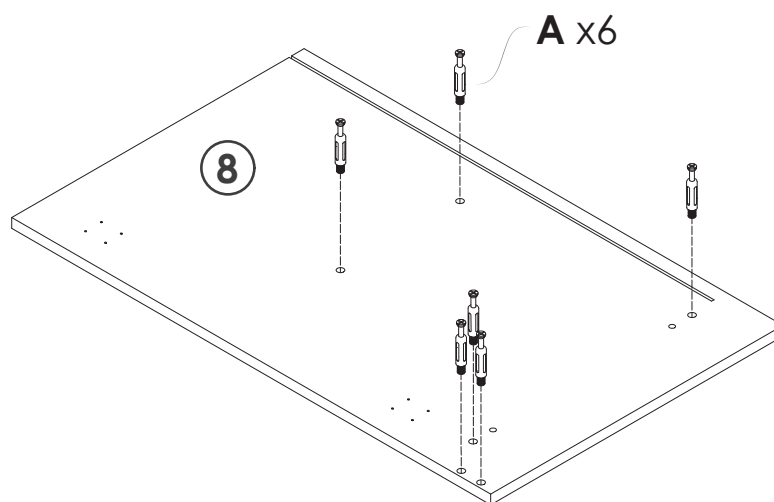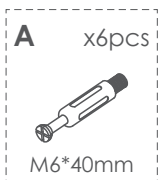


24

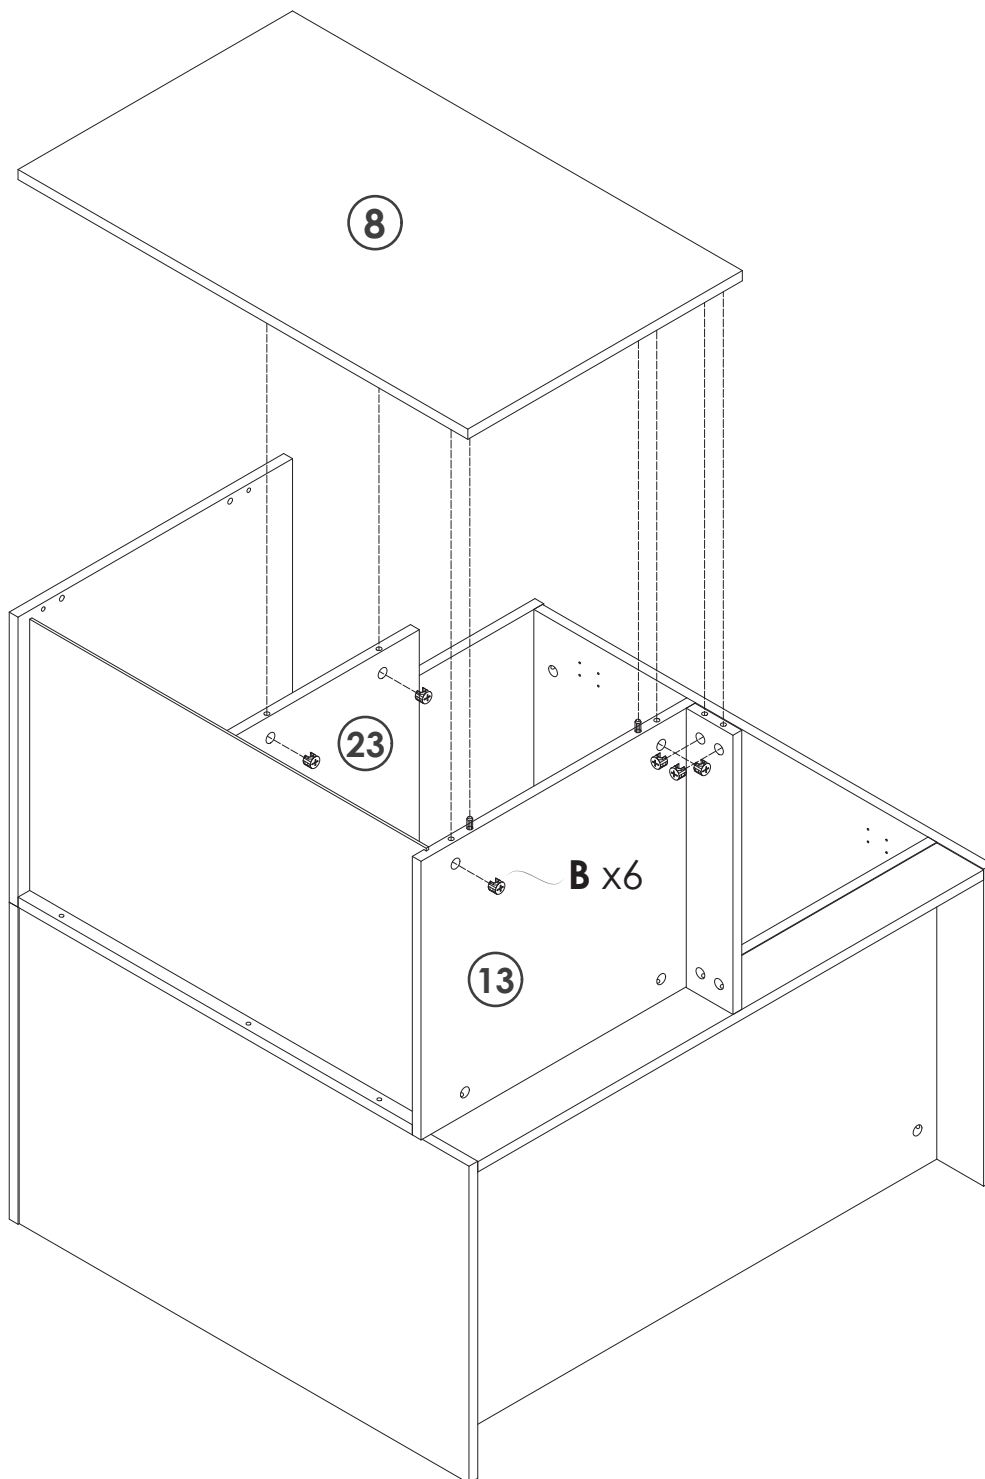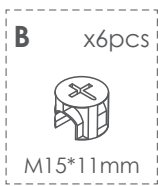



25

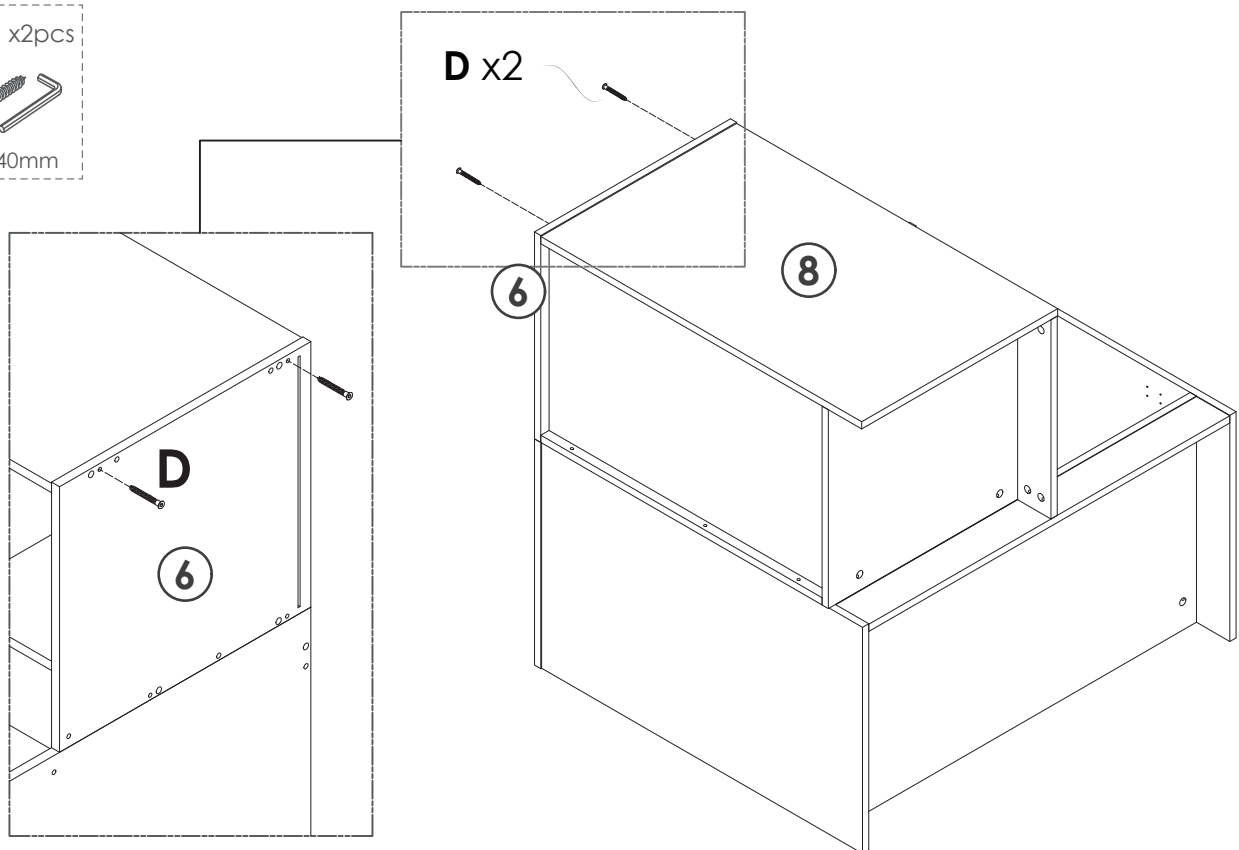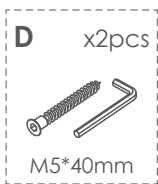


26

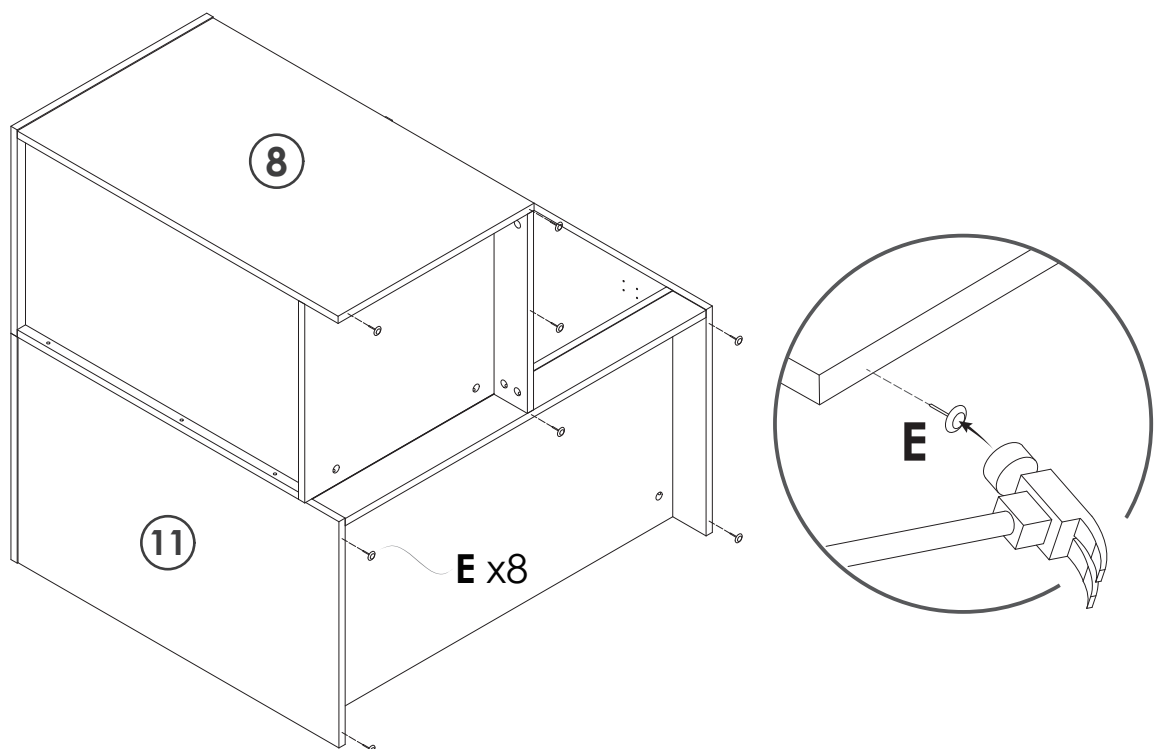



27

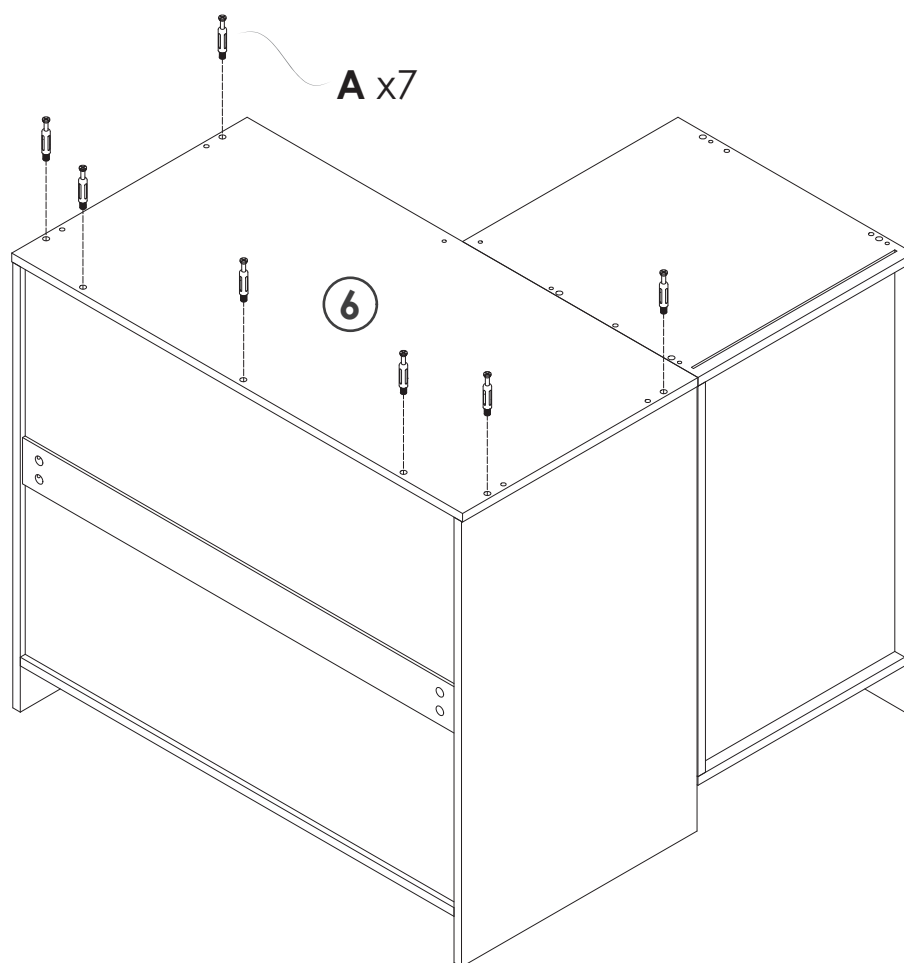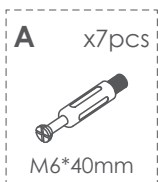



28

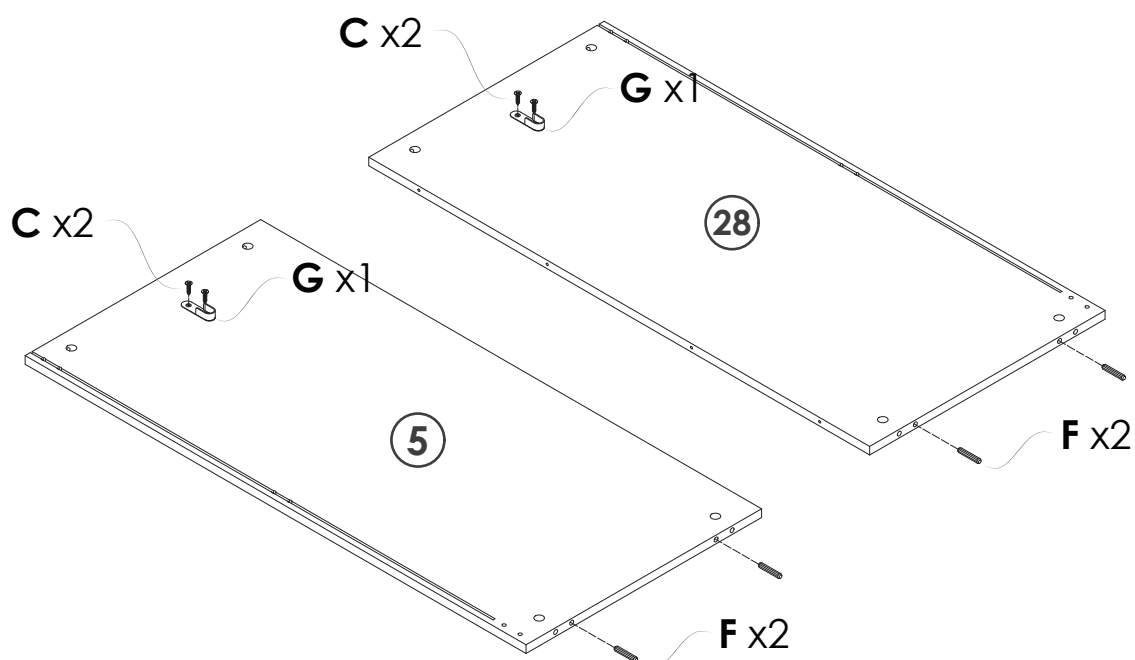


29

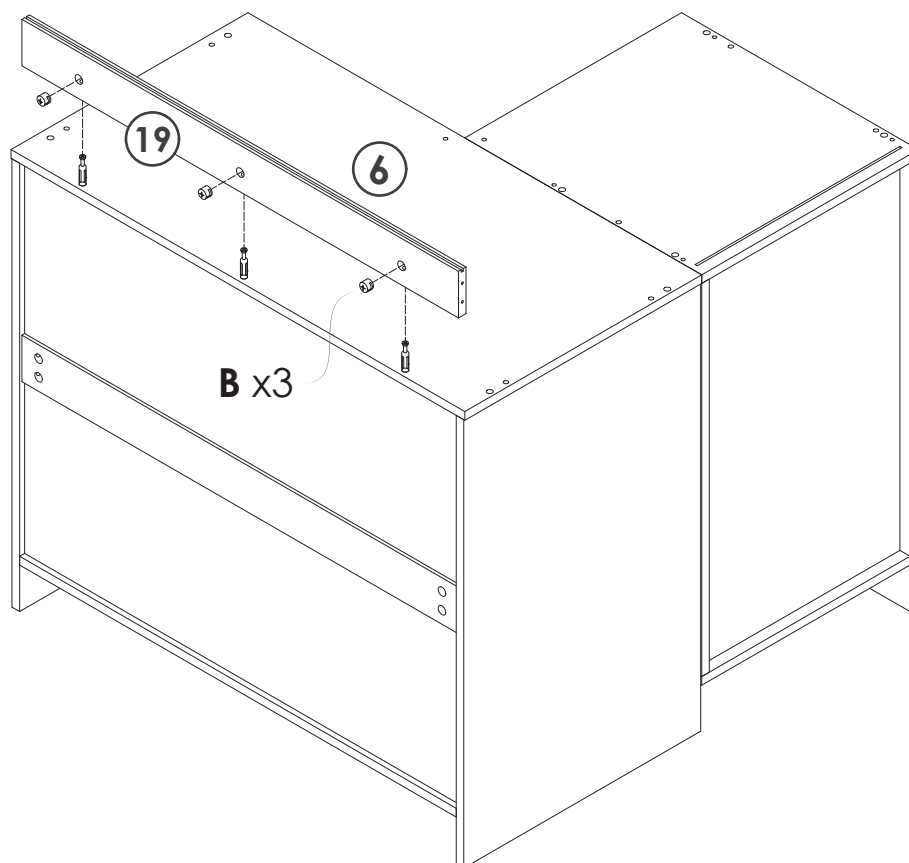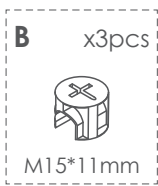


30

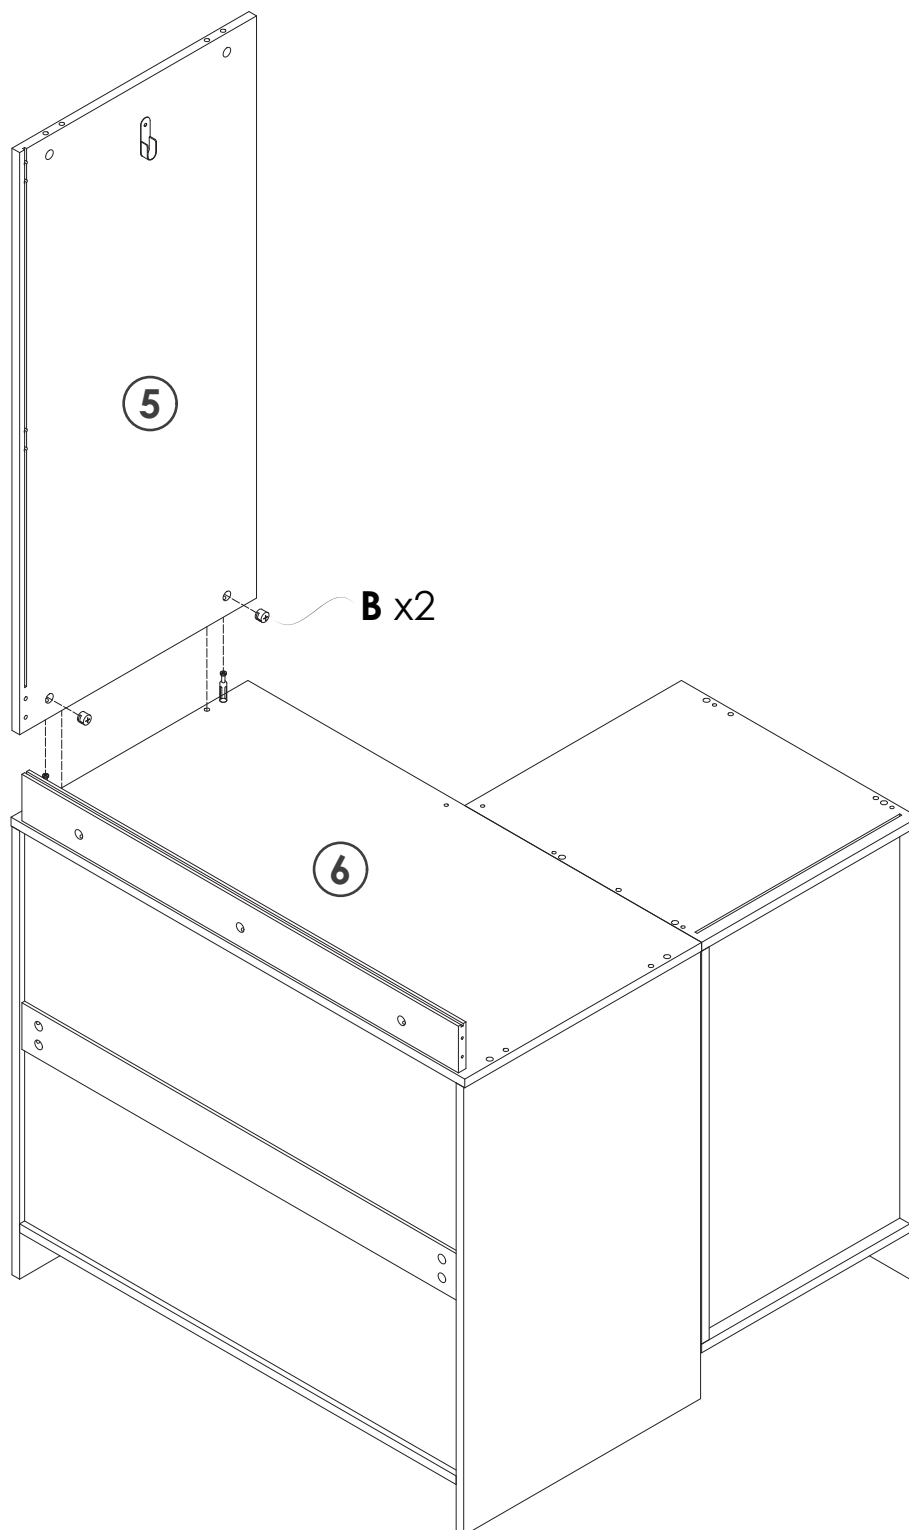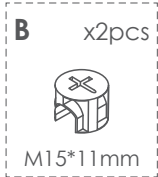



31

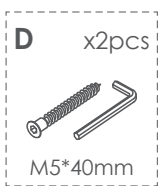



D x2

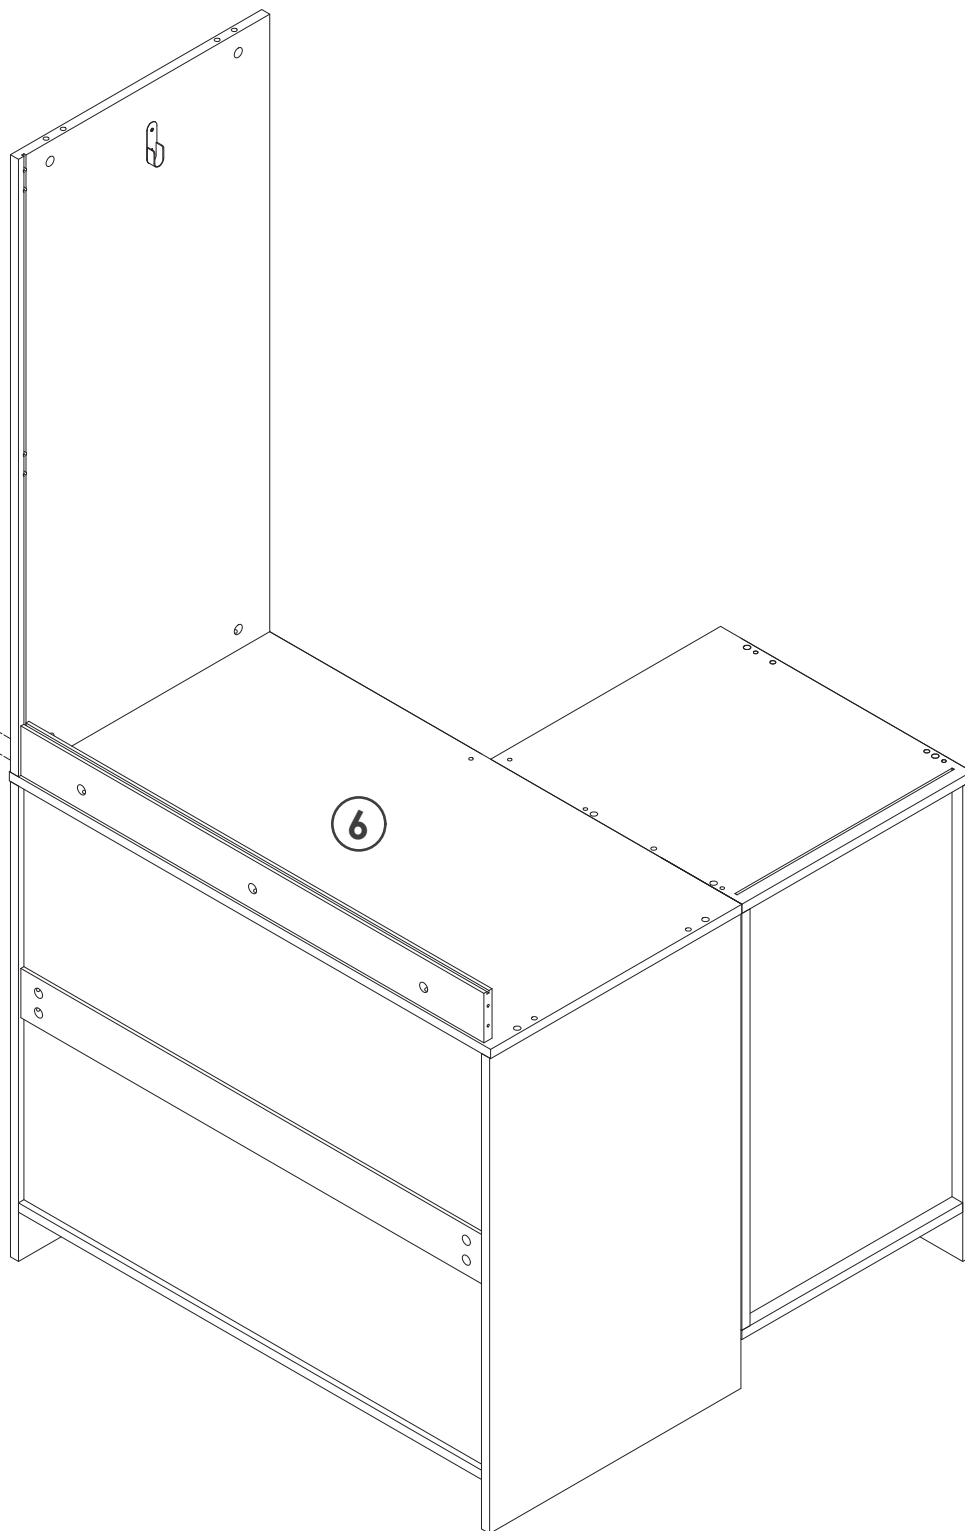


32

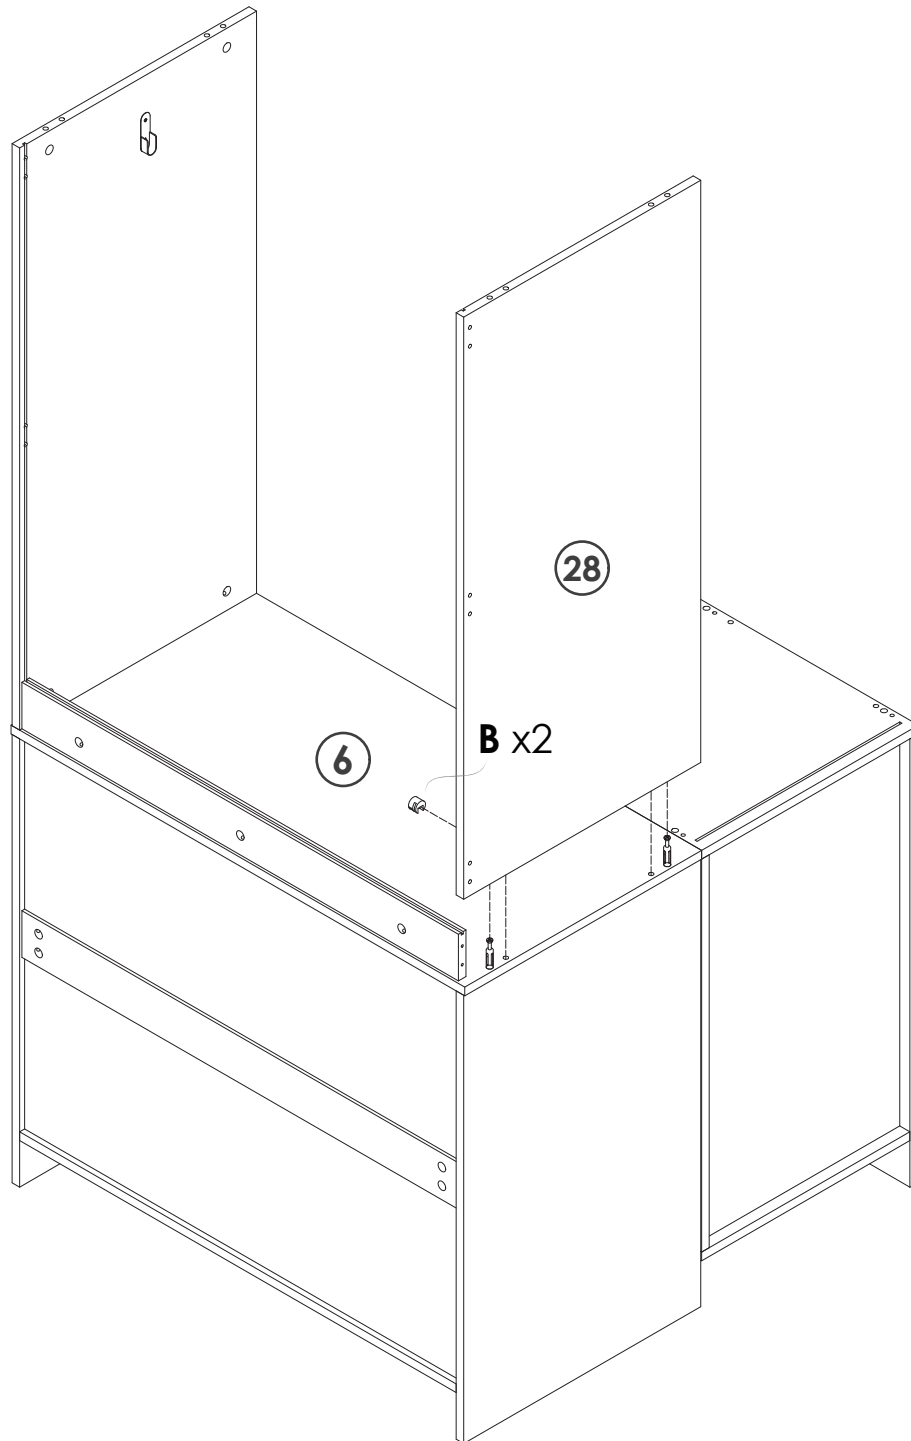
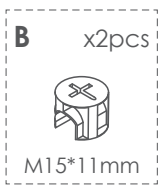



33

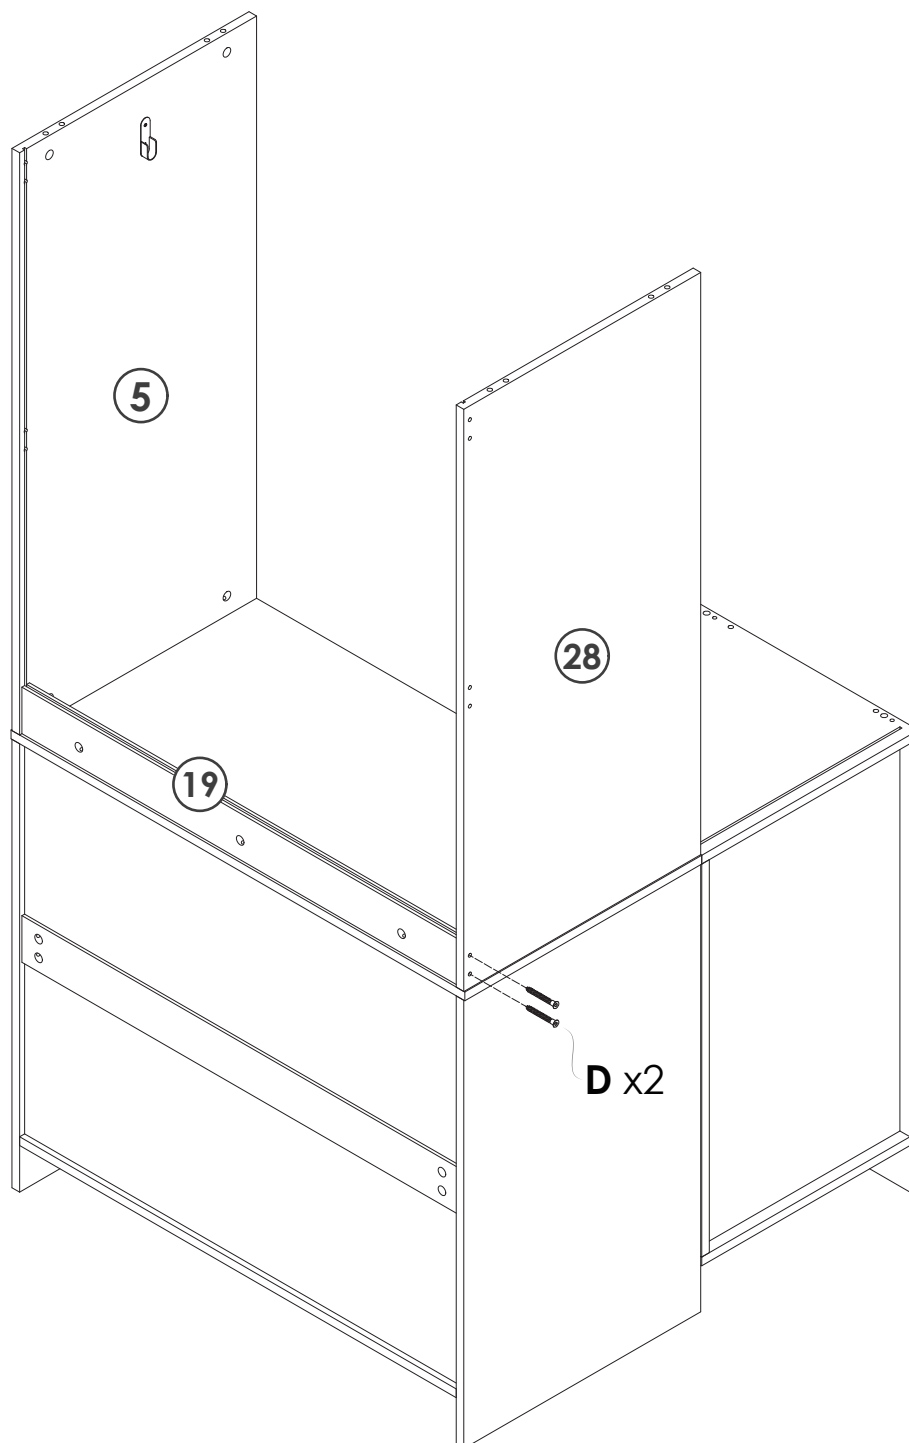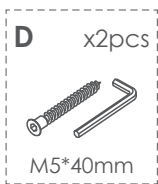


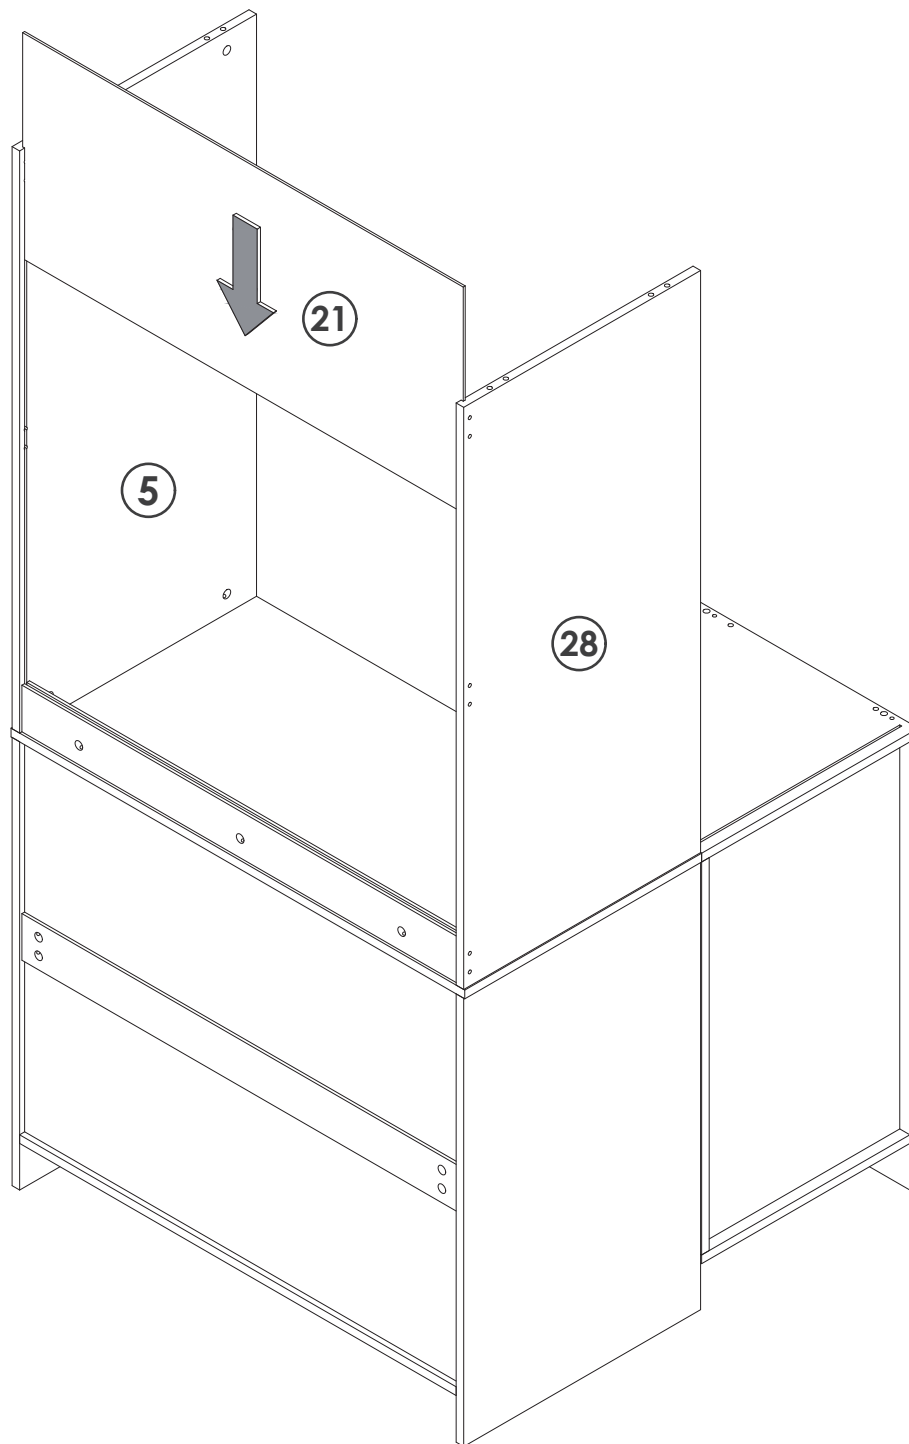


35

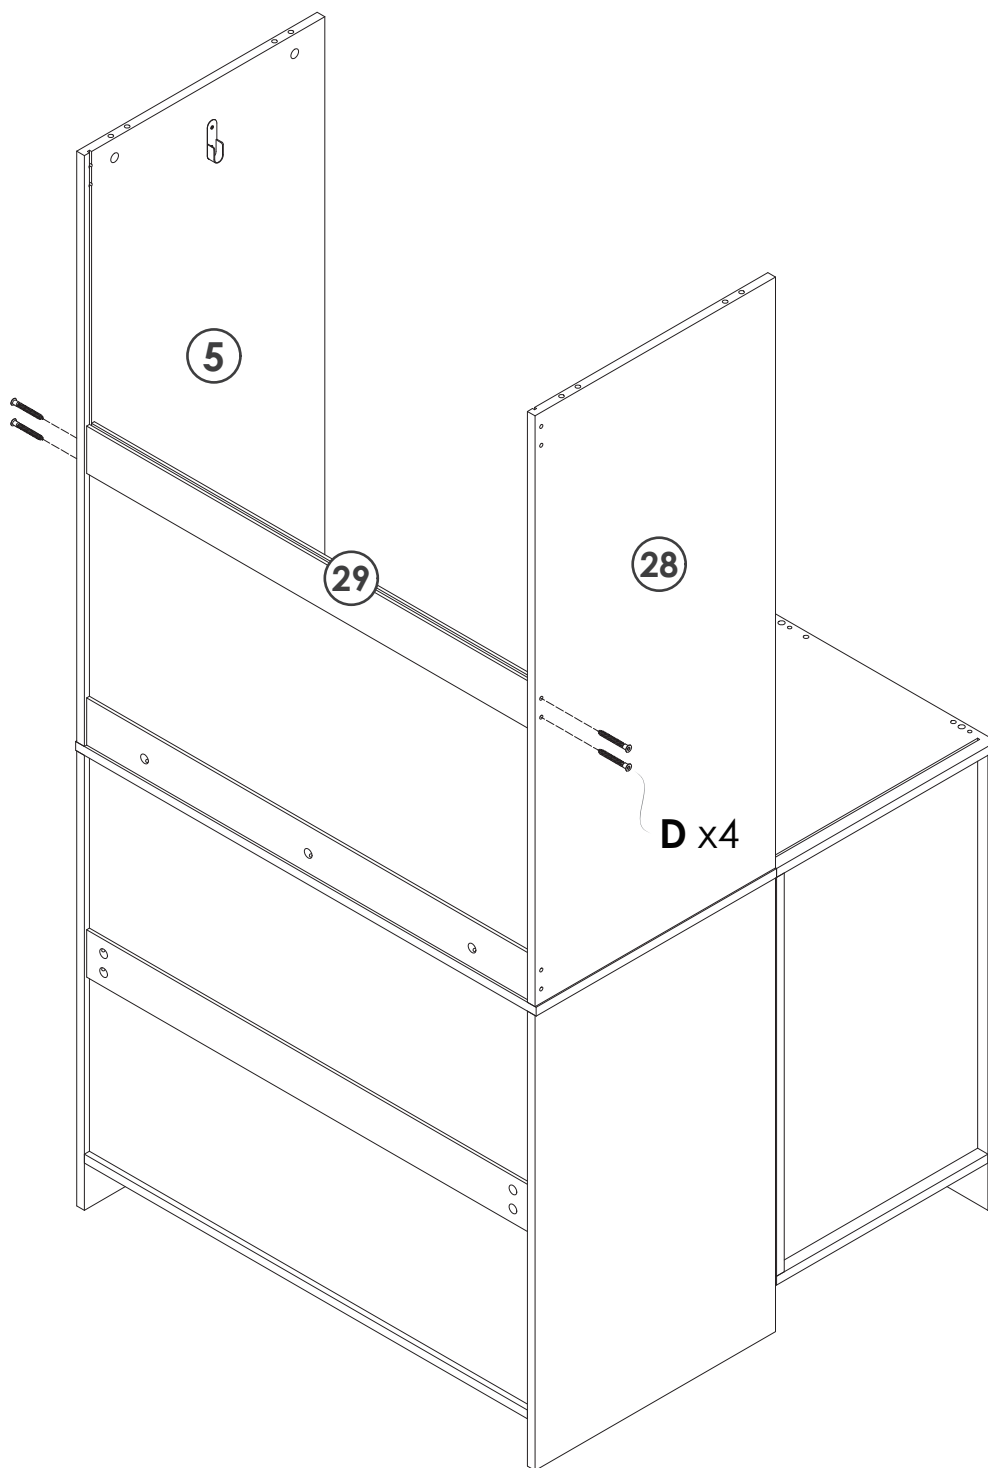
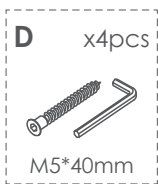


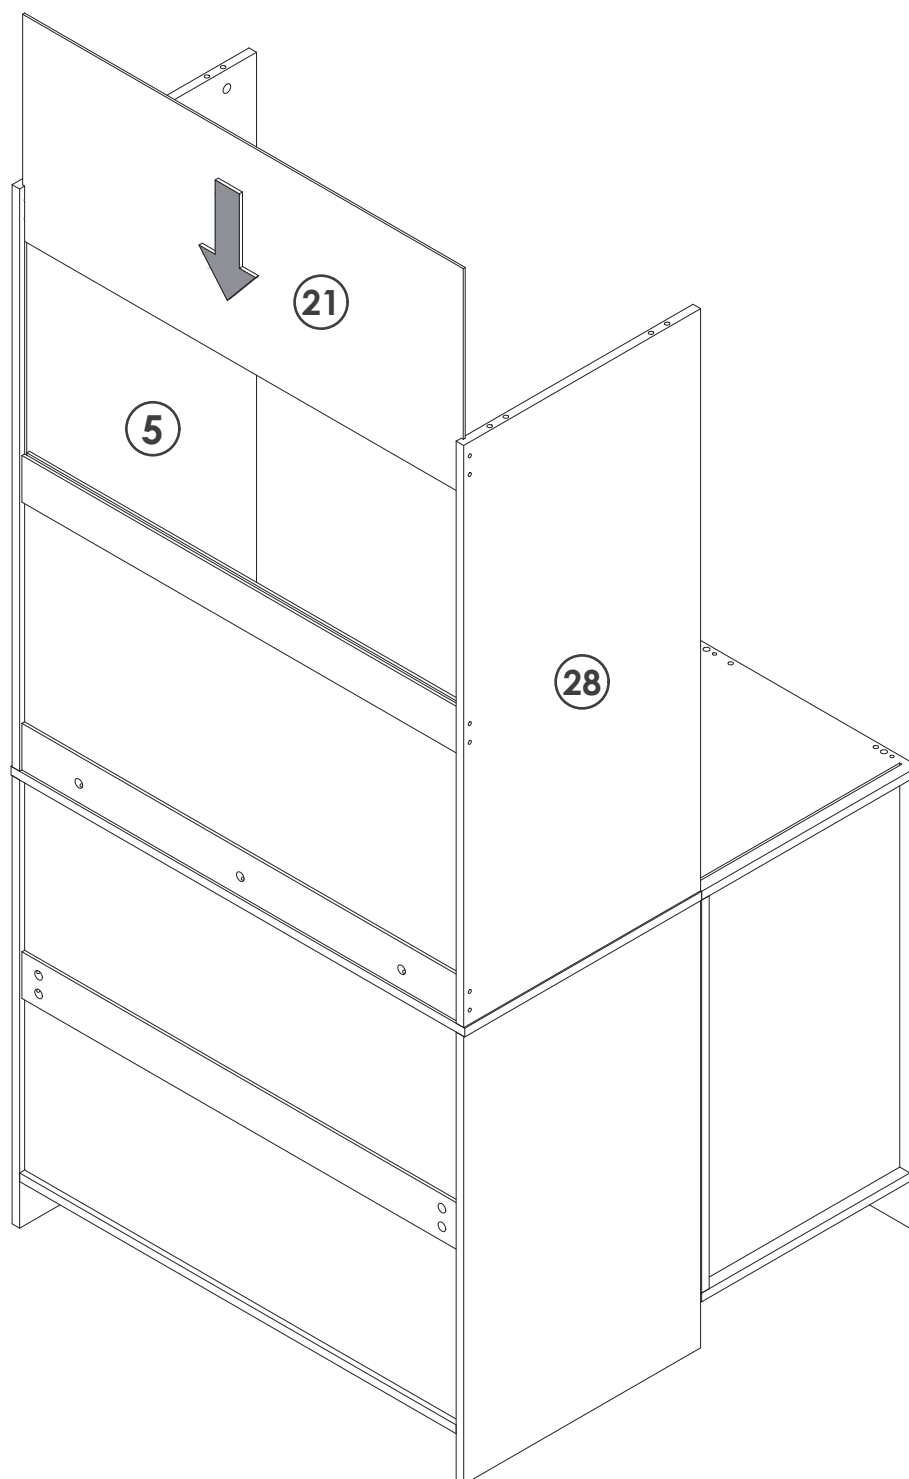




37

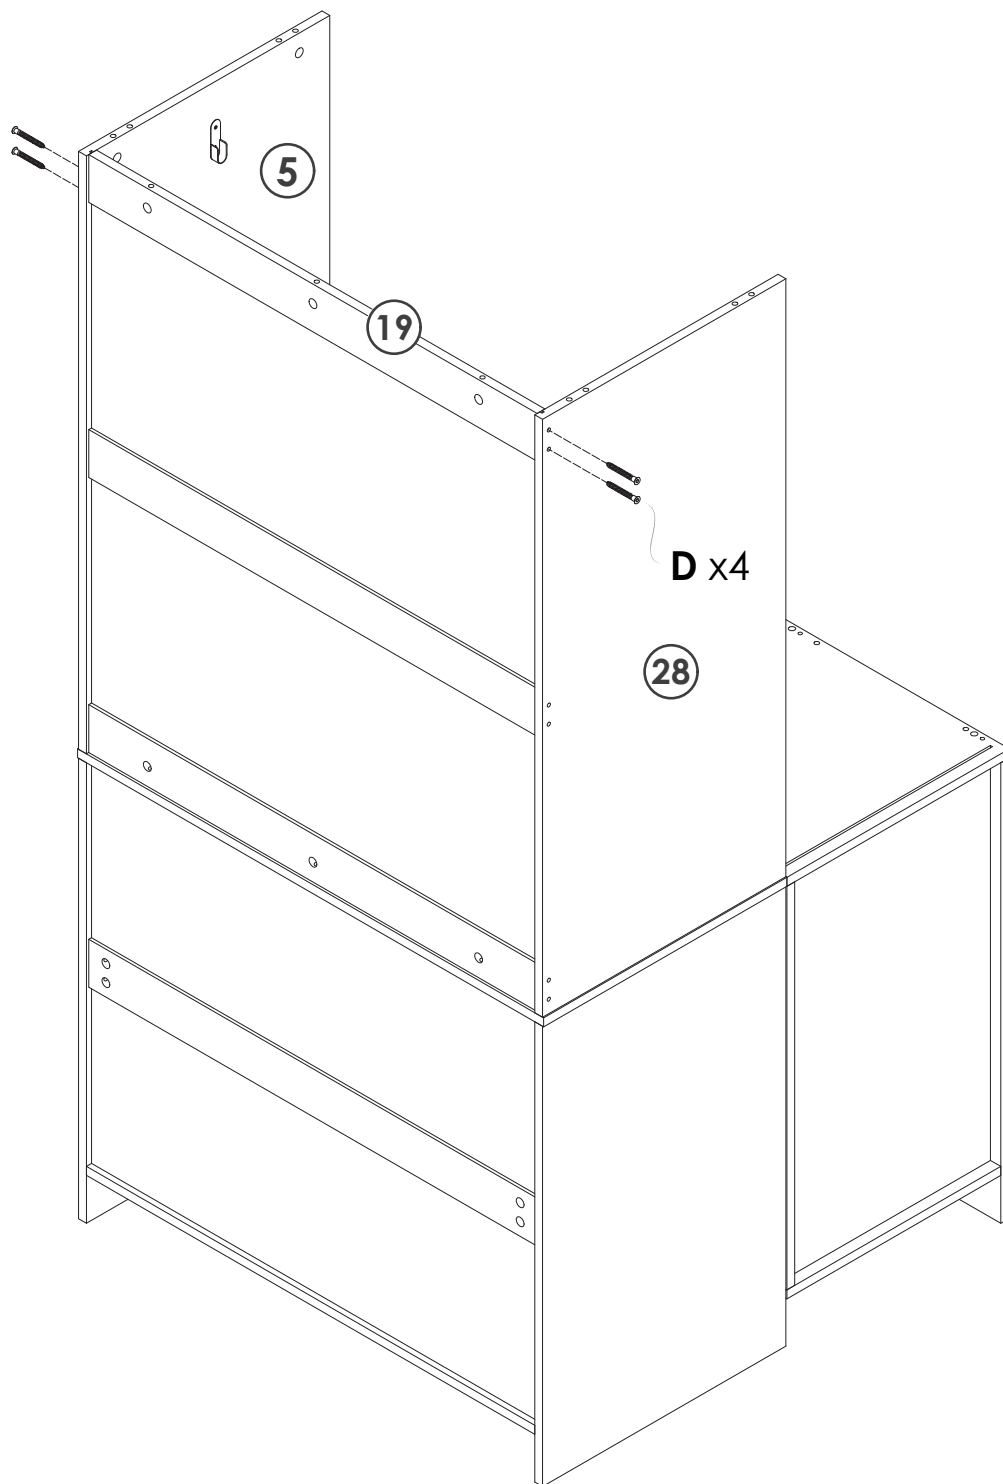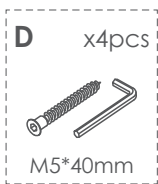

38

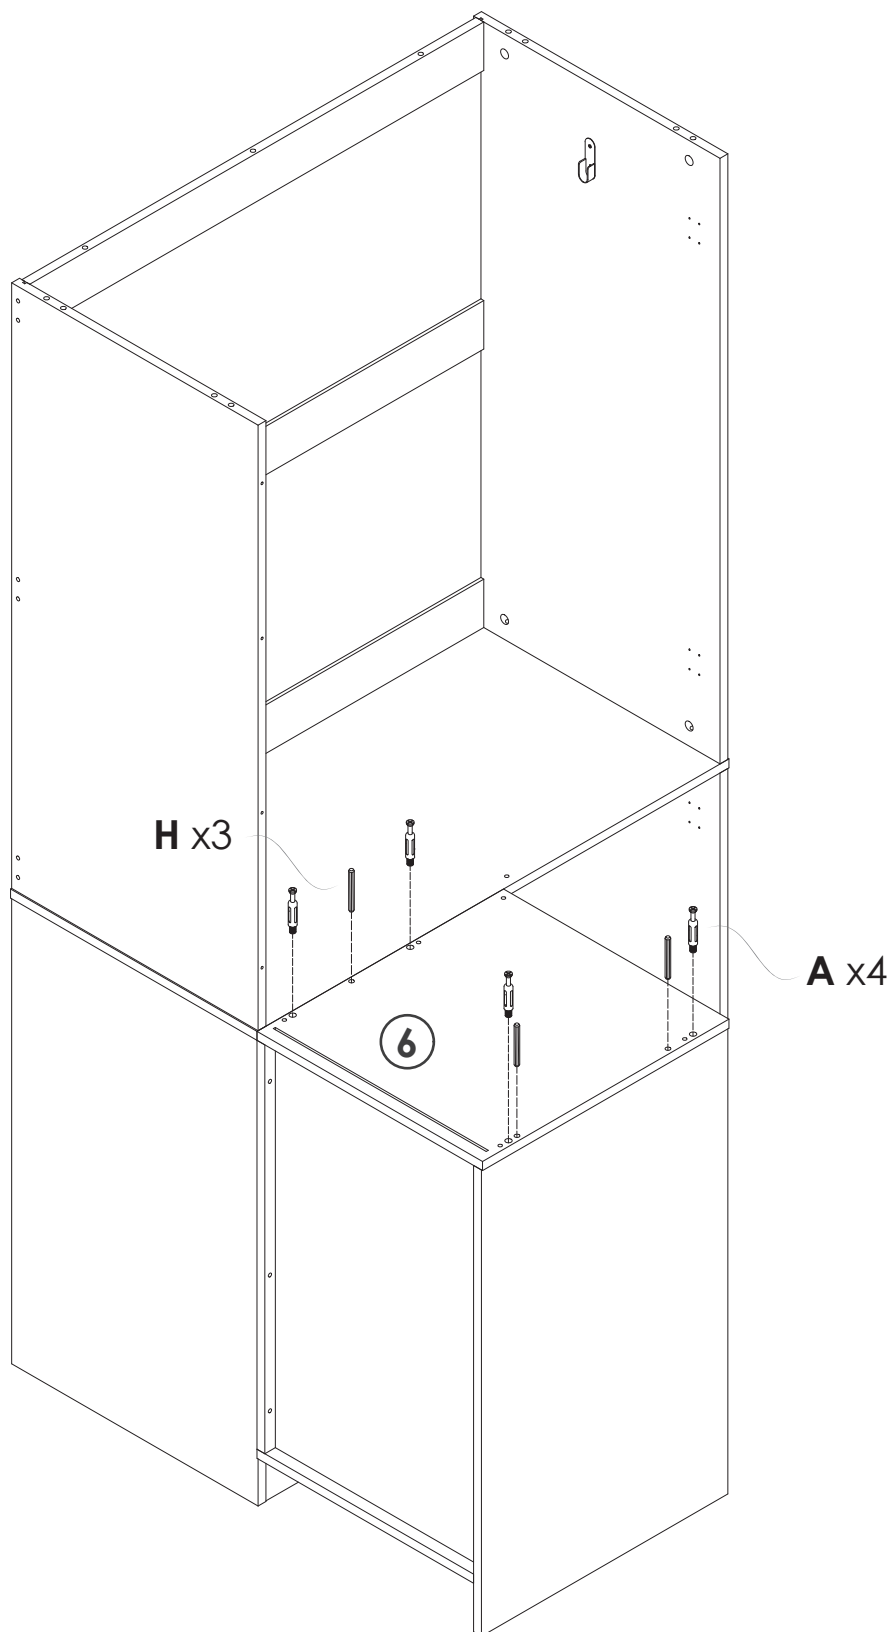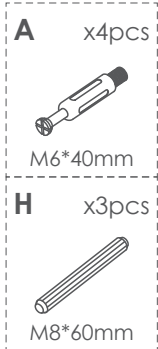

39

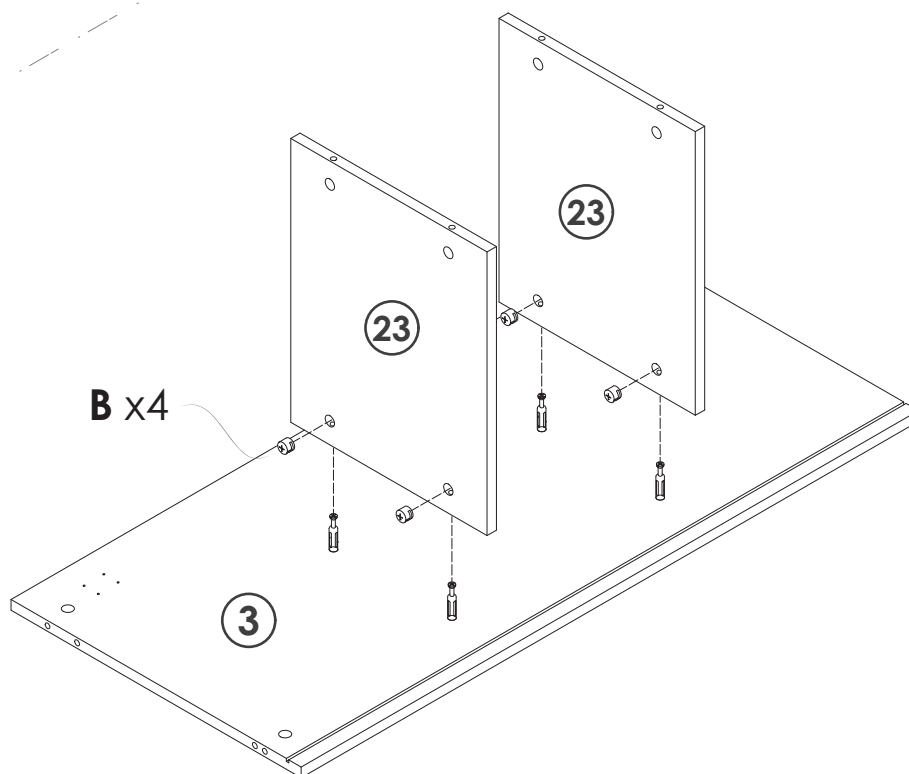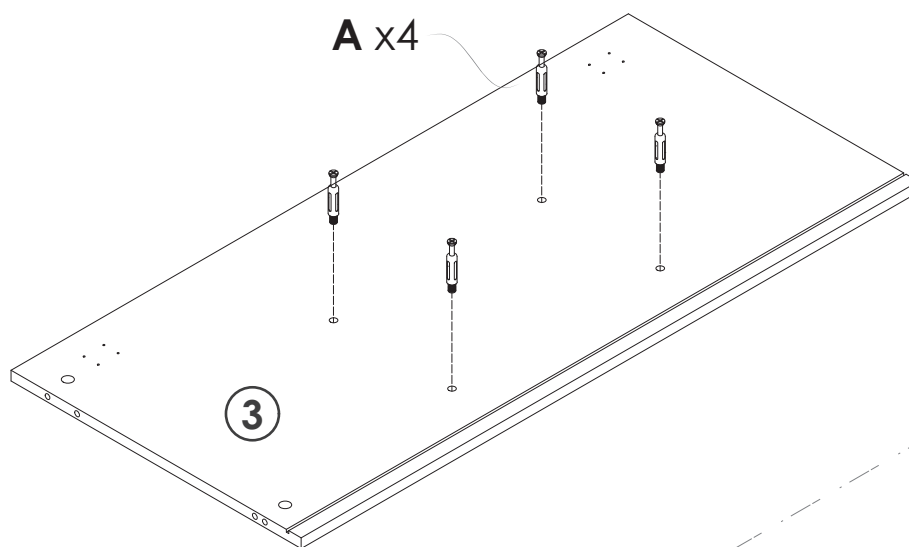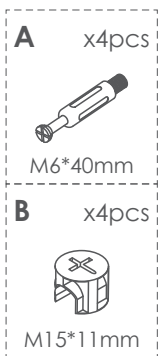

40

A x4pcs





M6*40mm



B x4pcs





M15*11mm

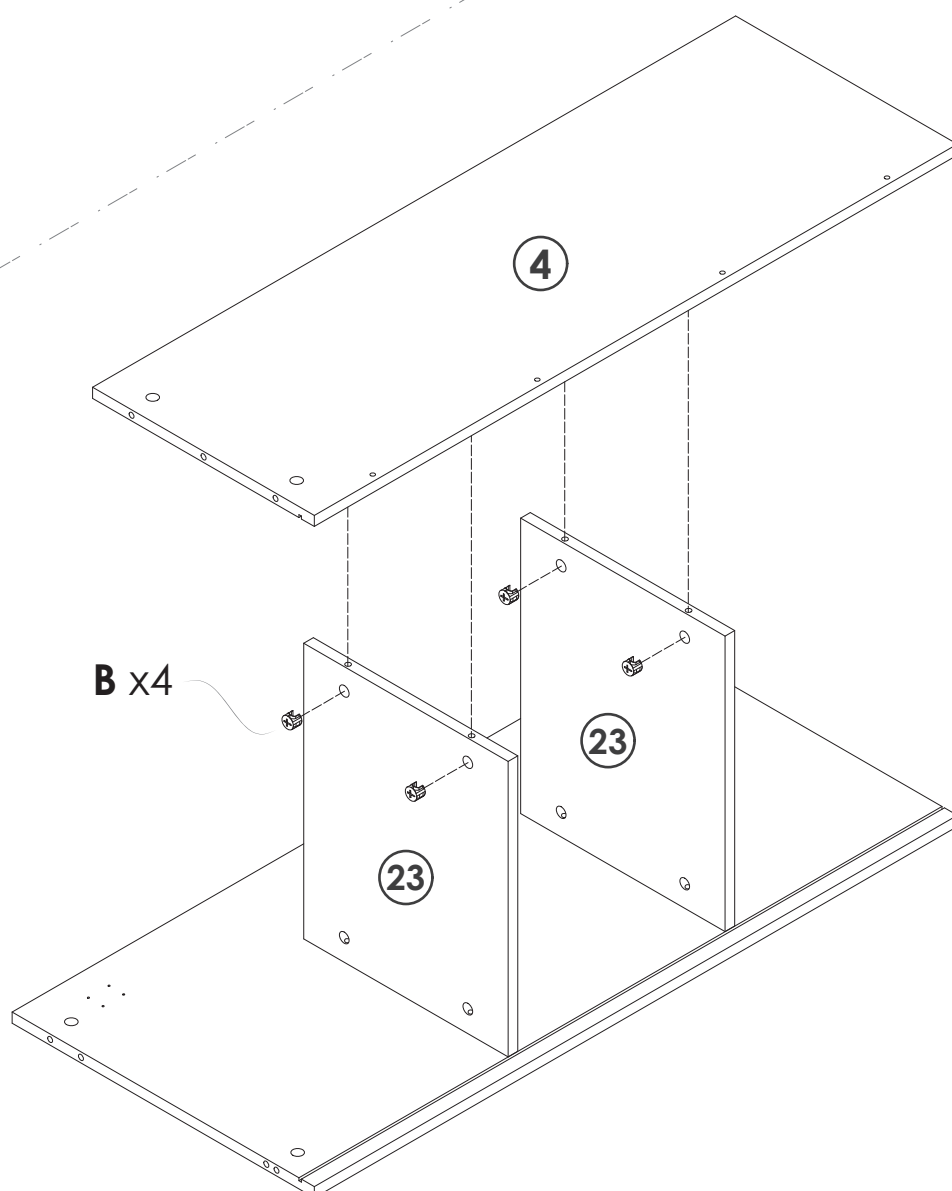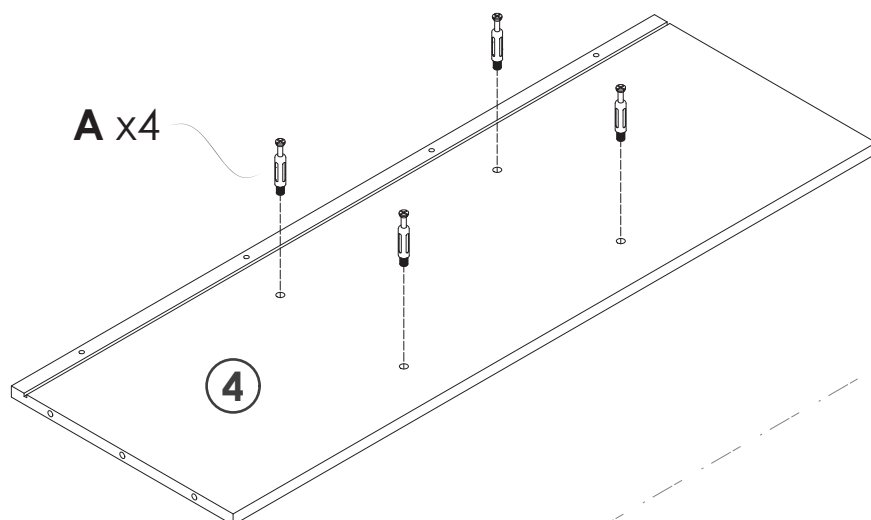



41

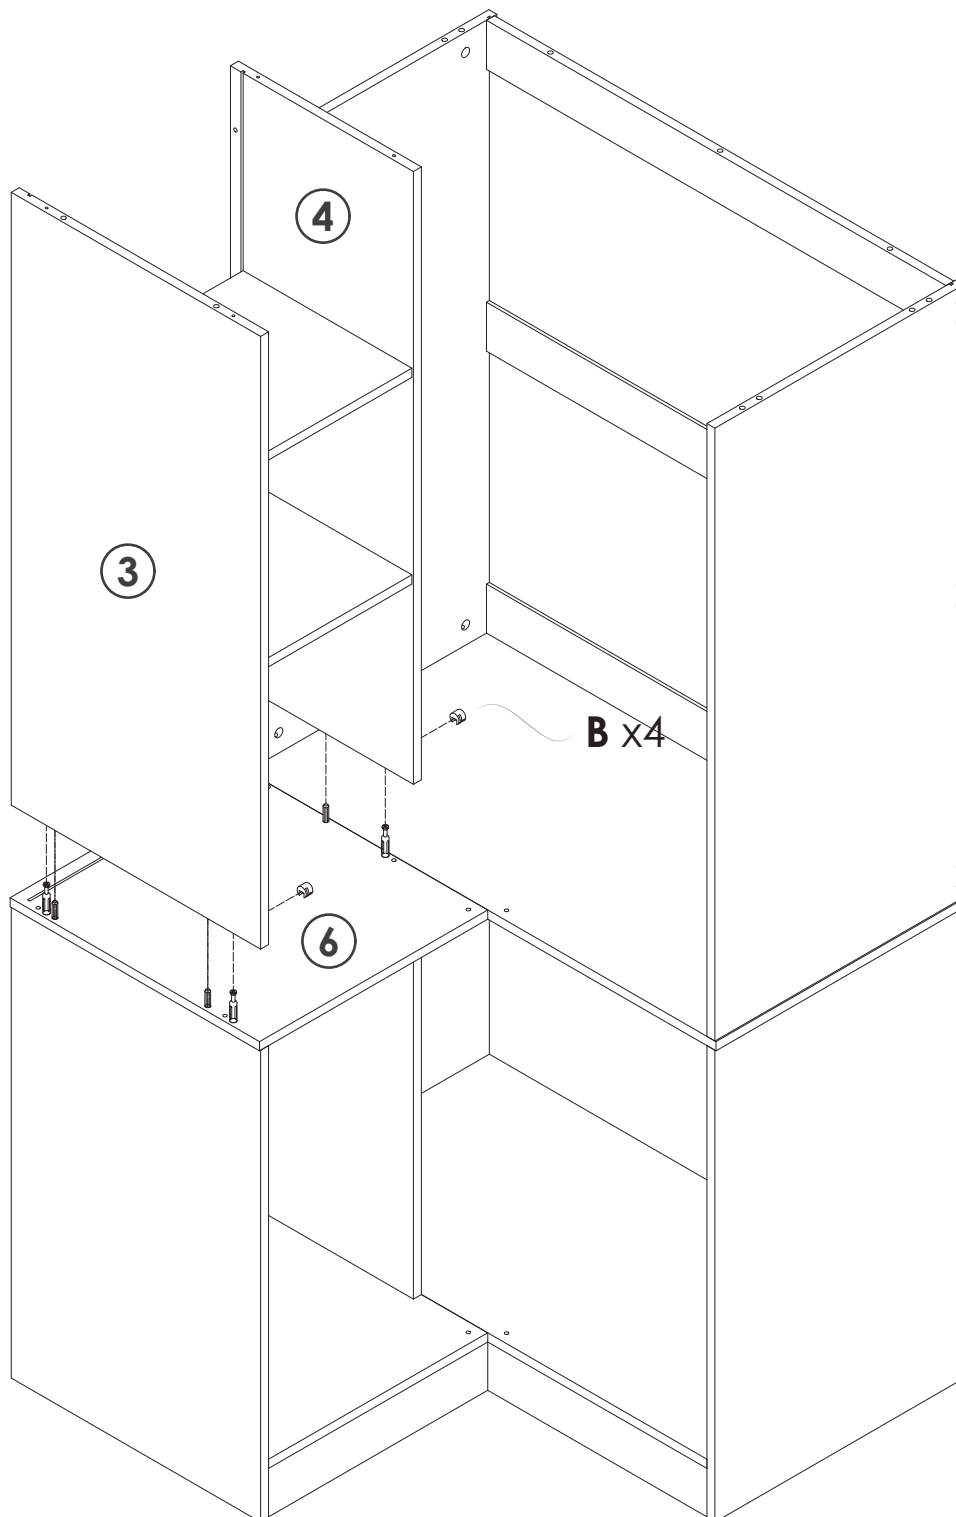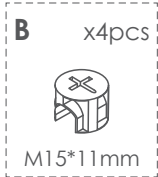




42

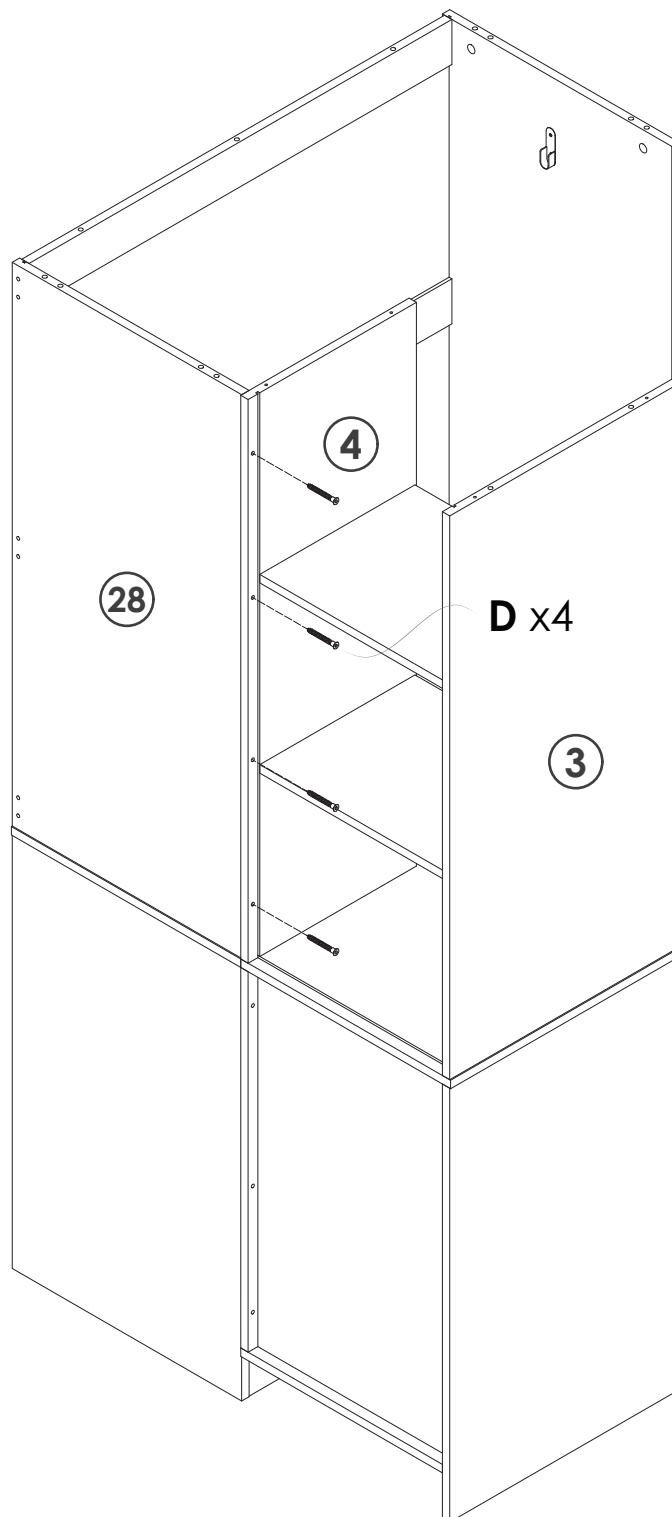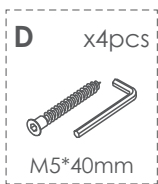



43

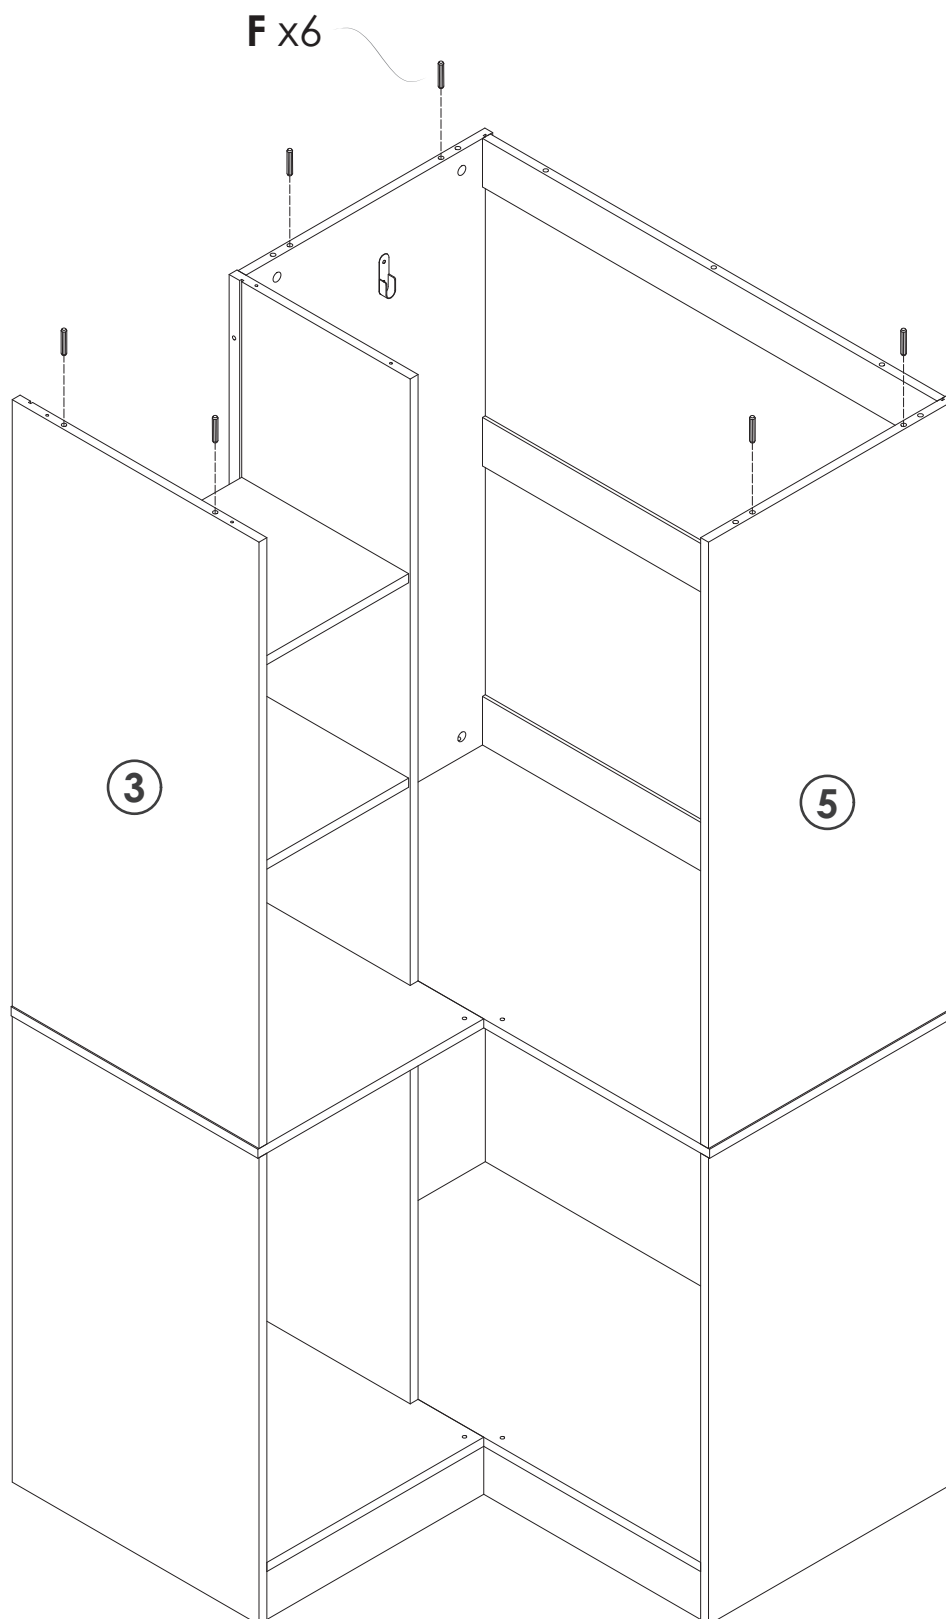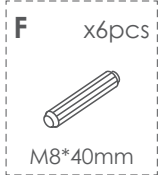


44

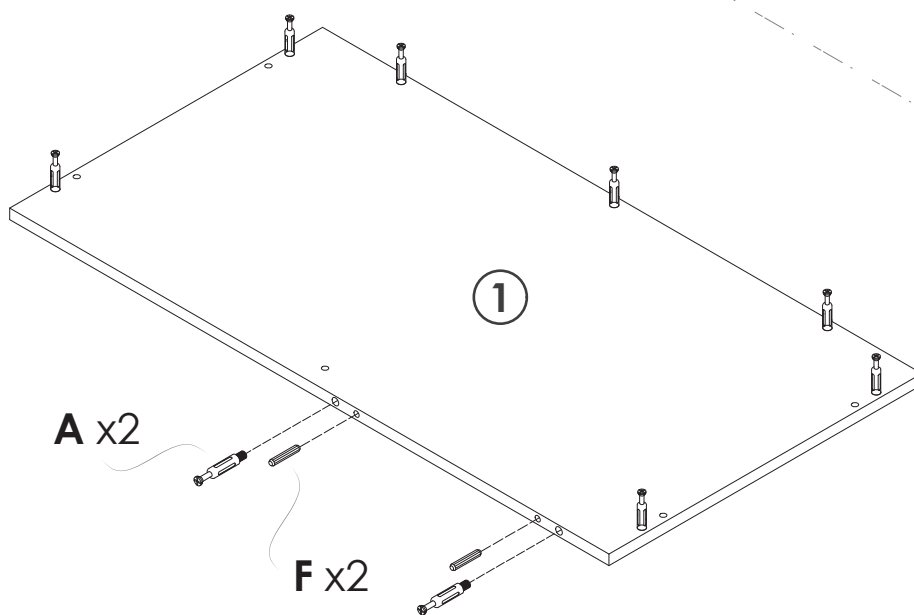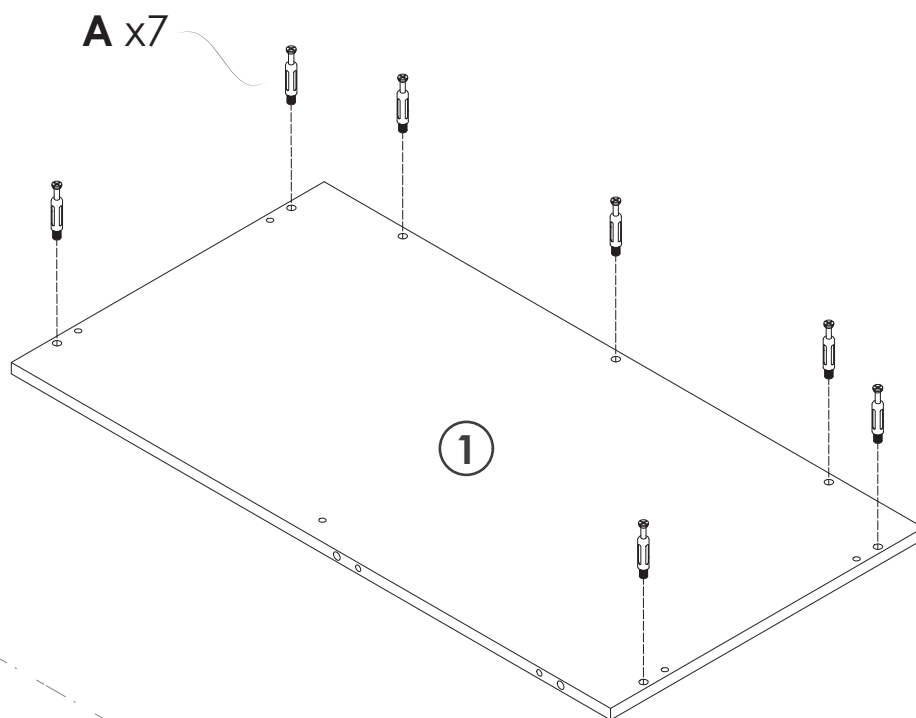
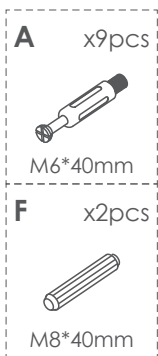


45

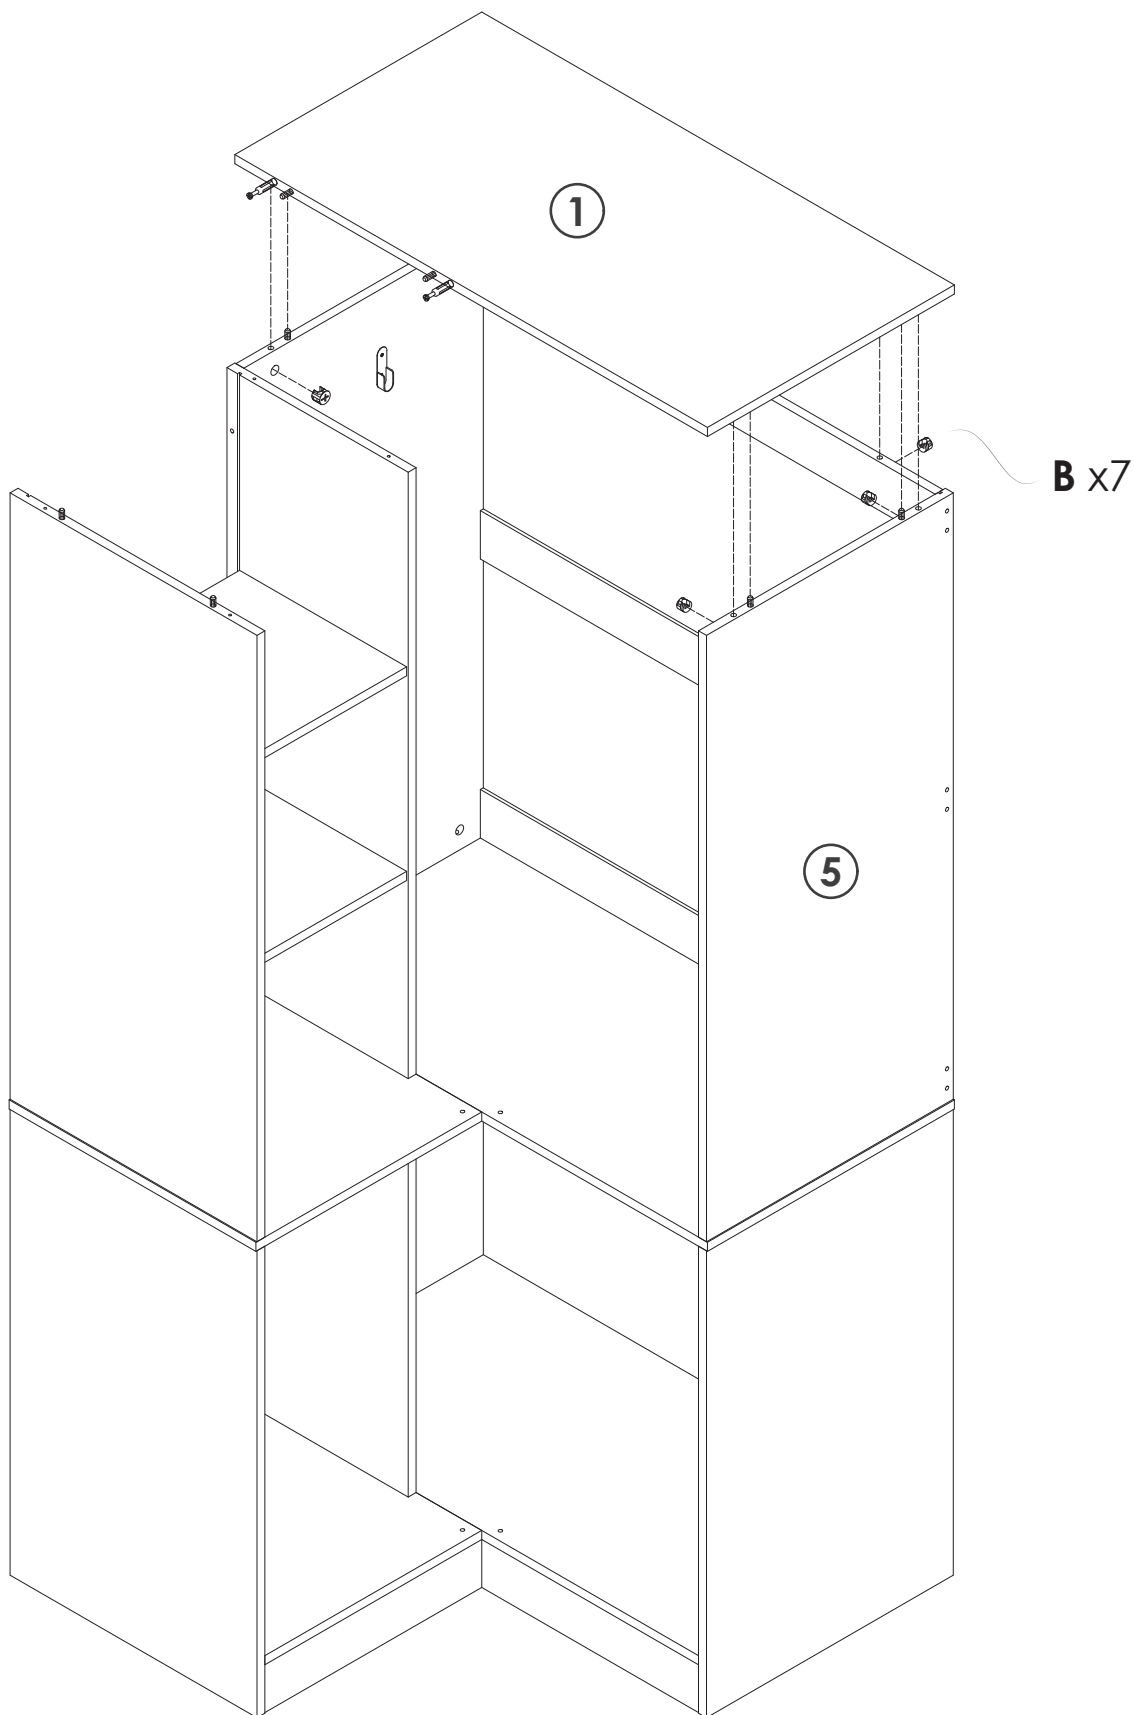
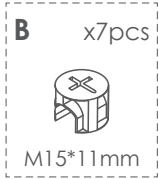


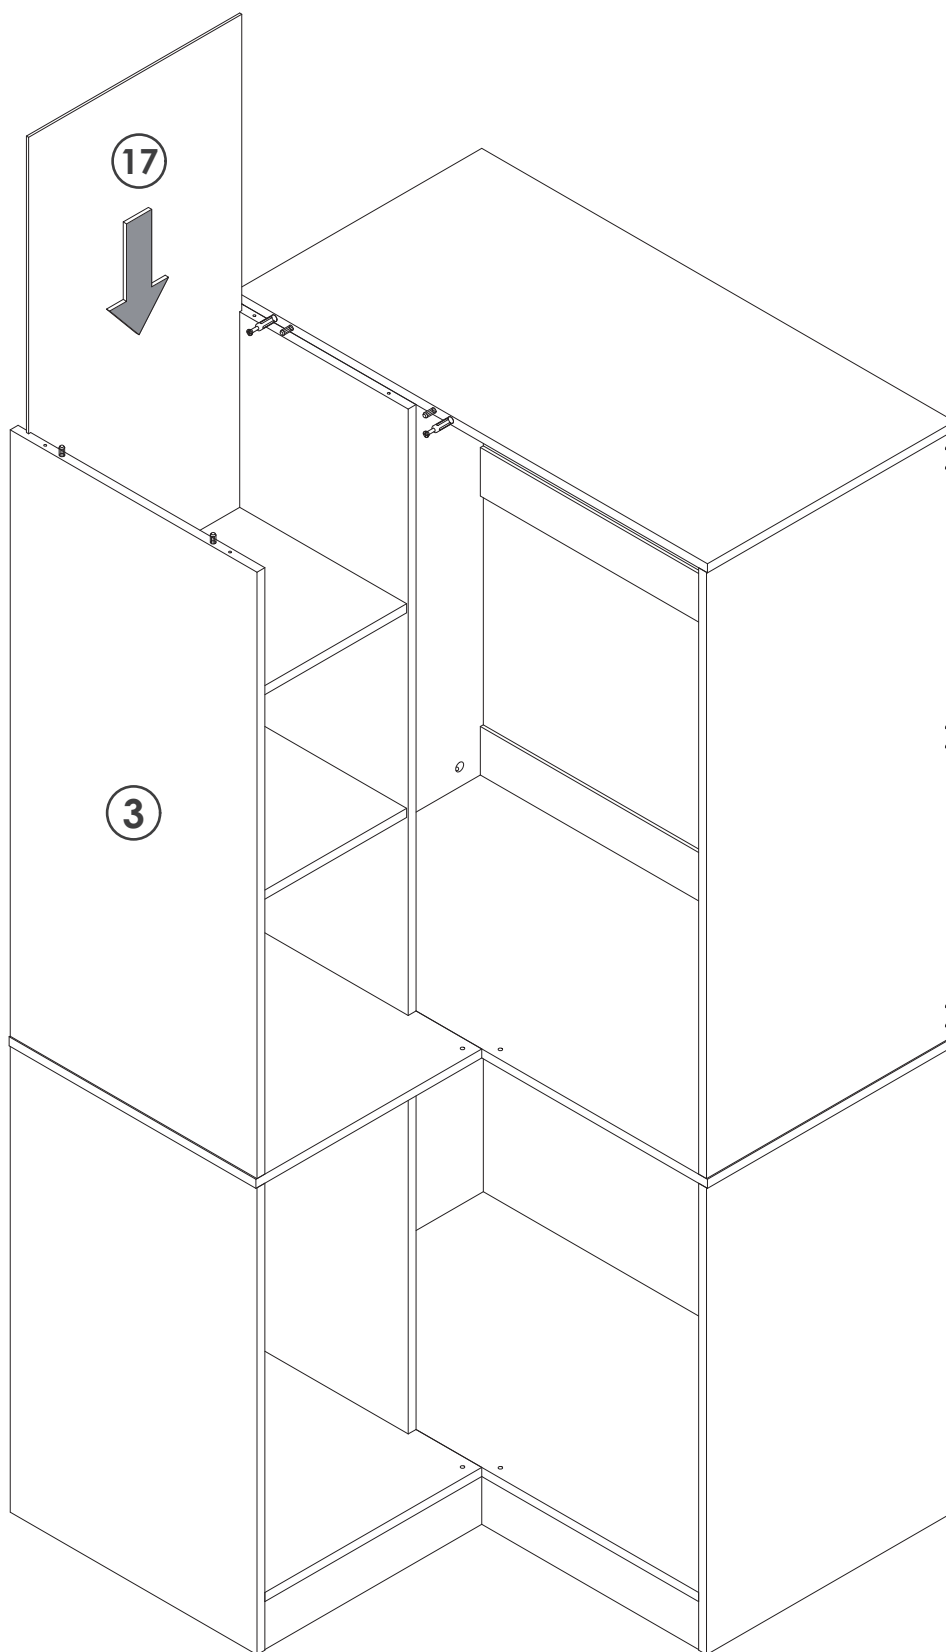



47

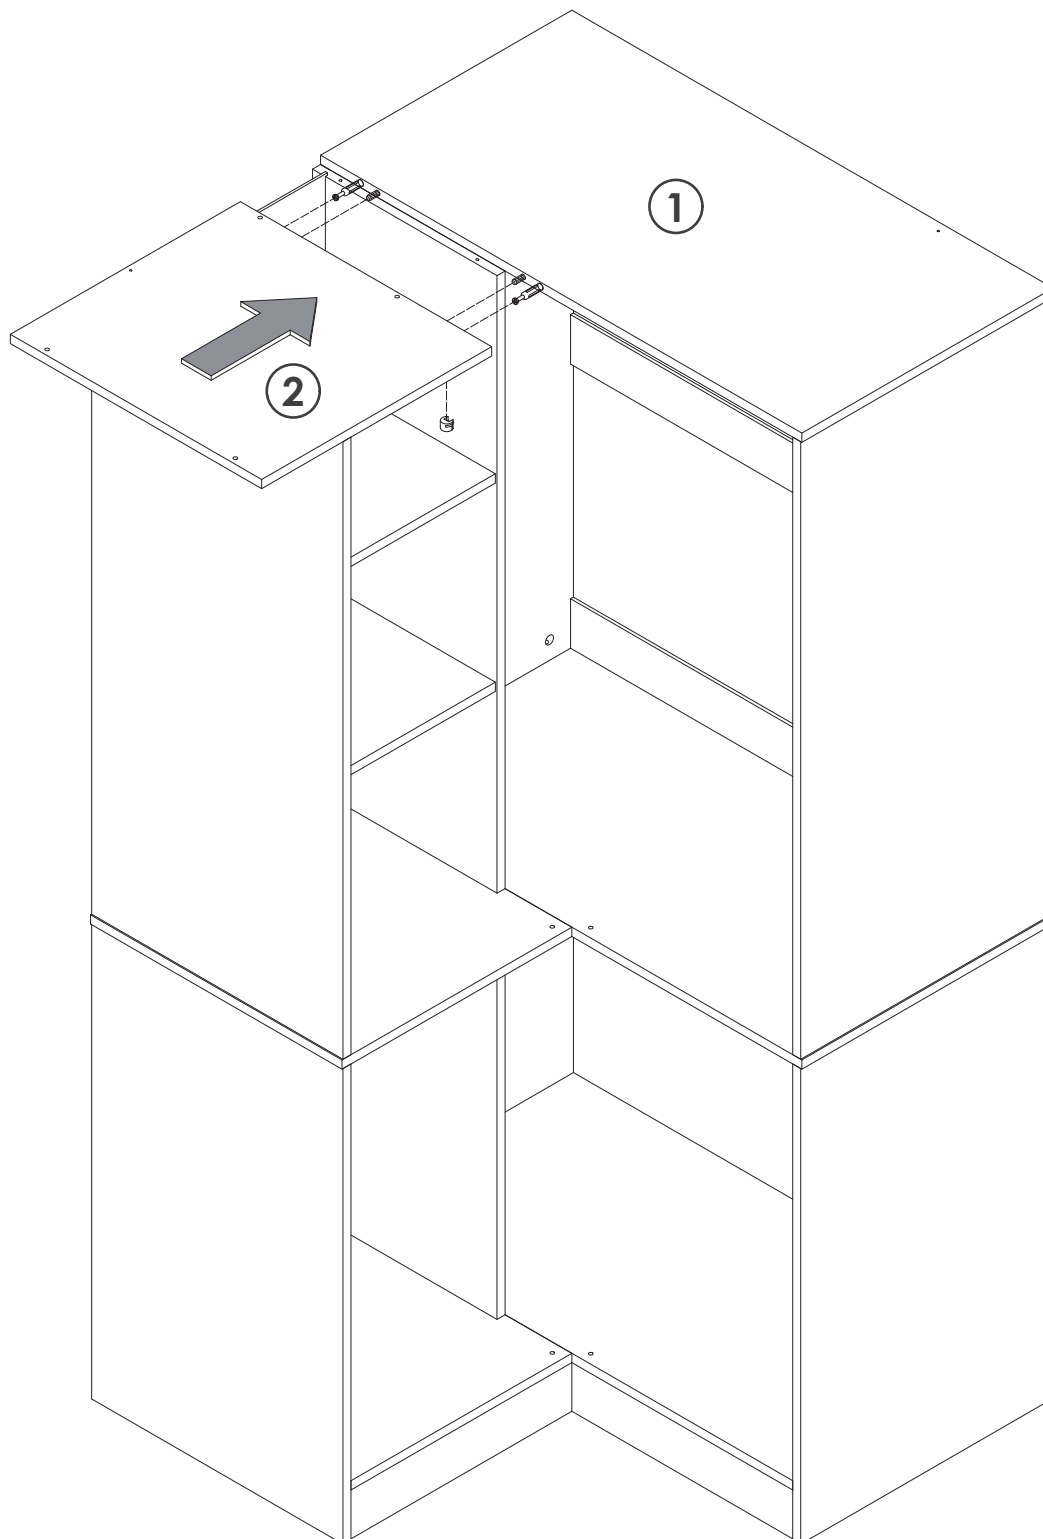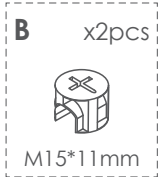



48

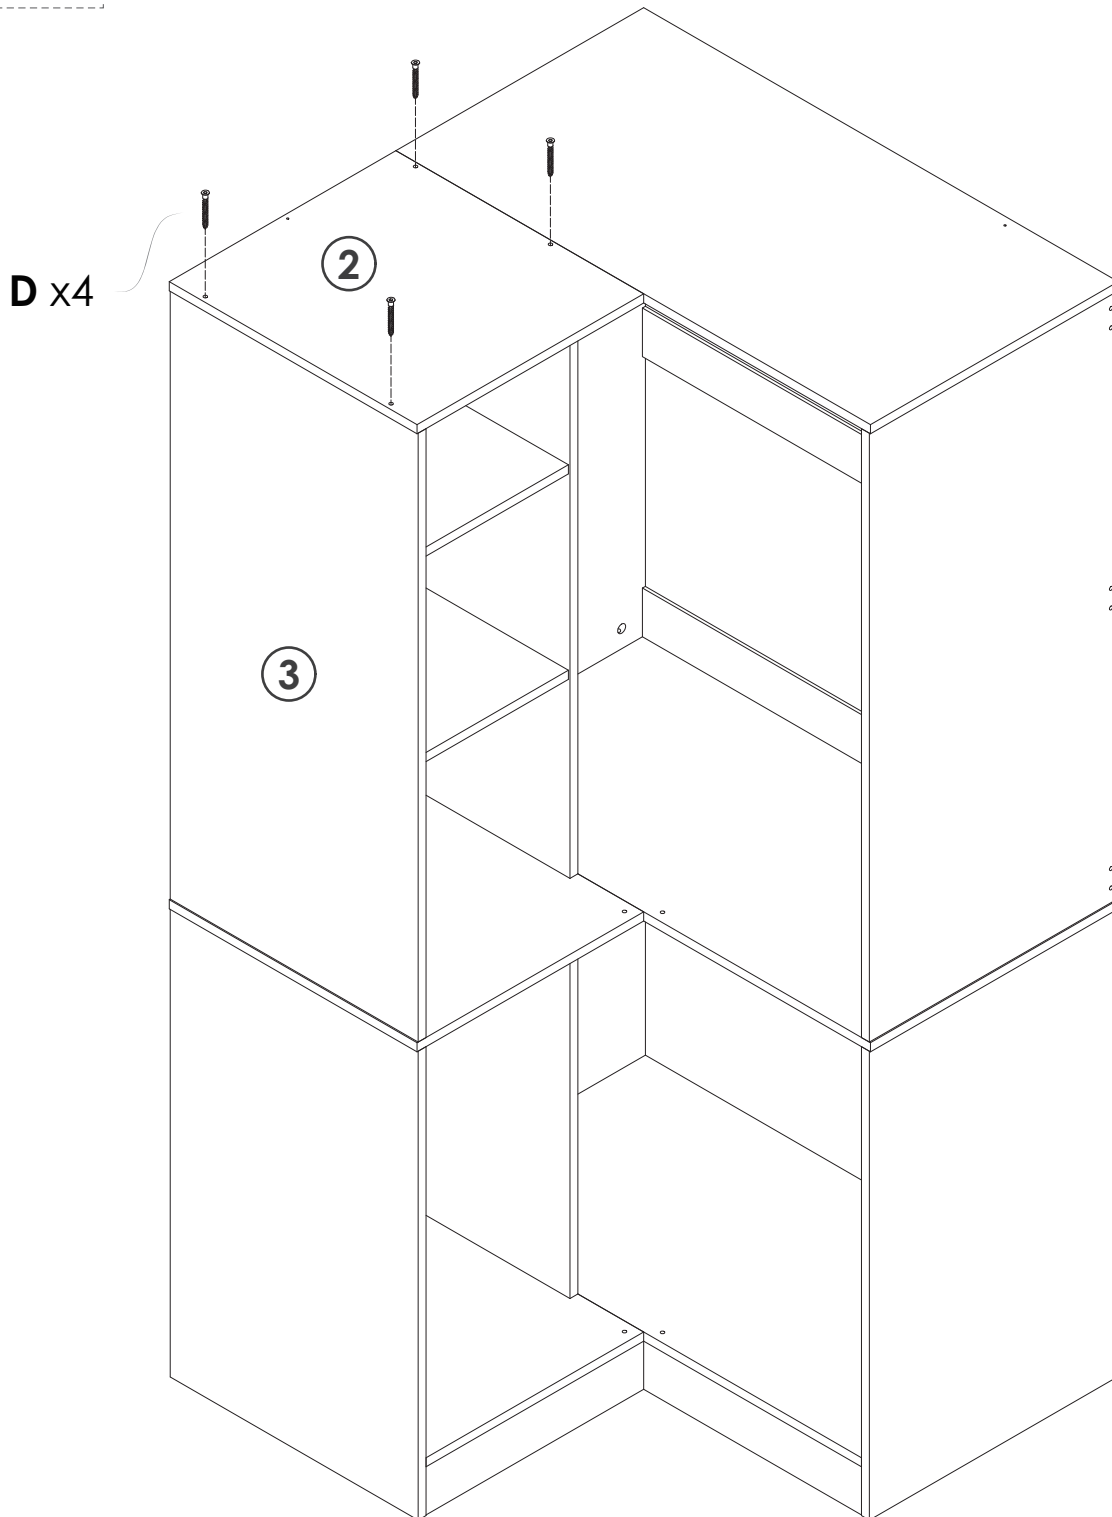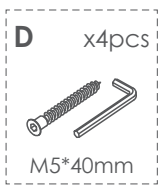


49

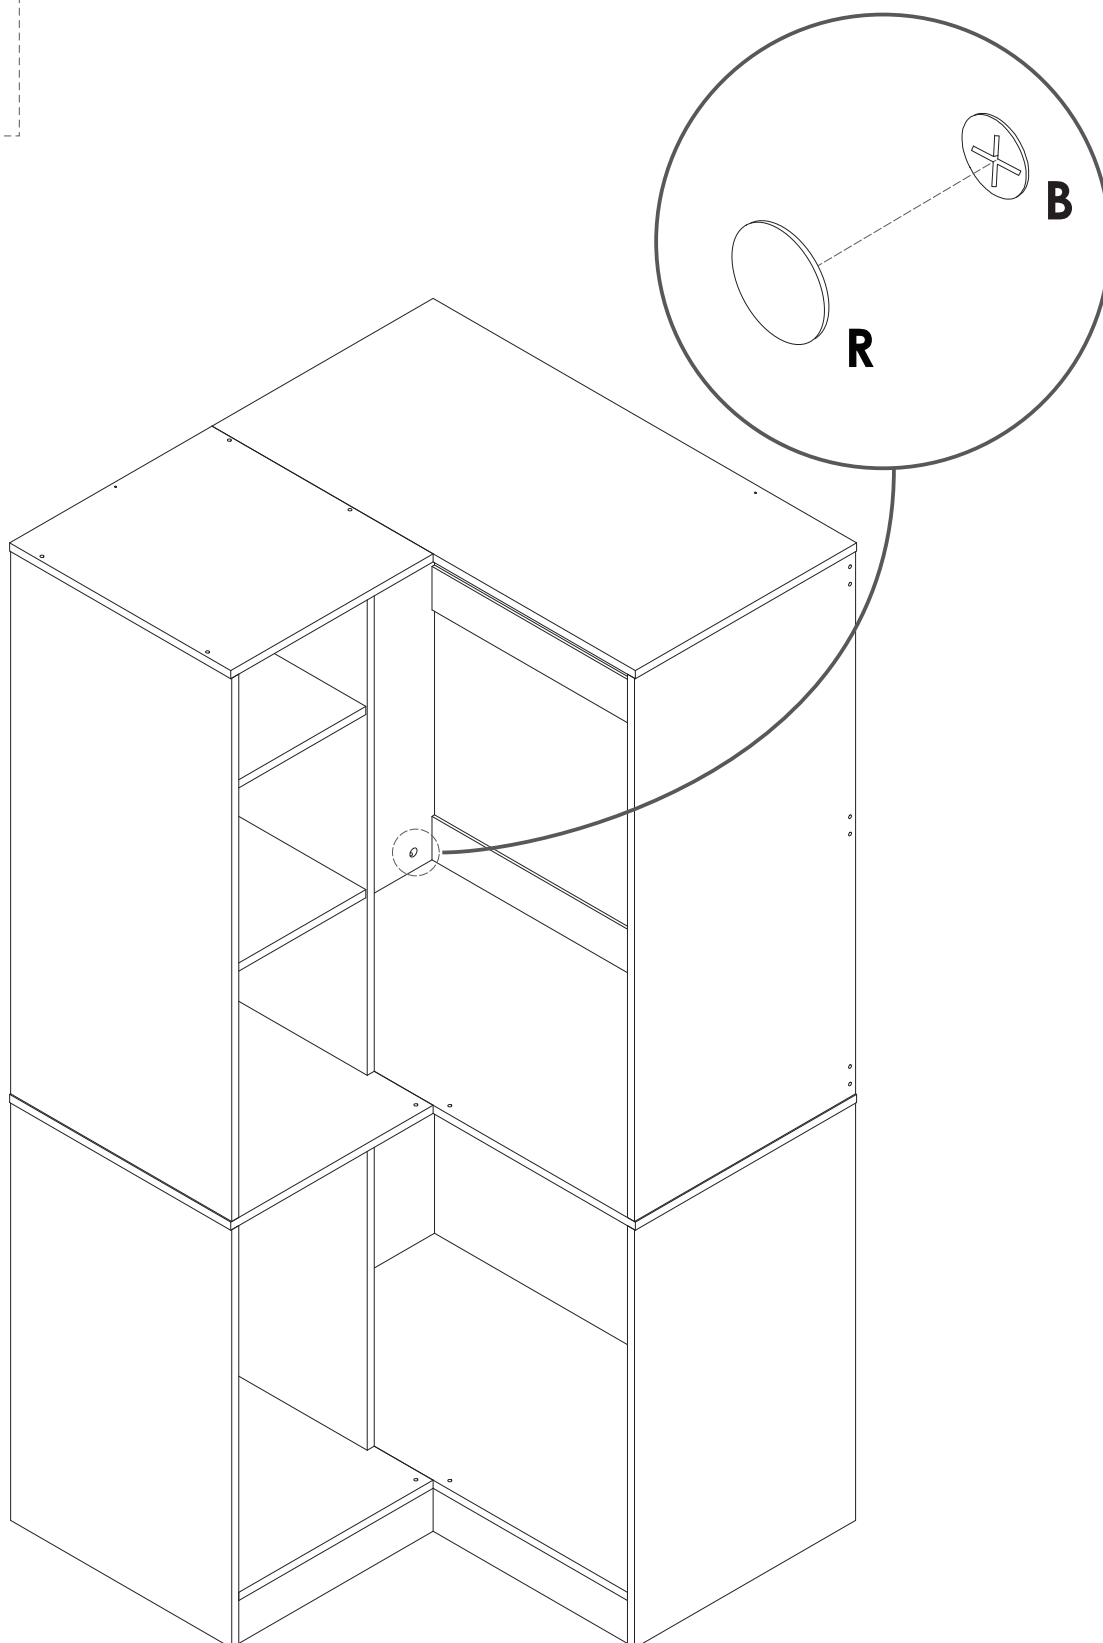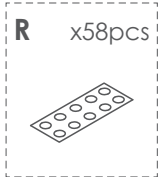

50

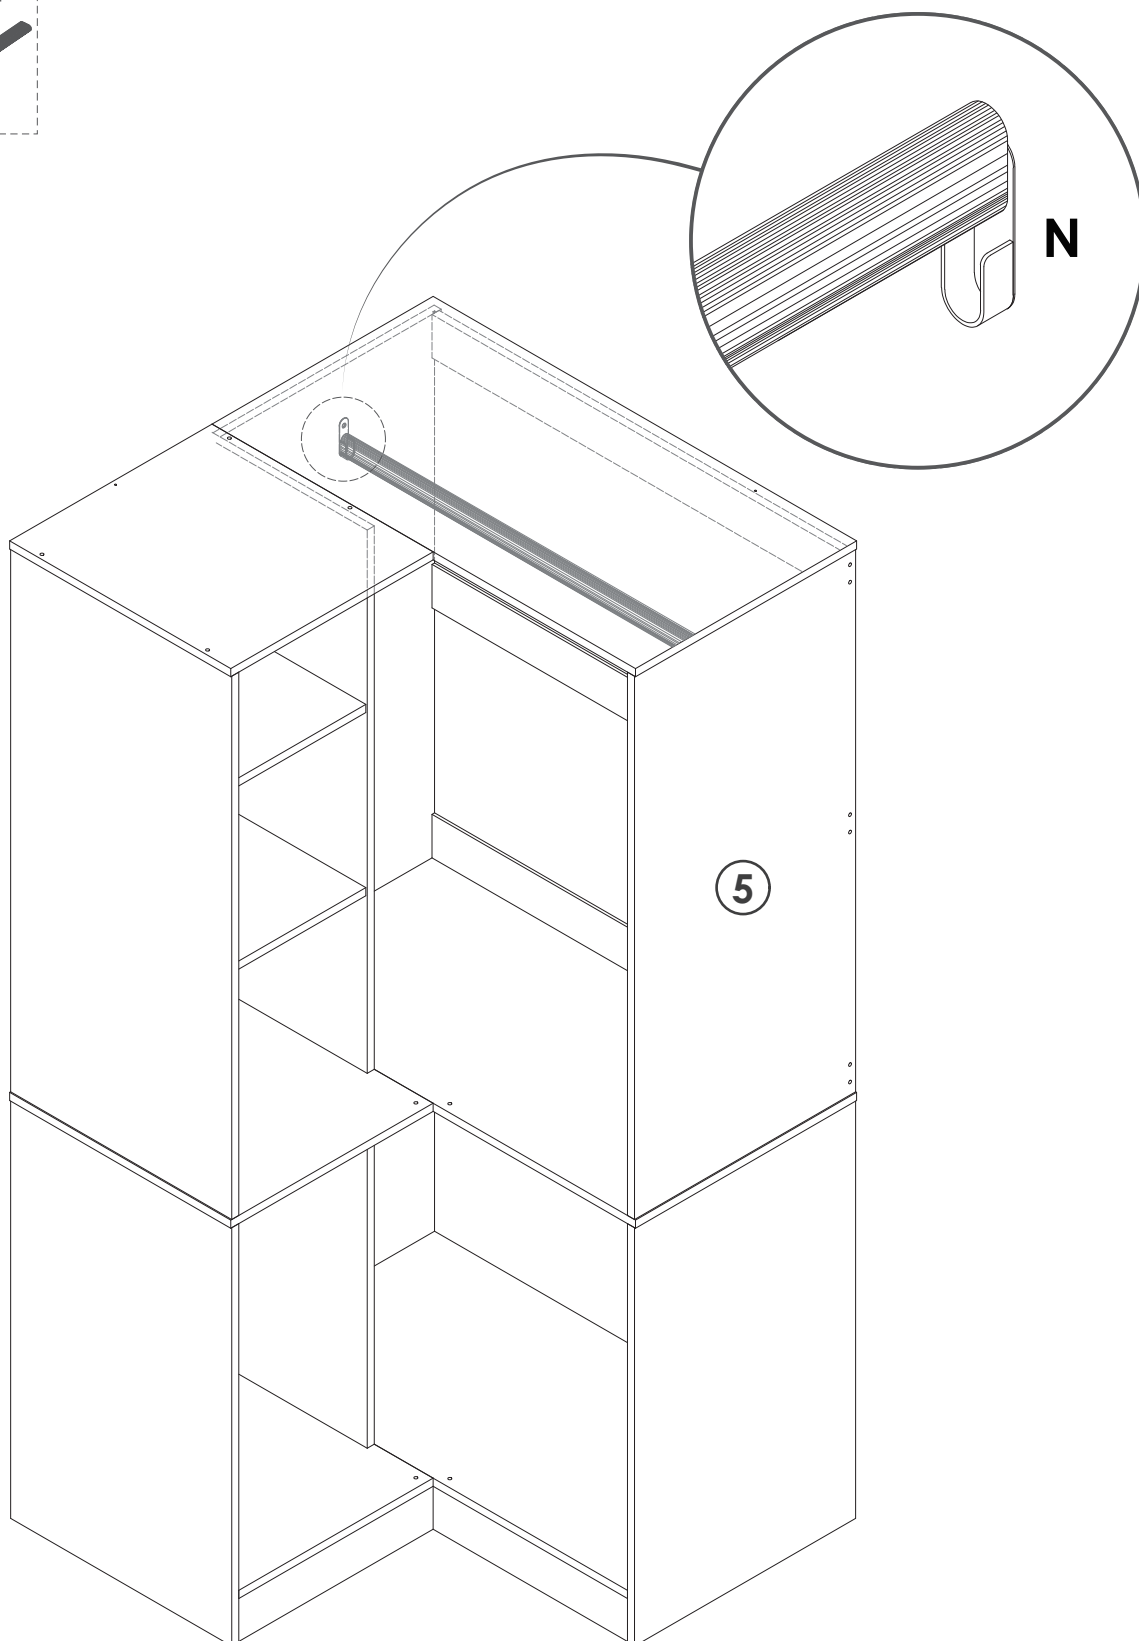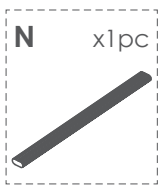

51

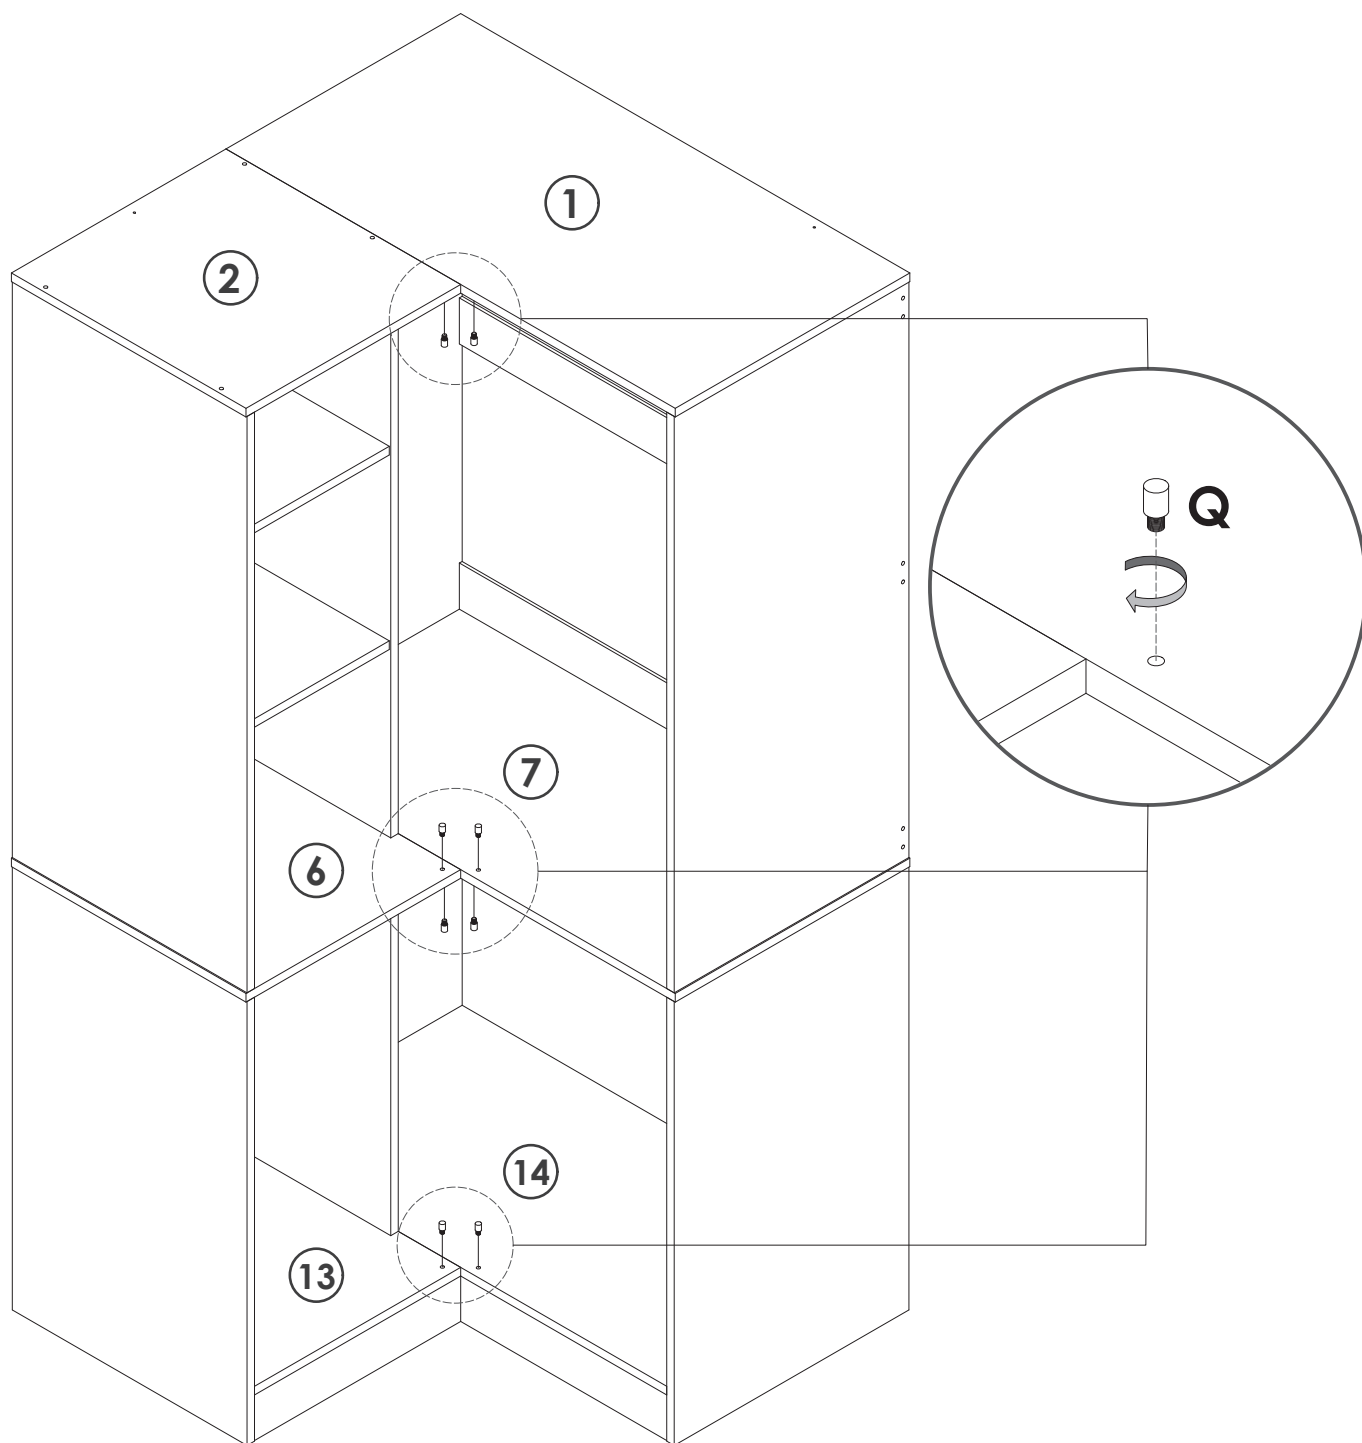



52

C x4pcs



M3.5*14mm

 J x2pcs

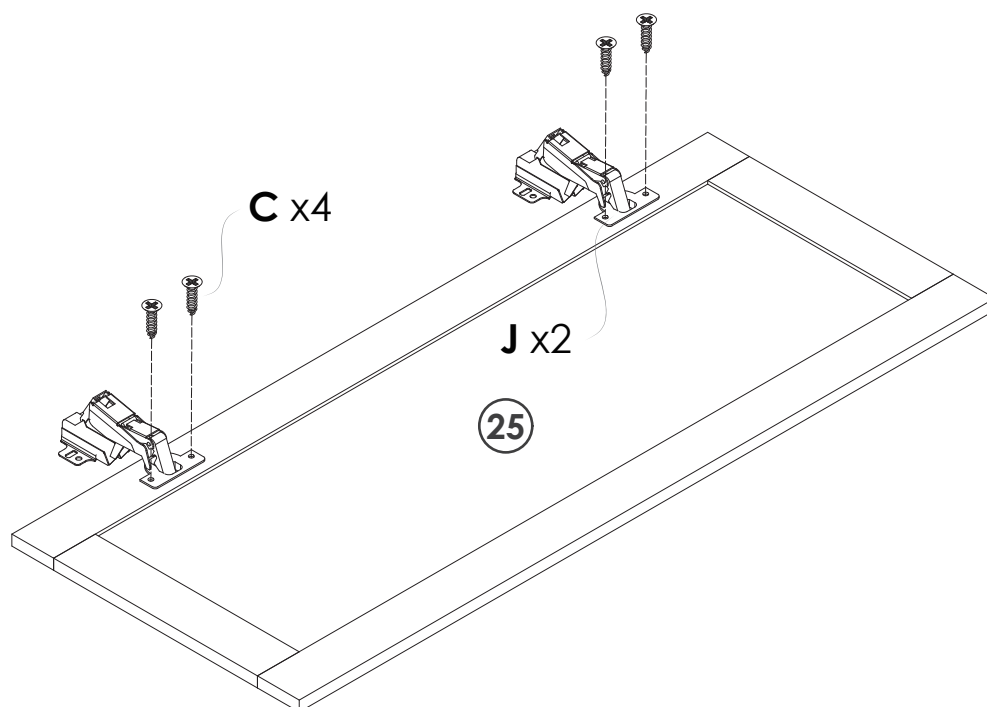



53

C x4pcs






M3.5*14mm

 J x2pcs












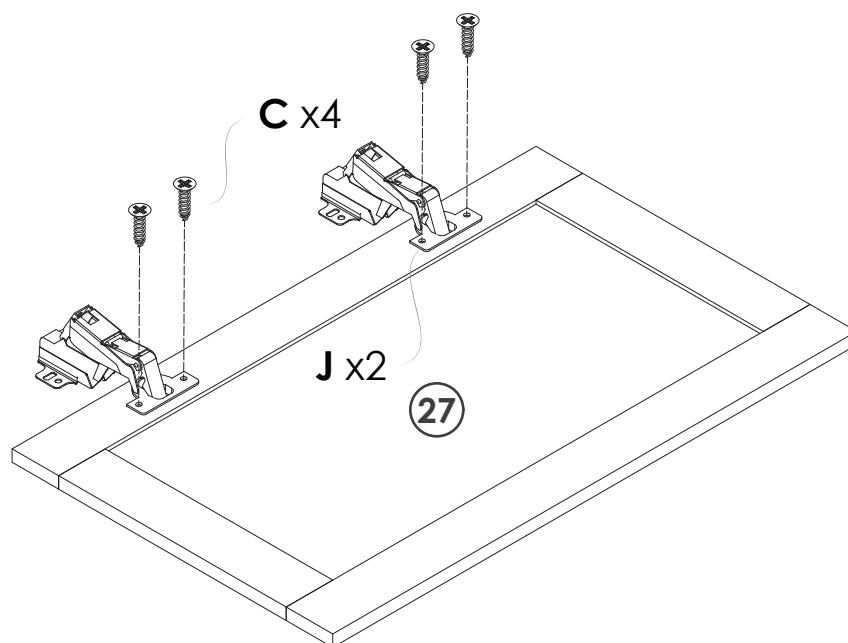



54

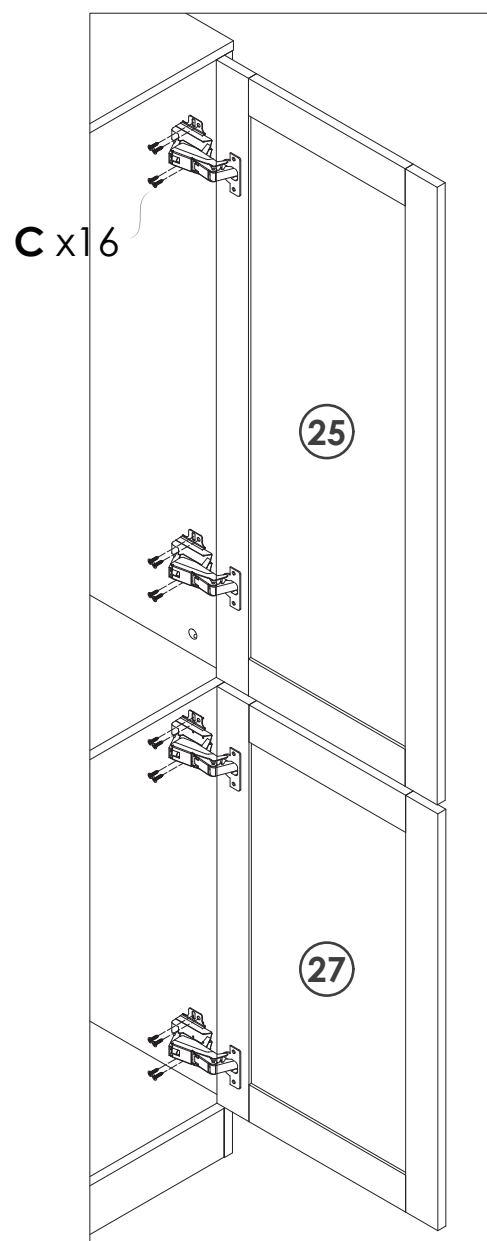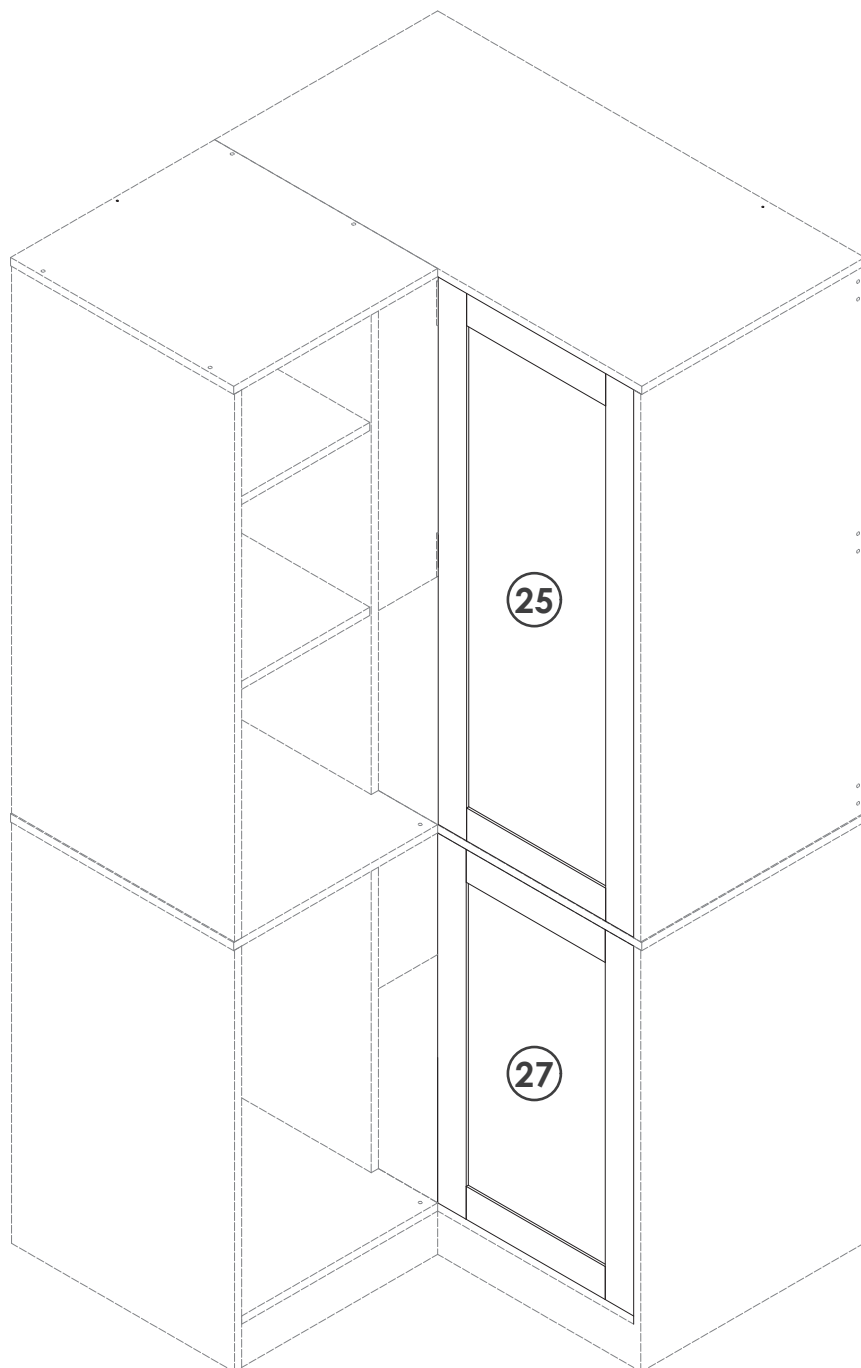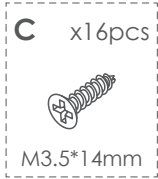

The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.

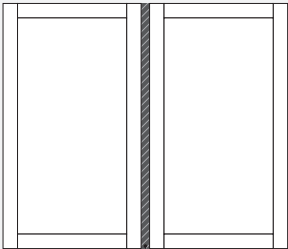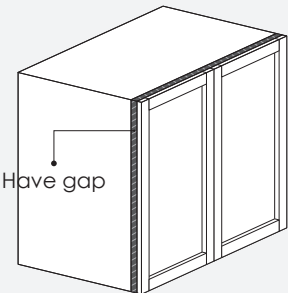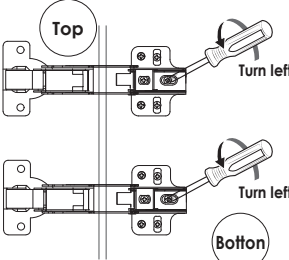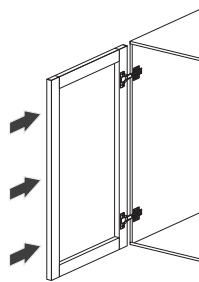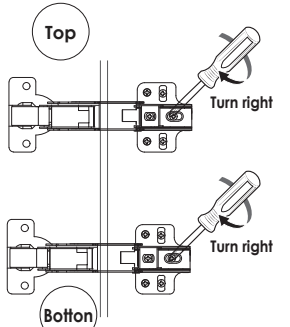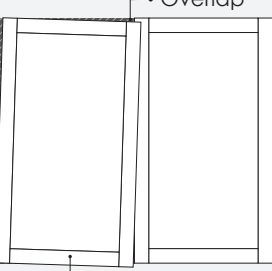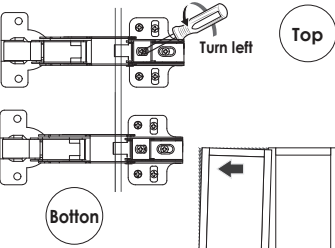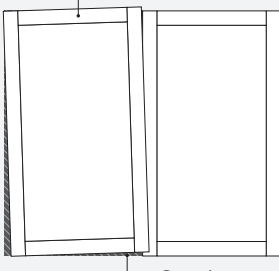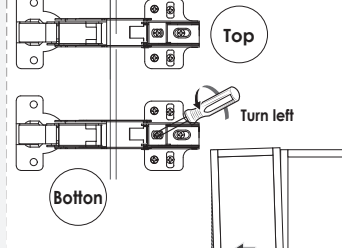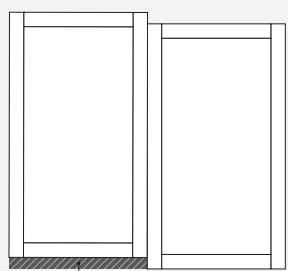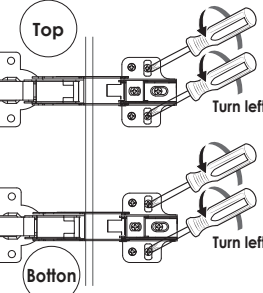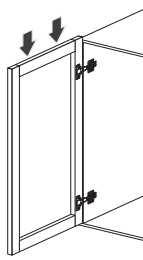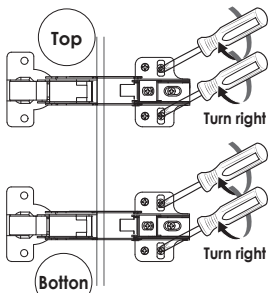Obvious gaps between doors or Doors don't look closed  Have gap	1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little. Top Turn right Bottom Turn right The left door → Turn right Top Turn right Bottom The right door ← * If the 2 doors are overlap, please turn the "internal & external screw" to the left.		
When door is crooked  Have gap	1 Rotate the "front and rear screws" to the left.  Top Turn left Bottom Turn left *After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.	2 Push the door to the cabinet. 	3 Rotate the "front and rear screws" to the right.  Top Turn right Bottom Turn right
When door is leaning  Overlap Protruding to the underside	Turn "internal & external screw" to the left can make the top of the door tilted outward.  Top Turn left Bottom Protruding to the upside  Overlap Turn "internal & external screw" to the left can make the bottom of the door tilted outward.  Top Turn left Bottom		
When the door is higher on top  Have gap	1 Turn "up & down screw" to the left.  Top Turn left Bottom Turn left 2 Lower the door's height so that 2 doors are of the same height.  3 Turn "up & down screw" to the right.  Top Turn right Bottom Turn right *If the door is lower on bottom, please lift up the left door slightly on step 2.		

 
C x4pcs

C x4pcs



M3.5*14mm

J x2pcs




P x1pc



K x1pc



M4*20mm

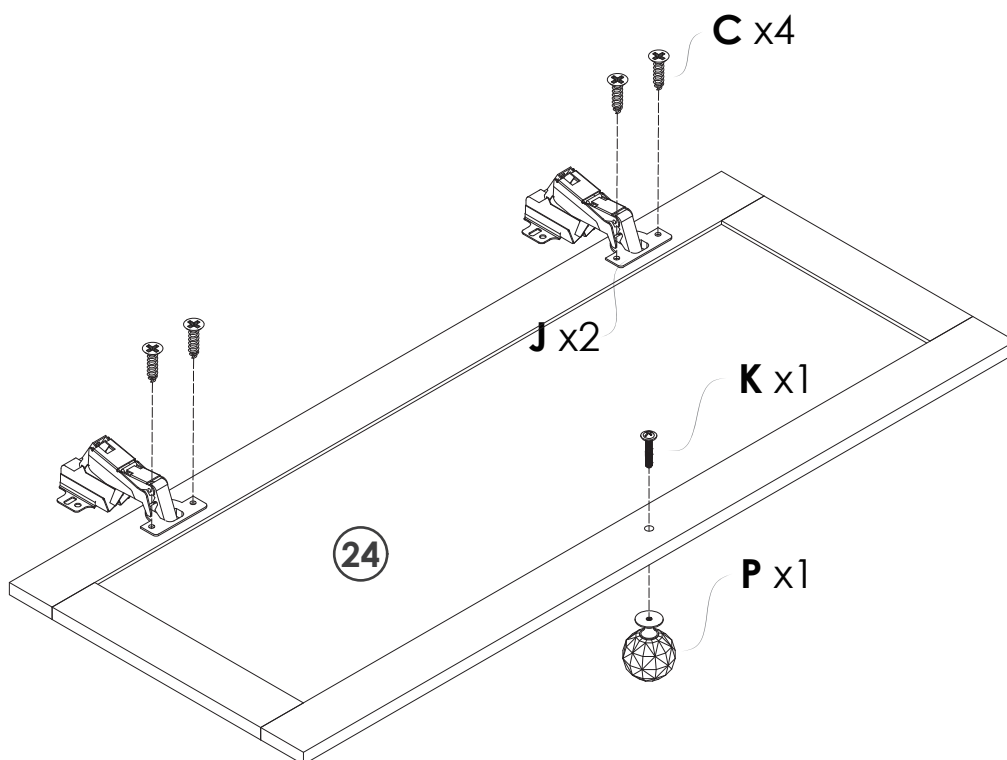


56

C x4pcs



M3.5*14mm

 J x2pcs




P x1pc





K x1pc




M4*20mm

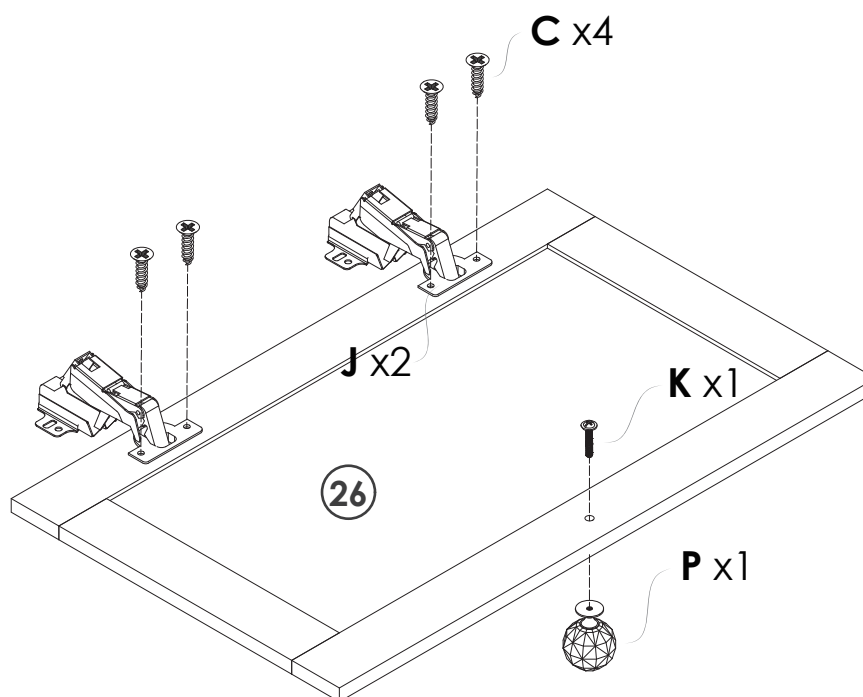




57

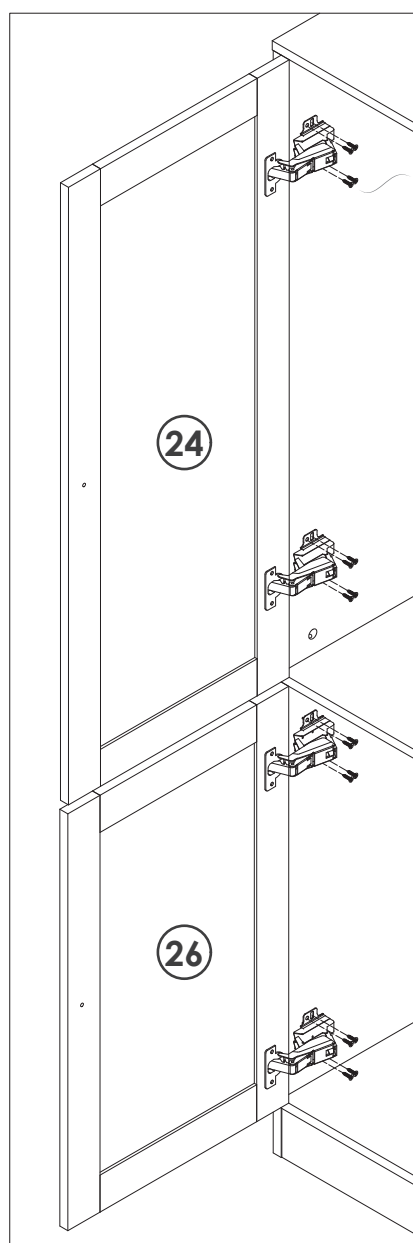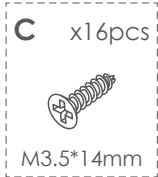

C x16

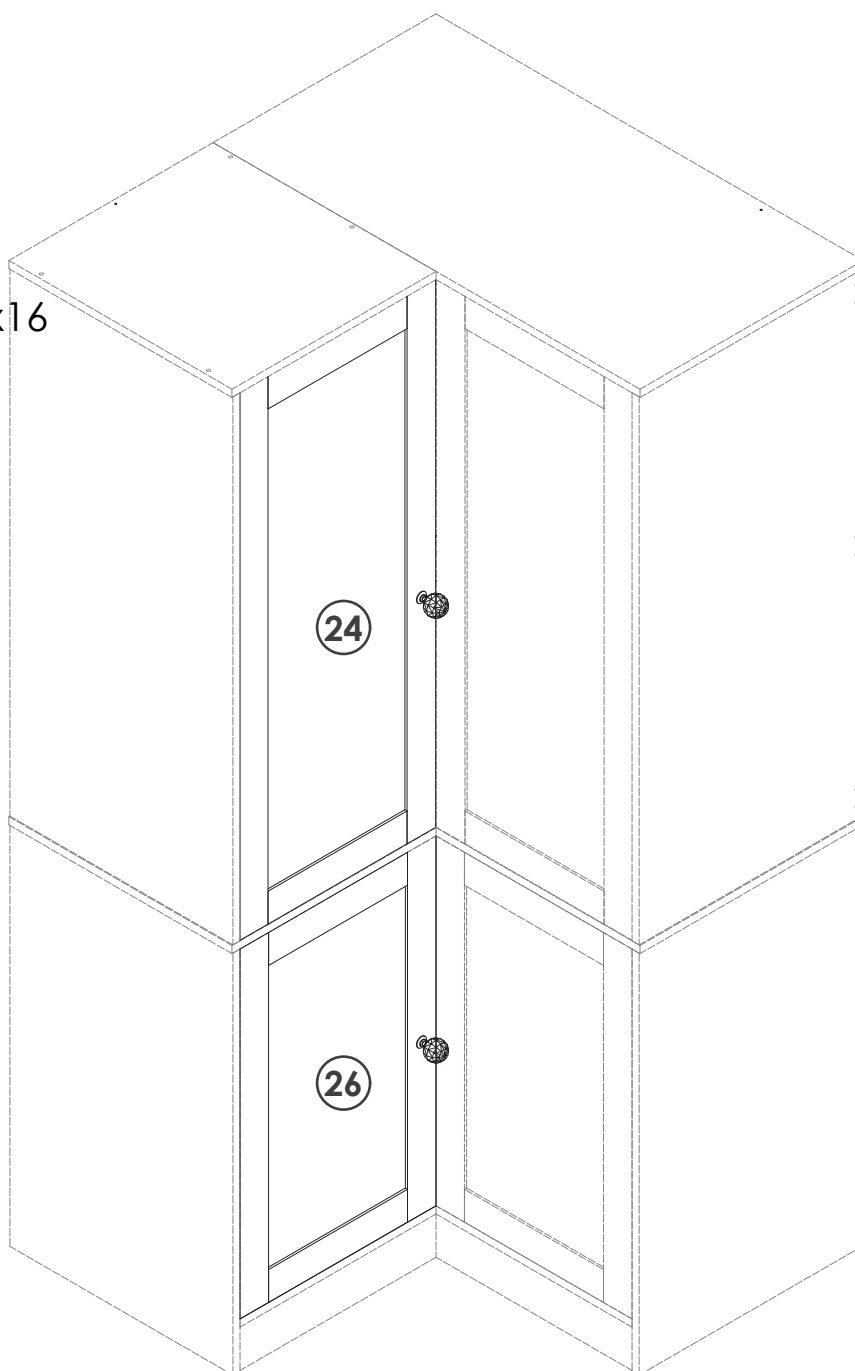


58

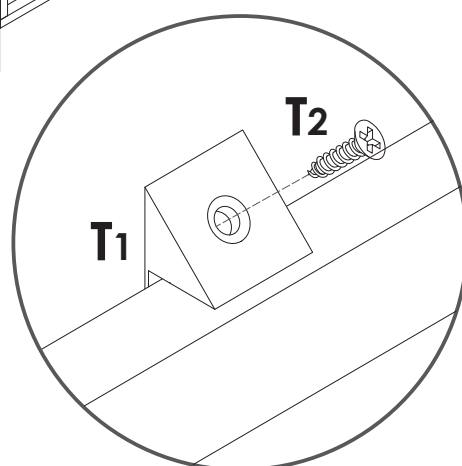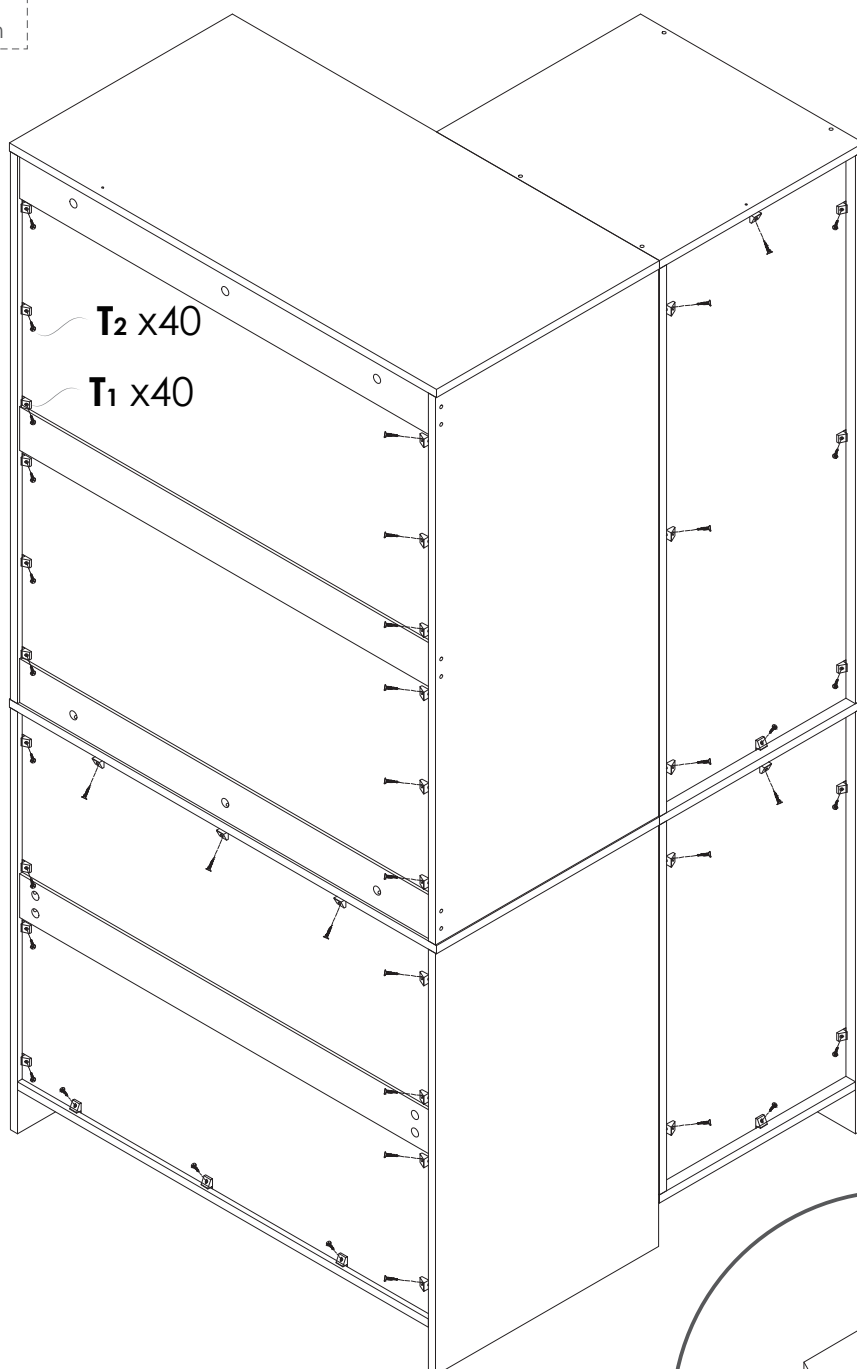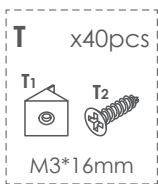

59

Mandatory!

For safety reasons, we strongly recommend you follow these instructions to install the anti-tipping hardware, when installed properly, this hardware may prevent the unit from tipping unexpectedly.

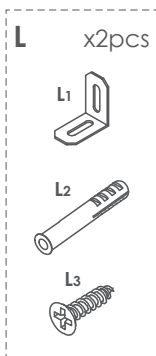

! WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER open more than one drawer at a time.
- NEVER put a TV on this product.
- Place heaviest items in the lowest drawers.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.



This is a permanent label. Do not remove!

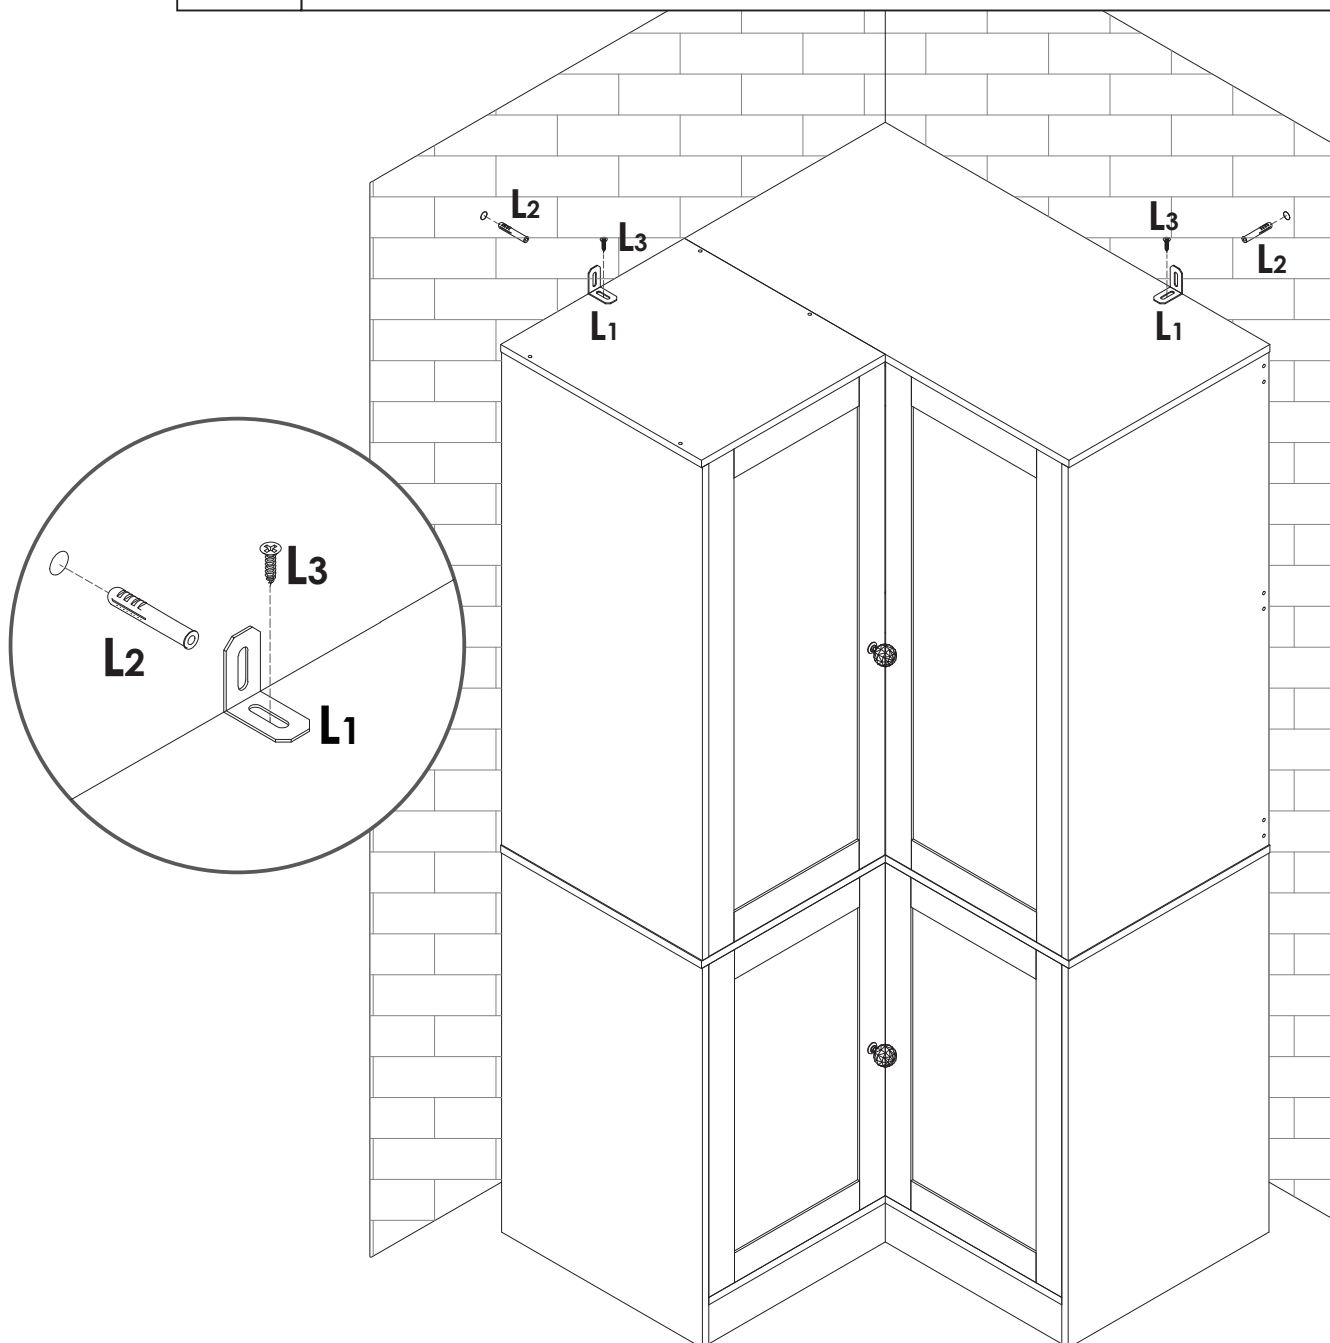

60

