

Oshion



ASSEMBLY INSTRUCTIONS

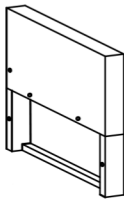 
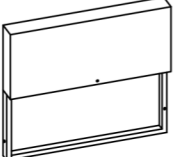 
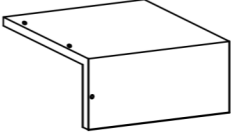 
 
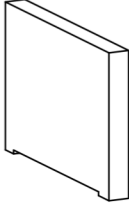 
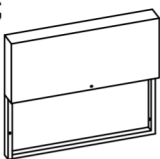 
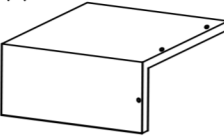 
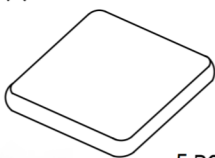 
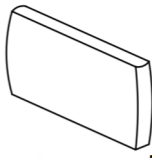 
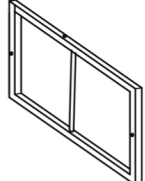 
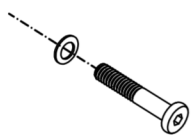 
 
 
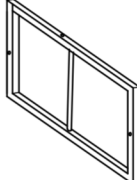 
 
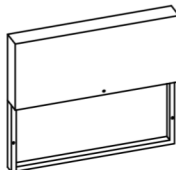 
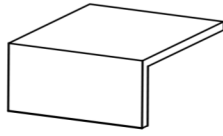 
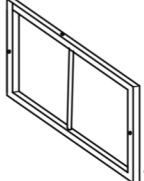 
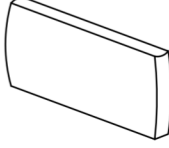 
 
 
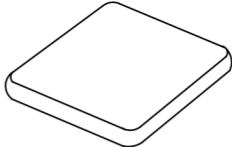 
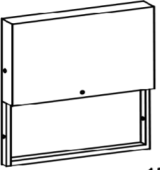 
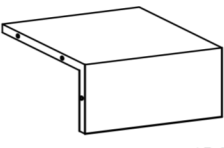 
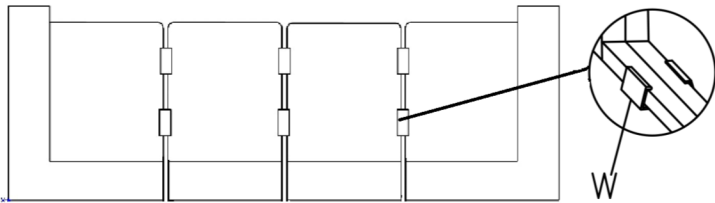 
Oshion

PARTS AND HARDWARE

Avoid using sharp object such as a knife to cut and open the packing as you may accidentally damage the upholstery

Do not fully tighten bolts until assembly is complete

PARTS LIST

A1  2PC	D  1PC	E  1PC	F  8 PCS	A2  2PCS
G  1PC	H  1PC	N  5 PCS	O  5 PCS	U  2 PC
S  M6*35 65 PCS	R  4PCS	Q  M6*20 8 PCS	V  1PC	X  2 PC
W  6 PCS	I  2 PC	J  2 PC	L  2PCS	T  2PC
K  1PC	M  1PC	P  1PC	Z  1PCS	
B  1PC	C  1PC			
				

ASSEMBLY

