 


142.50 mm

### Solar Post Light


Please read the manual carefully before use.

Model: 2020P-solar

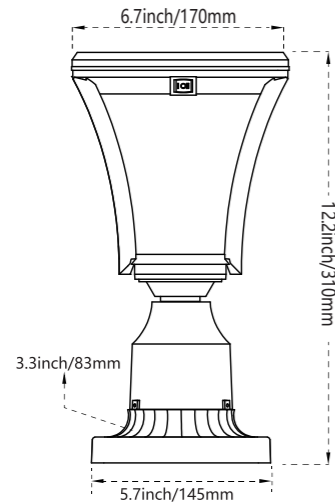

Specification	
Power of Light	0.8W-2.3W
Output of Light	3.7V
Input of Solar panel	6V/ 3.3 W
Color temperature	Daylight White 6500K&Warming Light 3000K
Brightness	65-185 Lumen
Light Source	20 LED Chip
Material	Aluminum Alloy & Glass
Waterproof	IP44
Power Source	Solar
Dimension of the Base	145*145mm (5.7*5.7inch)
Switch Type	ON/OFF (the switch is at the side of the middle bezel)
Battery	Rechargeable 18650 Lithium Battery
Charging Time	12 Hours
Working Time	6-8 Hours


Switch

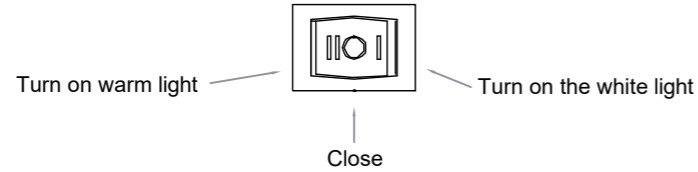

### Installation Steps

**Note:** Please install the light to a place about 6.5FT/2M above the ground, which is directly exposed to the sunlight.

1. Install the post light above the base with the small screws.
2. Drill 4 holes with the electric drill on the post that you want to install the light.
3. Install the light base with the screws and plastic anchors.
4. Turn on the switch under the solar panel bottom and let the post light be fully charged under sunlight for 12 hours.
5. Keep the switch on, it will automatically turn off during the day and charge in the sunlight. When the night falls, it will automatically turn on.

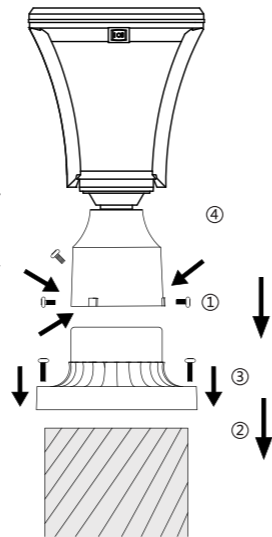


210.00 mm

142.50 mm

### Package Include

- 1 x Solar Post Light
- 1 x Light Base
- 4 x Mounting Screws
- 4 x Plastic Anchors
- 3x Small Screws
- 1 x Use Manuel

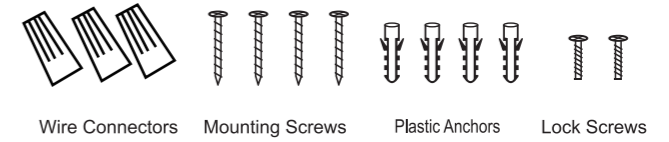

### Note:

1. Use of switch: the left switch is warm light, the right switch is white light, and the switch is closed in the middle.
2. Built-in dusk to dawn function: When the switch is on, it will not be on during the day. When the inductive switch senses the light, it will turn off. Only when the switch is turned on at night or when the light is dark, the light will be on.
3. It is recommended to install the post light on the stone post
4. Please turn on the switch under the solar panel bottom. The solar panel is charged only when the switch is on, and stops when the switch is off.
5. Please install the solar light in a place with direct sunlight
6. Please turn on the switch to fully charge the post light under sunlight for 12 hours before the first use to ensure that the battery can be used normally.
7. The light can be installed on the post (post is NOT included on this package)
8. The number of hours the light stays on depends on your geographical location, weather conditions and seasonal sunlight availability. Extreme cold weather also has a marked impact on battery capacity.

### After-sales Service:

Guarantee 3-Year warranty is provided for the product from the date of purchase. If you have any query, please contact us.  
 Note: An order ID with detail description or image is preferred when contacting our customer service, if possible.

### Warranty:

- (A) Failure or damage due to the improper use, repair or remodeling.
- (B) Failure or damage because of failing
- (C) Failure or damage caused by fire, earthquake, flood, lightning and other natural disasters.
- (D) Failure or damage when used other than its intended use.
- (E) Failure or damage caused by the third-party products other than this product.

Made in China

210.00 mm