 


TV STAND

ASSEMBLY INSTRUCTIONS

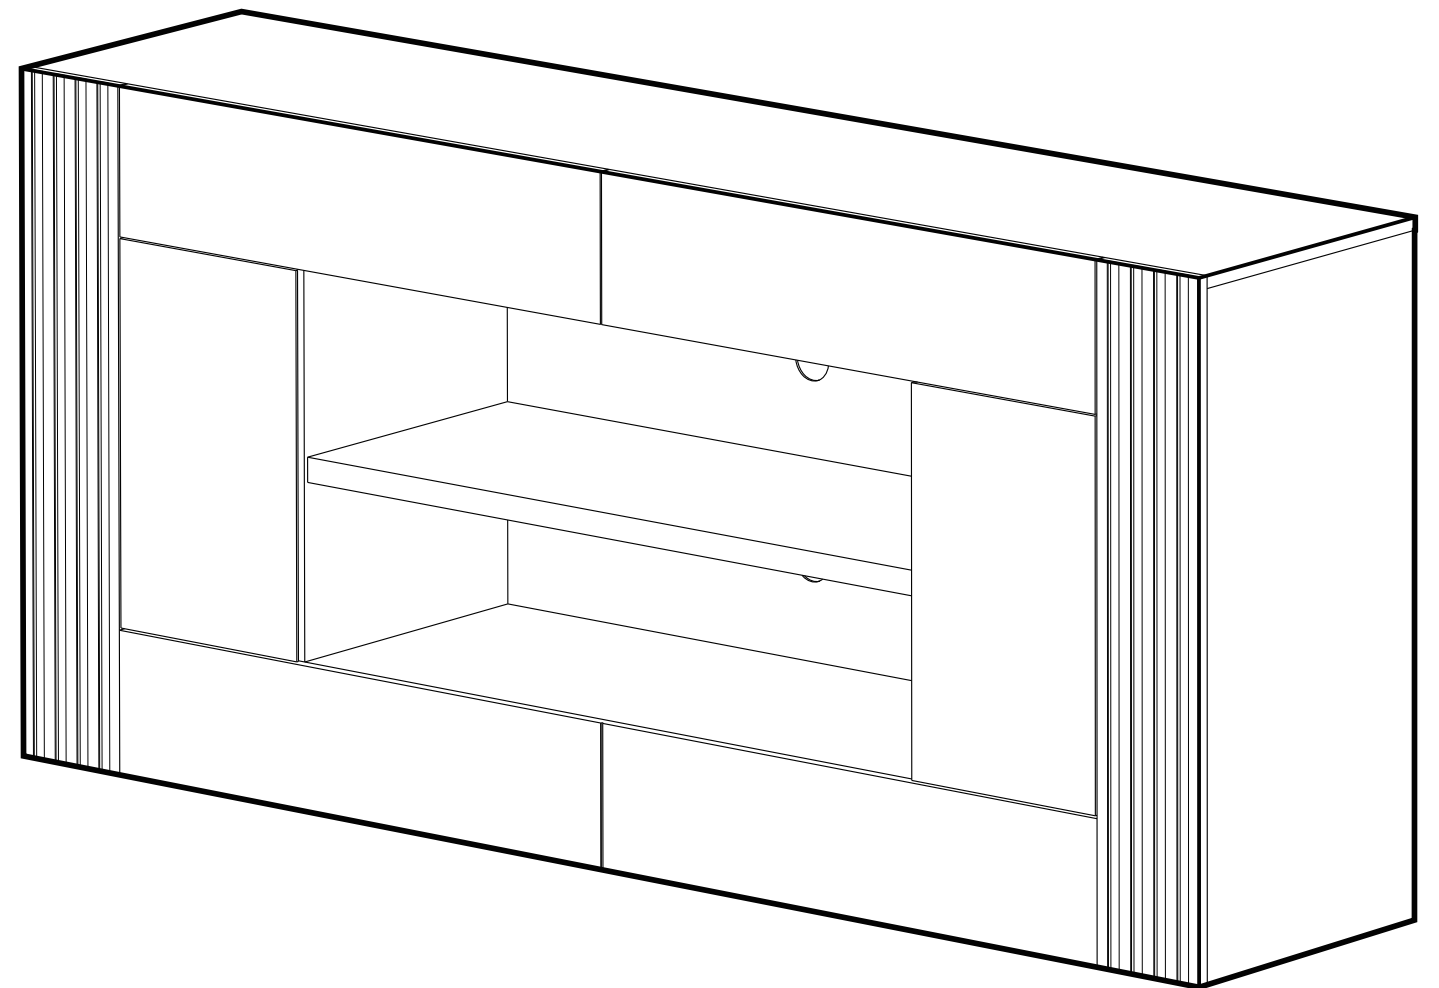



⚠ Warning	Flammable, please keep away from open flames!
⚠ Warnung	Entflammbar, bitte von offenen Flammen fernhalten!
⚠ Attention	inflammable, veuillez tenir à l'écart des flammes nues !
⚠ Attenzione	infiammabile, tenere lontano da fiamme libere!
⚠ Advertencia	Inflamable, mantener alejado de fuego!
⚠ Waarschuwing	Ontvlambaar, uit de buurt van open vuur houden!
⚠ Ostrzeżenie	Produkt łatwopalny, trzymać z dala od otwartego ognia!





⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

  - ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawer.

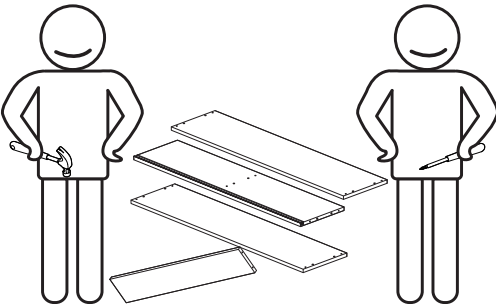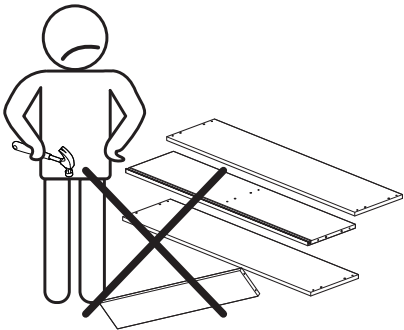


  We recommend at least 2 people for the assembly.

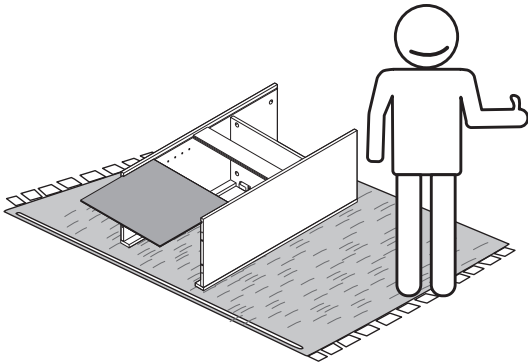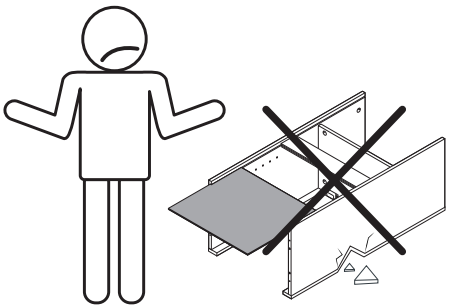


To prevent any damage during assembly, place a mat under the pieces.

 
PARTS DIAGRAM

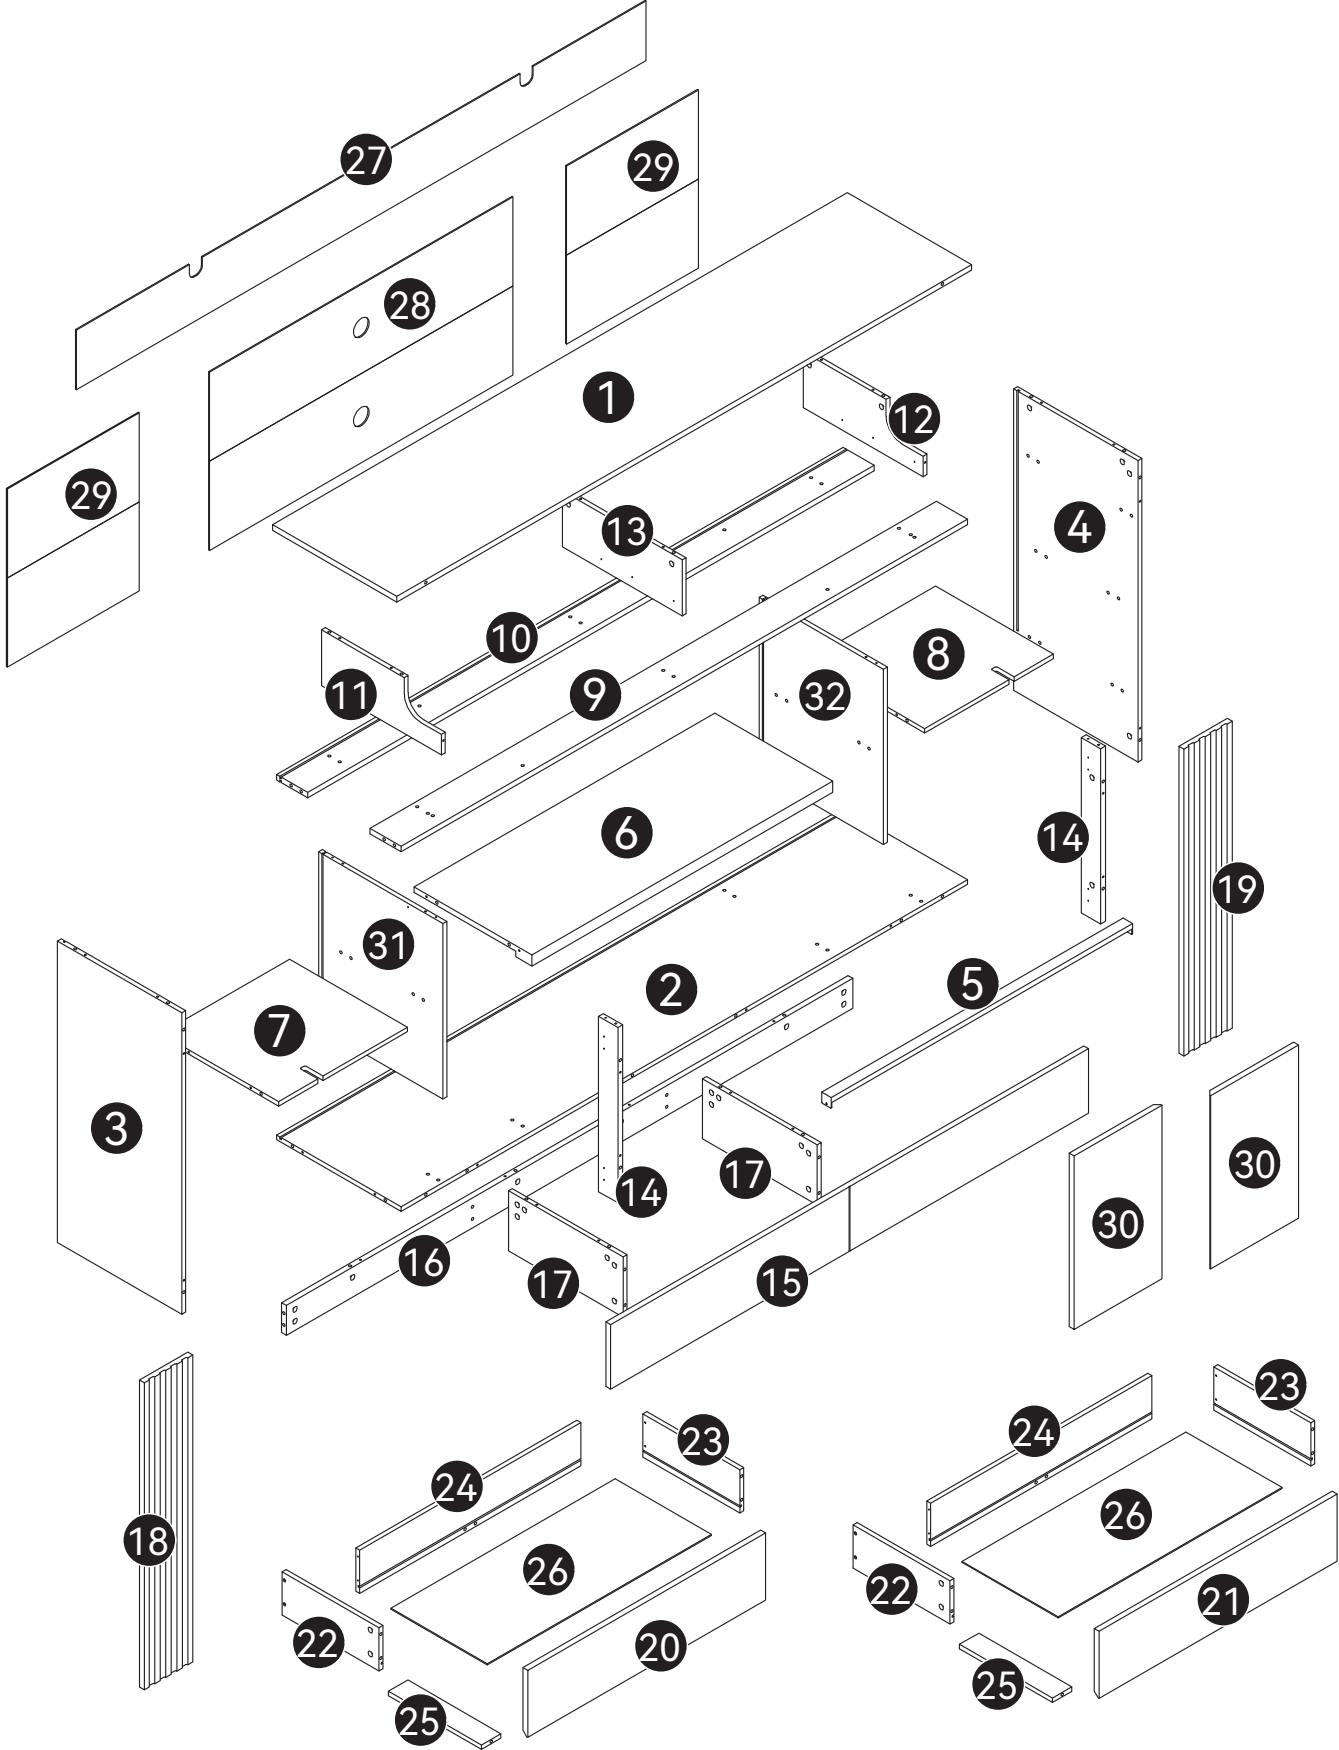


PARTS LIST

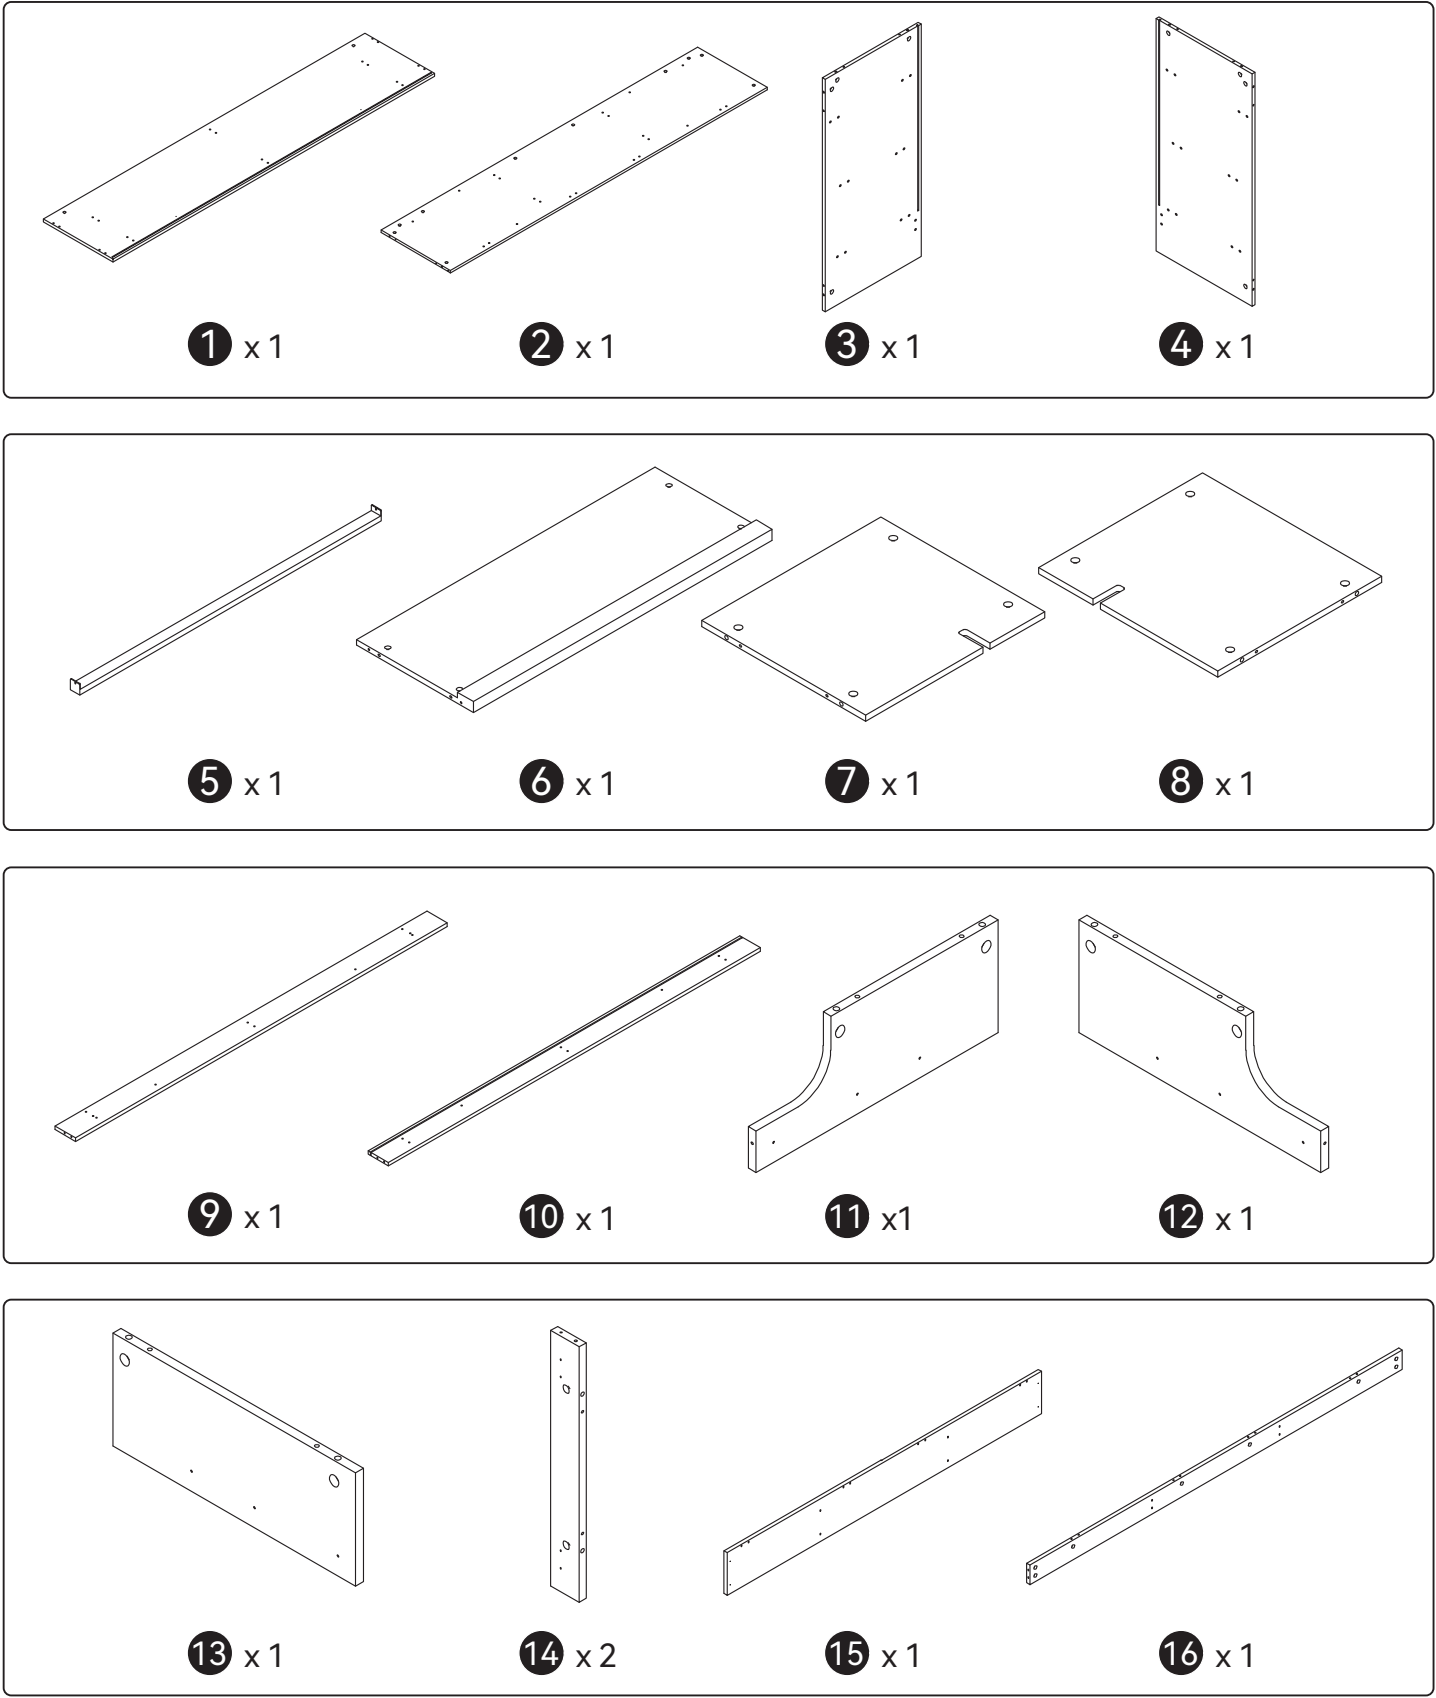 

PARTS LIST

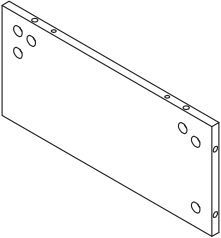 


17 x 2

 


18 x 1



 
19 x 1

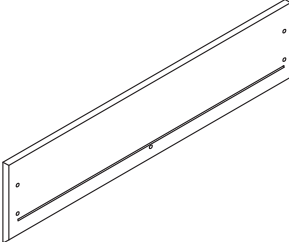


20 x 1

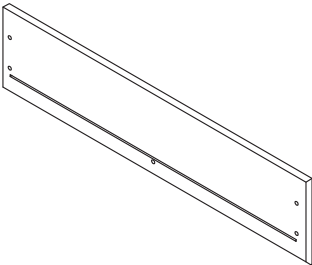 


21 x 1

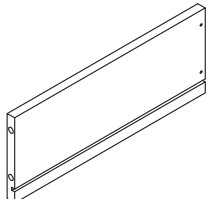 


22 x 2

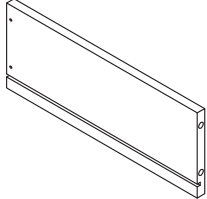 


23 x 2

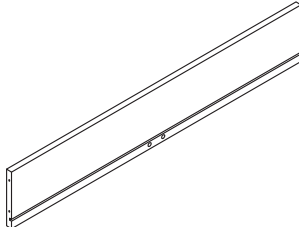 


24 x 2

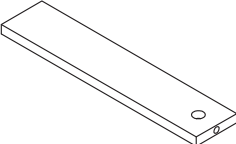 


25 x 2

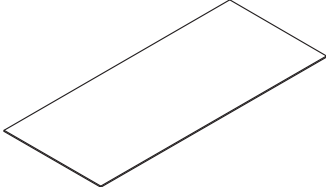 


26 x 2

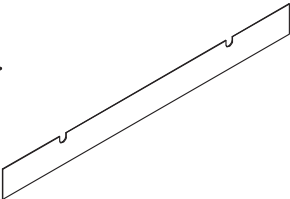 


27 x 1

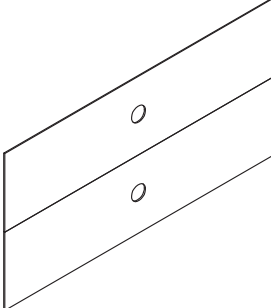 


28 x 1

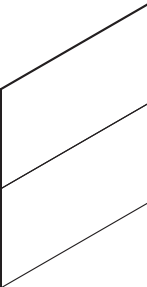 


29 x 2

 

30 x 2

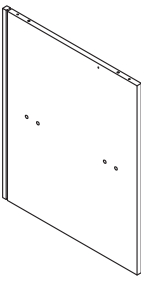 


31 x 1

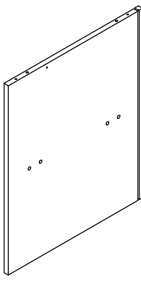 

32 x 1

 HARDWARES

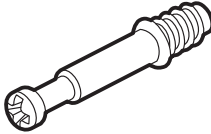


A x 80



B x 80
φ15x9.5mm



 C x 66
φ6x30mm

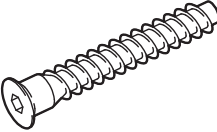


D x 18



E x 32
φ3x12mm



 
F x 26
φ3.5x14mm

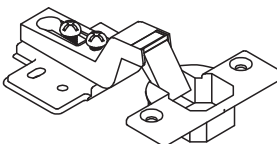

G x 4



 
H x 12
φ3.5x30mm

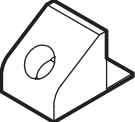

I x 18



 
J x 18
φ3x16mm




K x 4
M6x10mm



 
L x 8

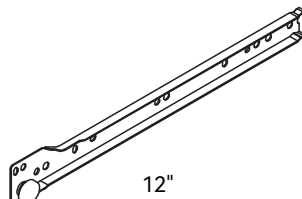


CL x 2
12"

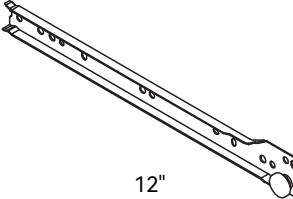 


CR x 2
12"

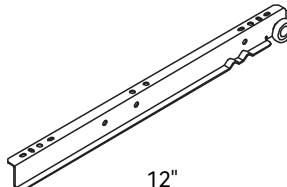 

DL x 2
12"

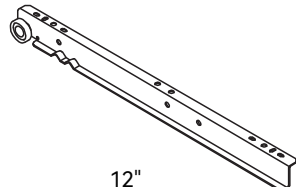 

DR x 2
12"

 

M1



M2

 


M3




M4

M x 2

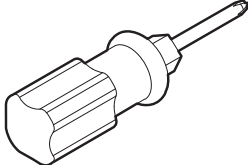


x 1

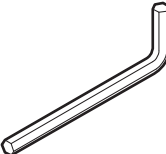 

#3
x 1


SPARE PARTS

  The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

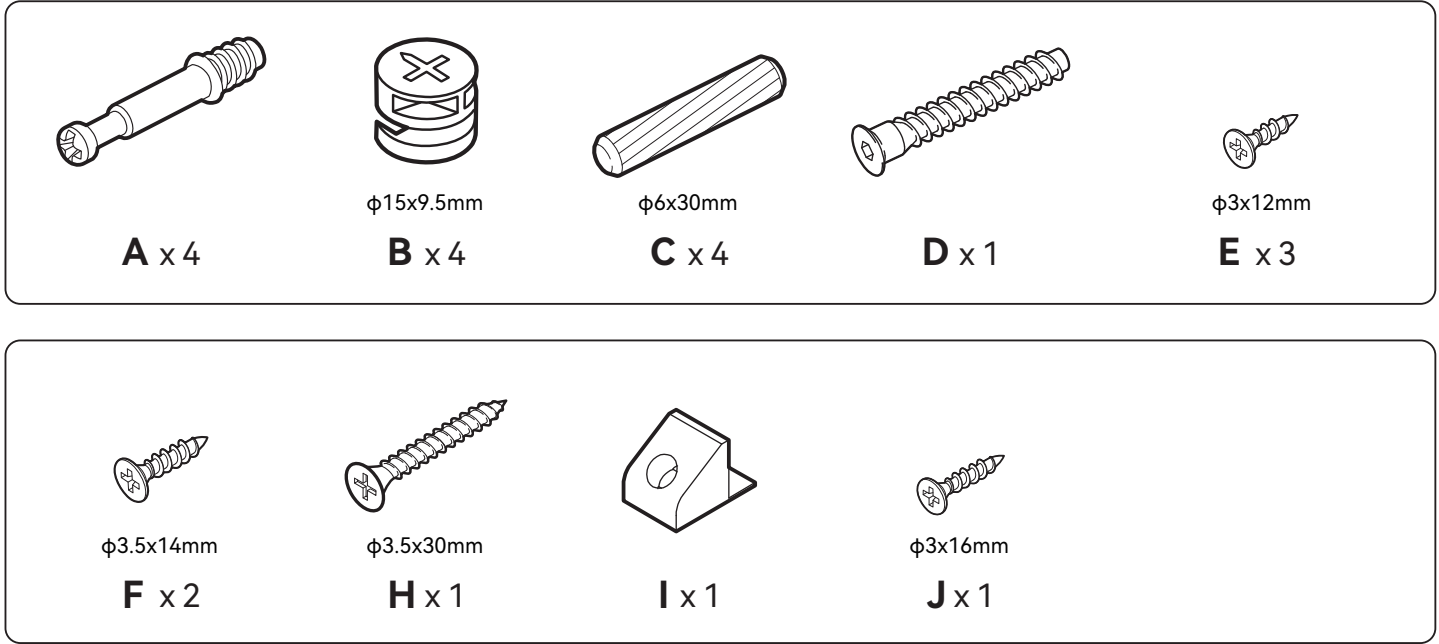


CAM LOCK FASTEN SYSTEM

  Insert the cam bolt into the hole, then insert the cam lock and tighten.

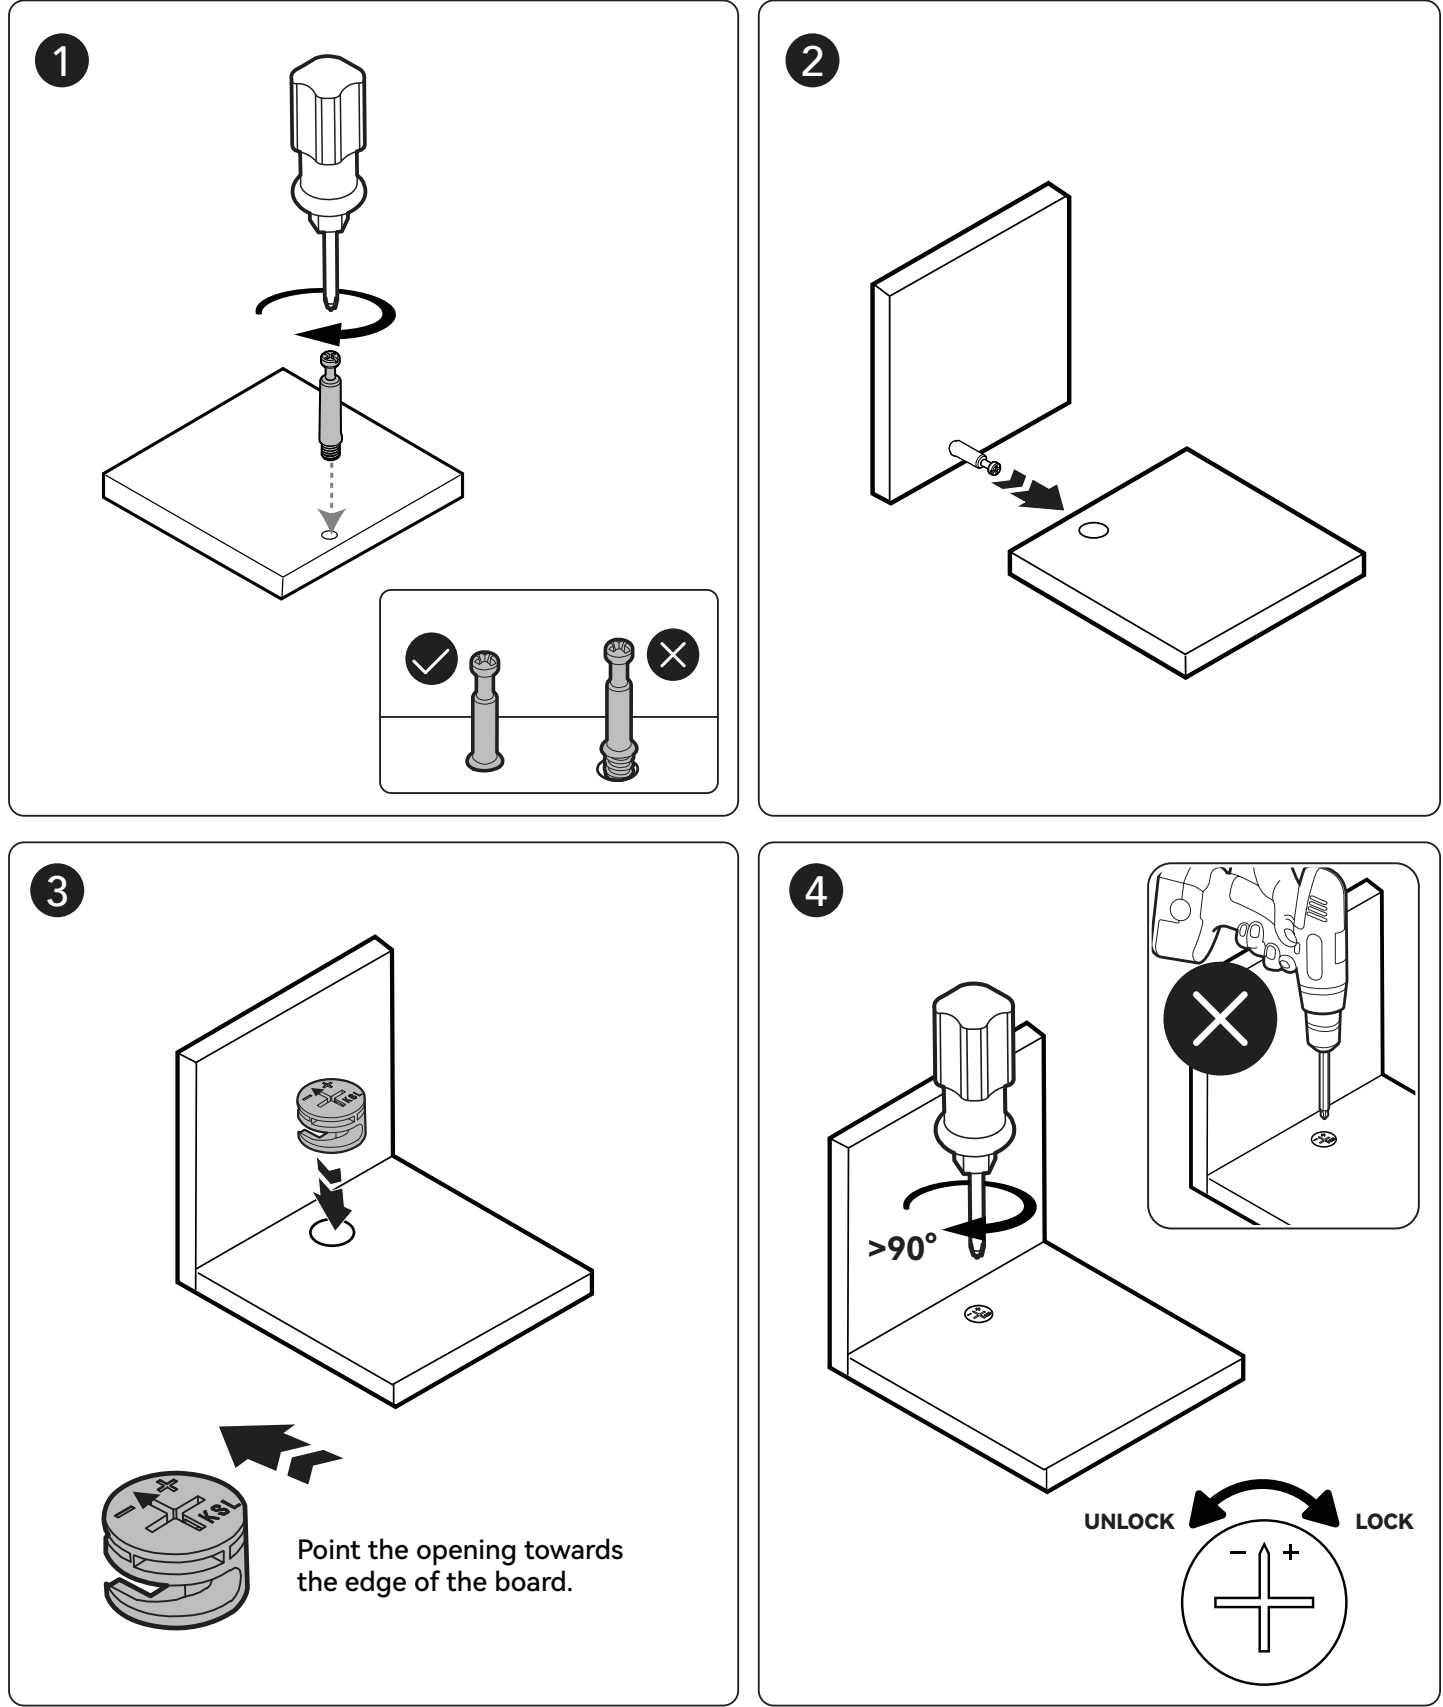


ASSEMBLY

 1




A x8

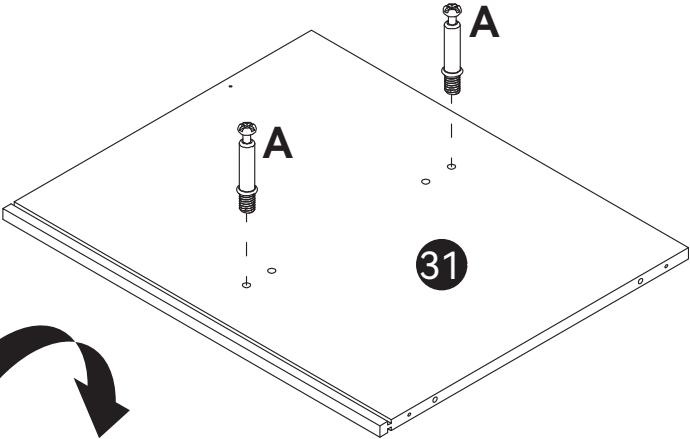 


31



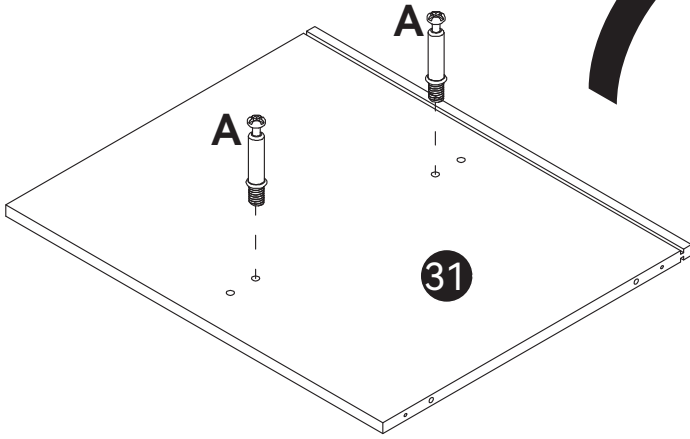 




31



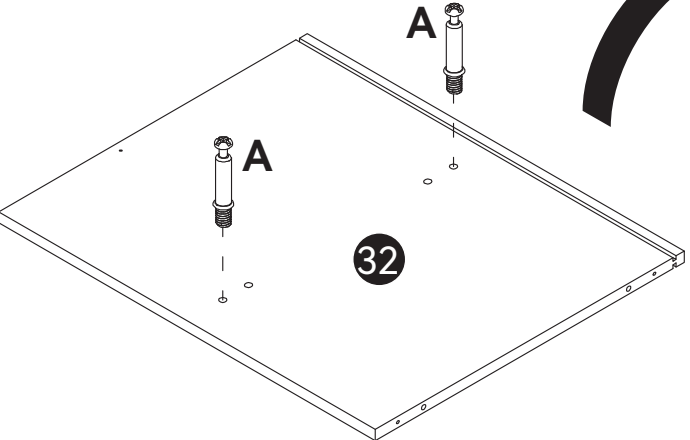 

32

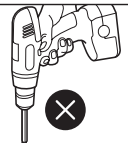 


  


2



 B x2

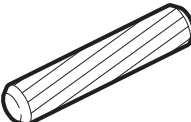


C x2

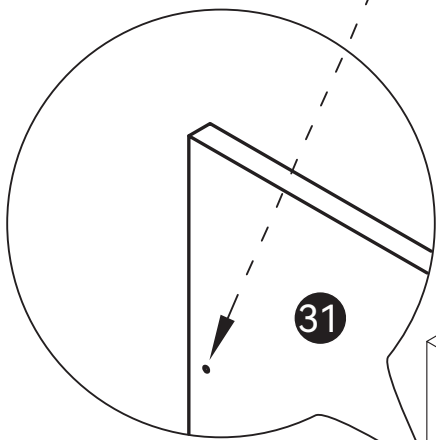 

31



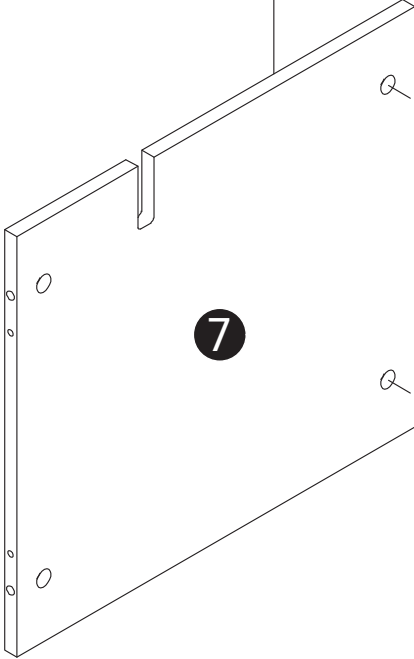 


7




B



 B

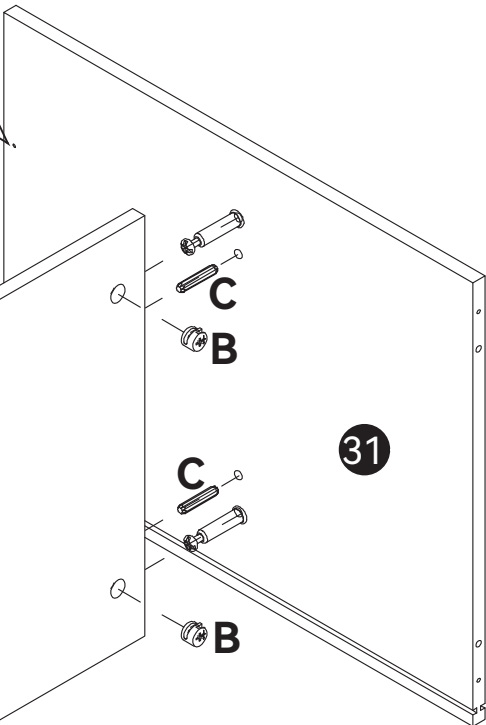




31

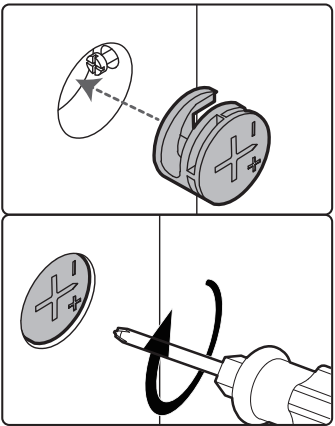 




08

09

 
 
 
3

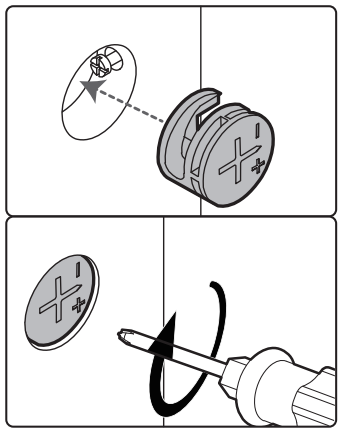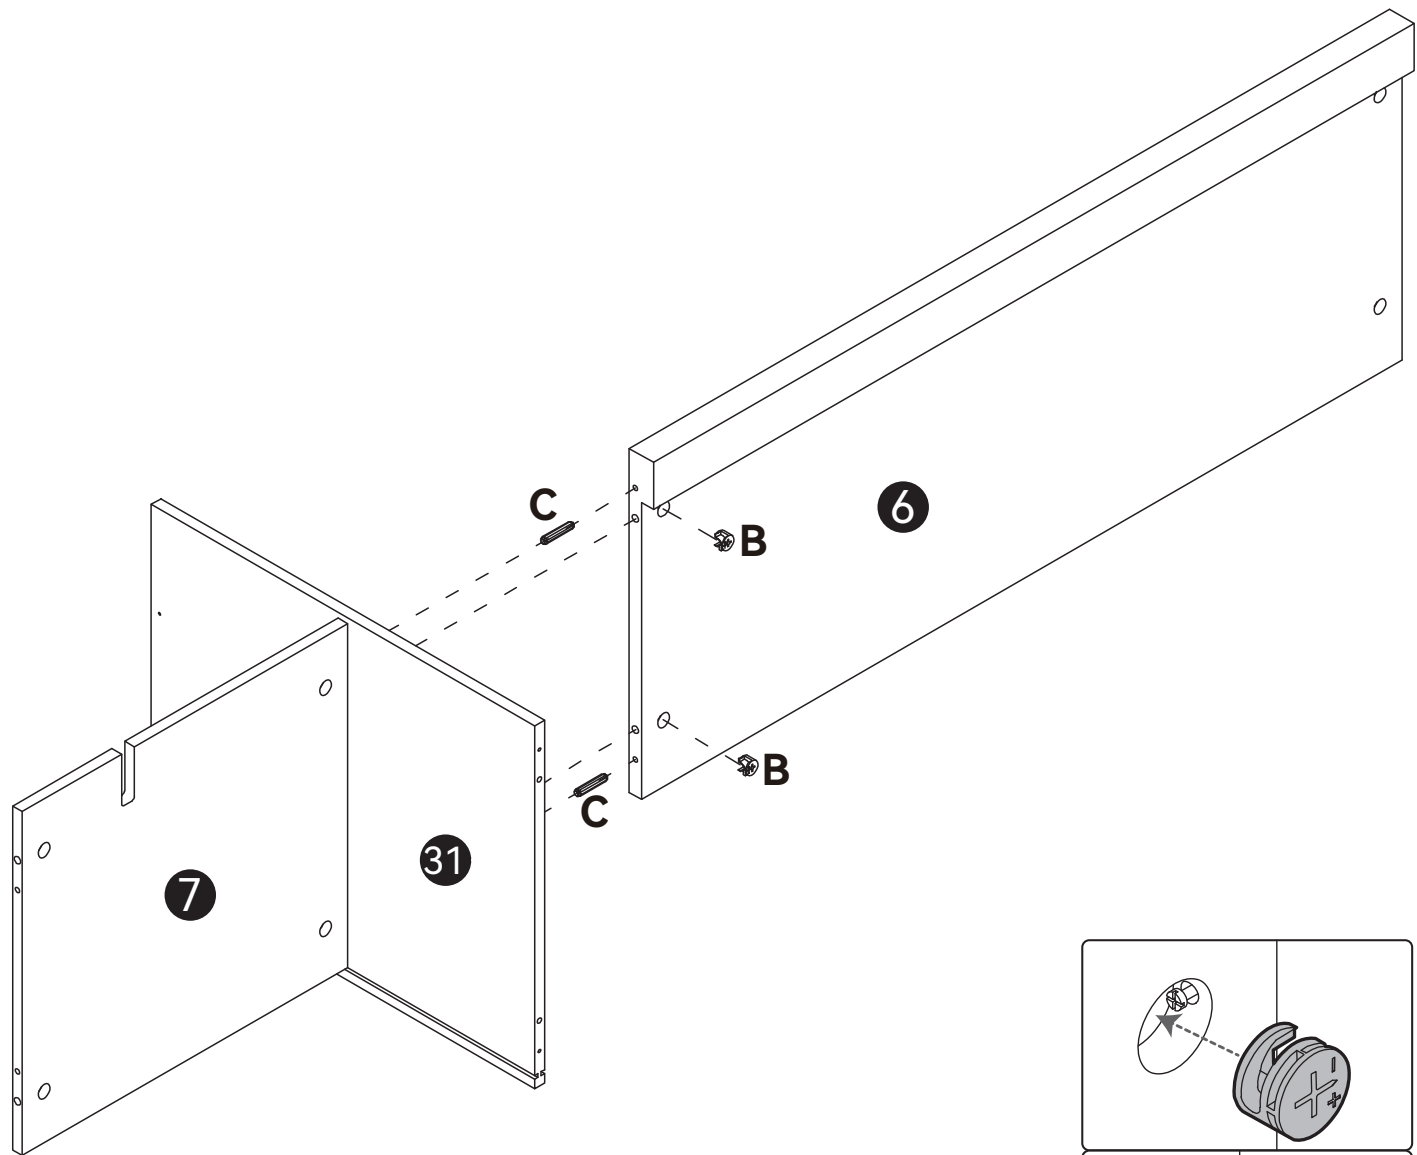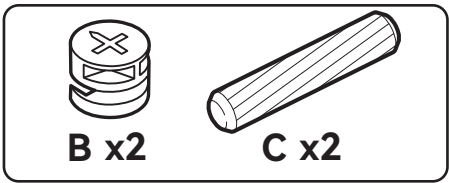




4

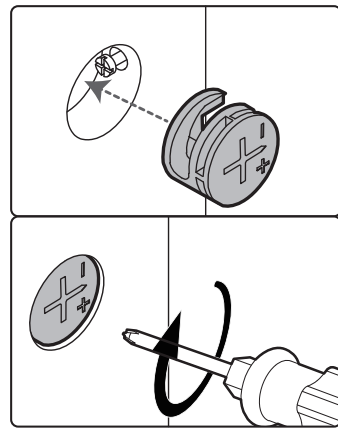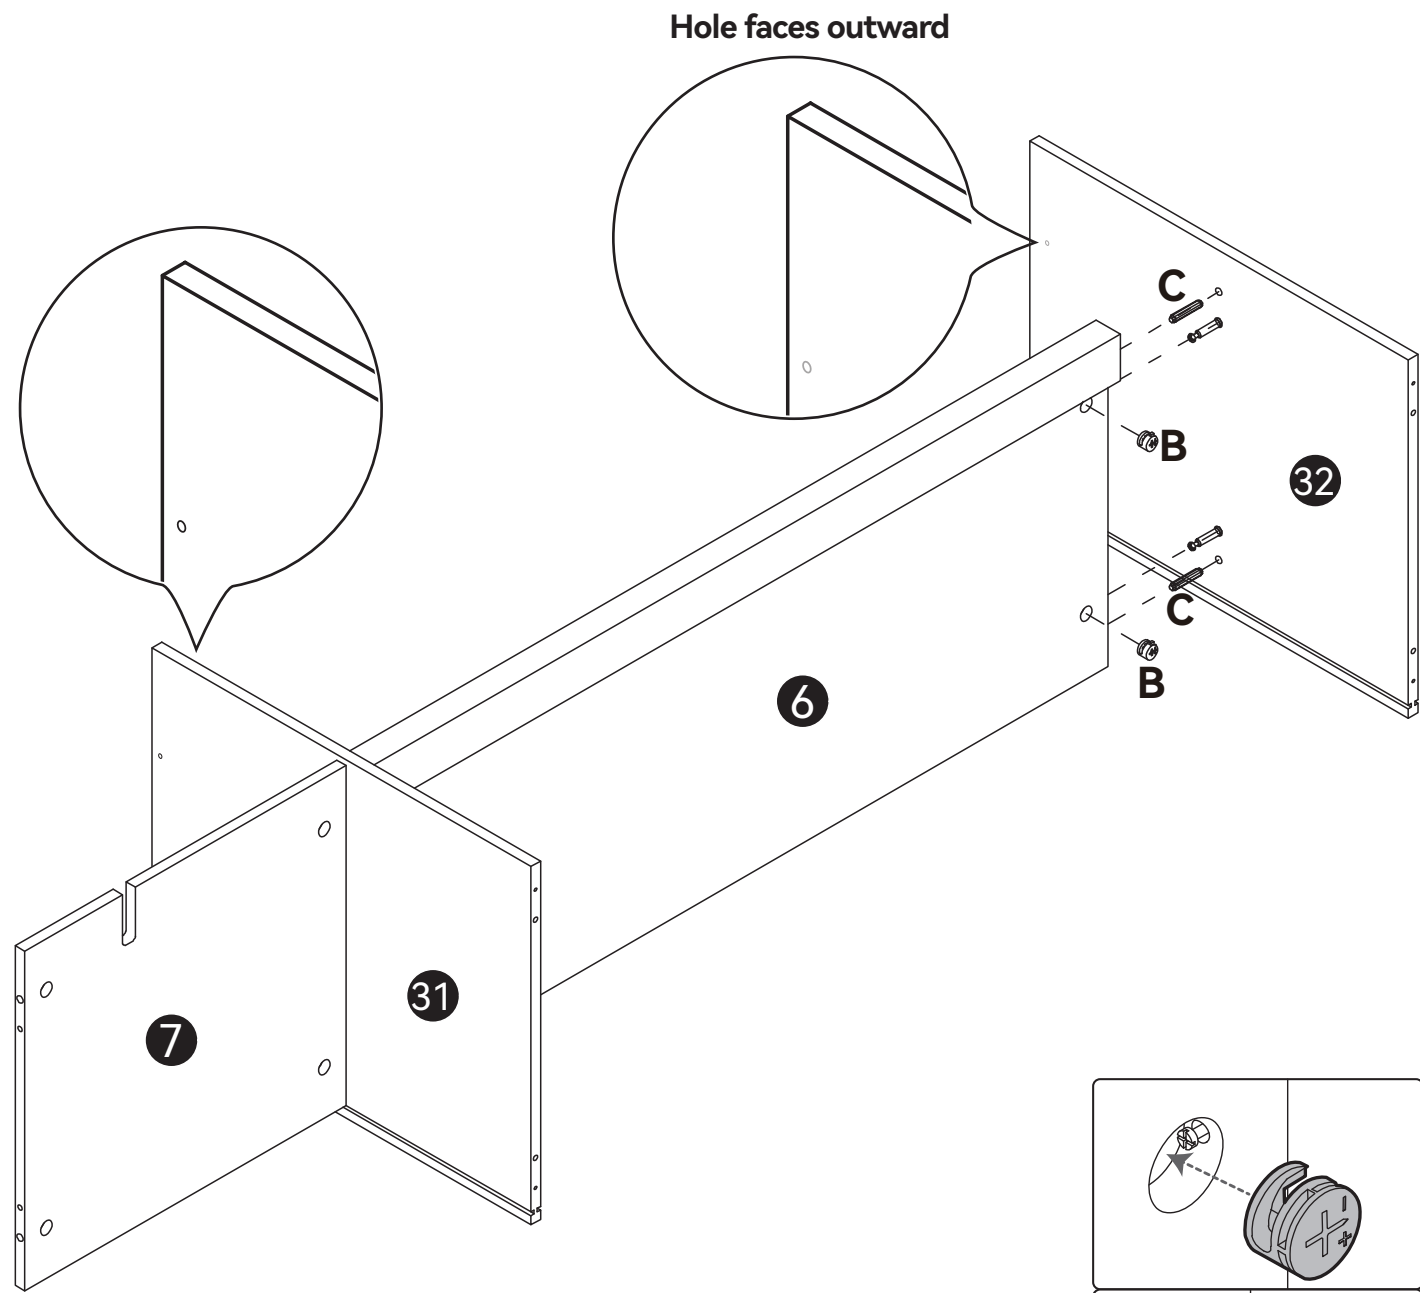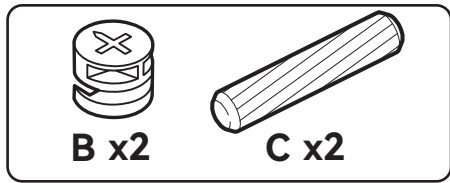   



5

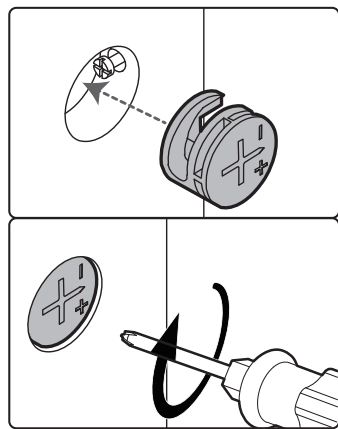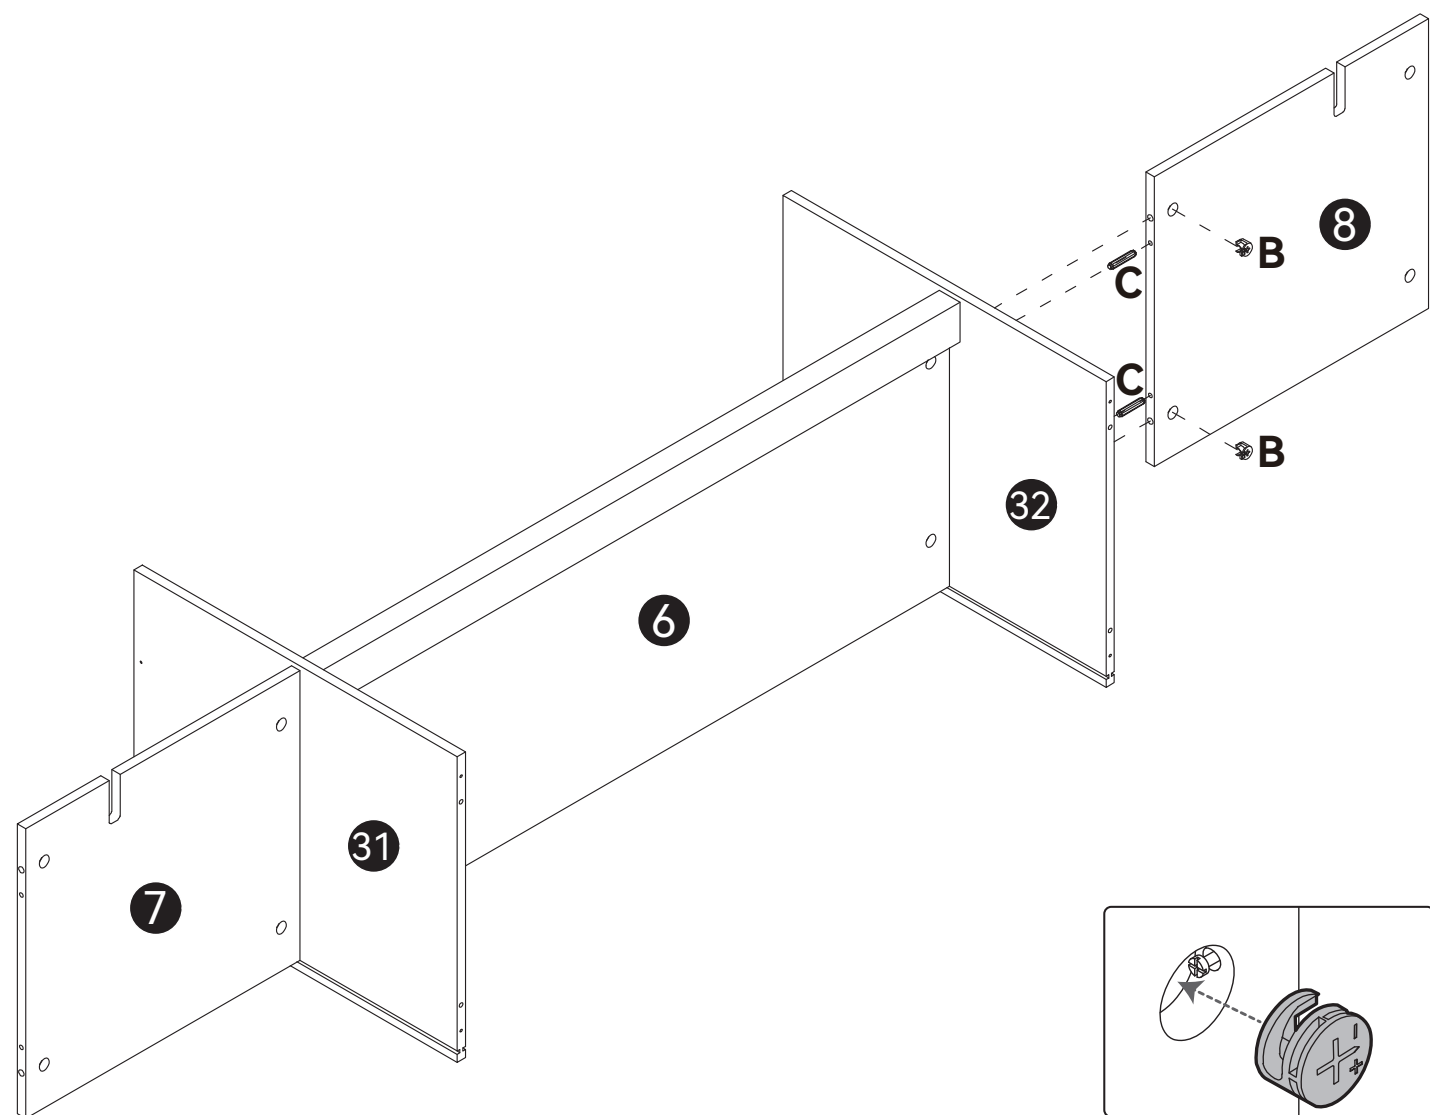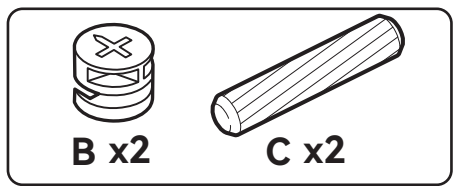   



6

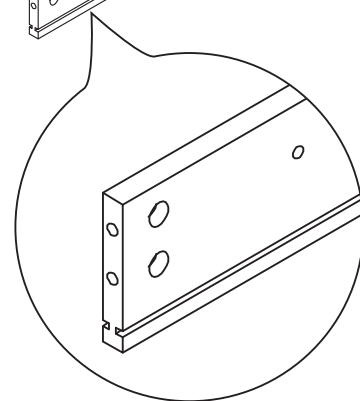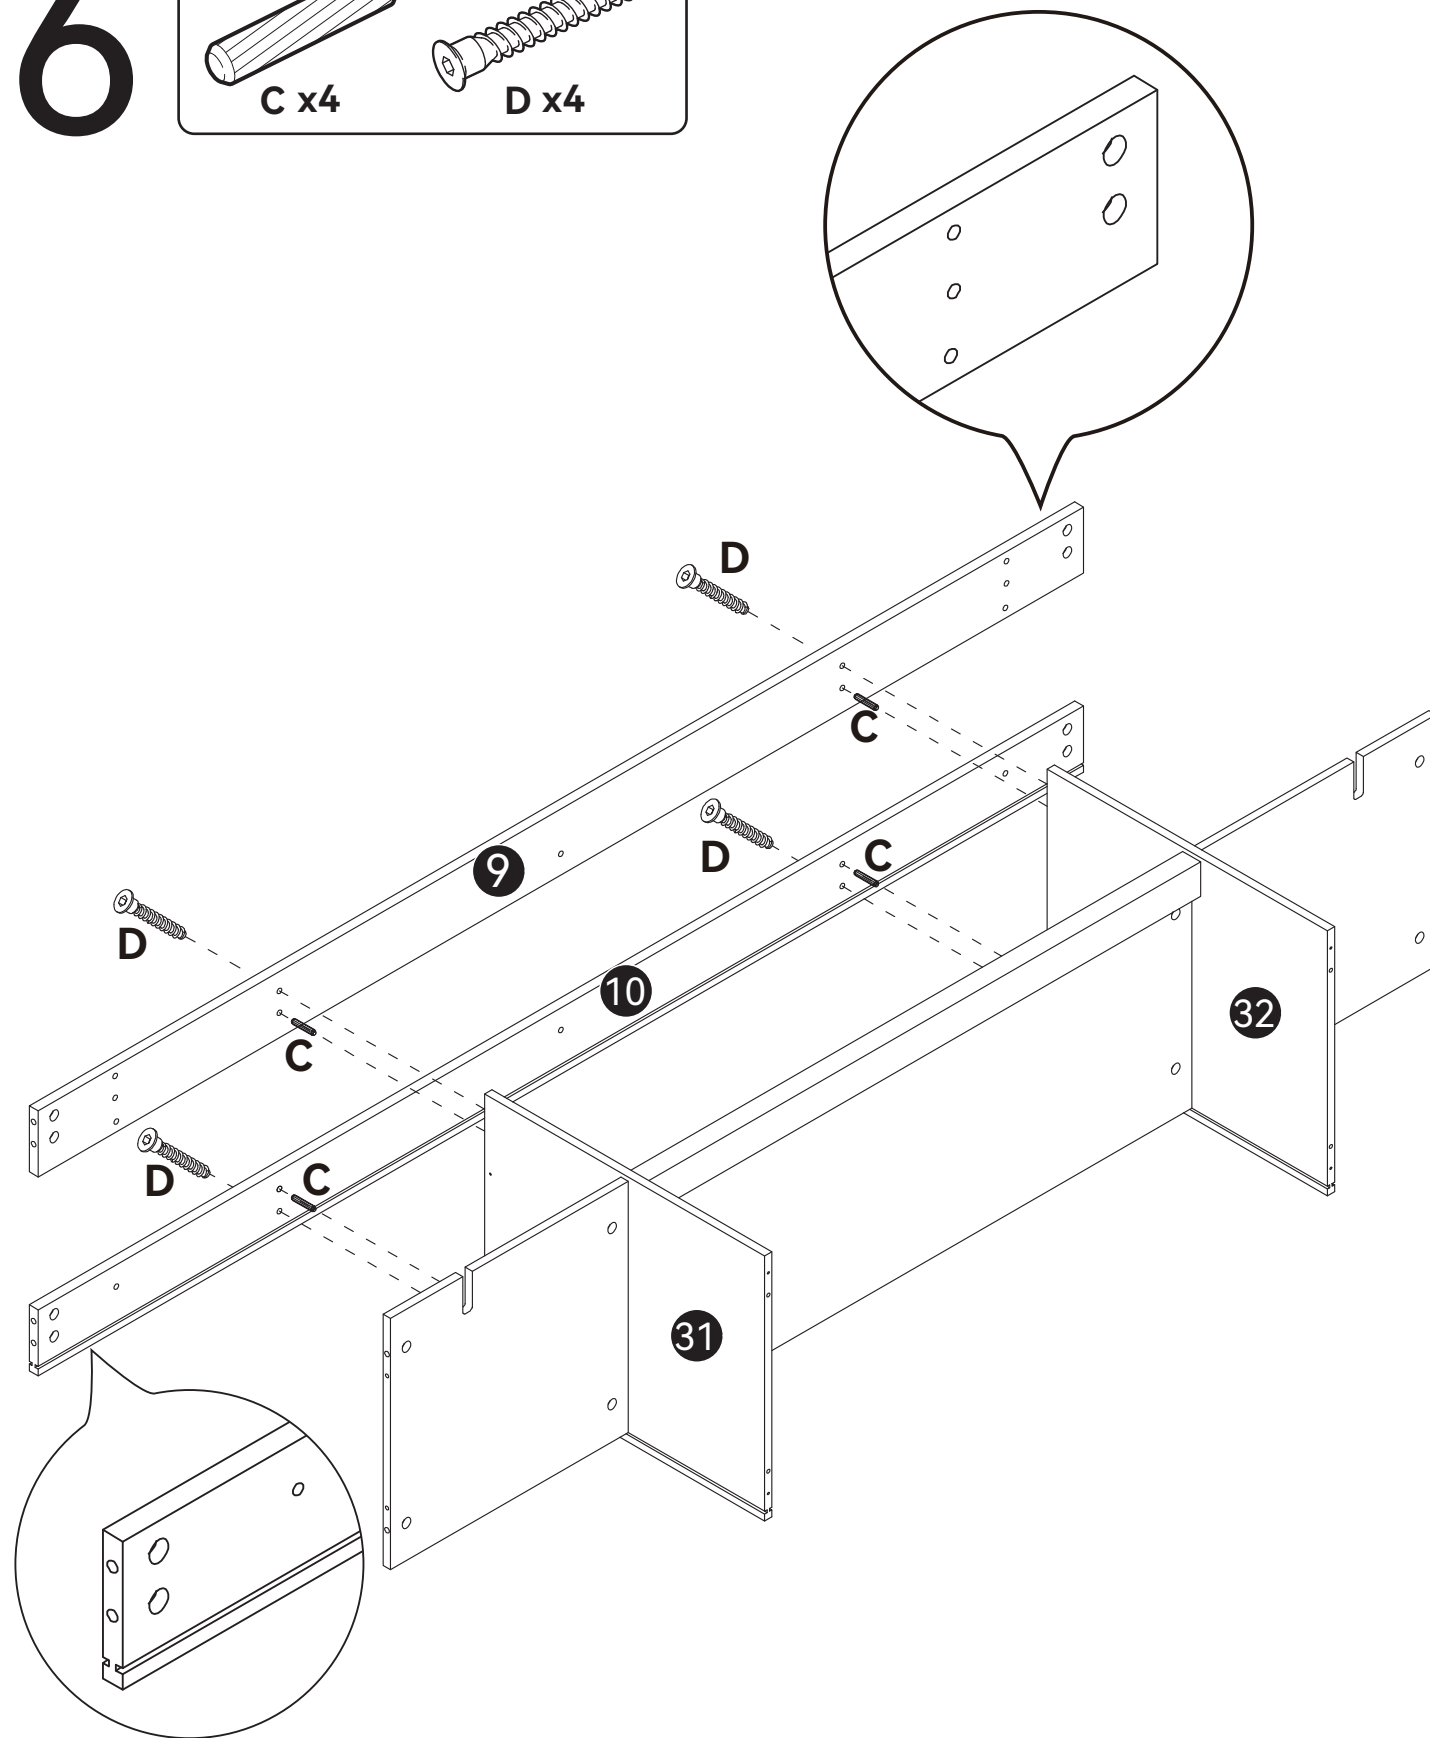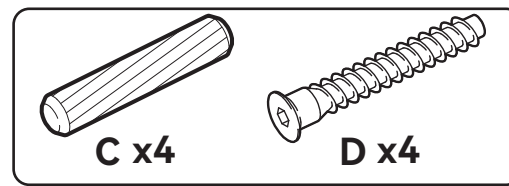   


7

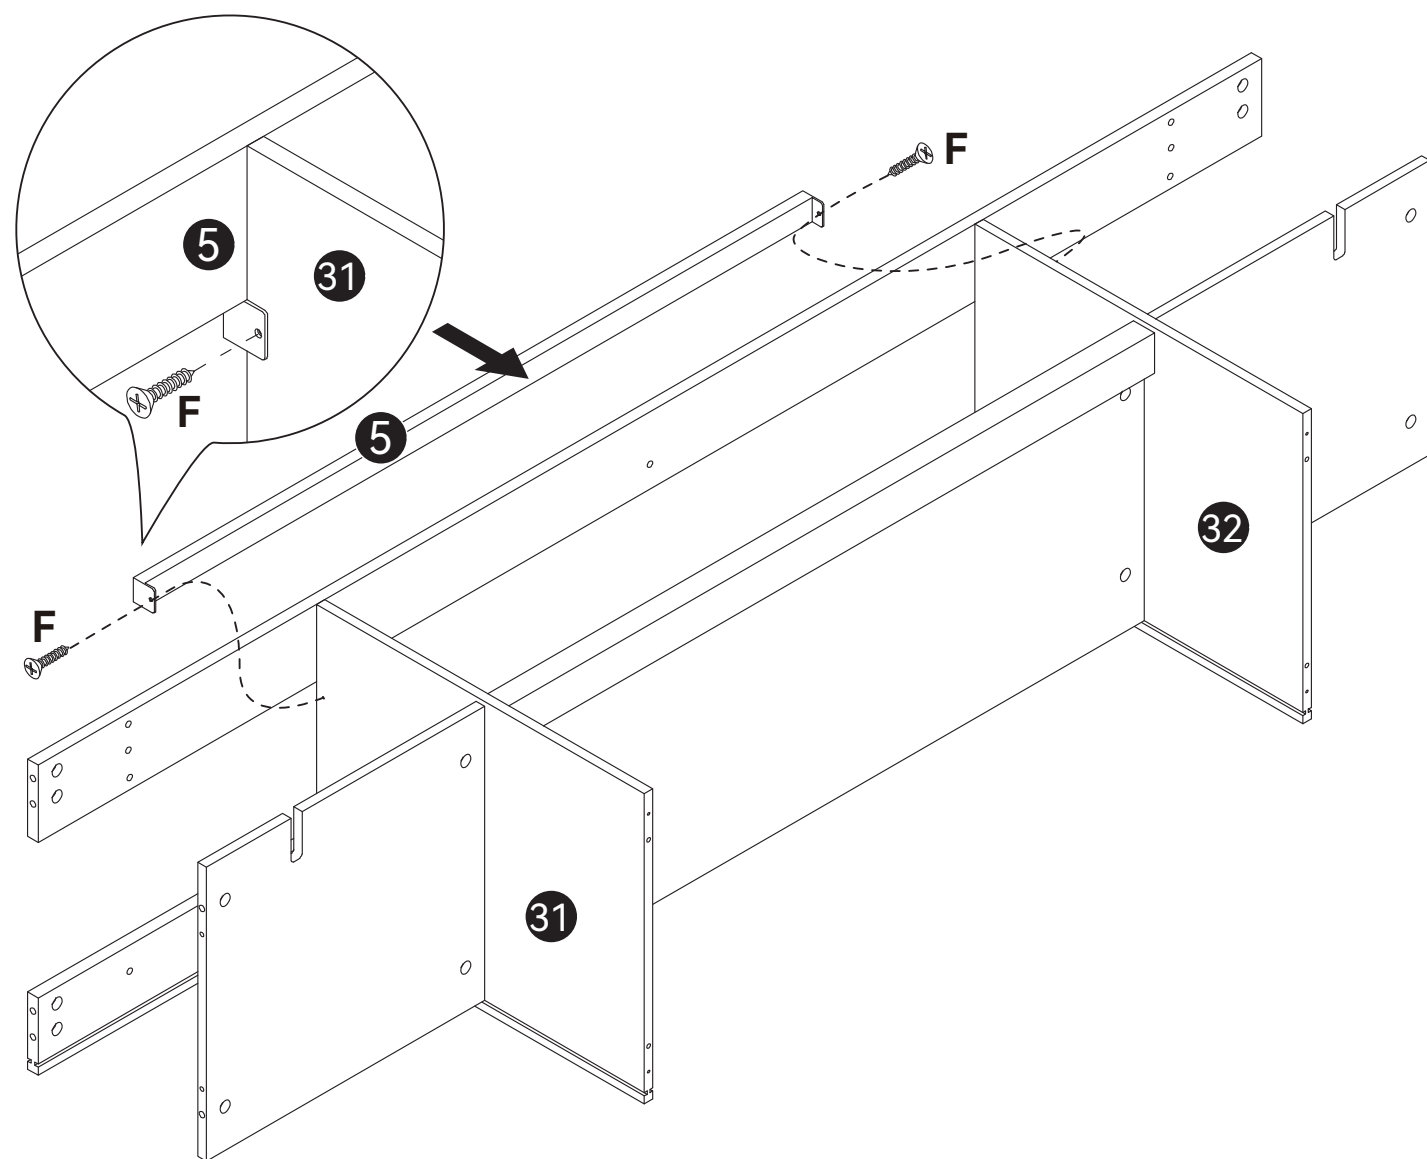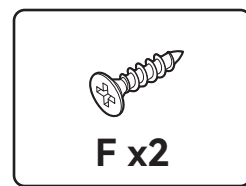  


8

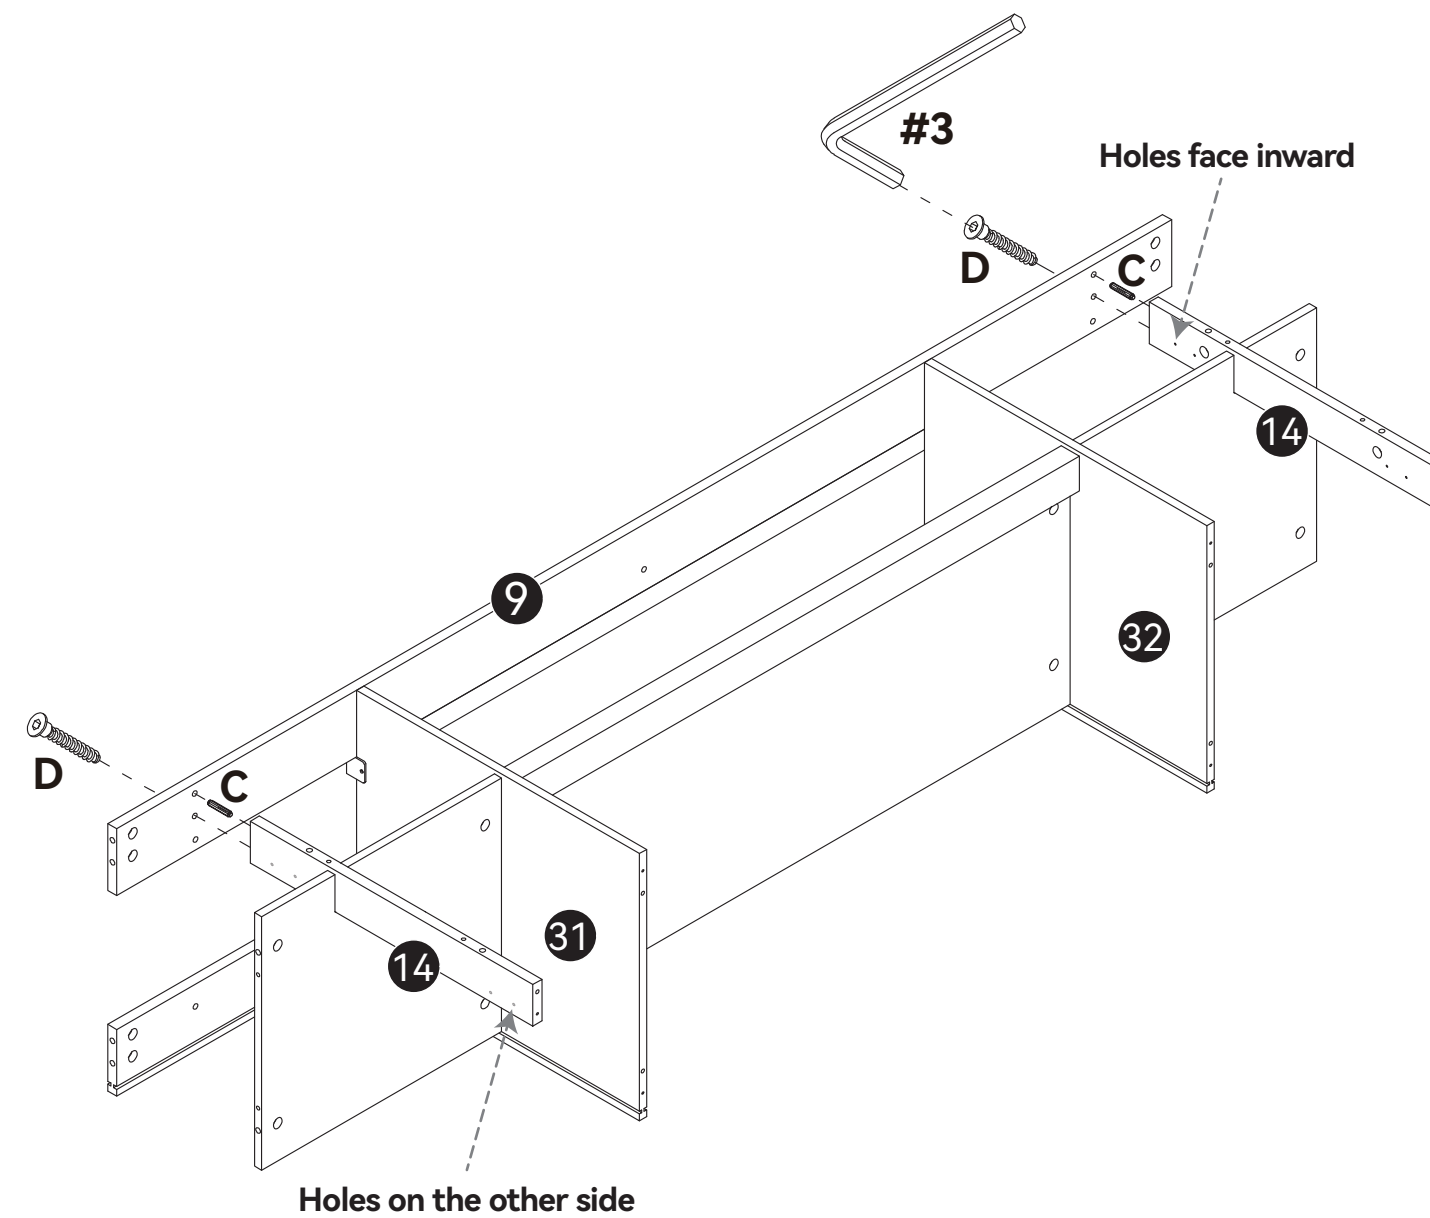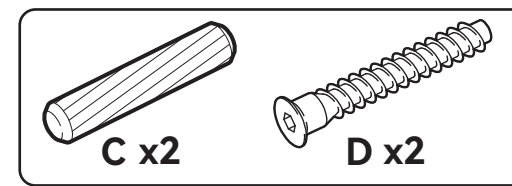  



9

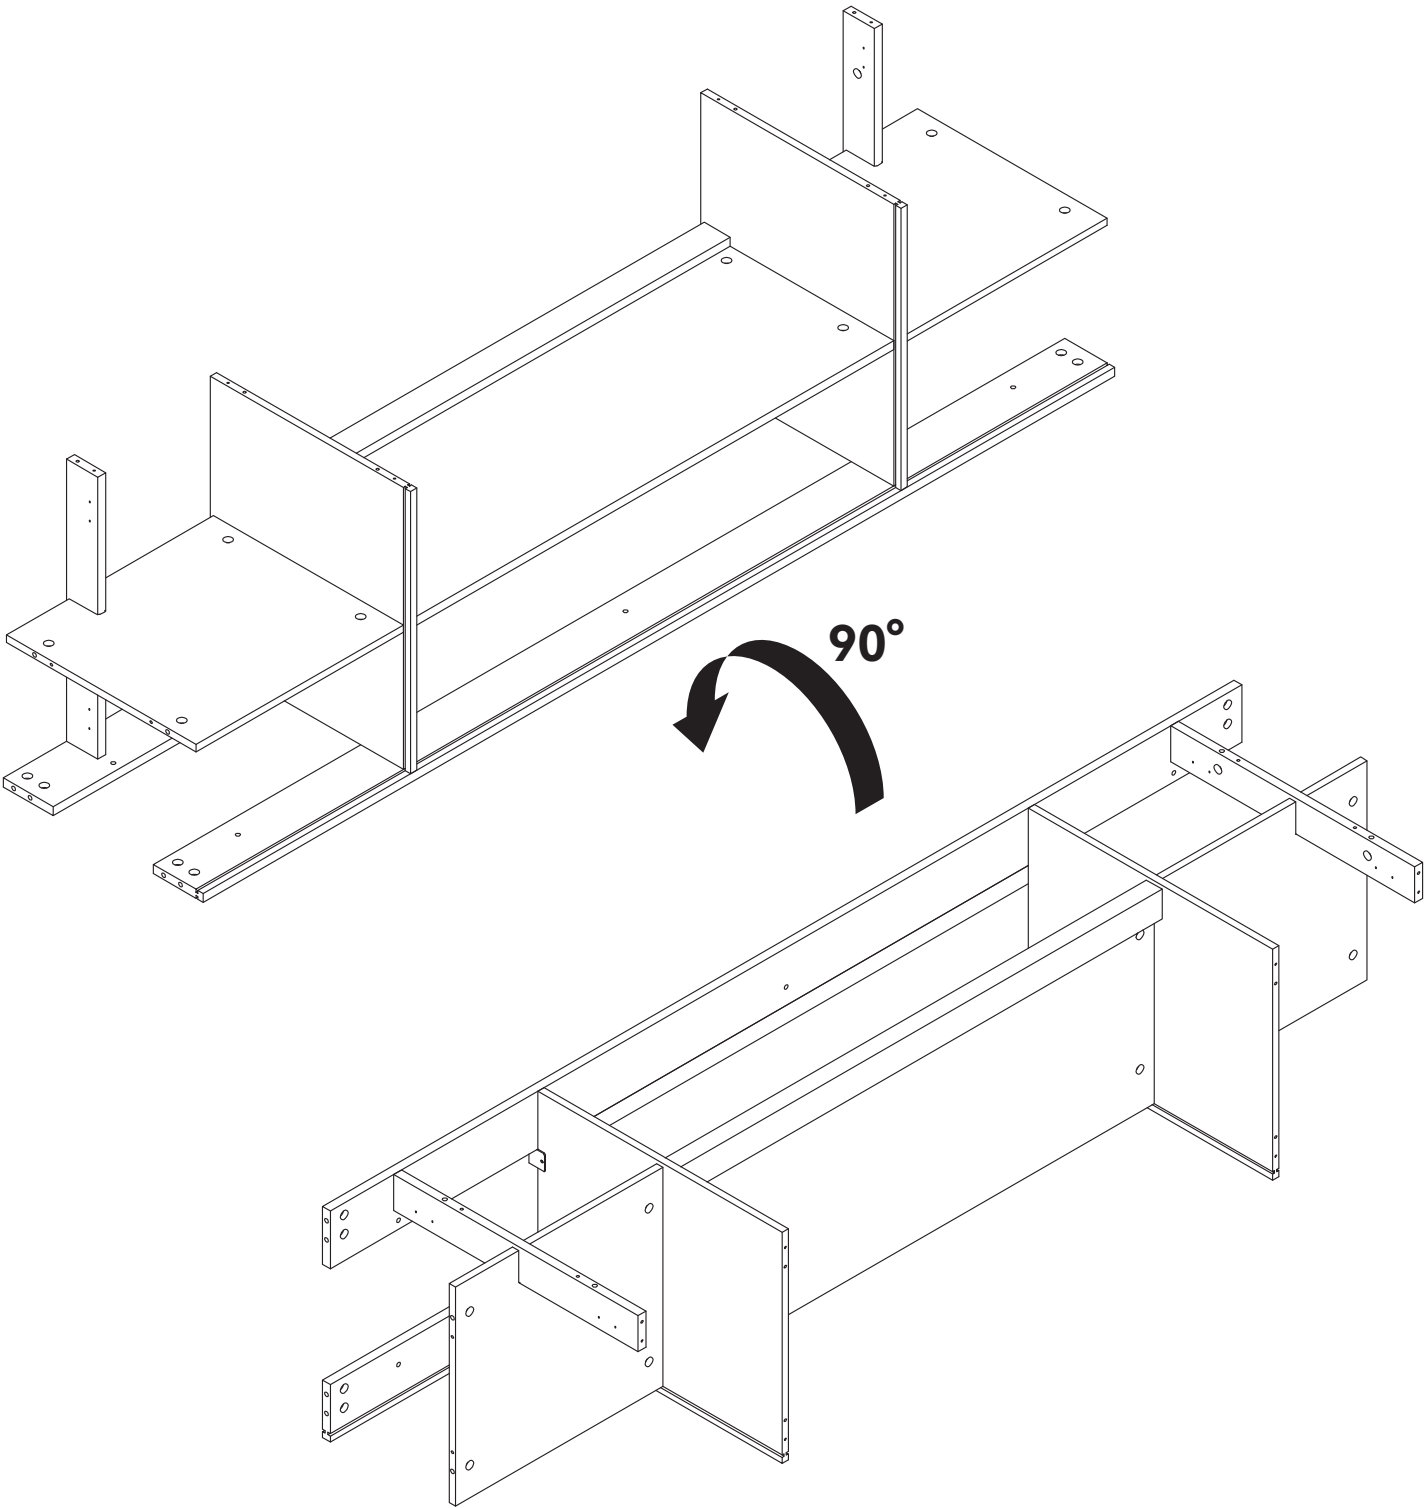 



10

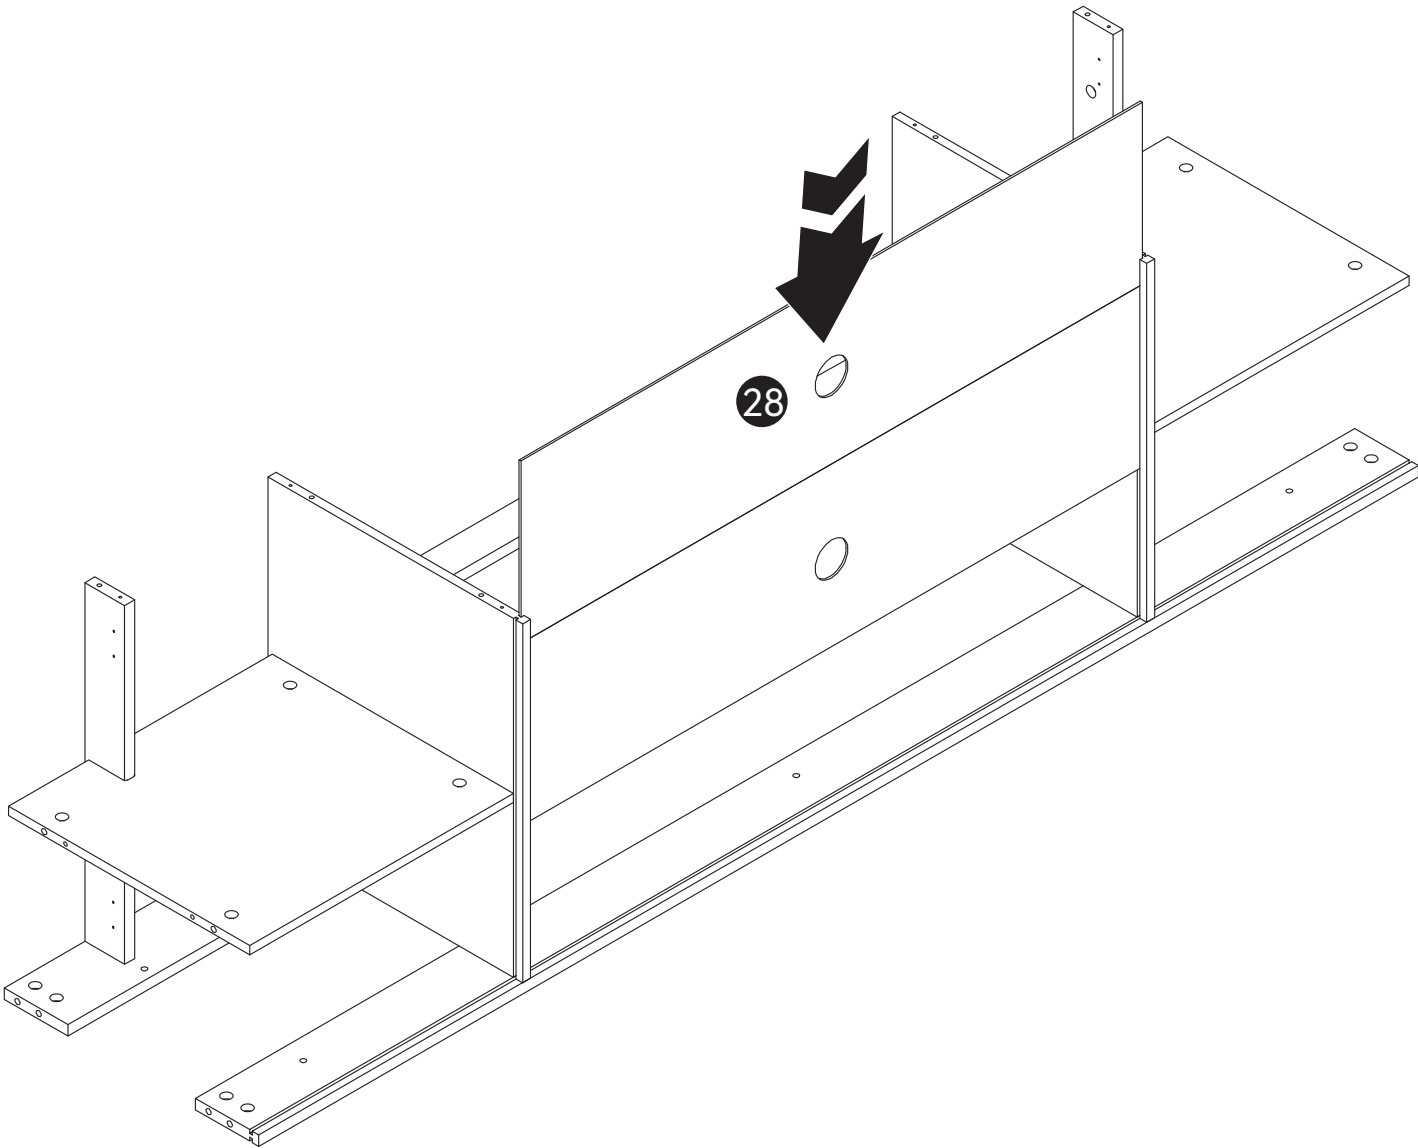 





11

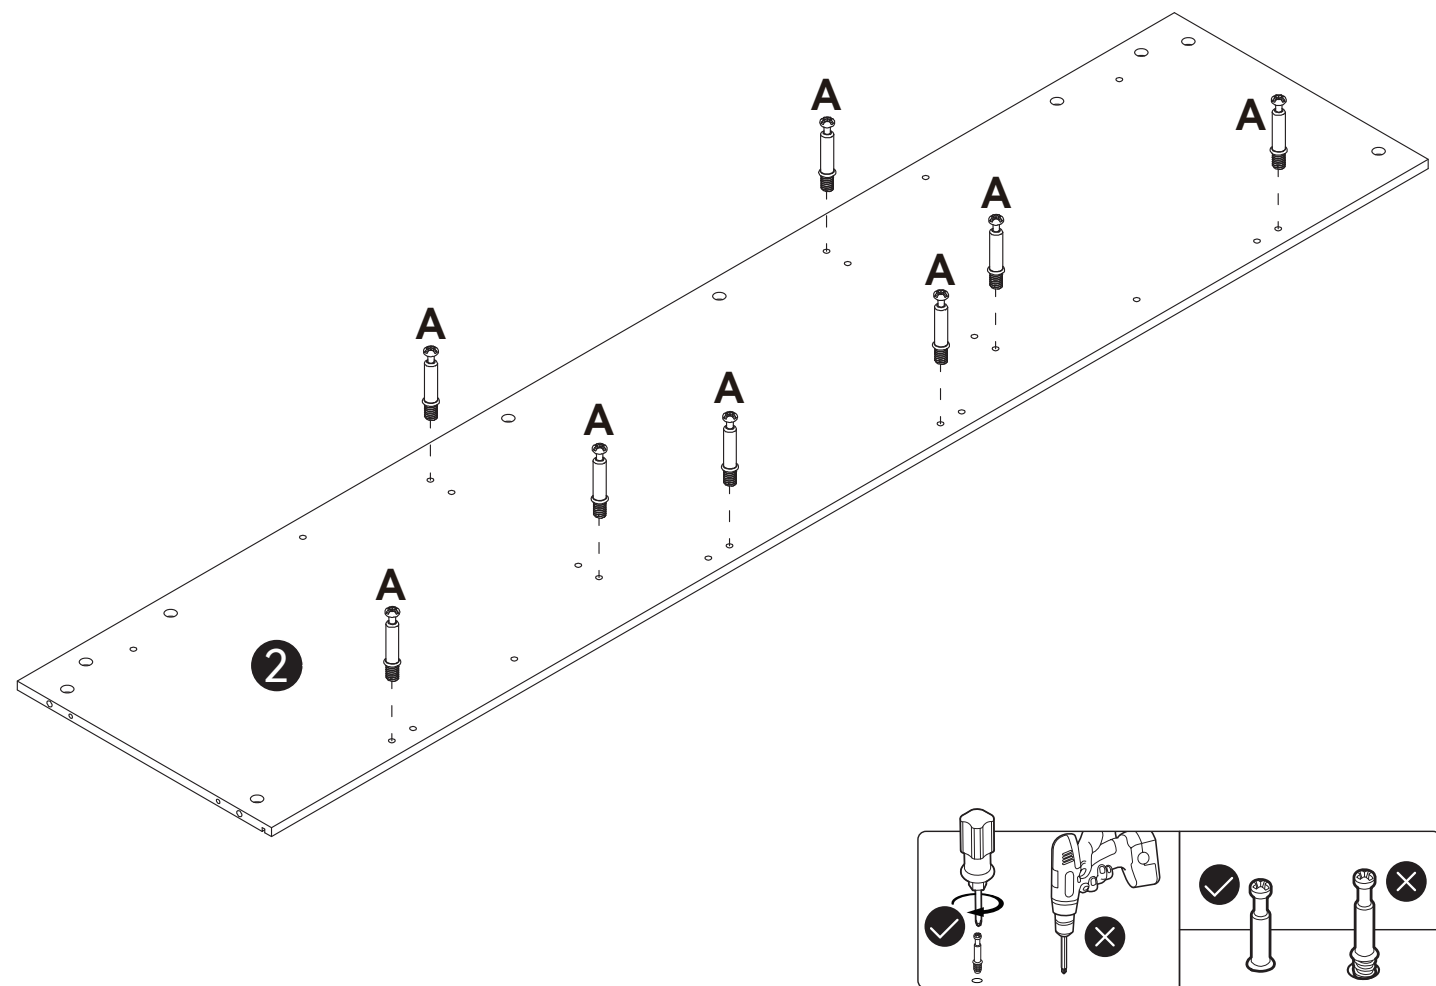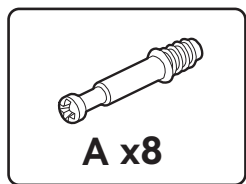  




12

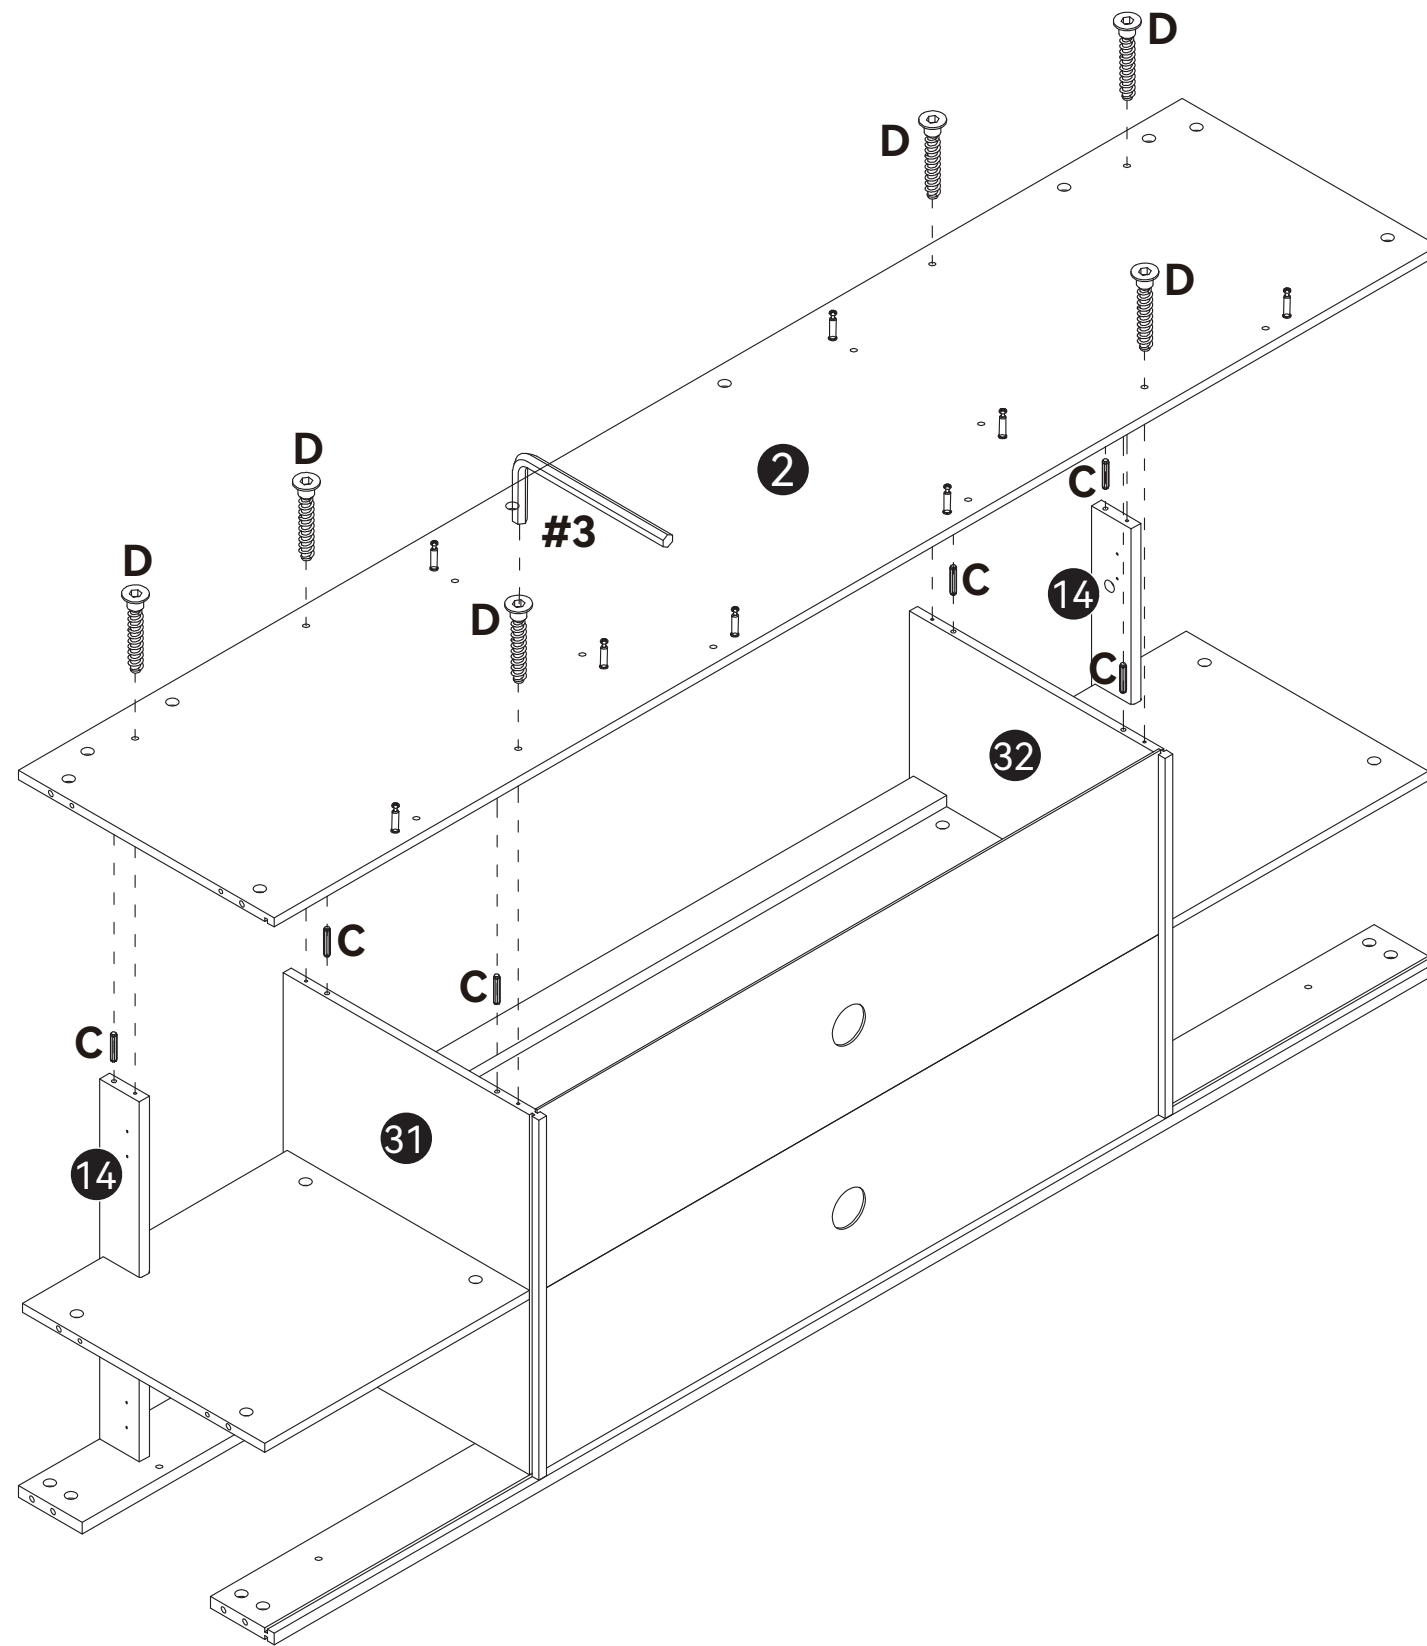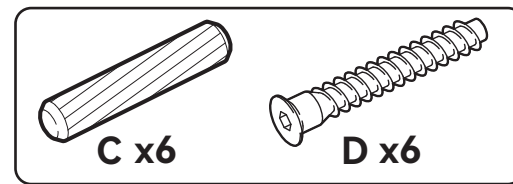  





13

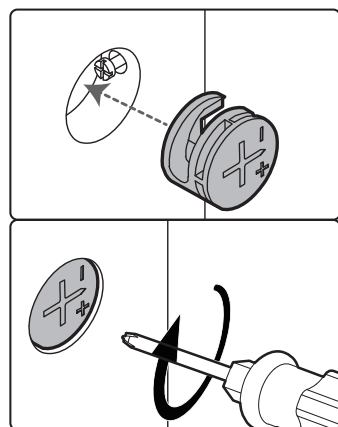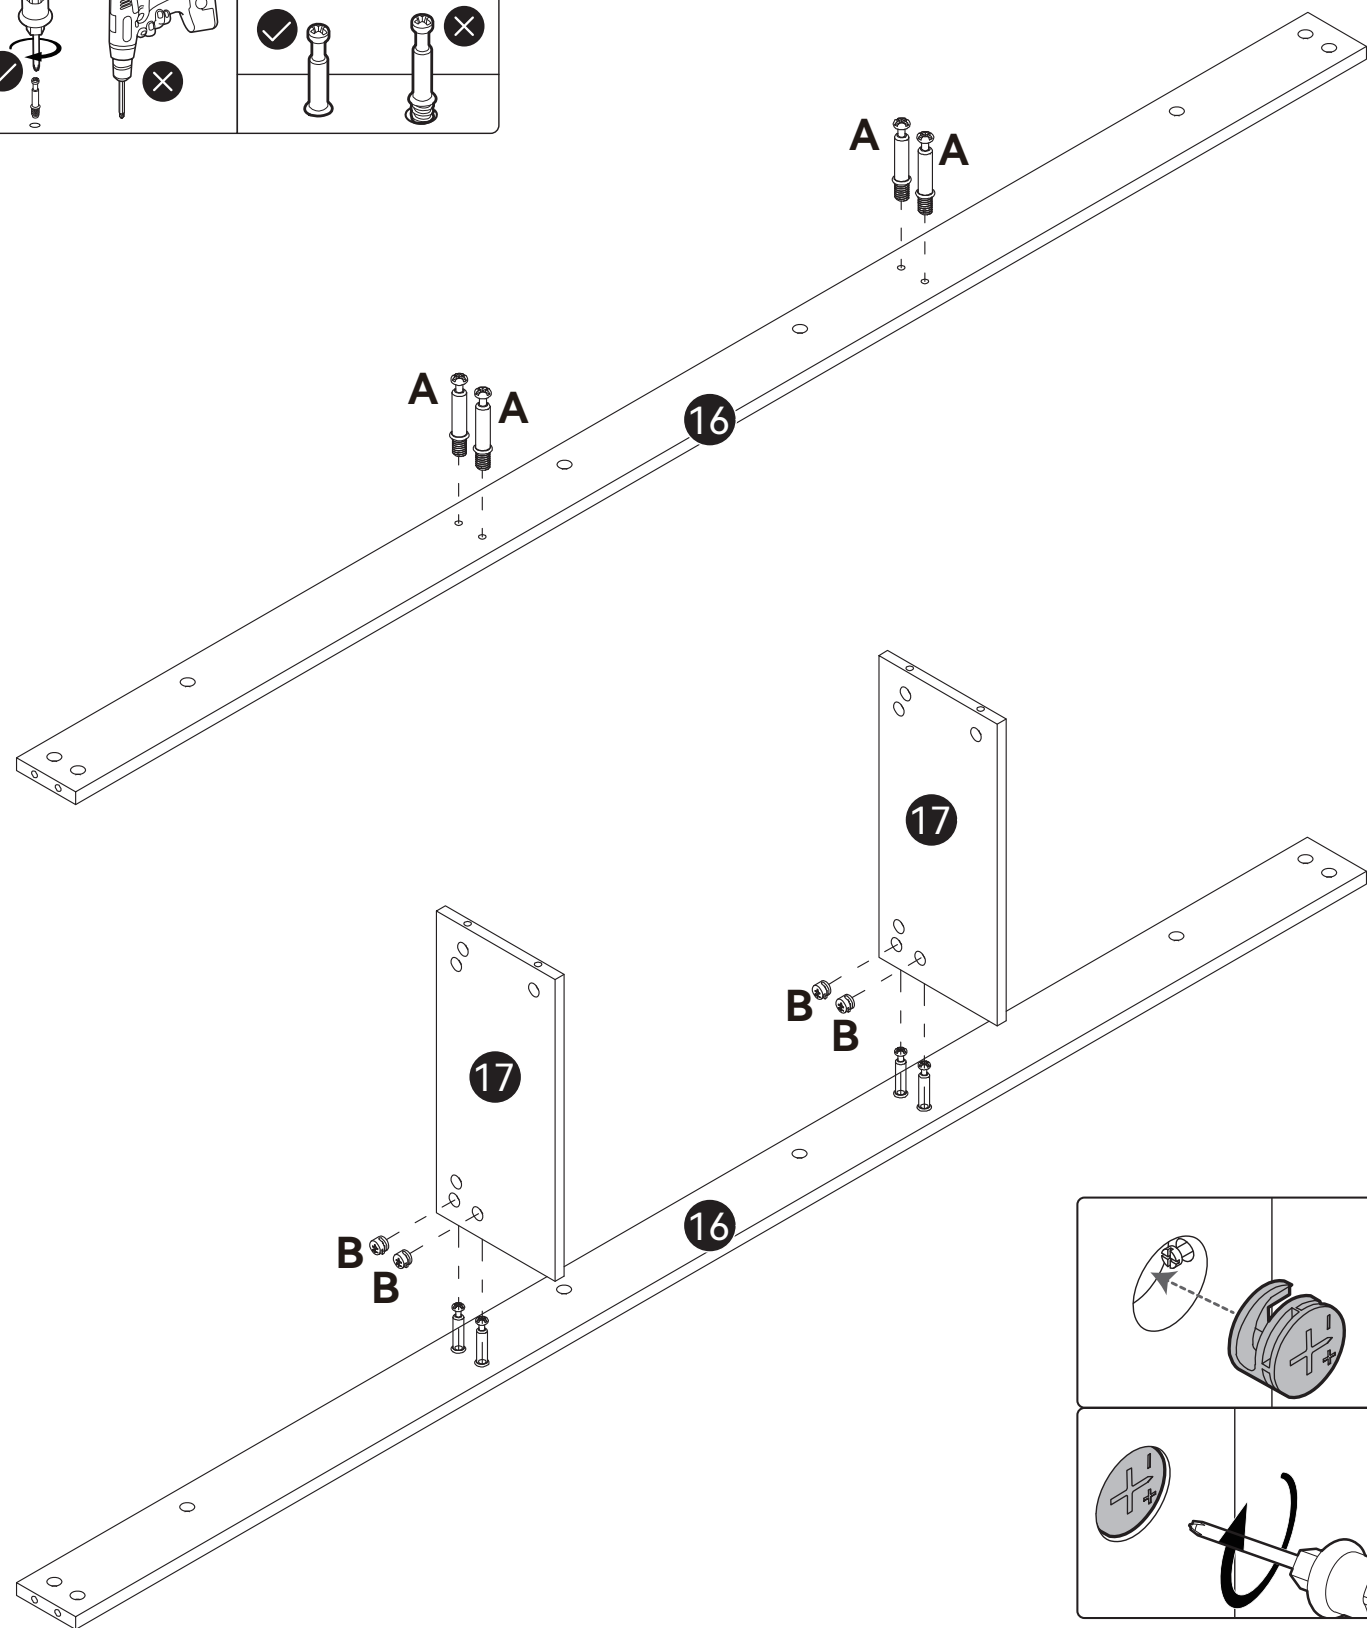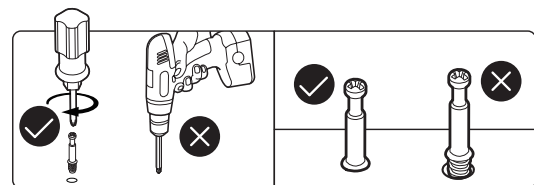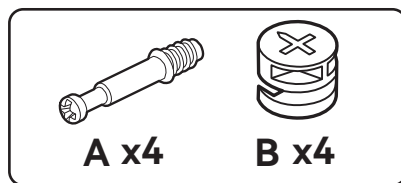    




14

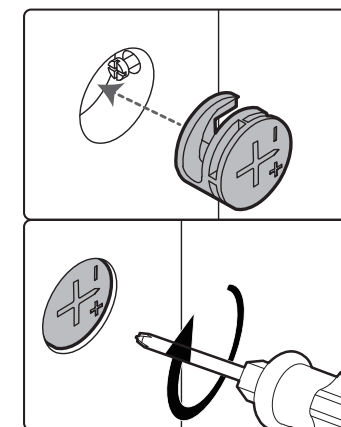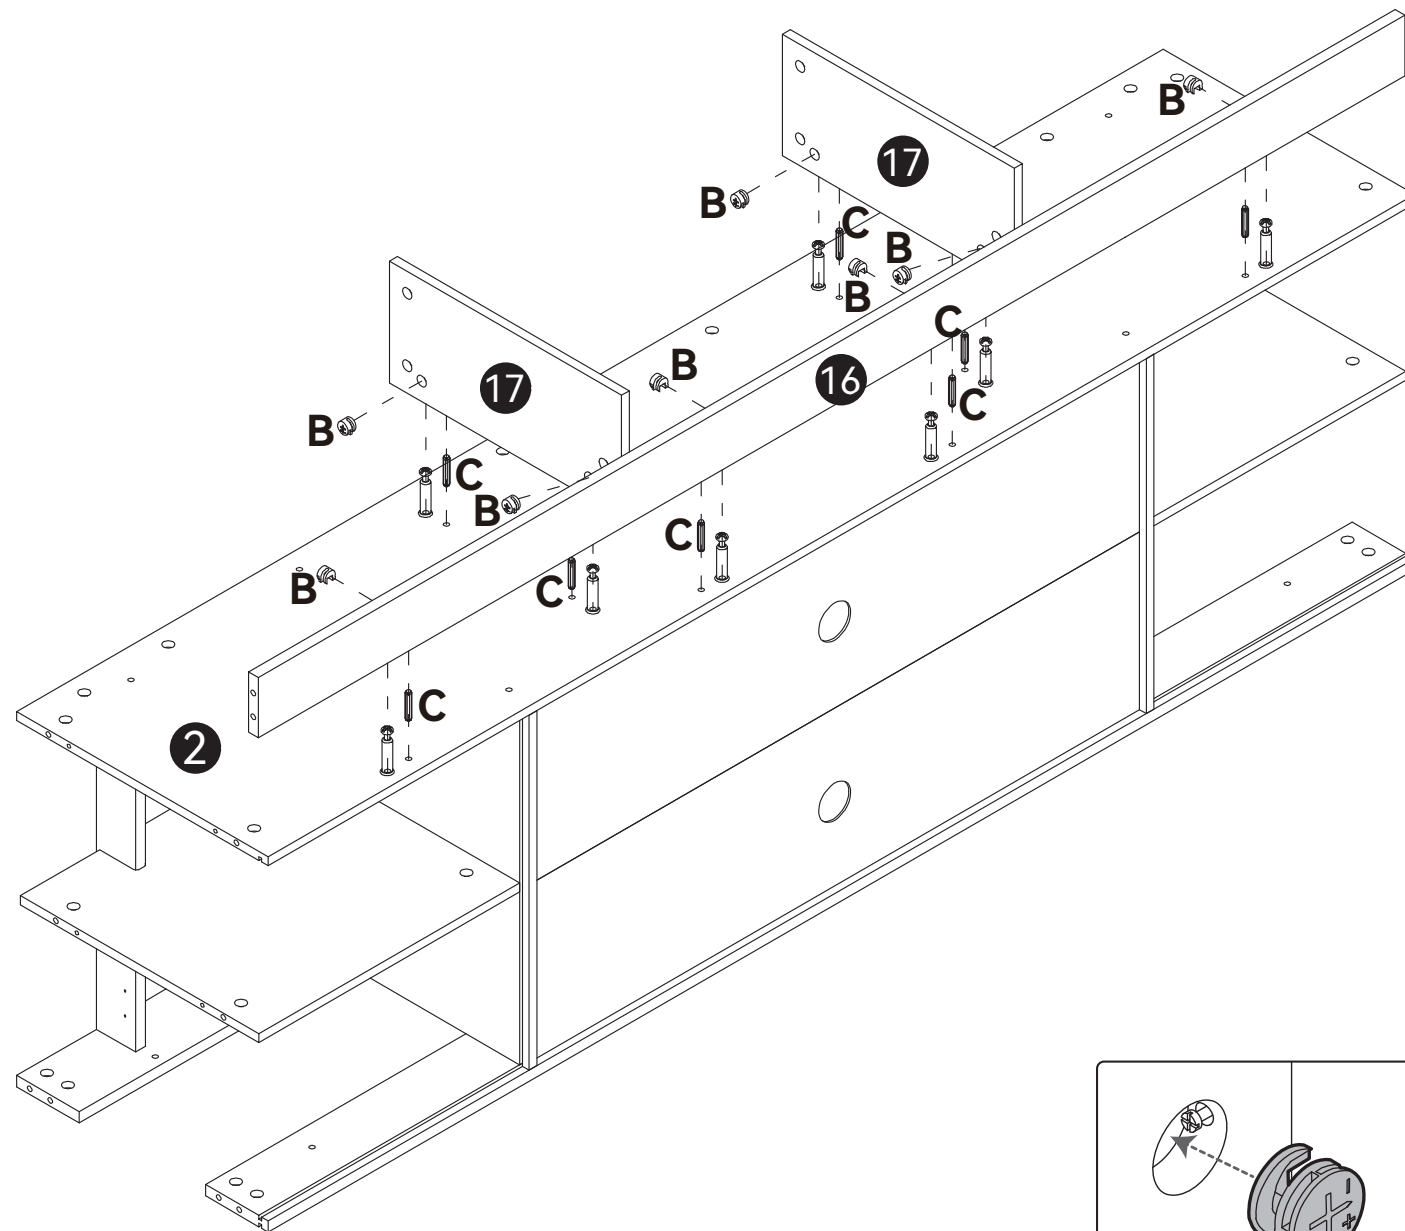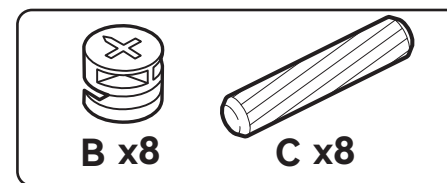   


15

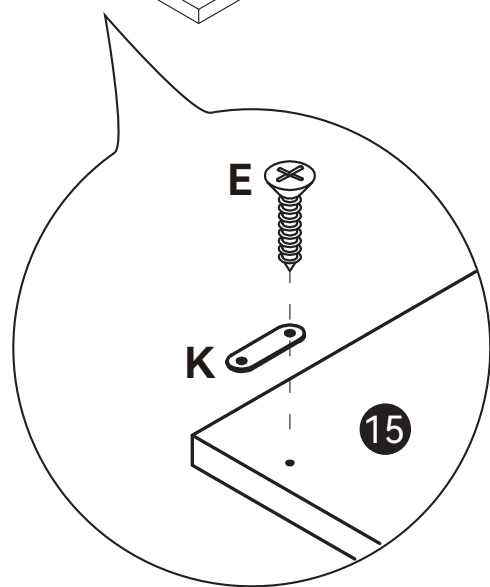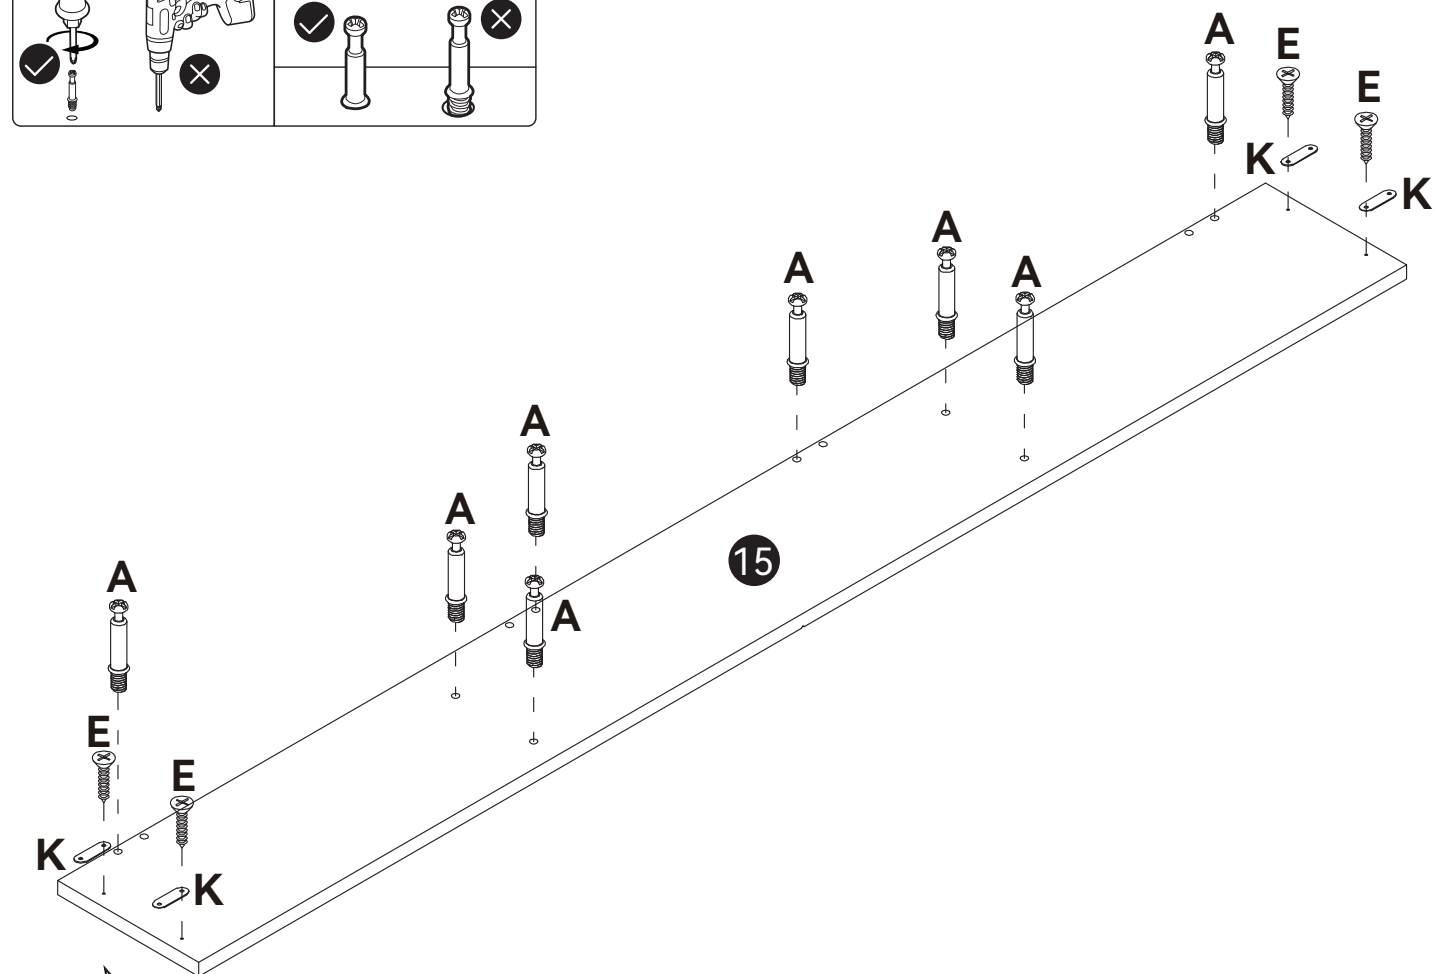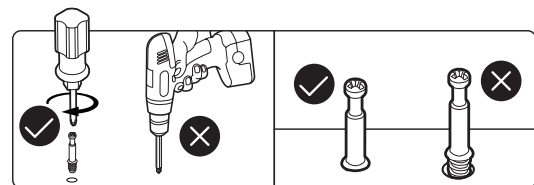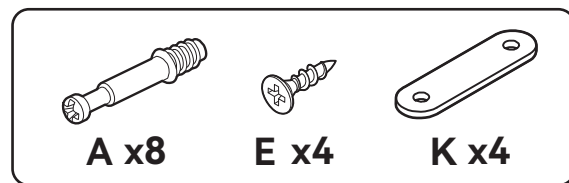    






16

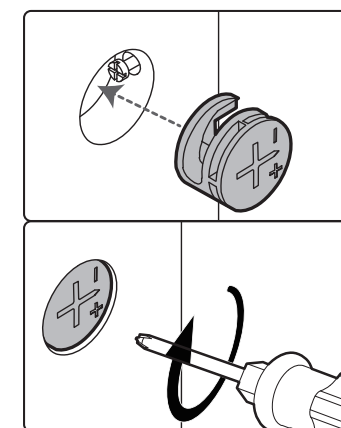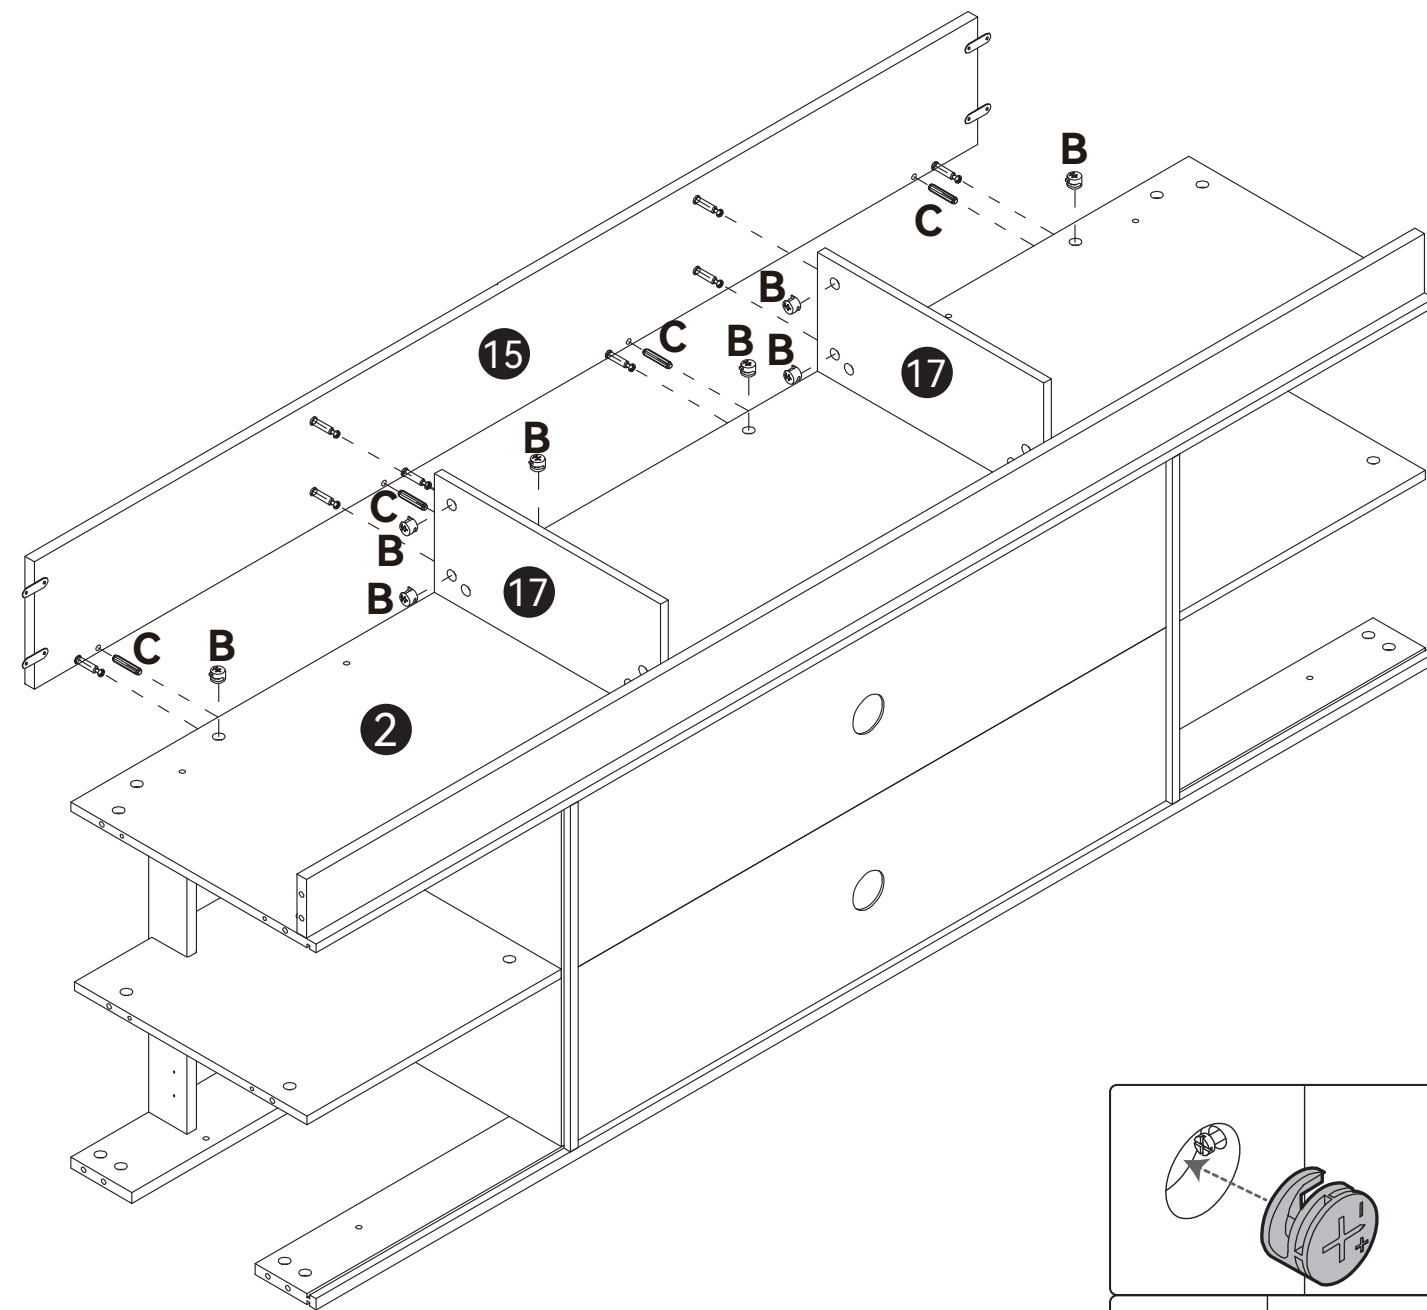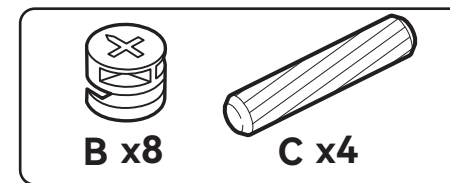   

17

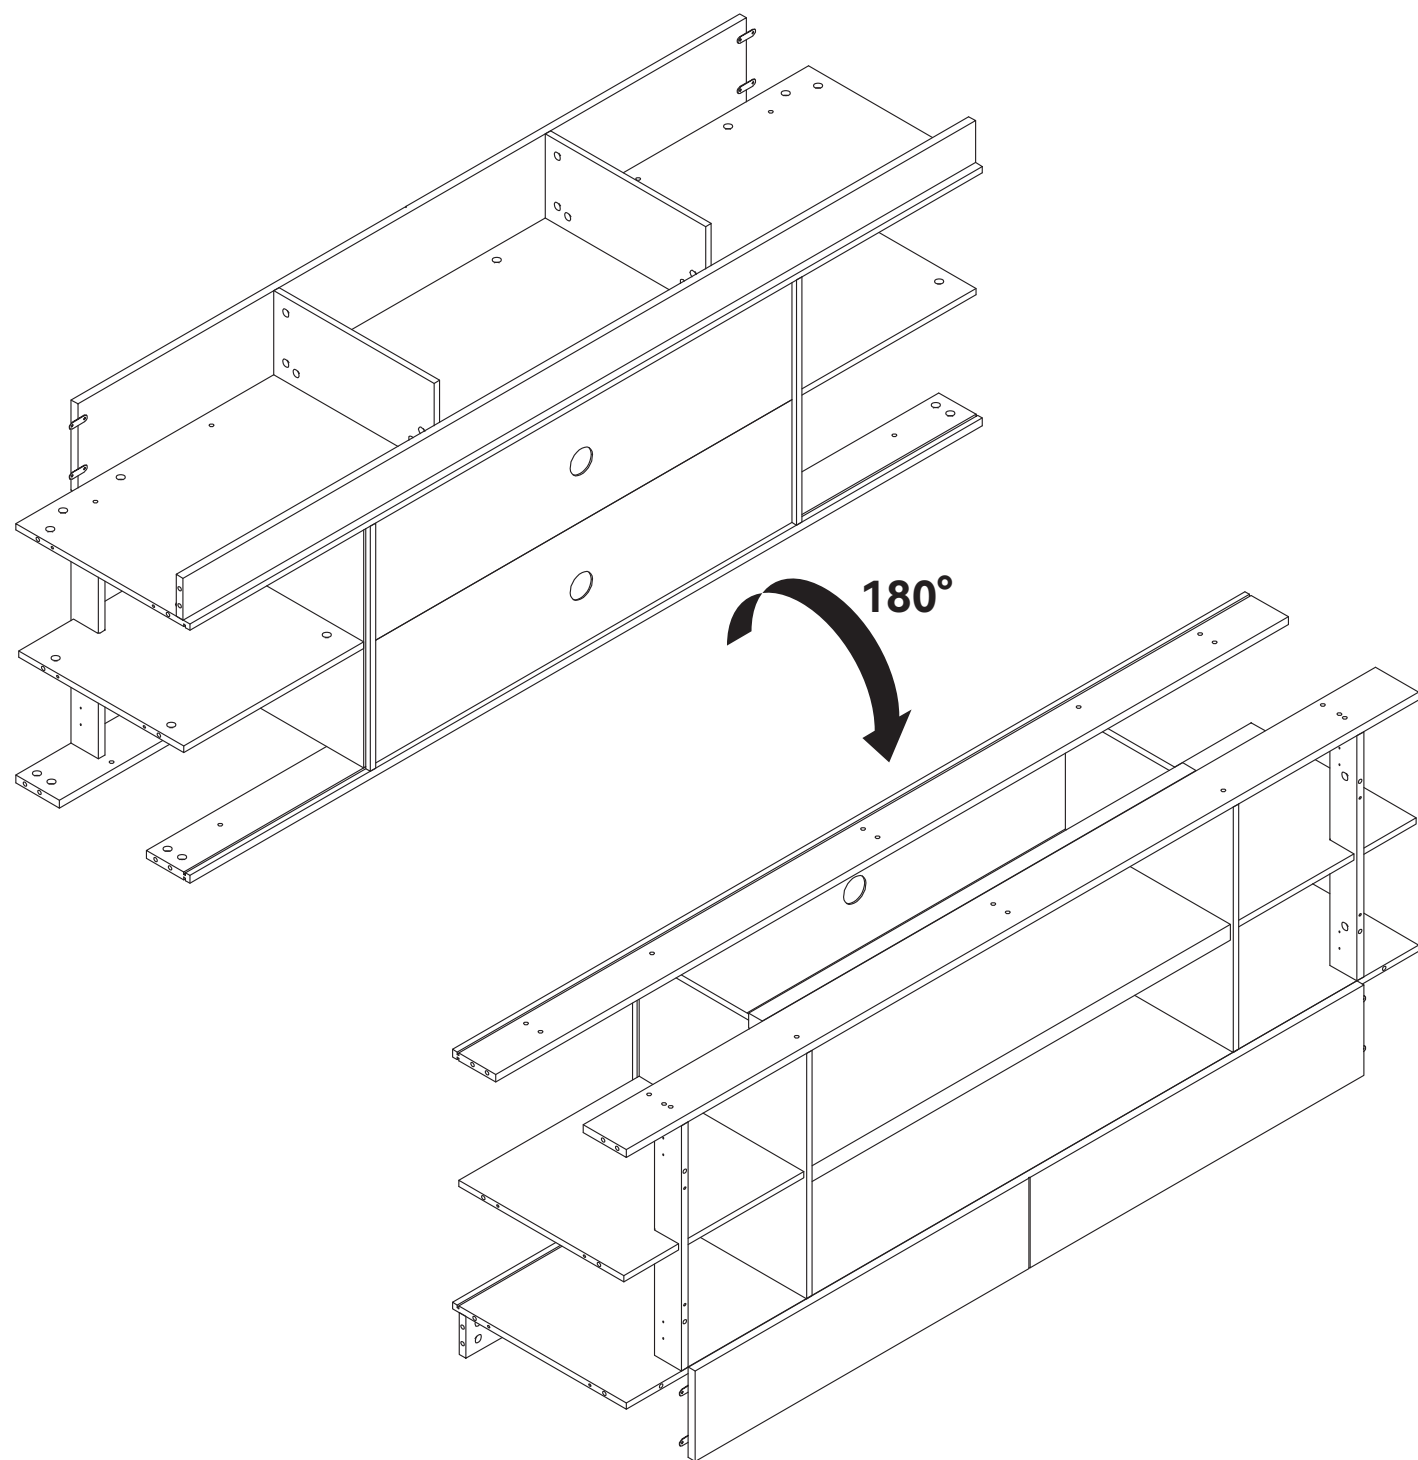 

18

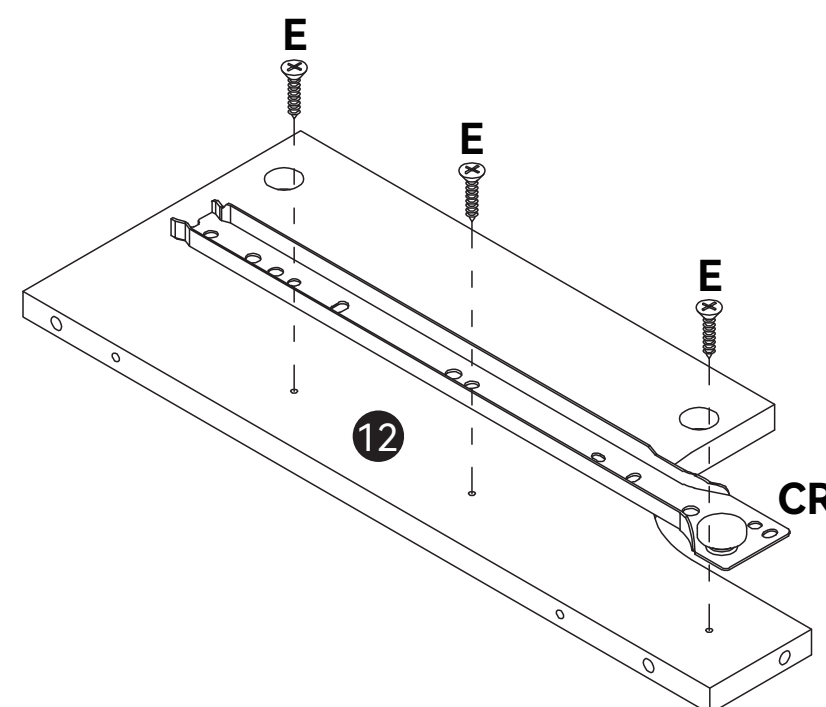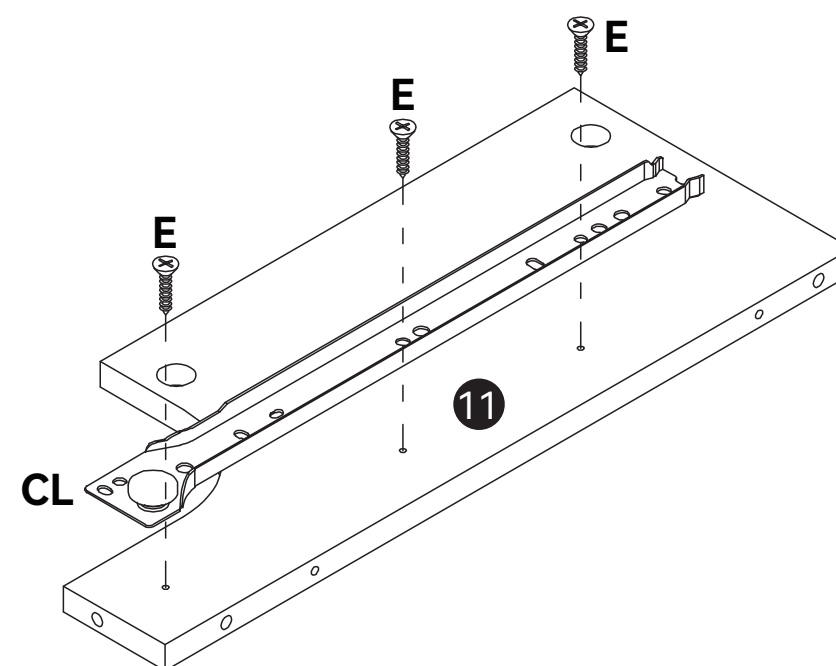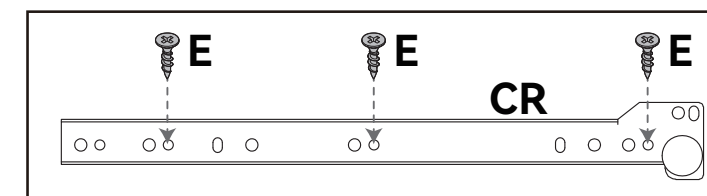   
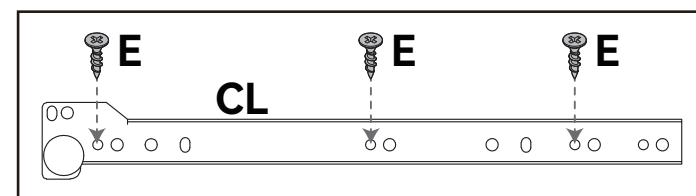 
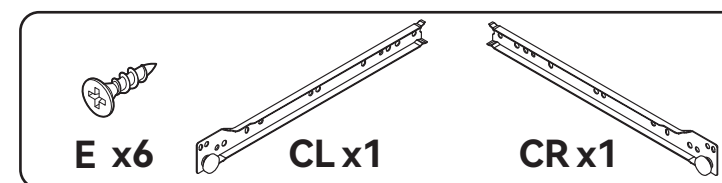 


19

E x6

CLx1

   
CRx1

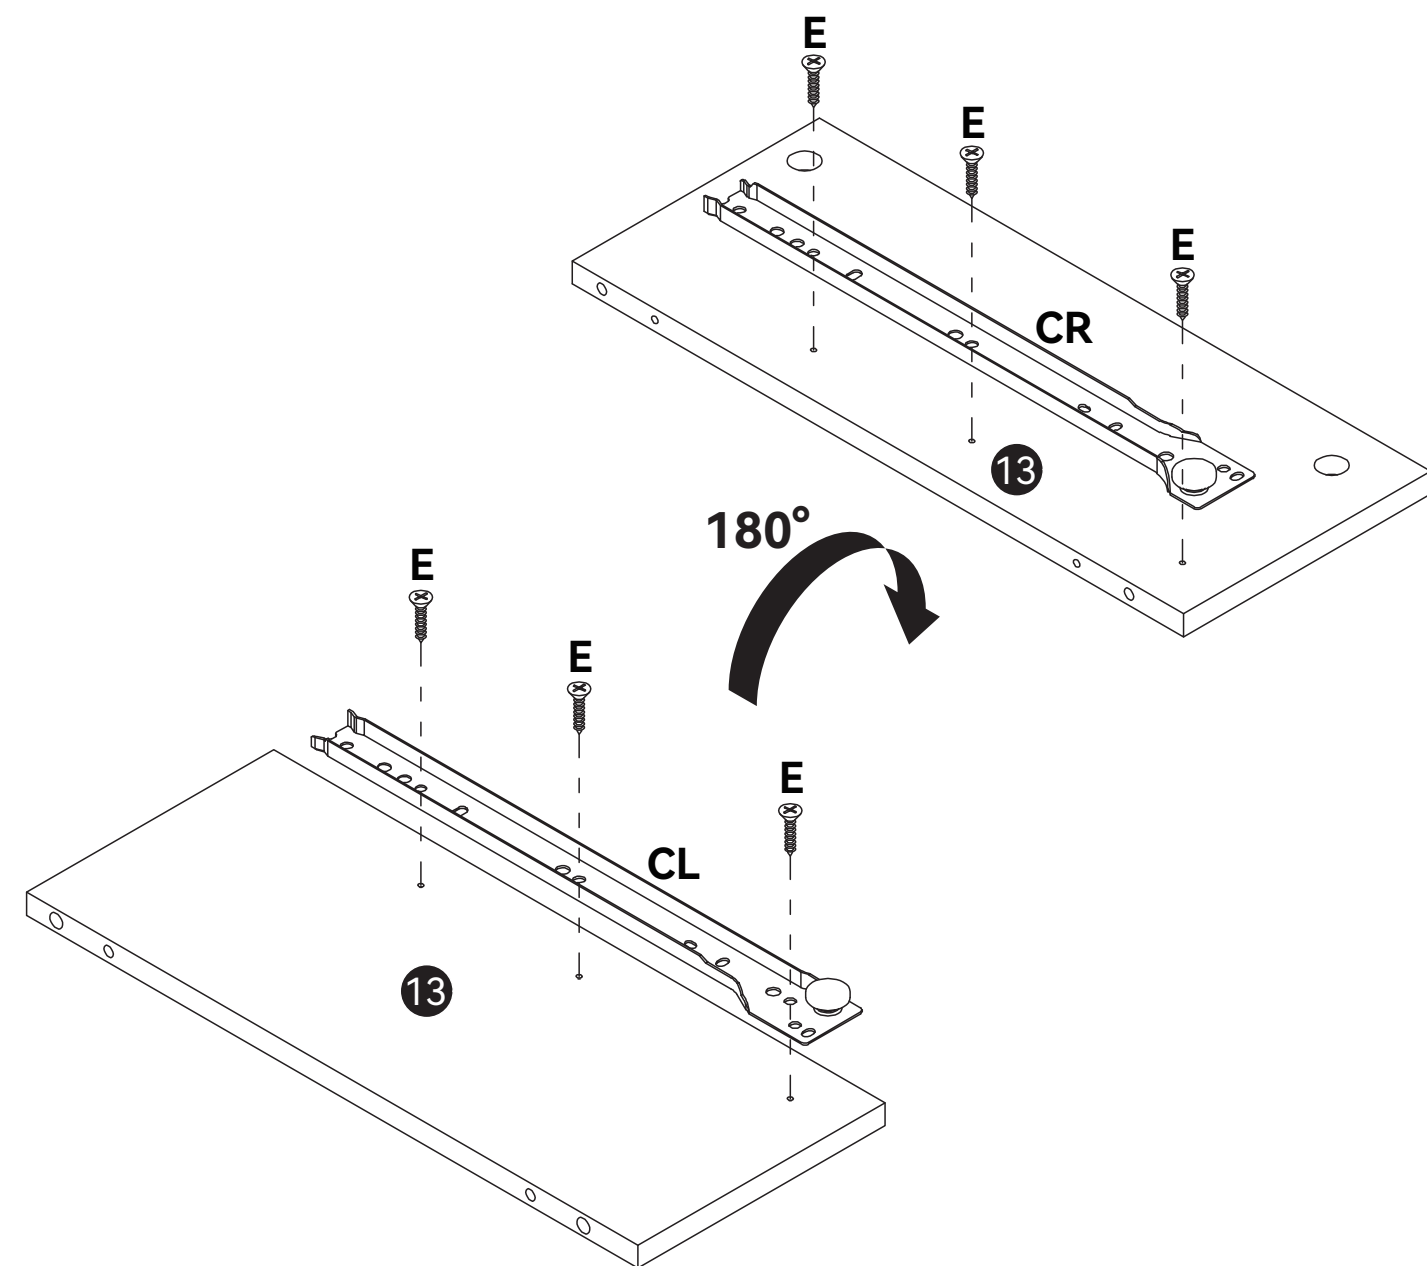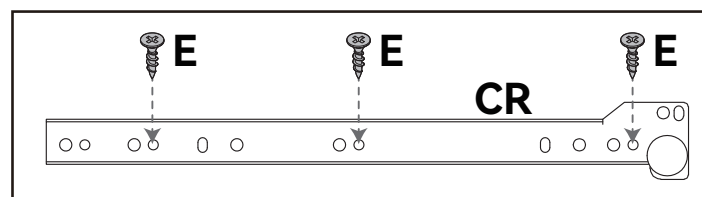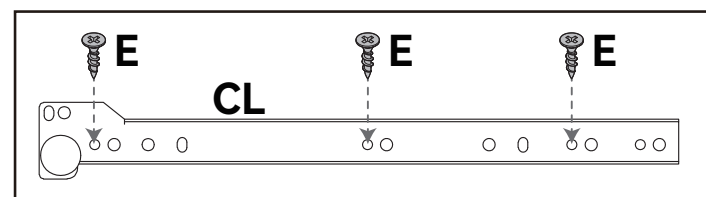


20

C x6




 
D x6

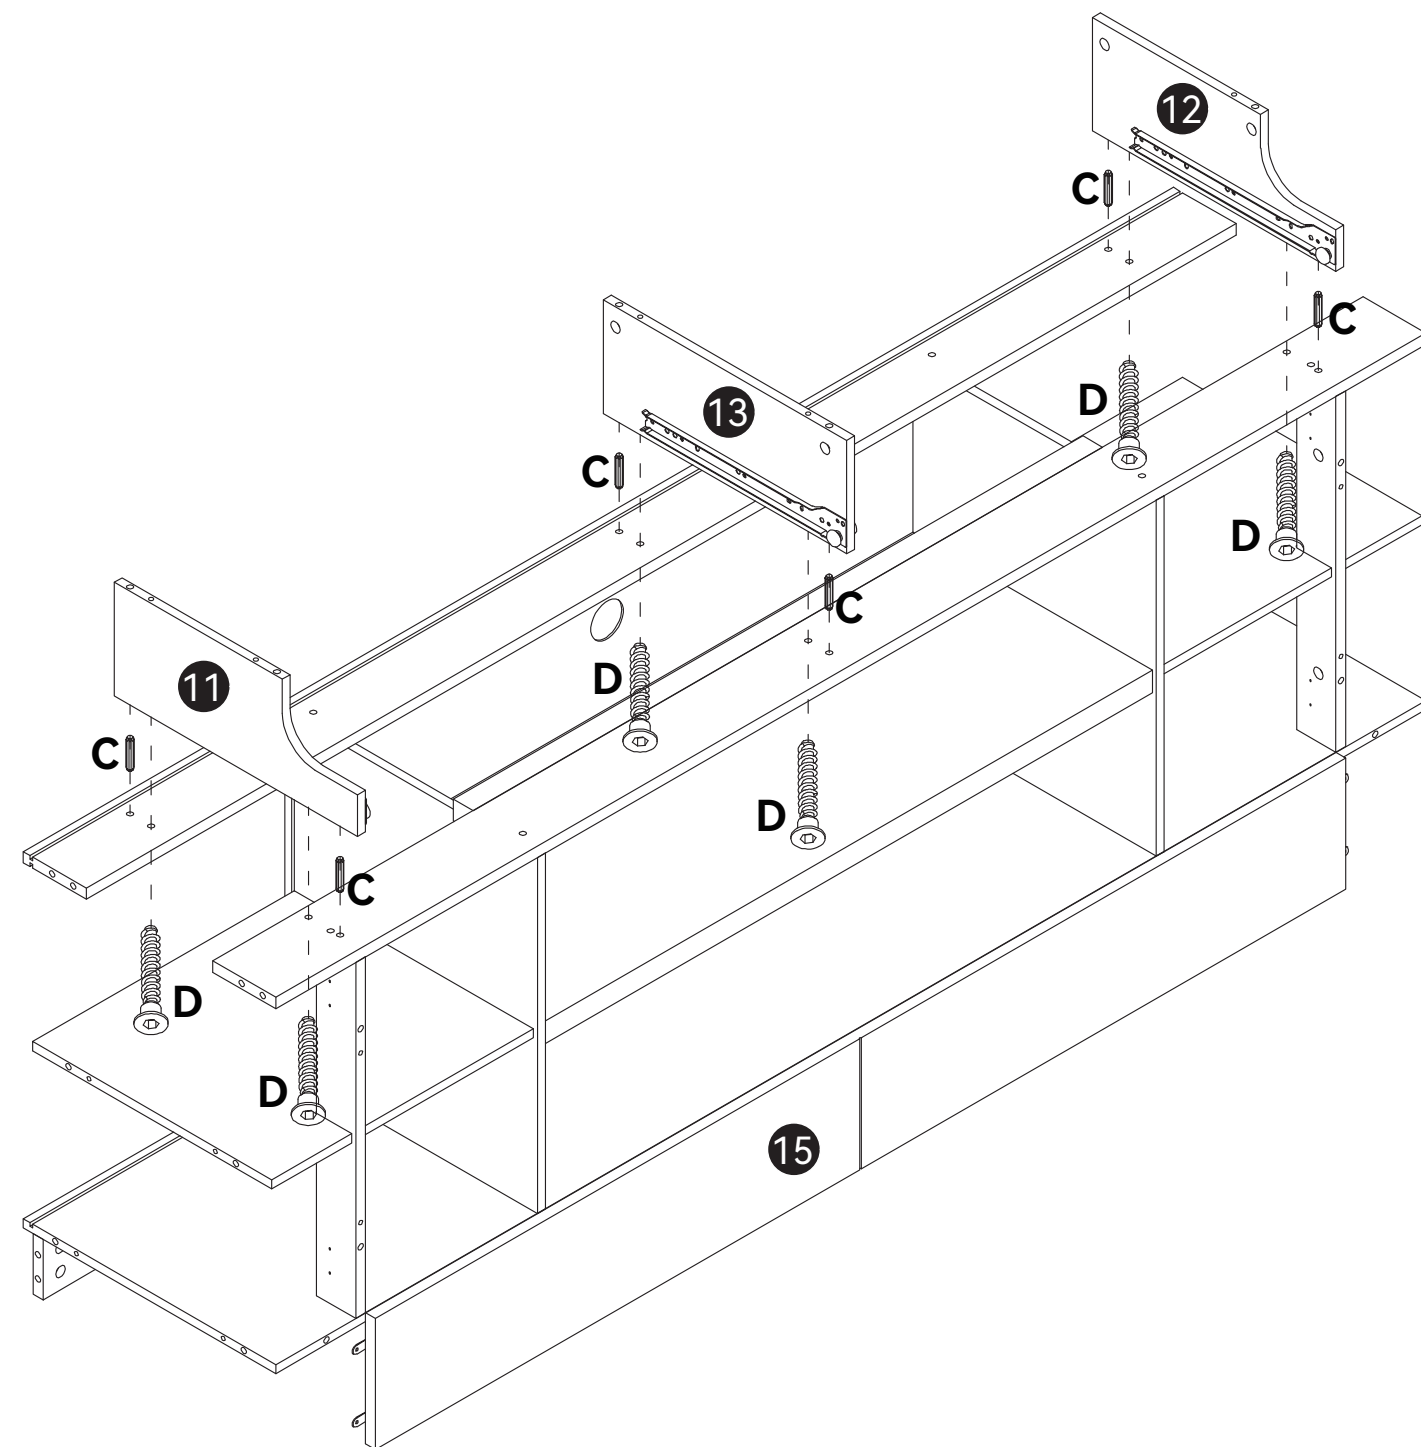



21

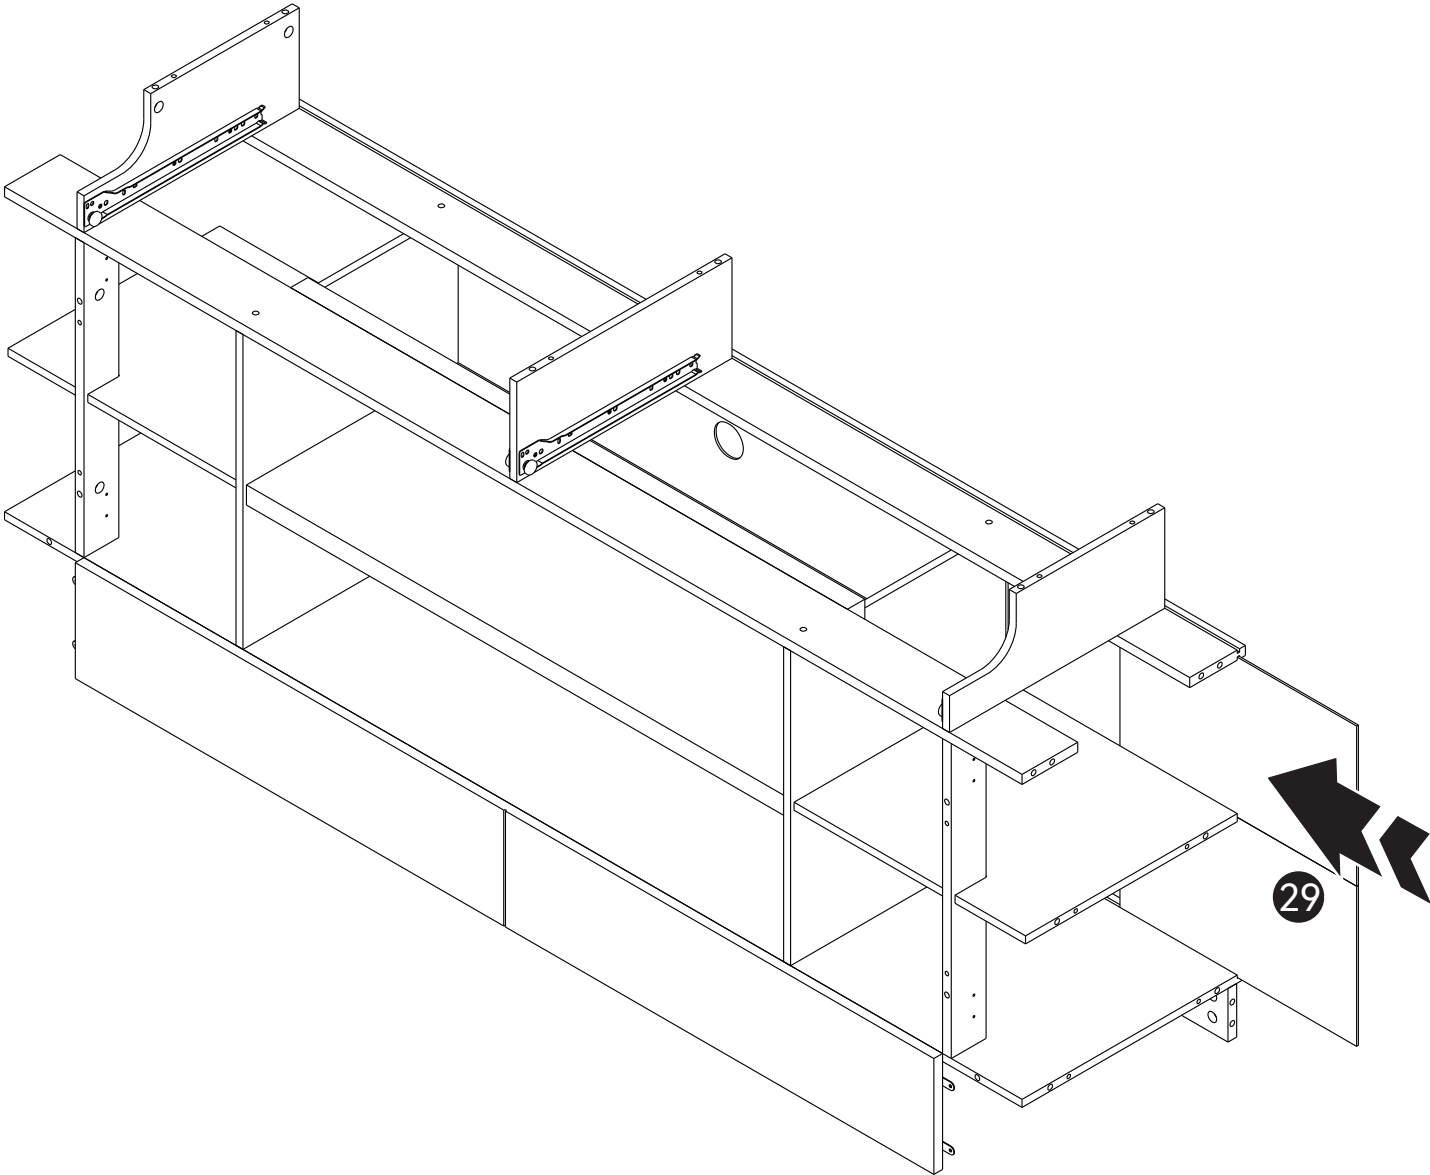 


22

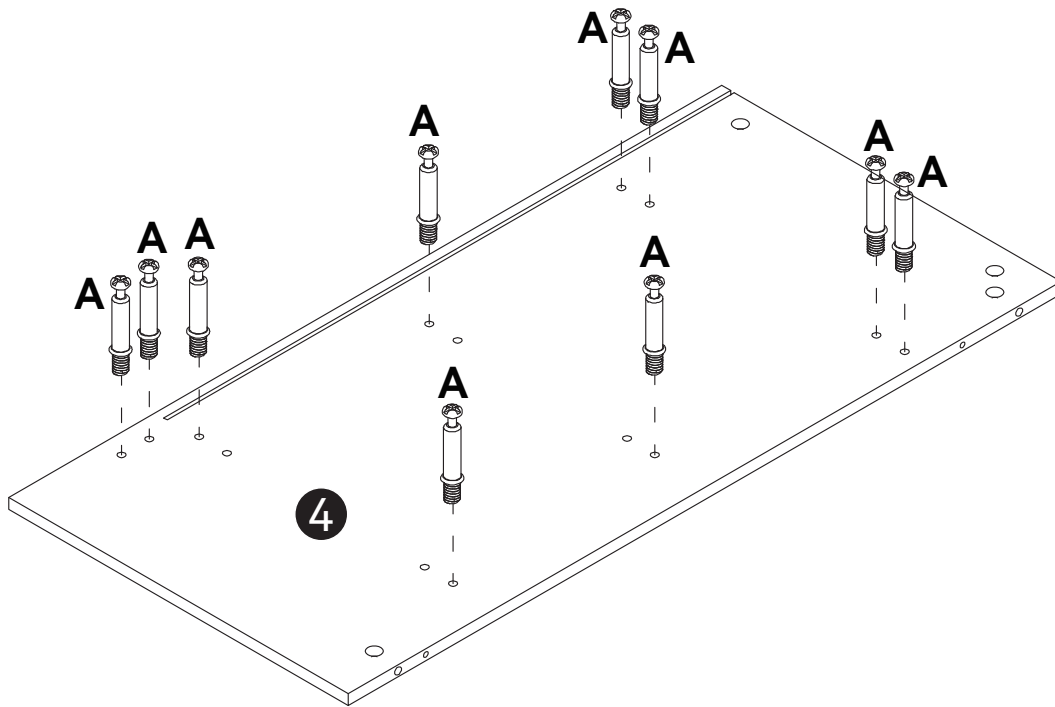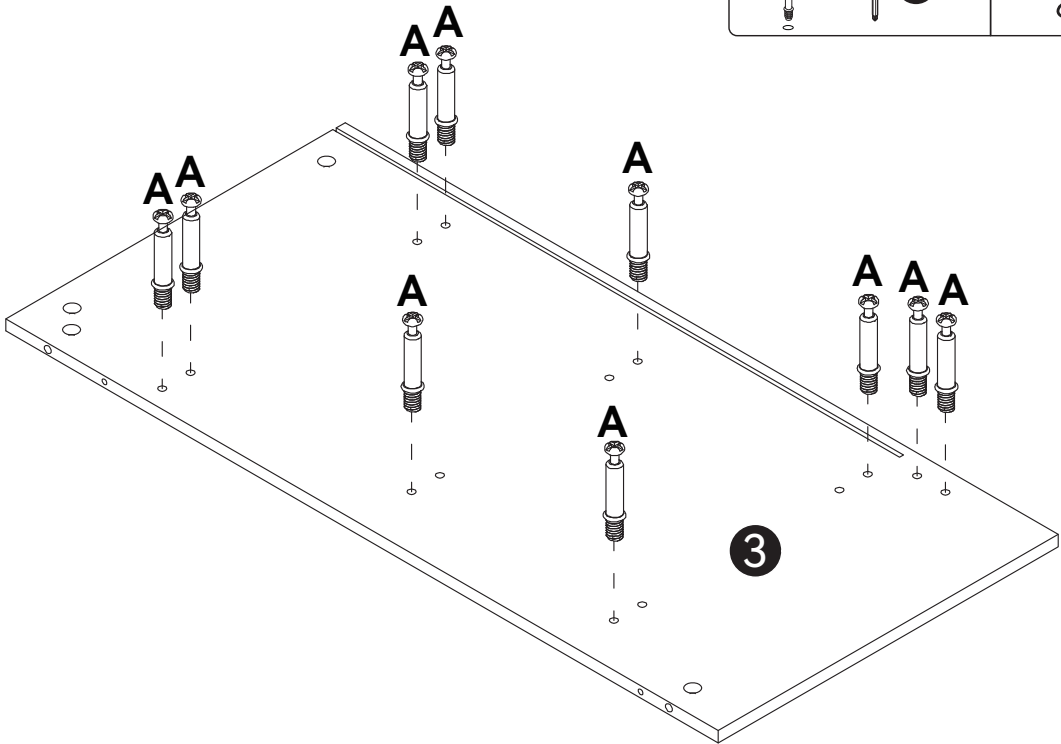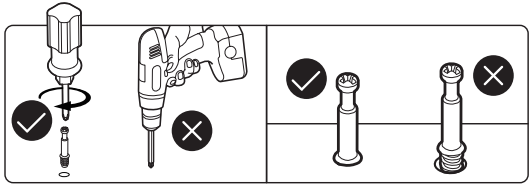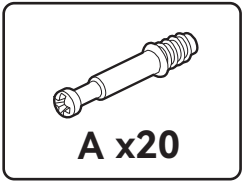    


23

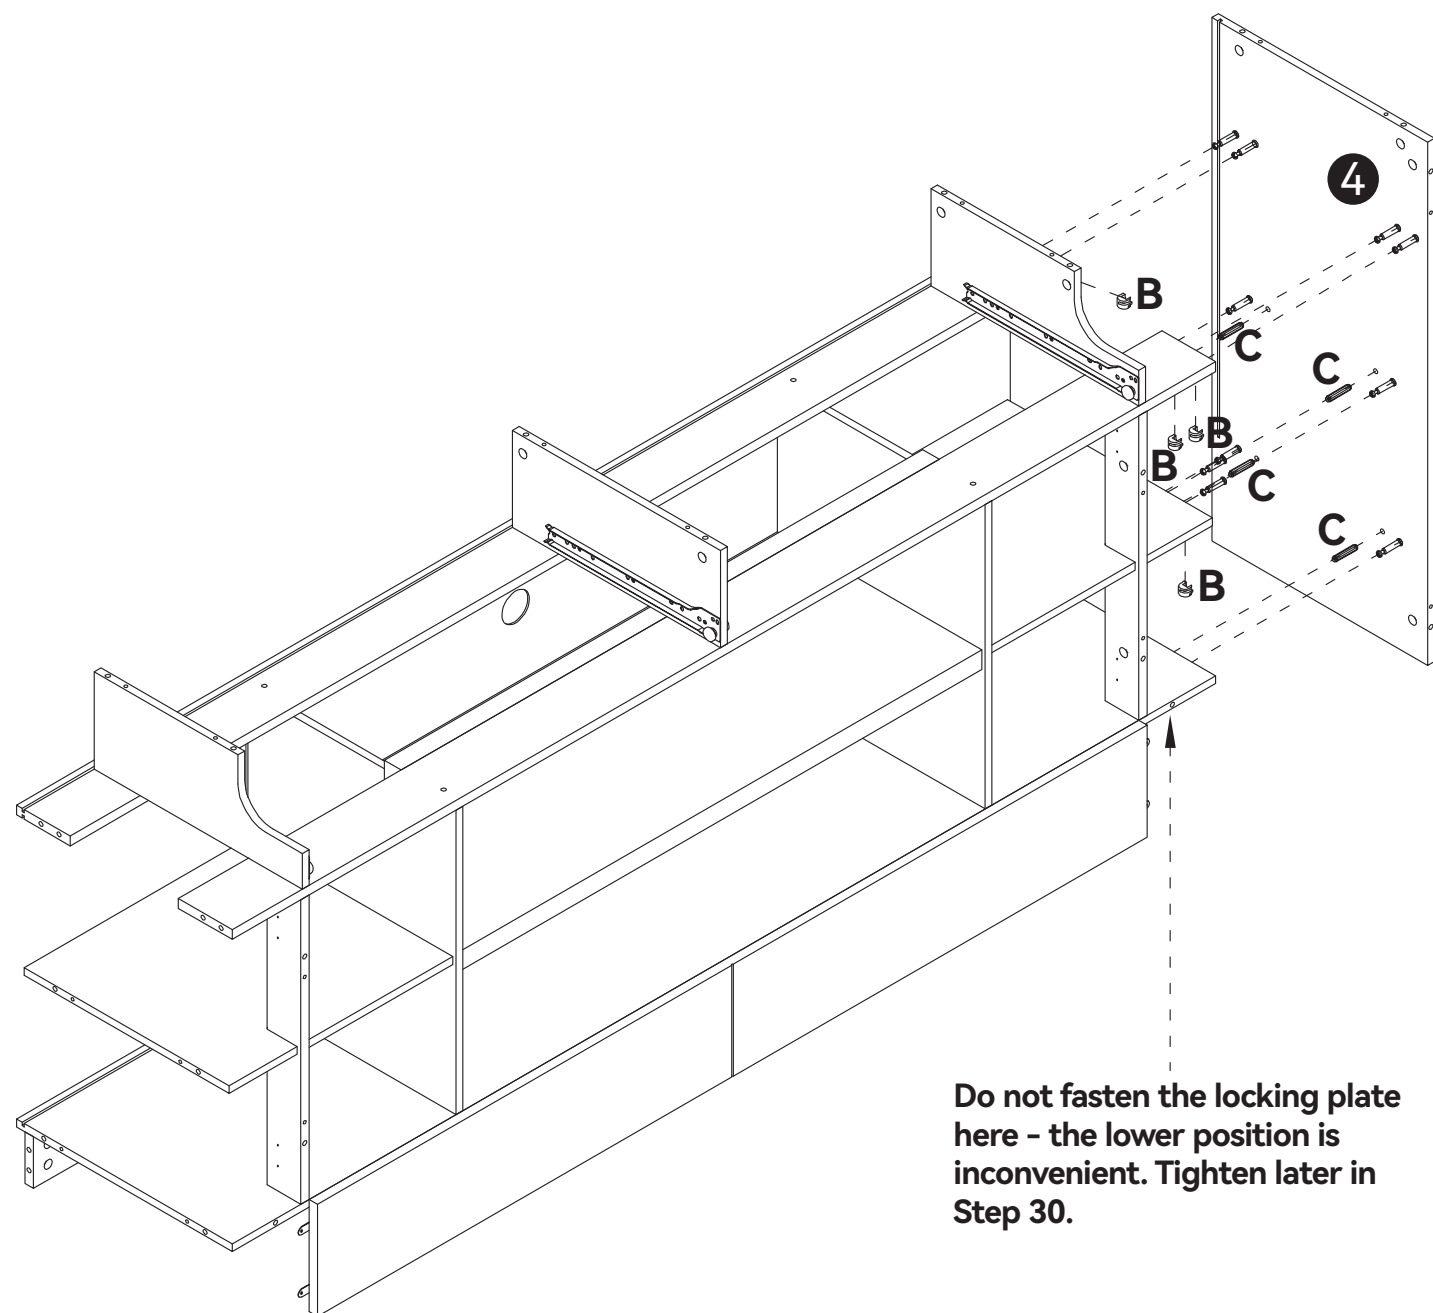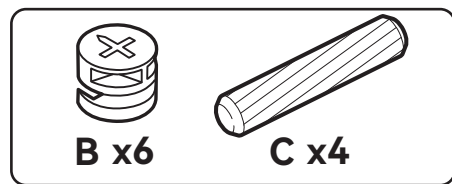  


 
Do not fasten the locking plate here - the lower position is inconvenient. Tighten later in Step 30.

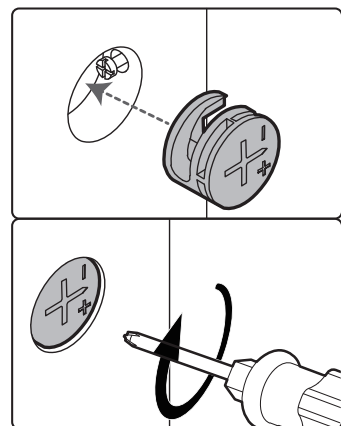


24

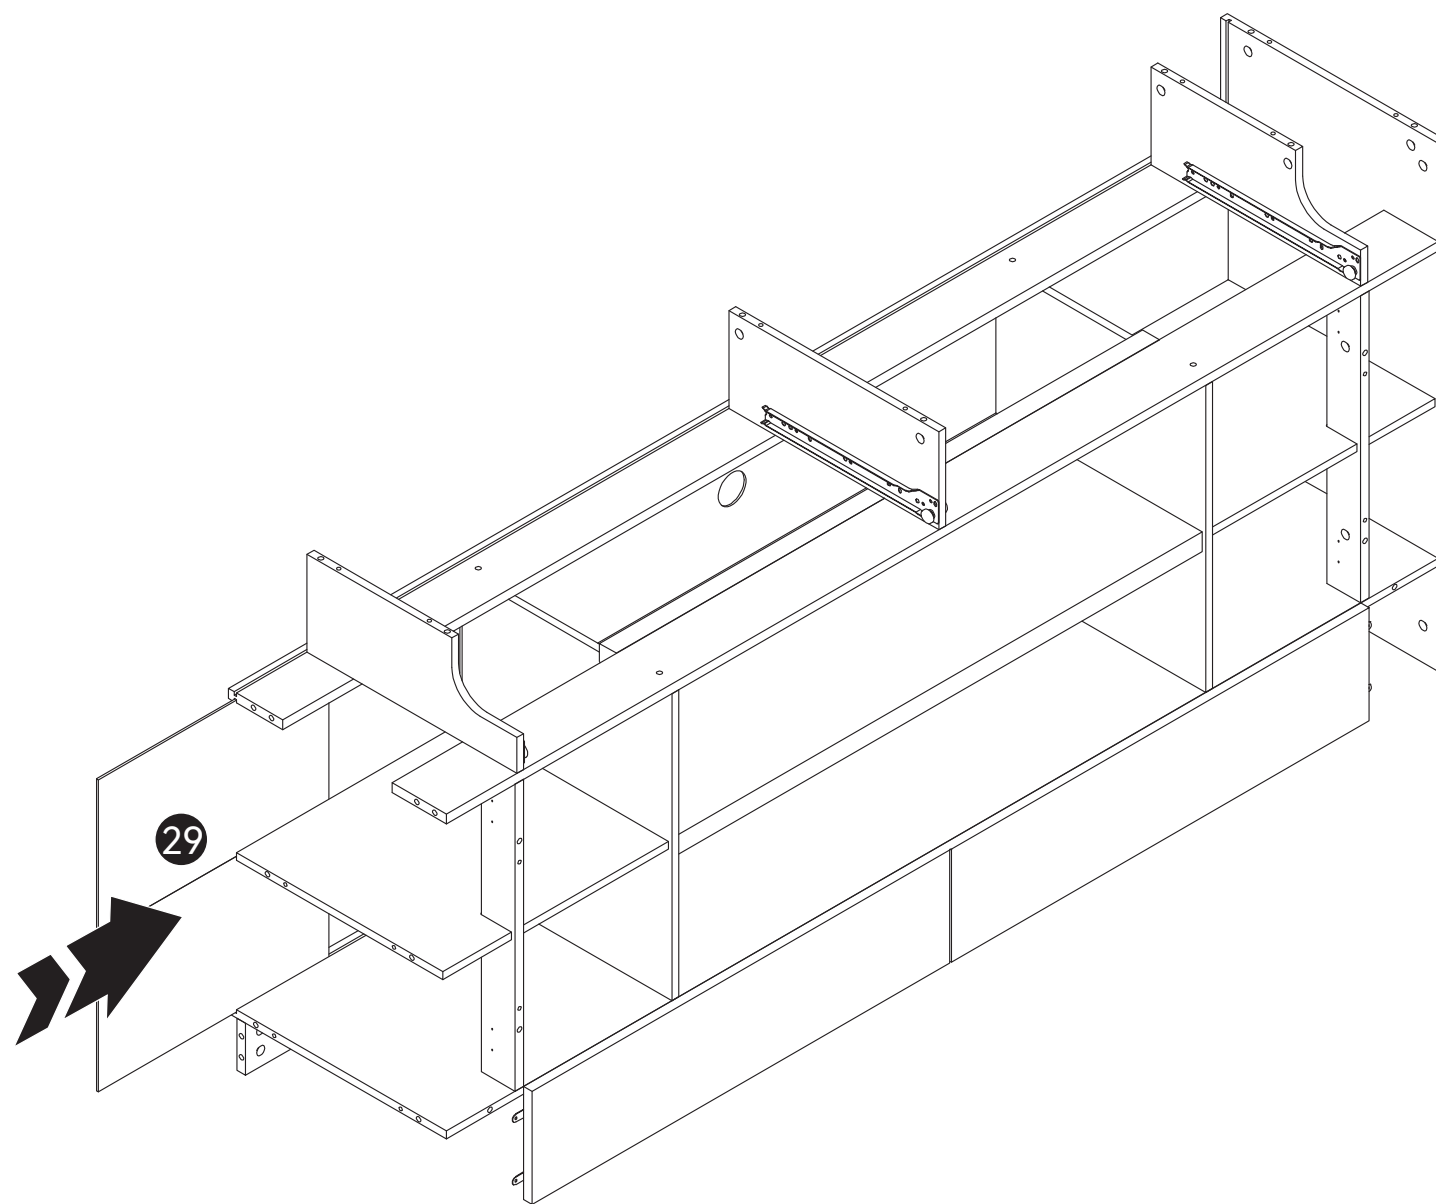 


25

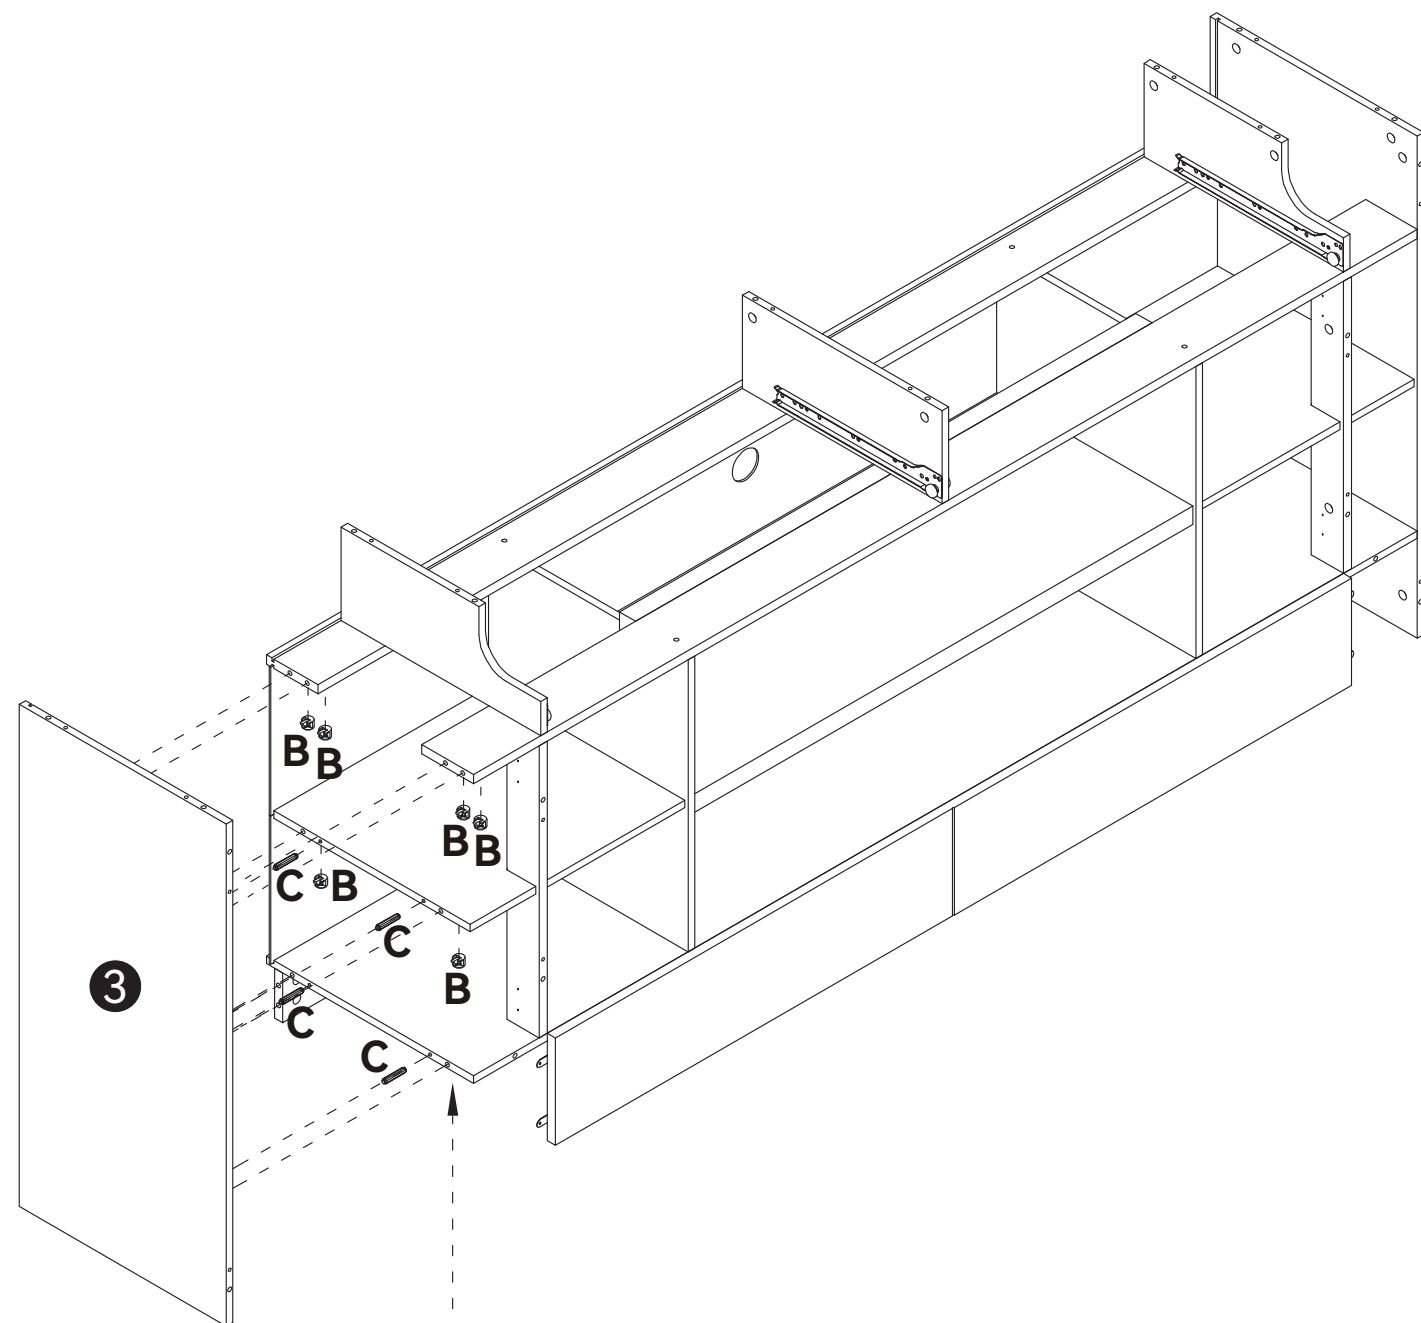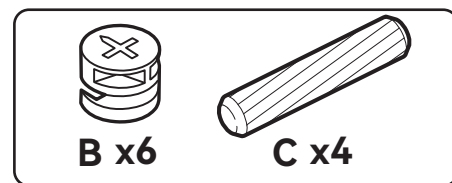  


 
Do not fasten the locking plate here - the lower position is inconvenient. Tighten later in Step 30.

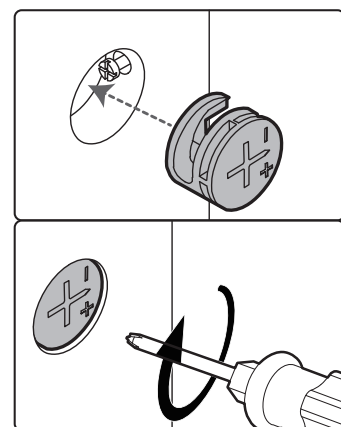



26

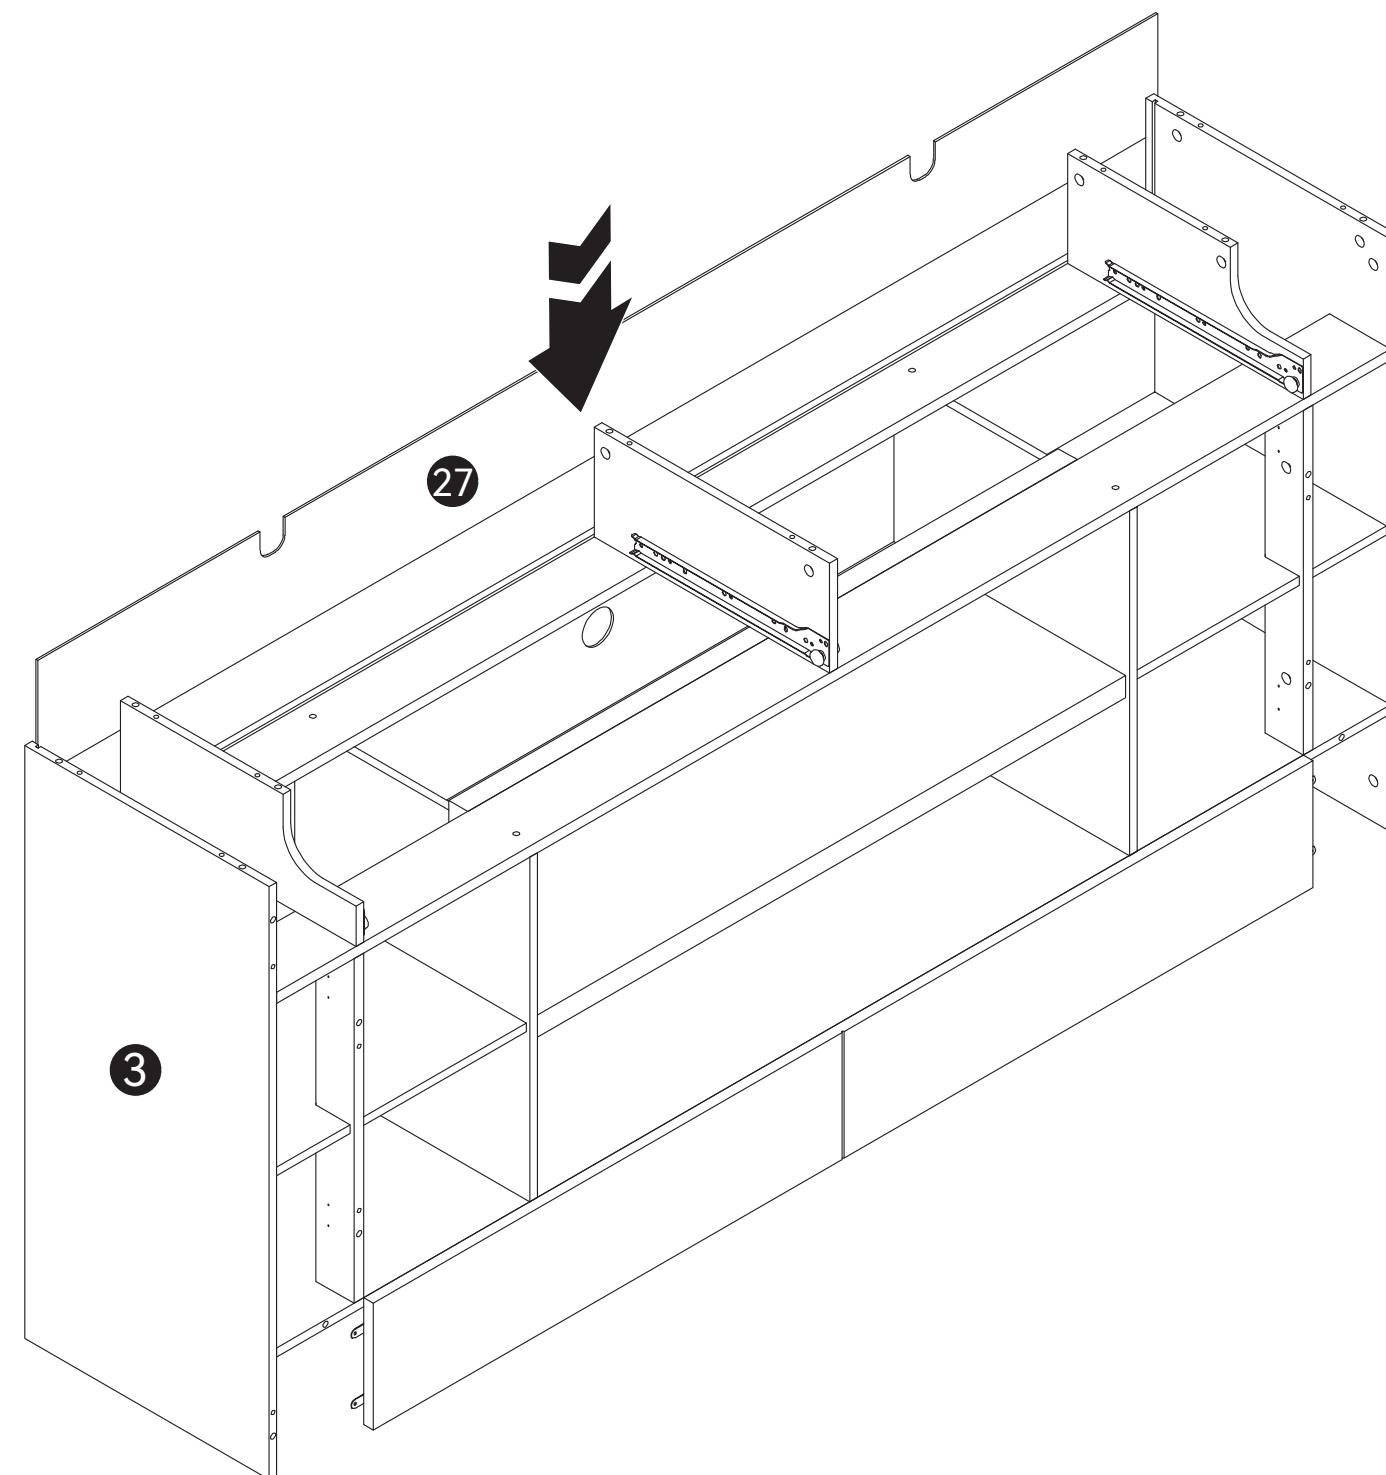 




27

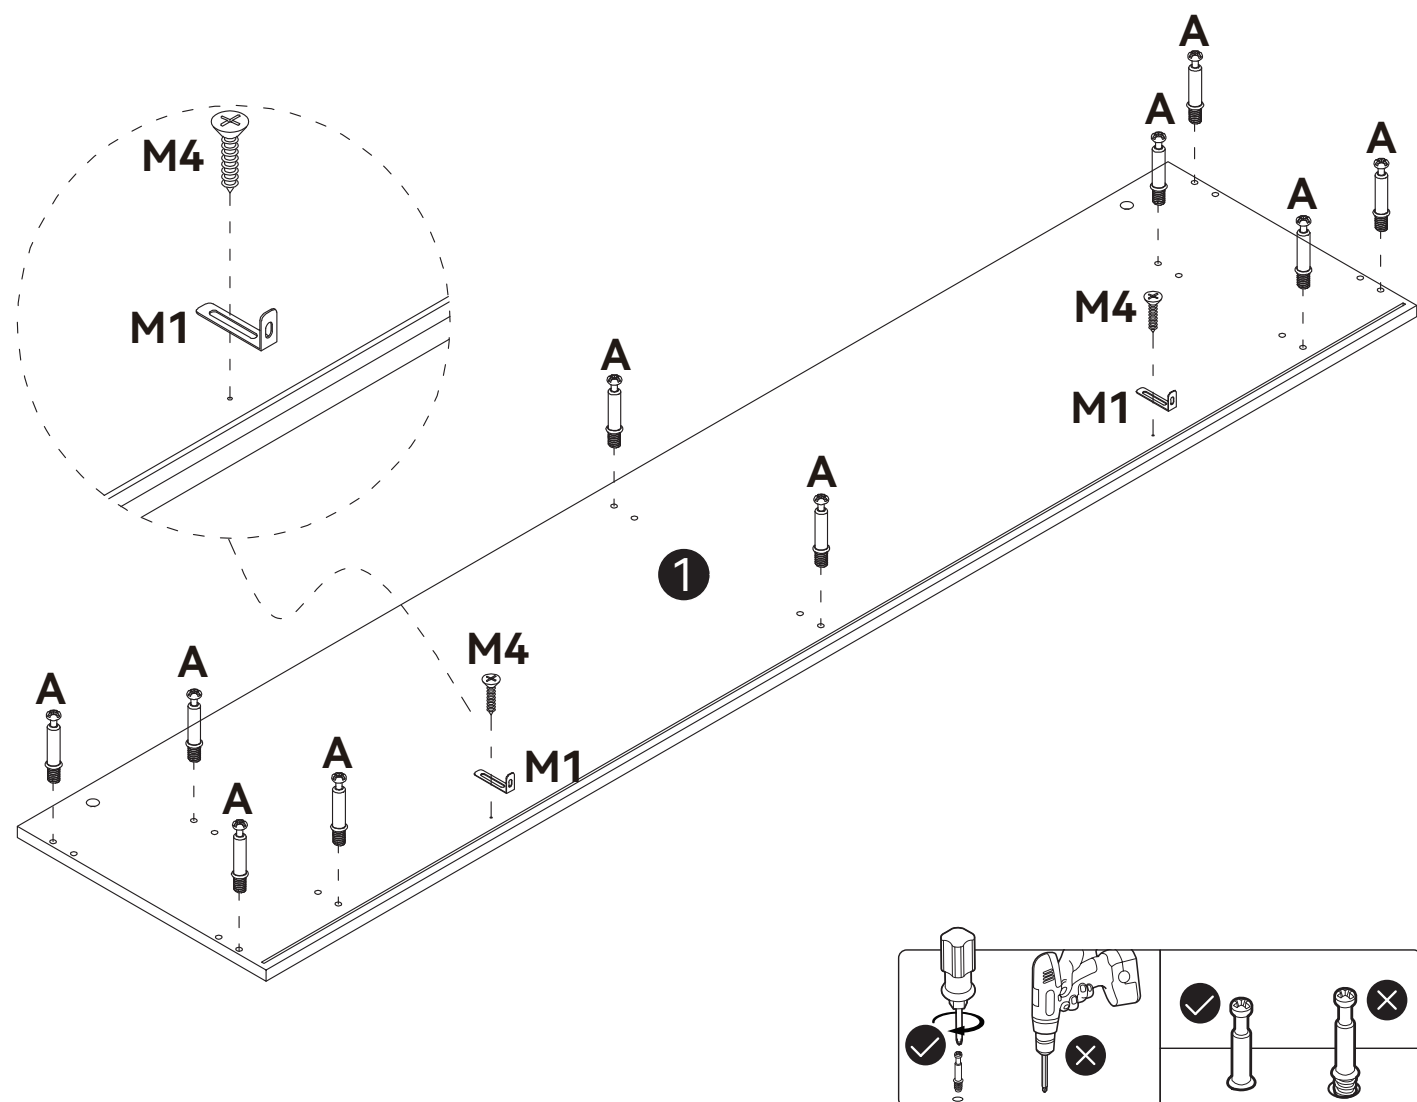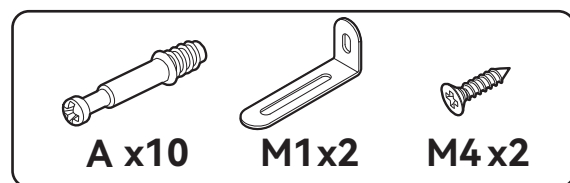  



28

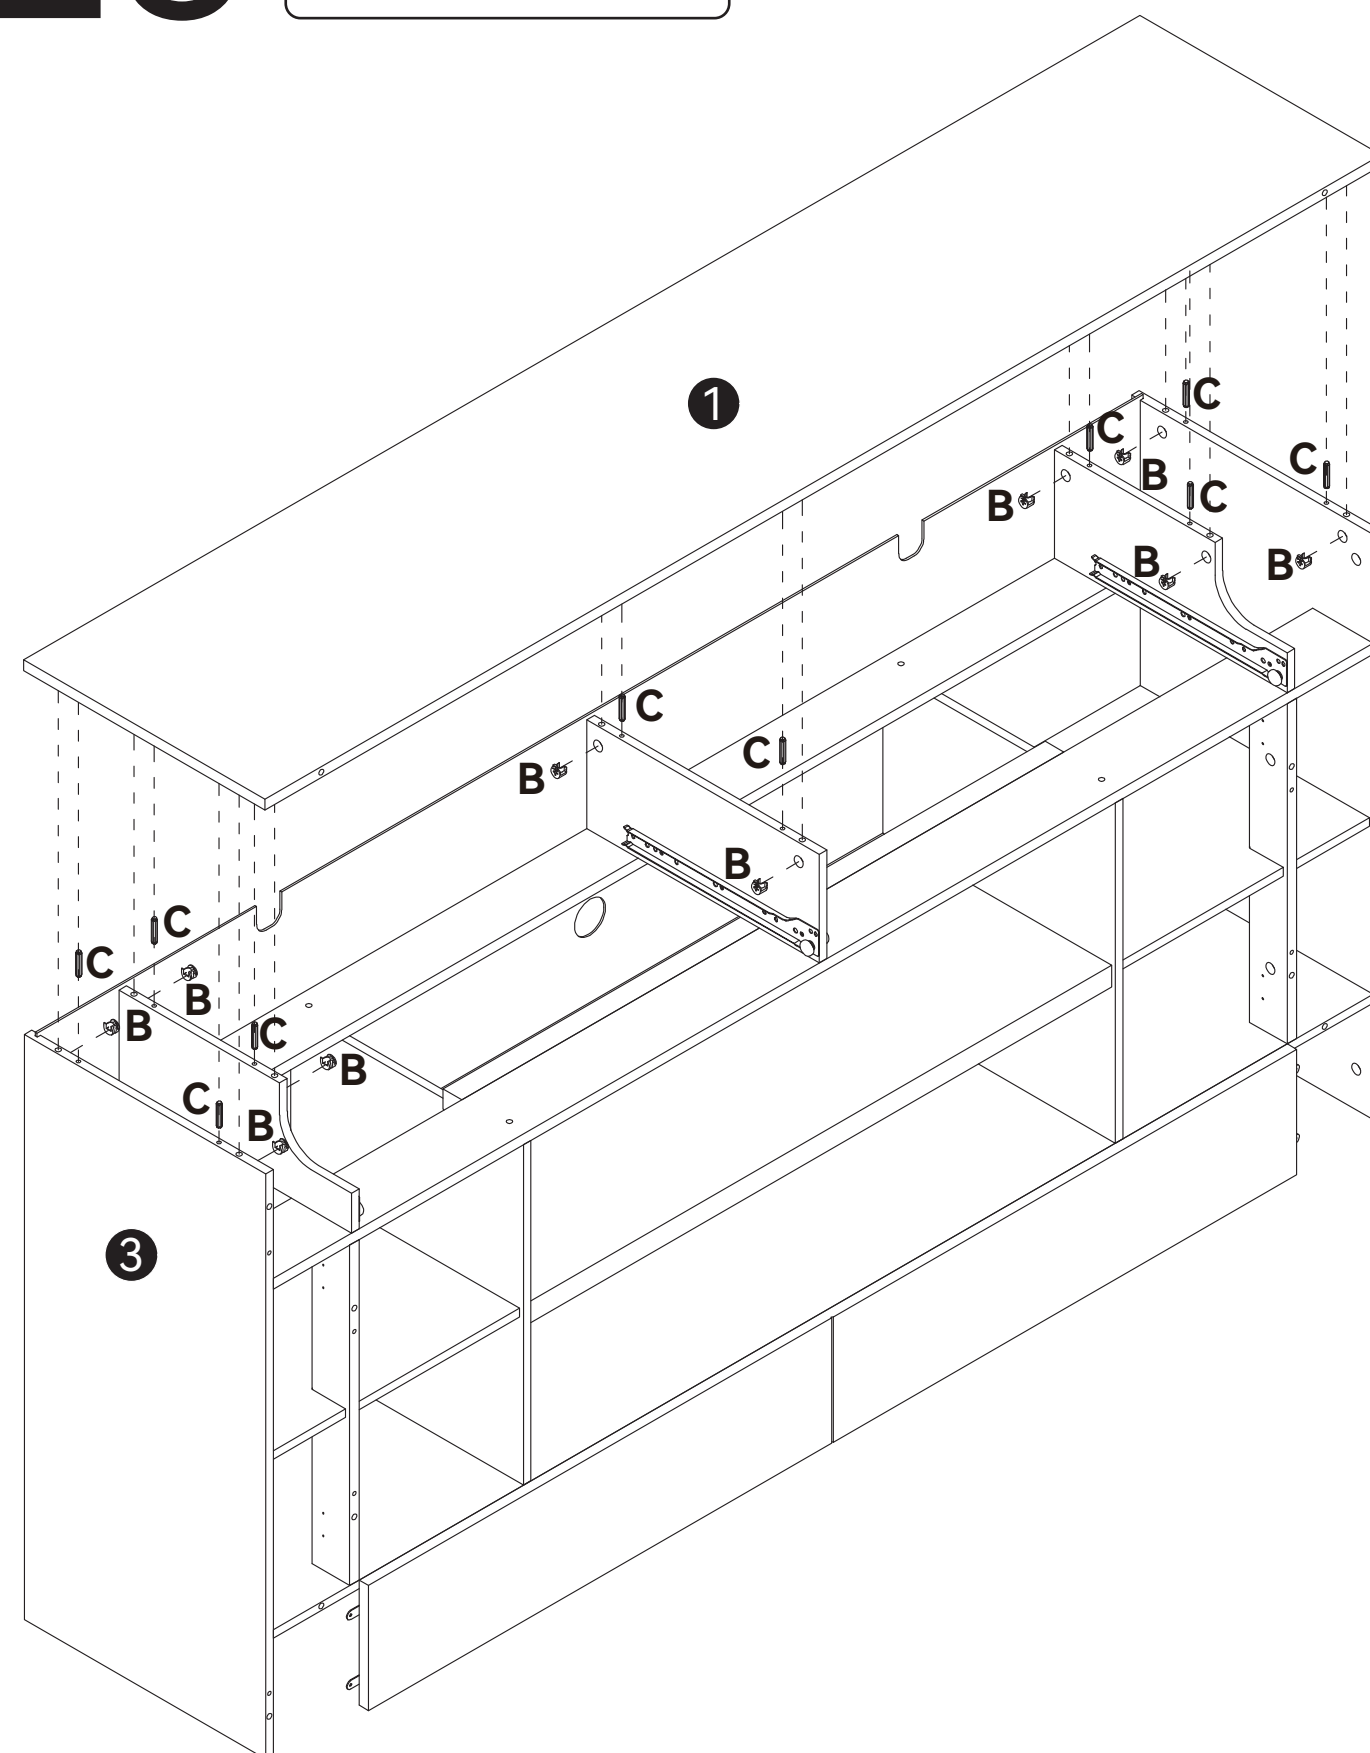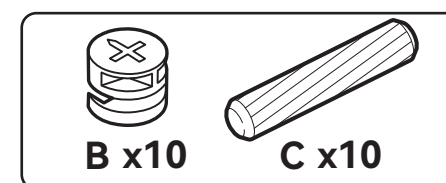  


29

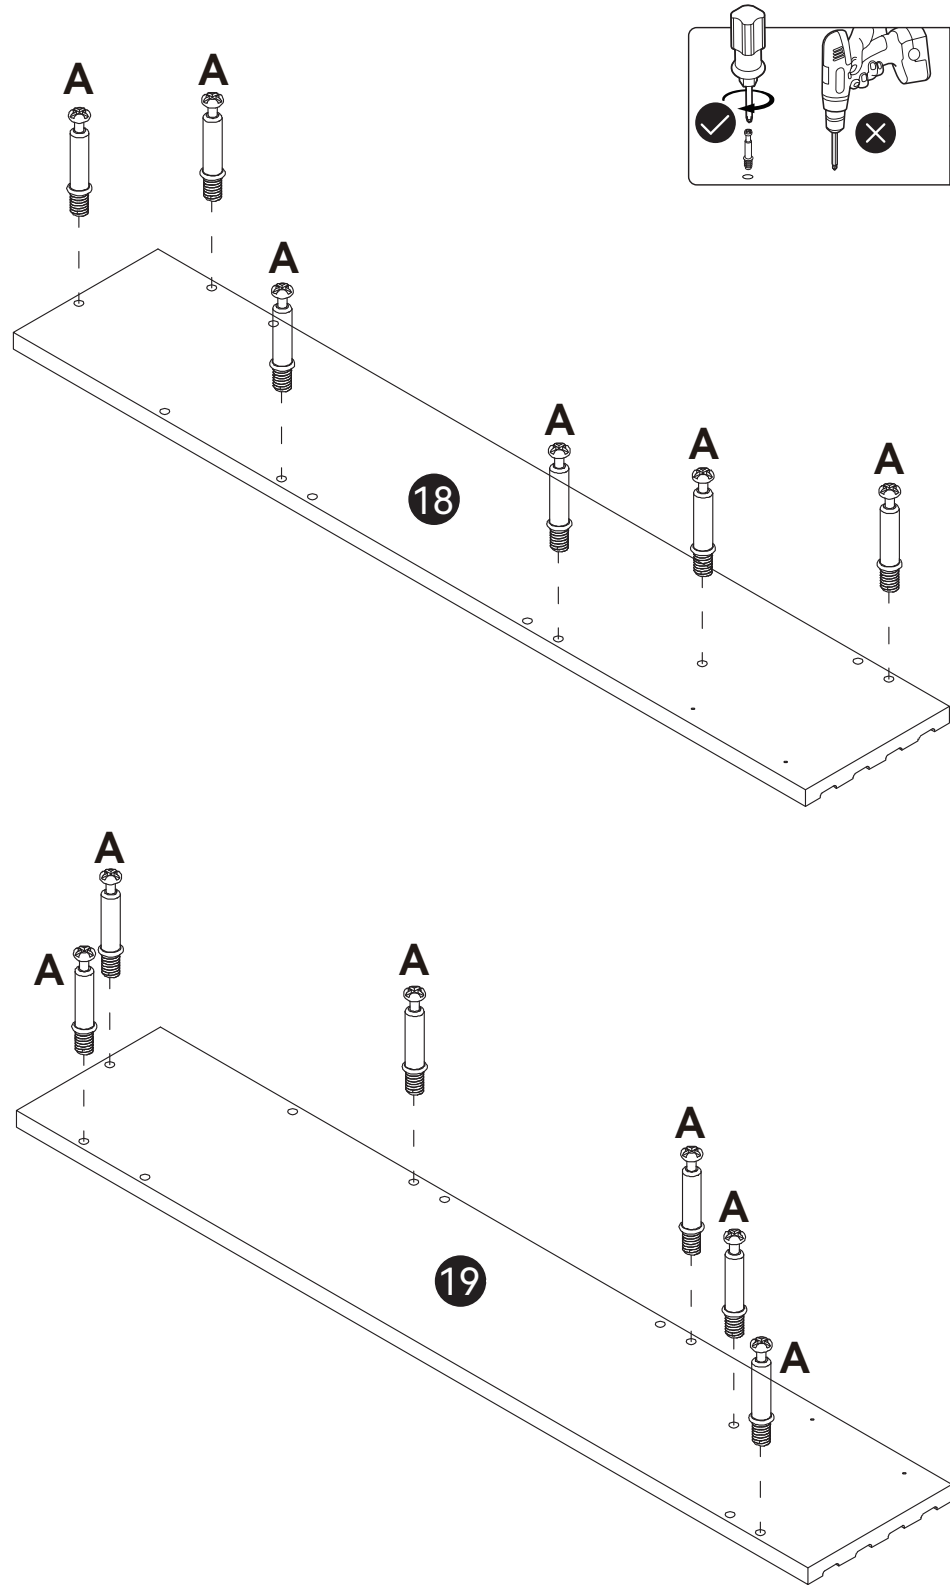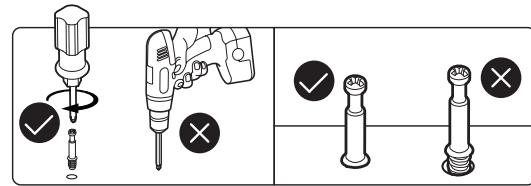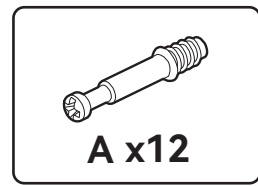   



30

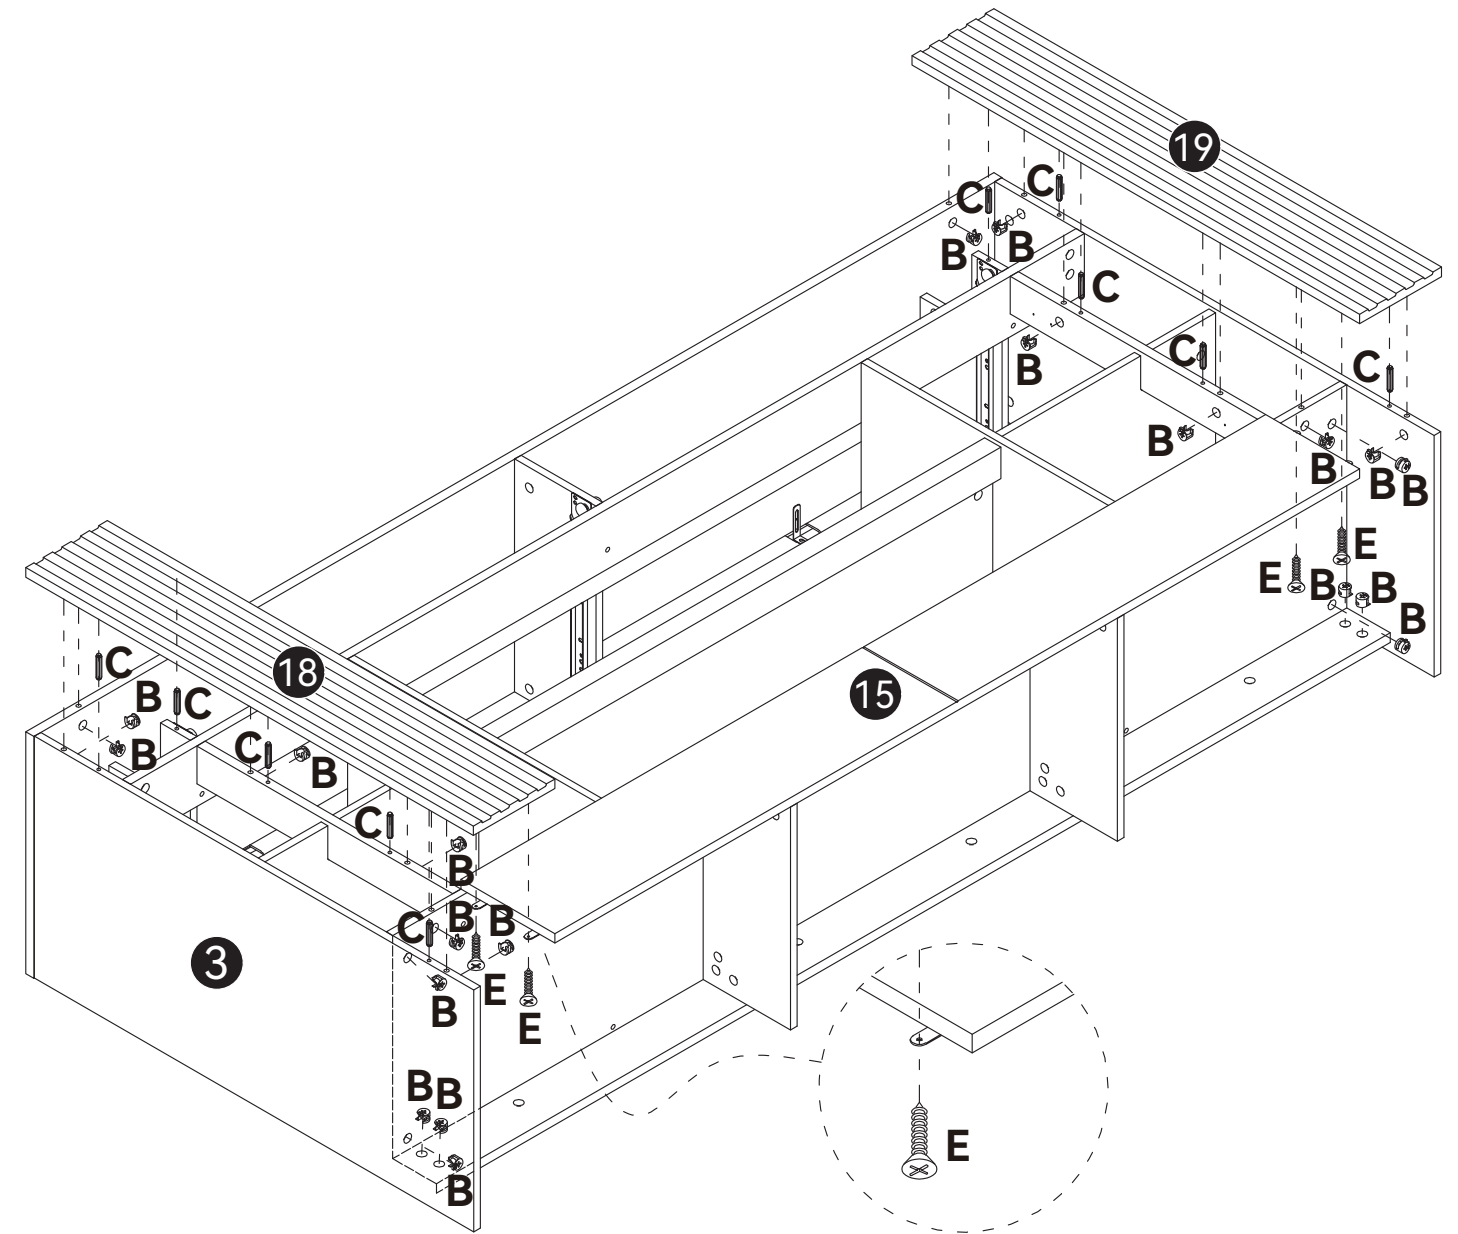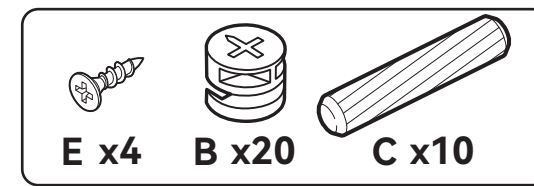  

31

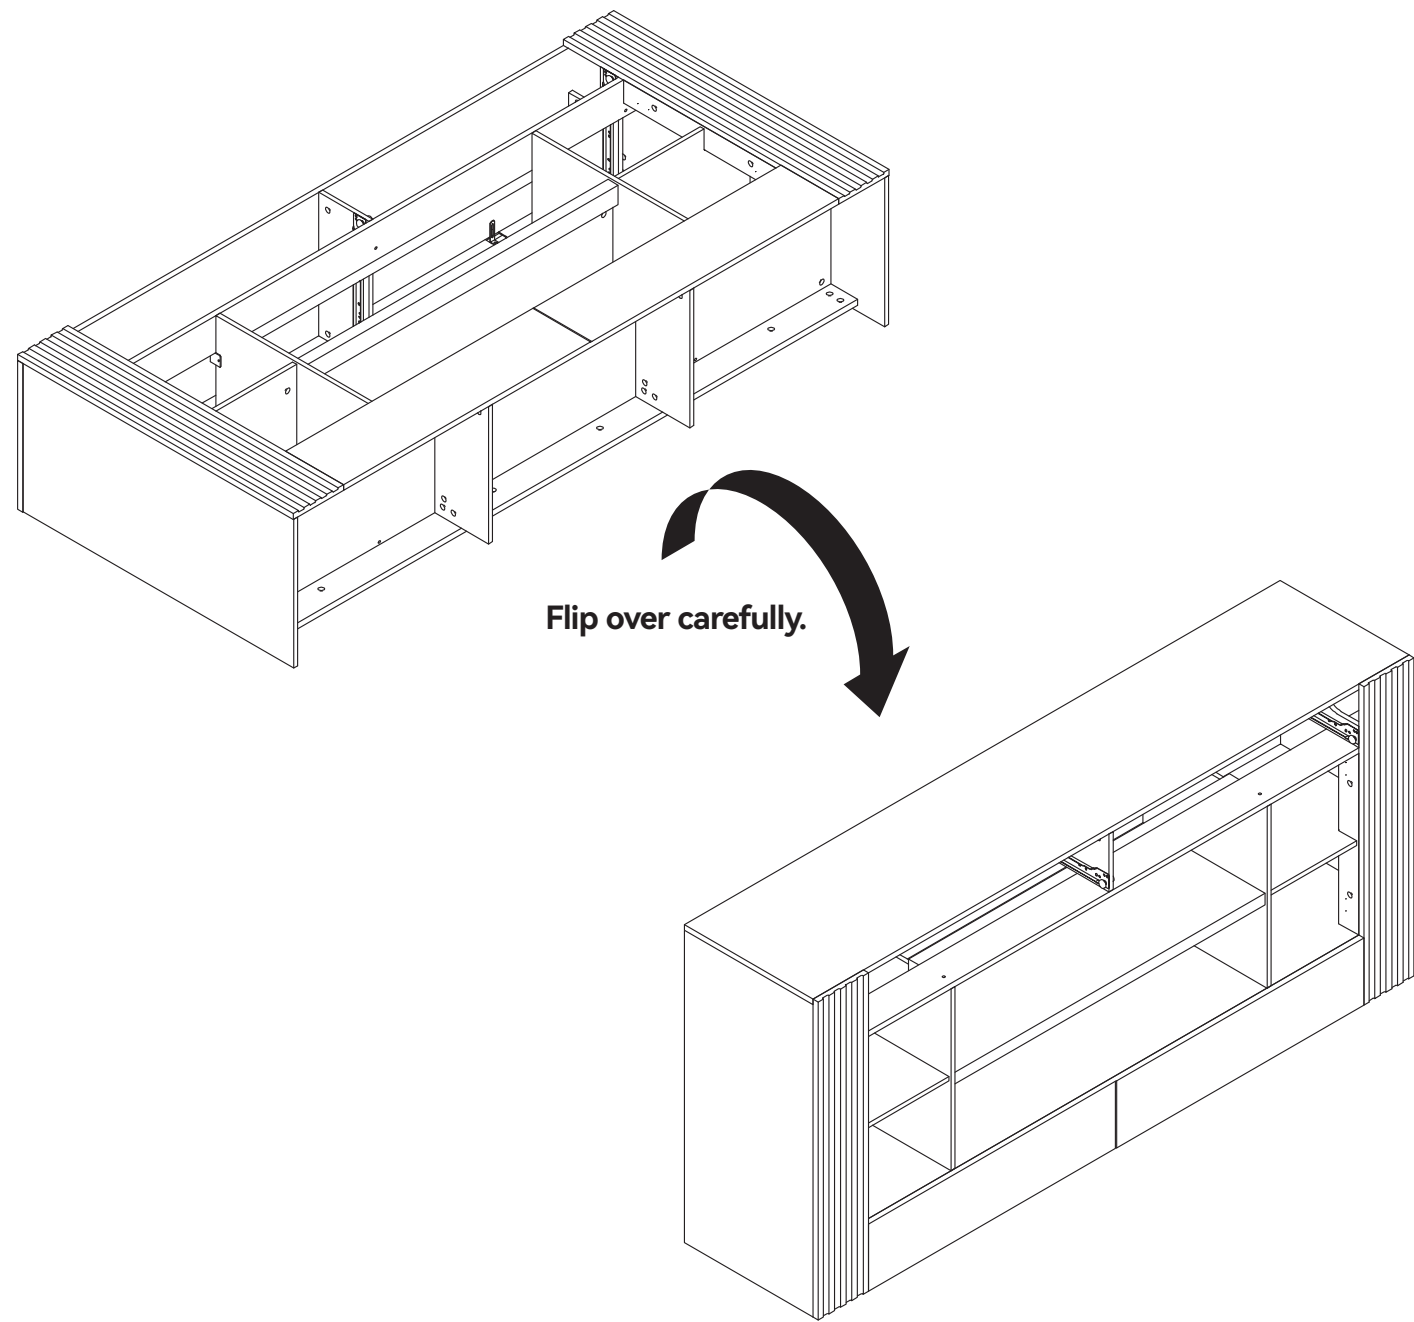 




32

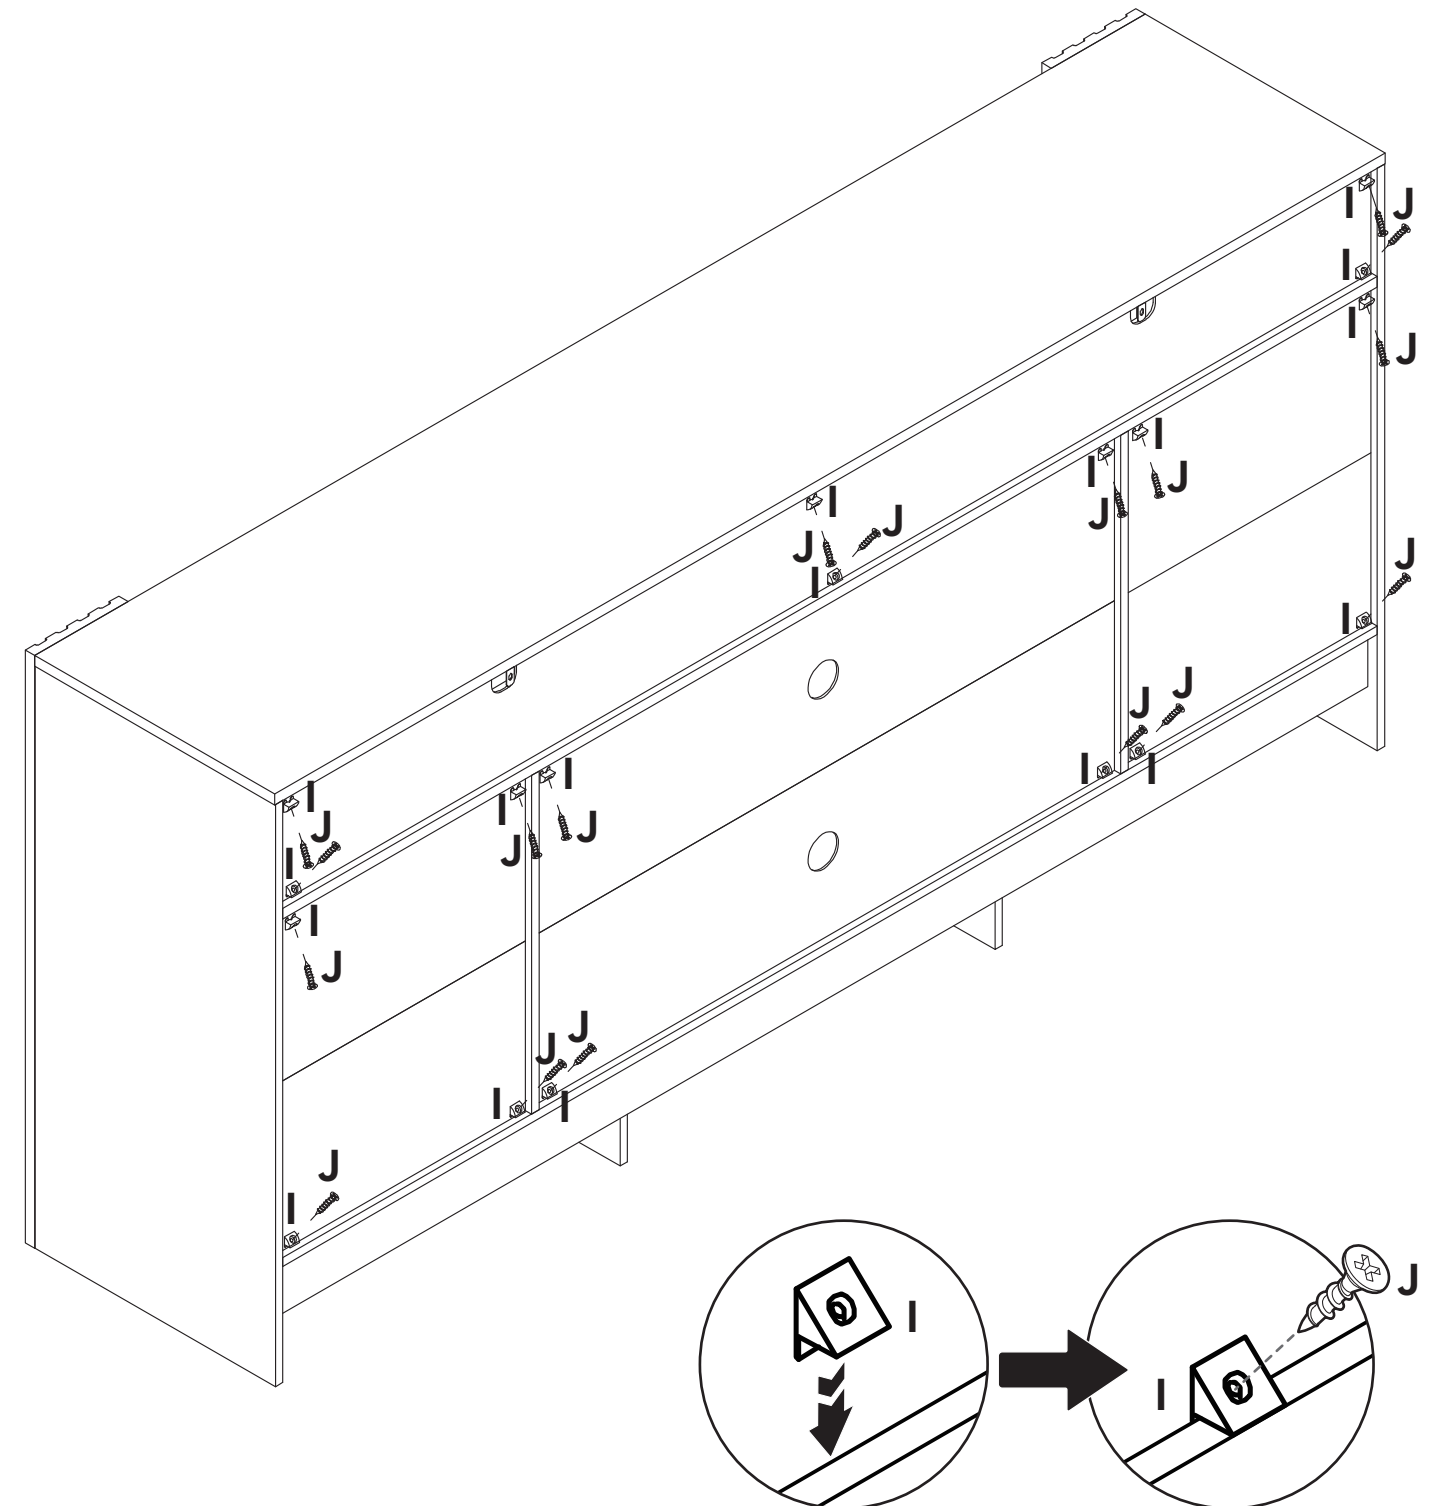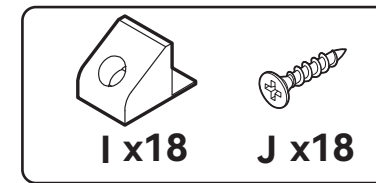  

Insert back panel clip into gap.



Secure with screw.

   33

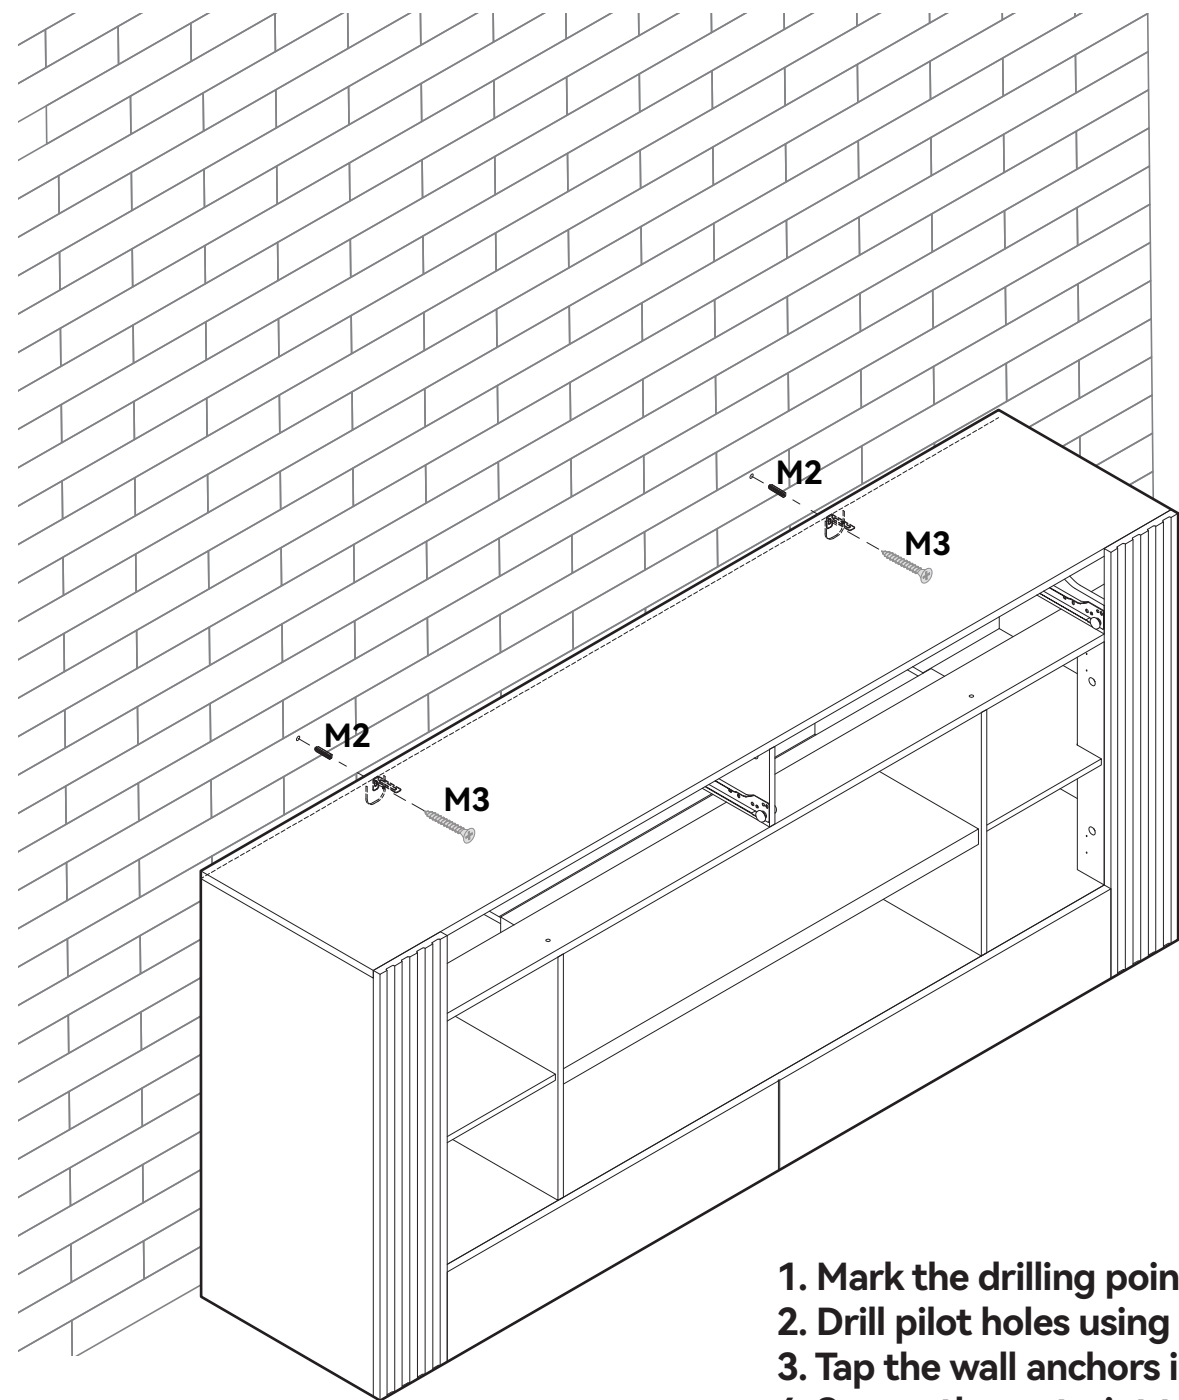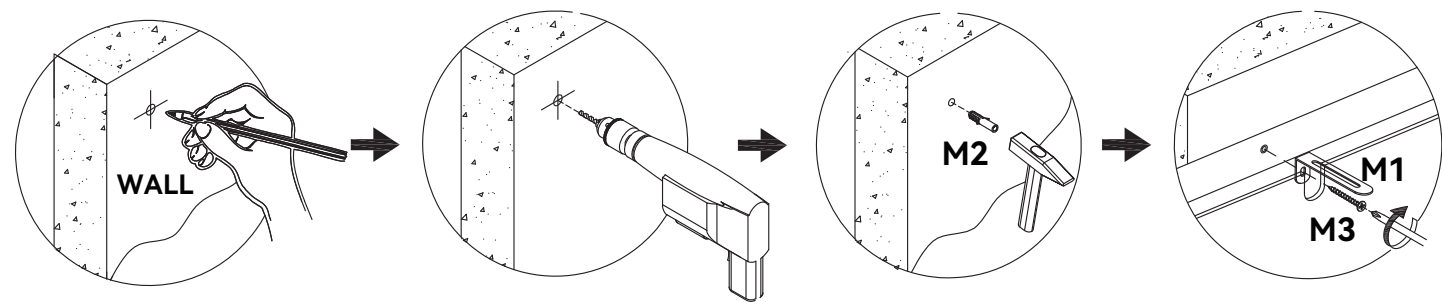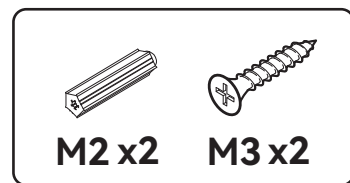


1. Mark the drilling points on the wall.
2. Drill pilot holes using an electric drill.
3. Tap the wall anchors into the holes.
4. Secure the restraint to the wall with screws M3.

  34

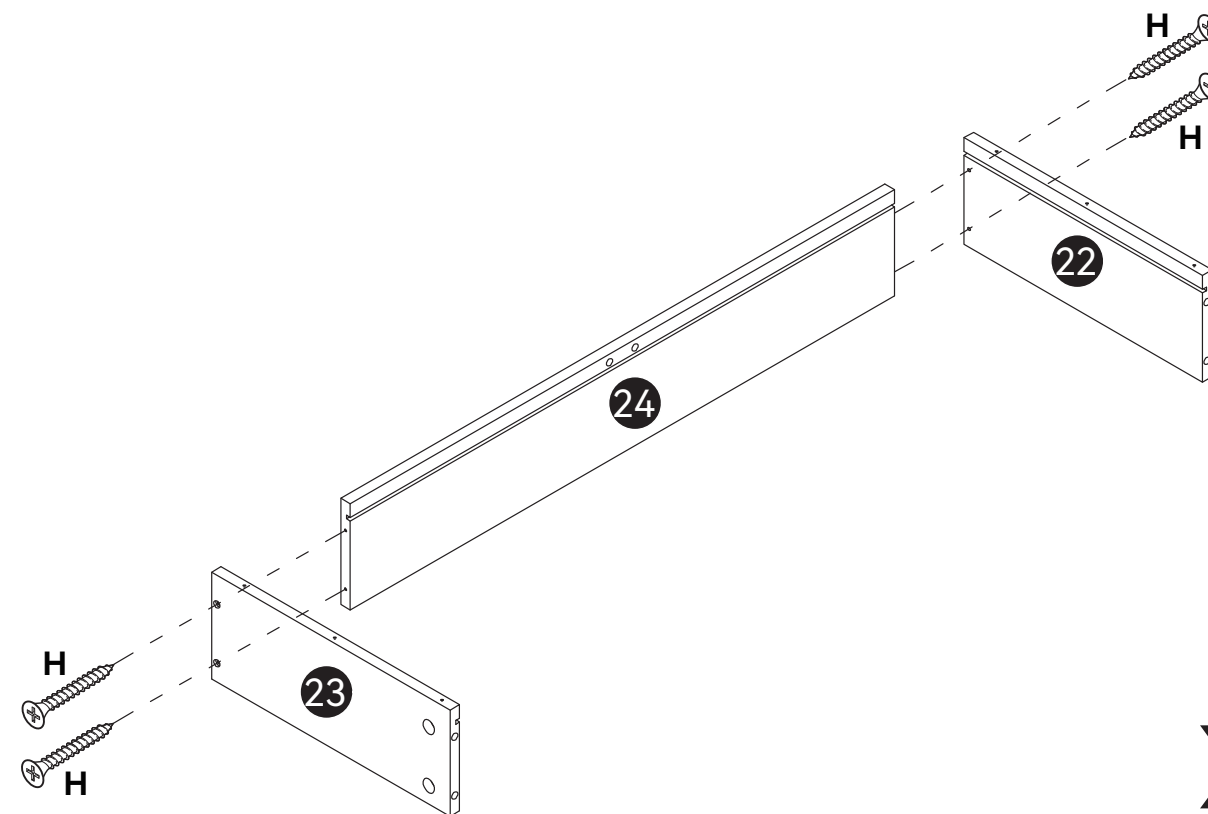
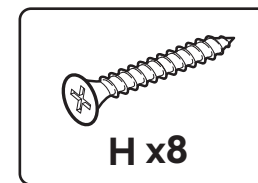


x2


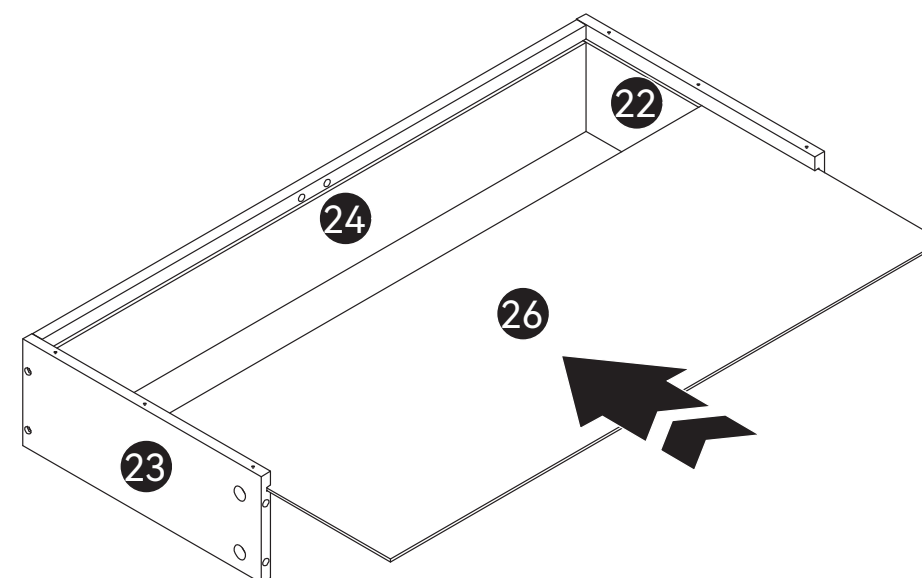 


x2



 
 
35

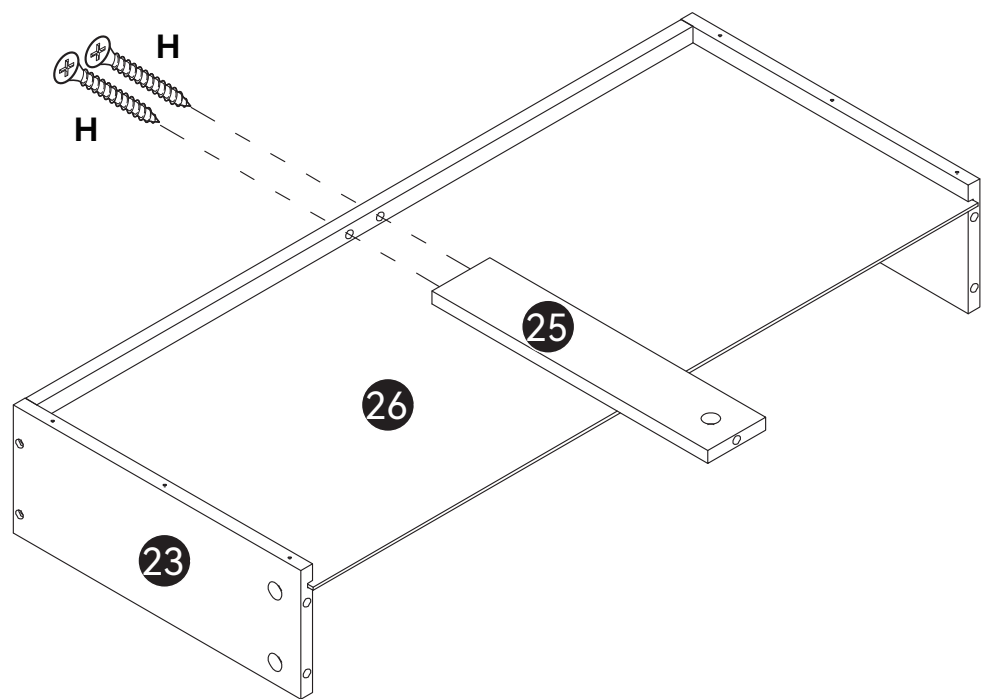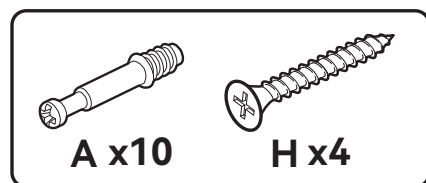





x2

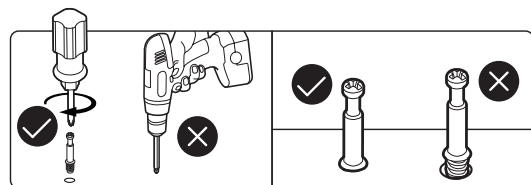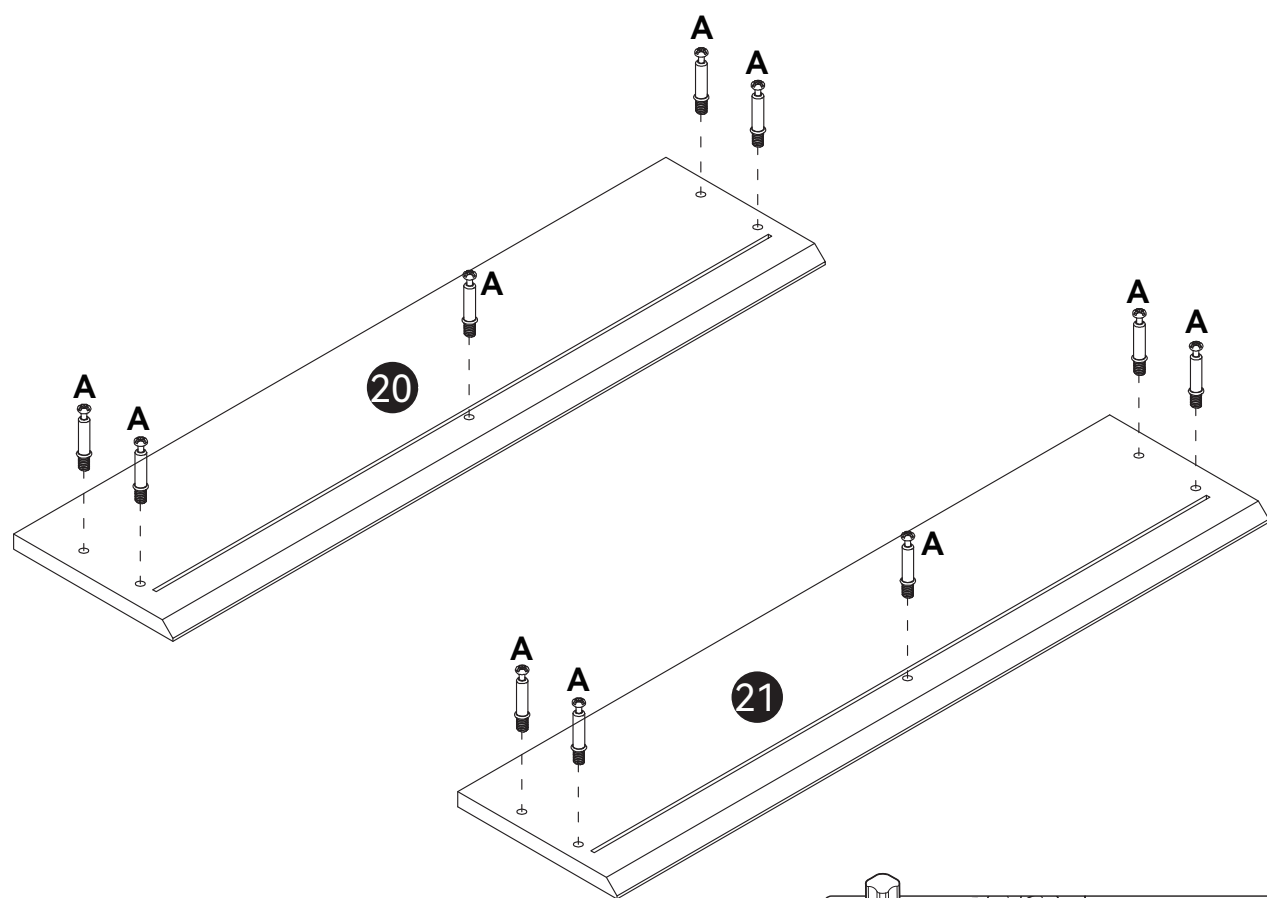  




36

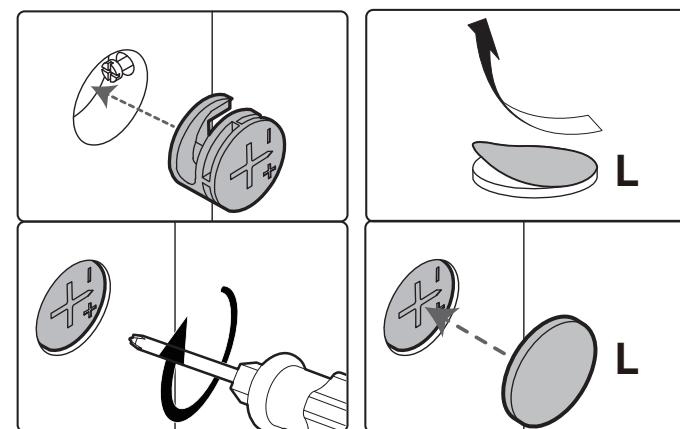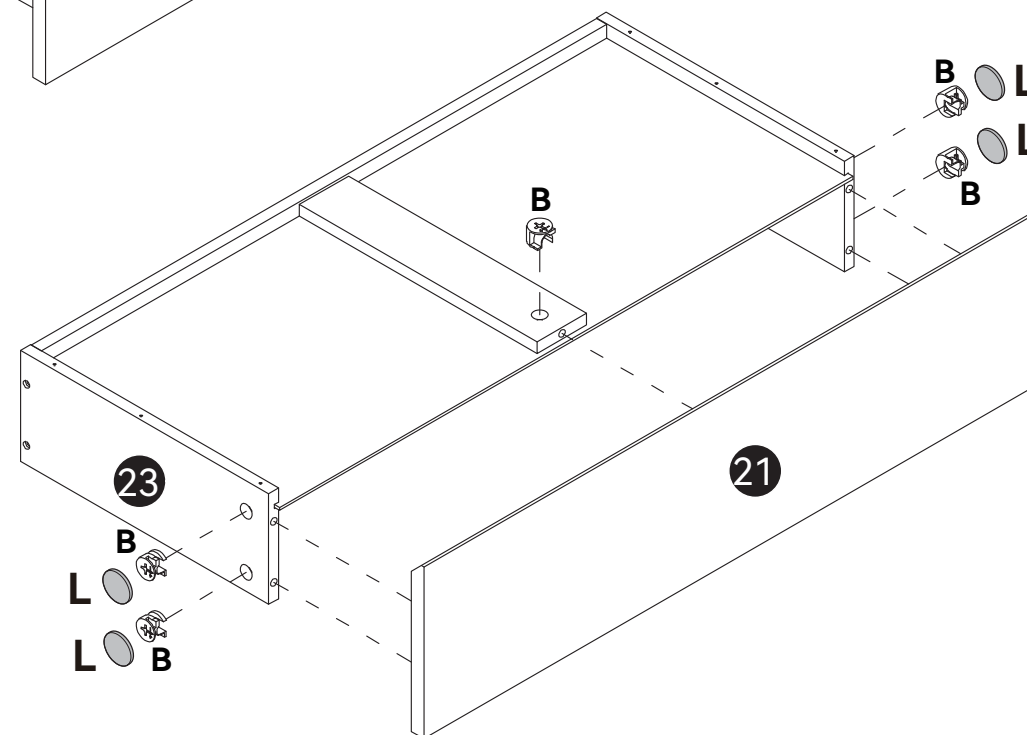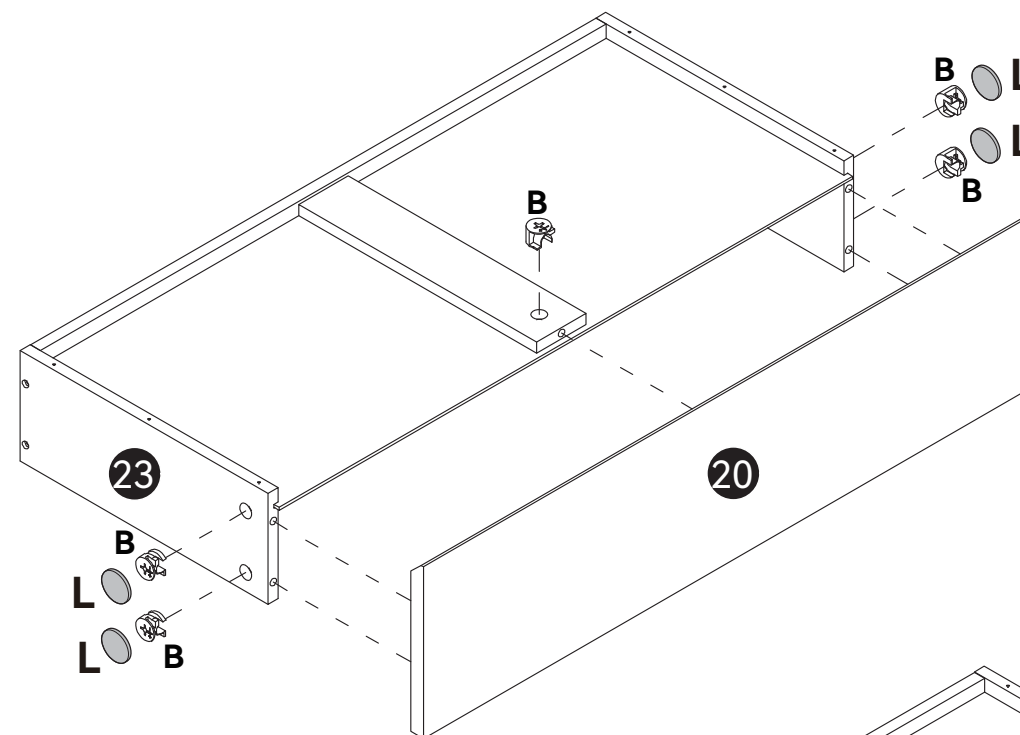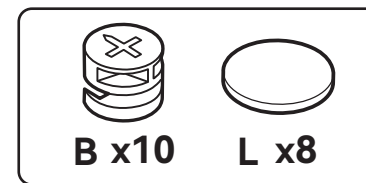    



37

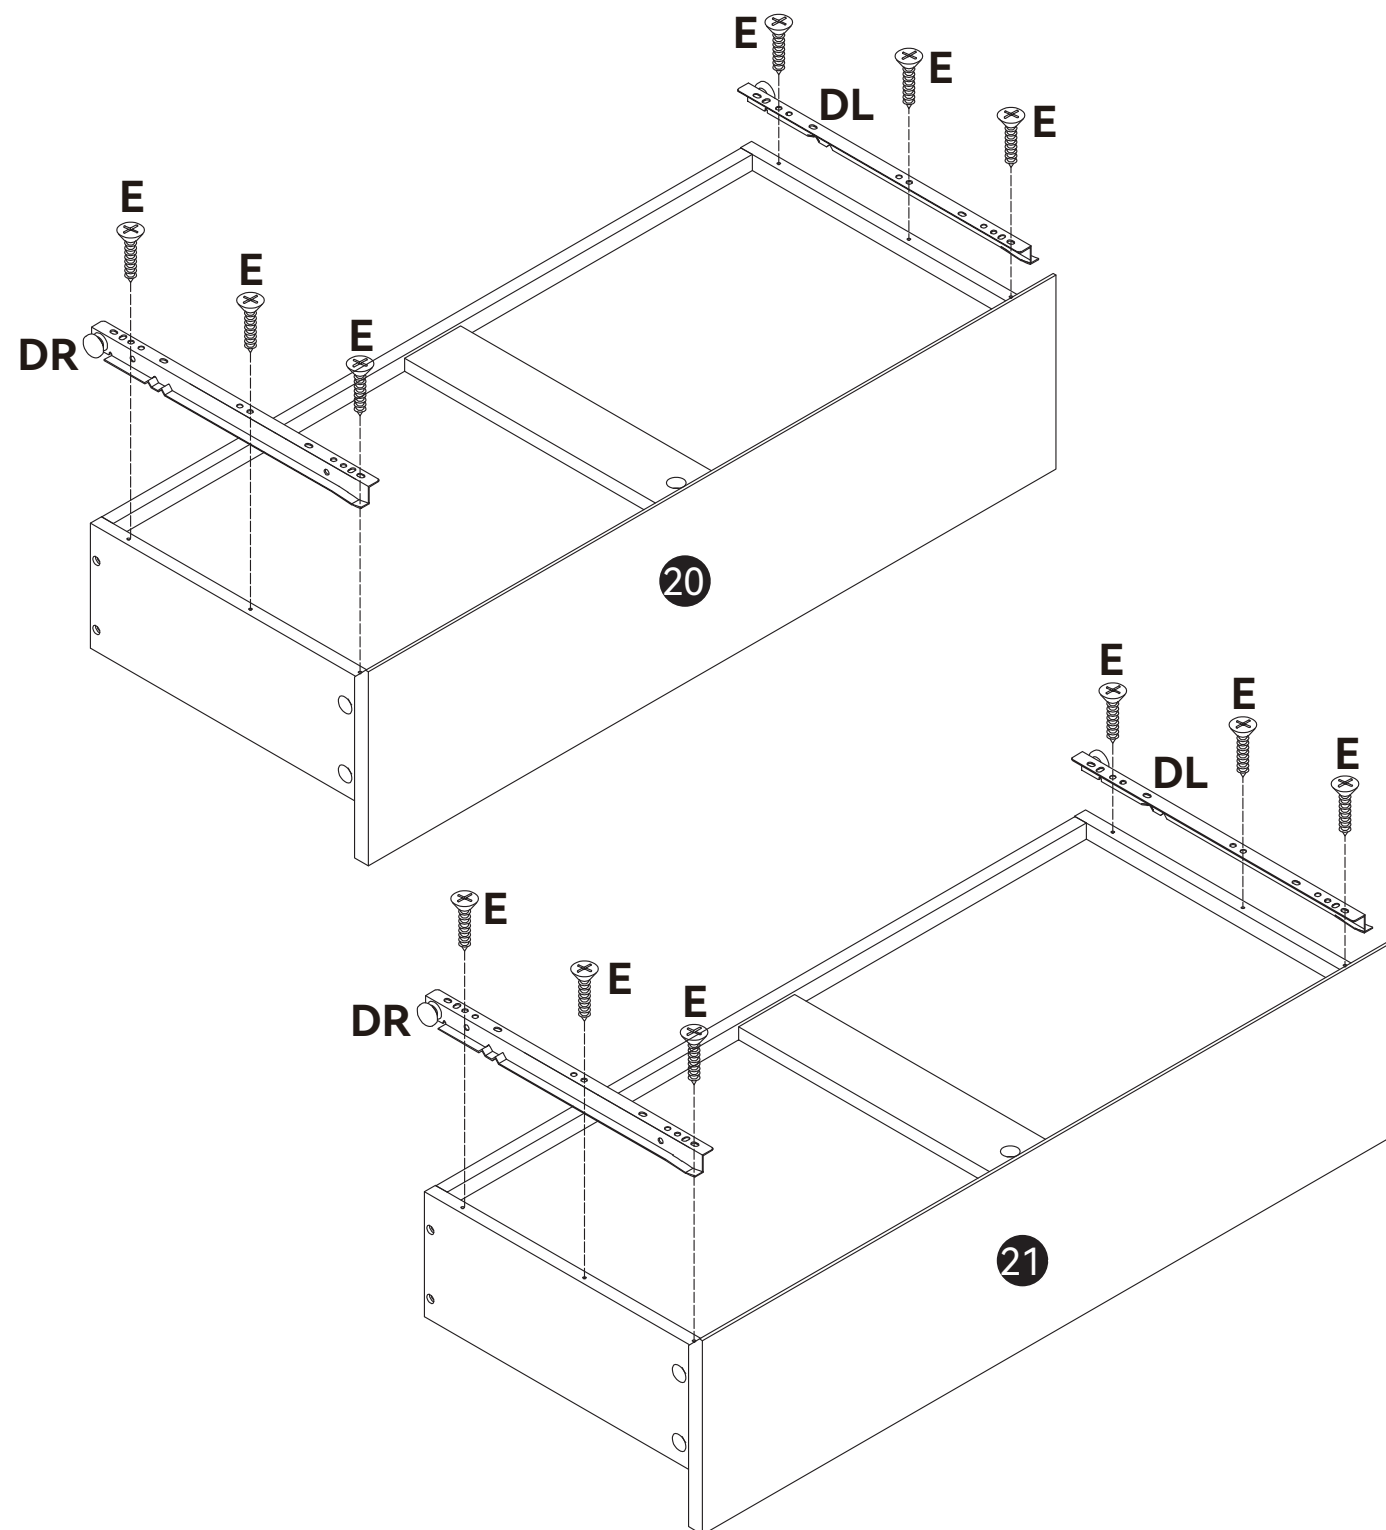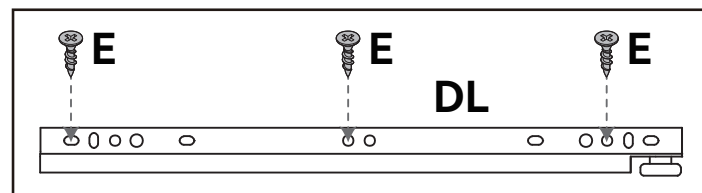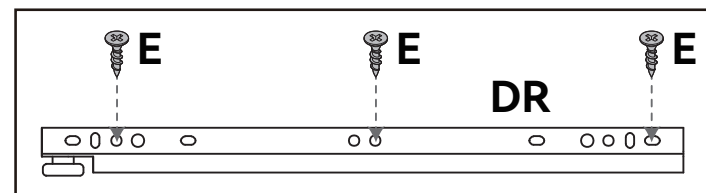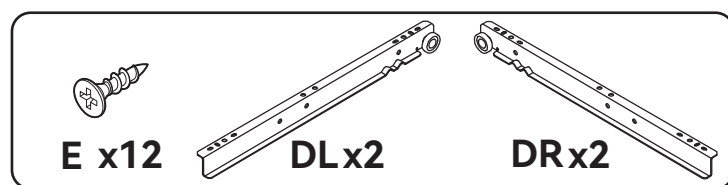    



38

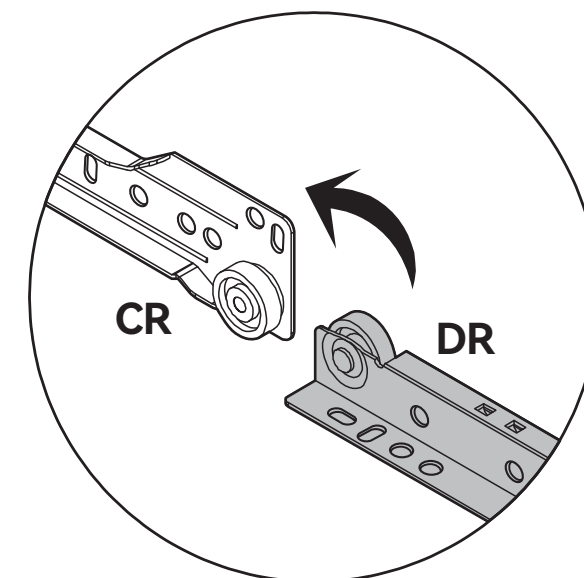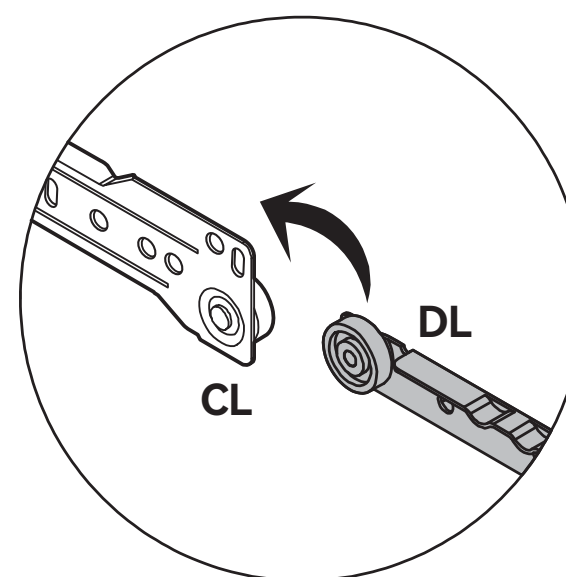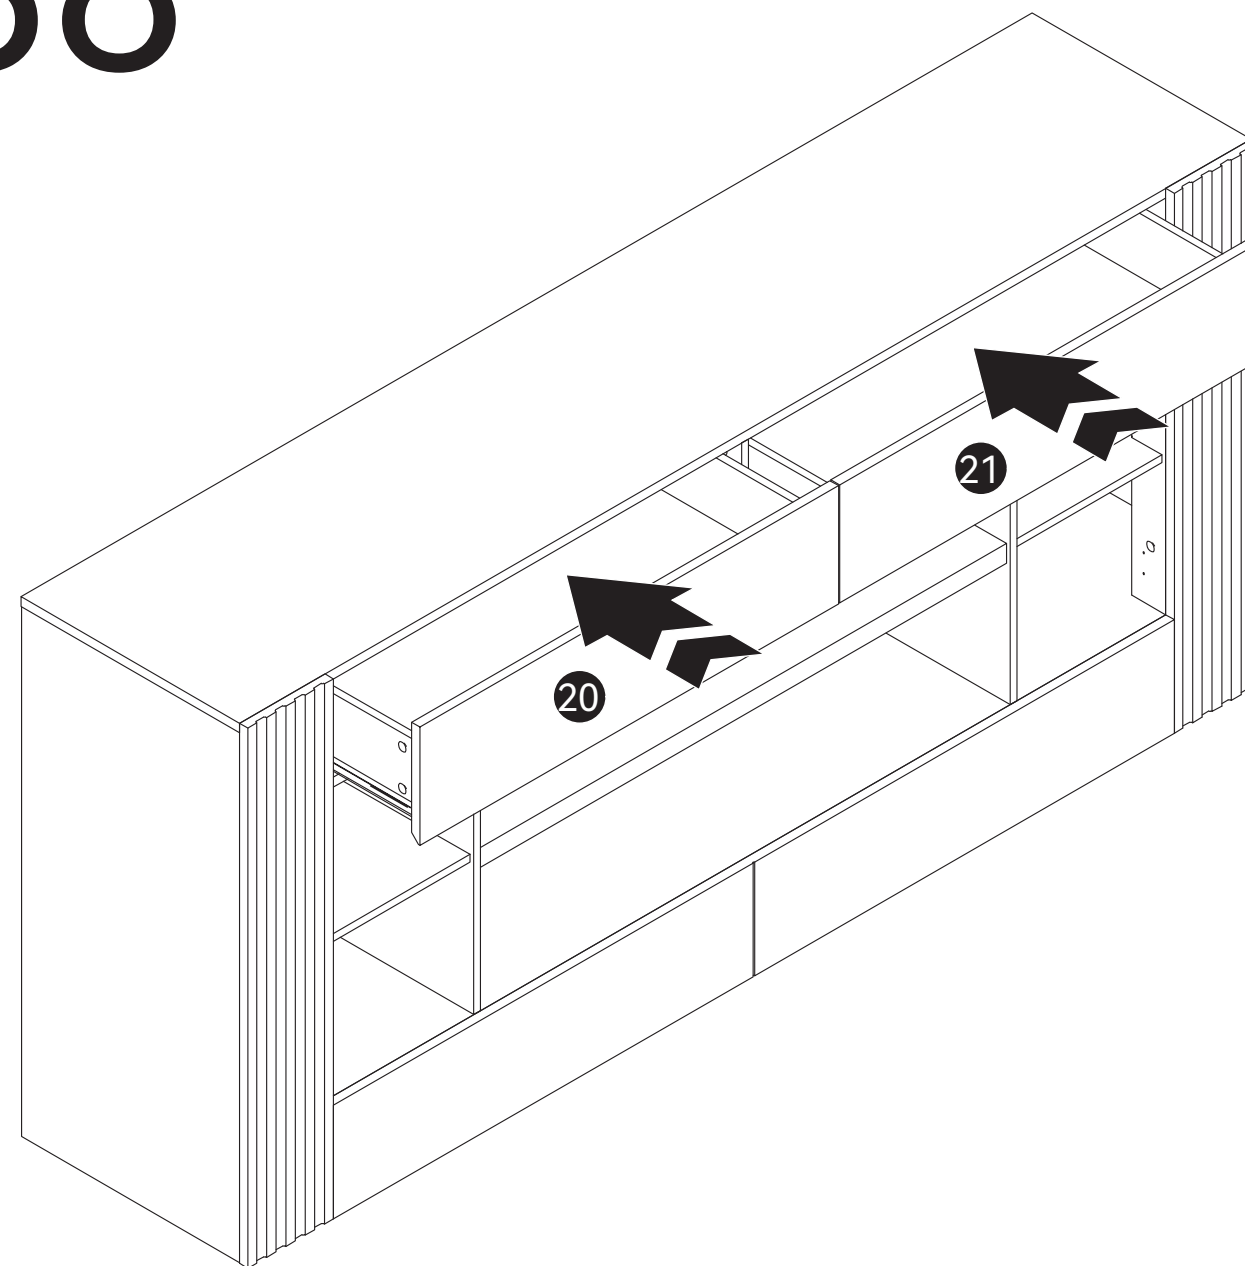   


39

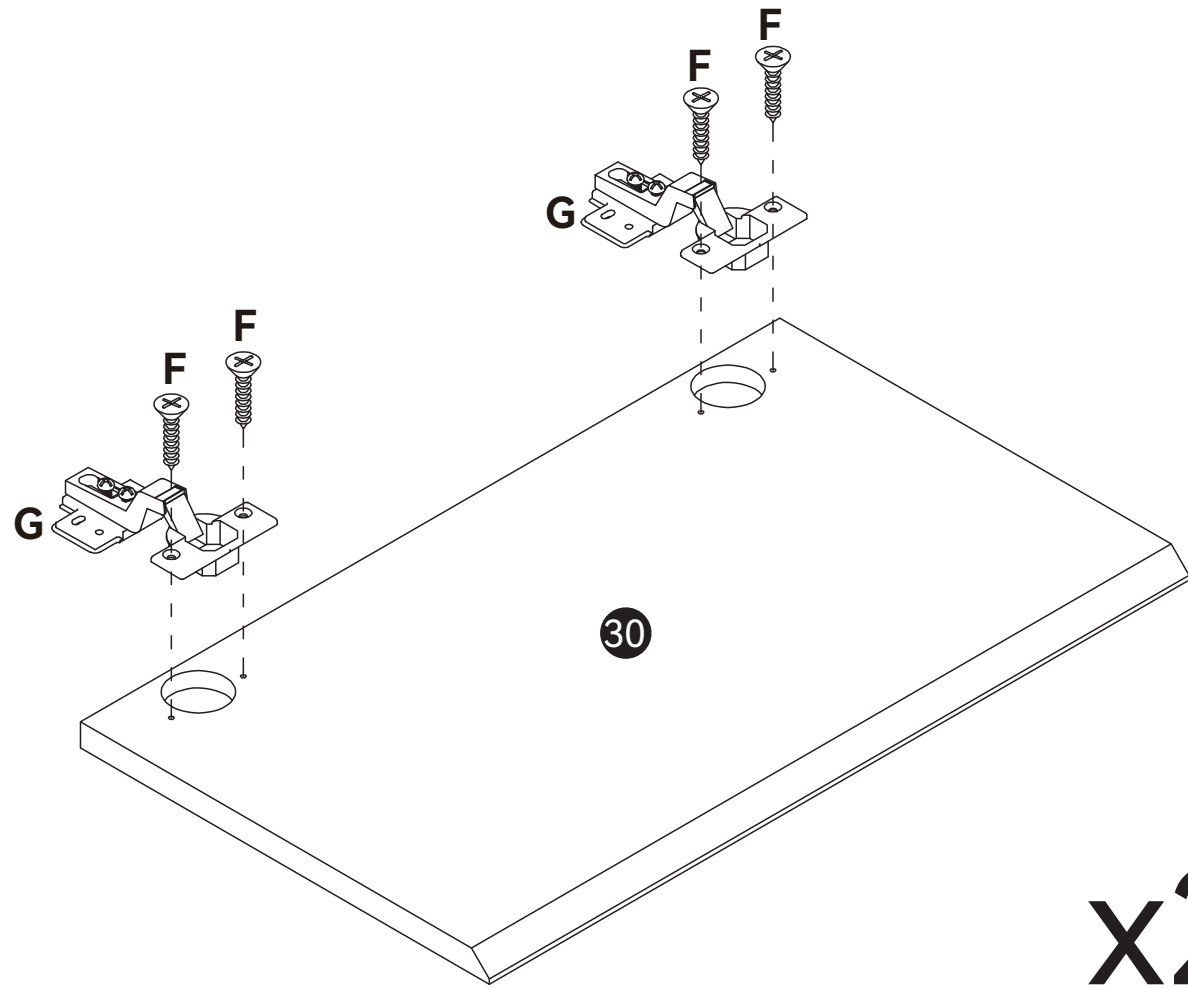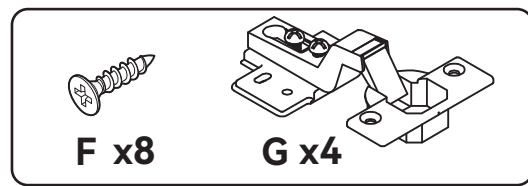  


40

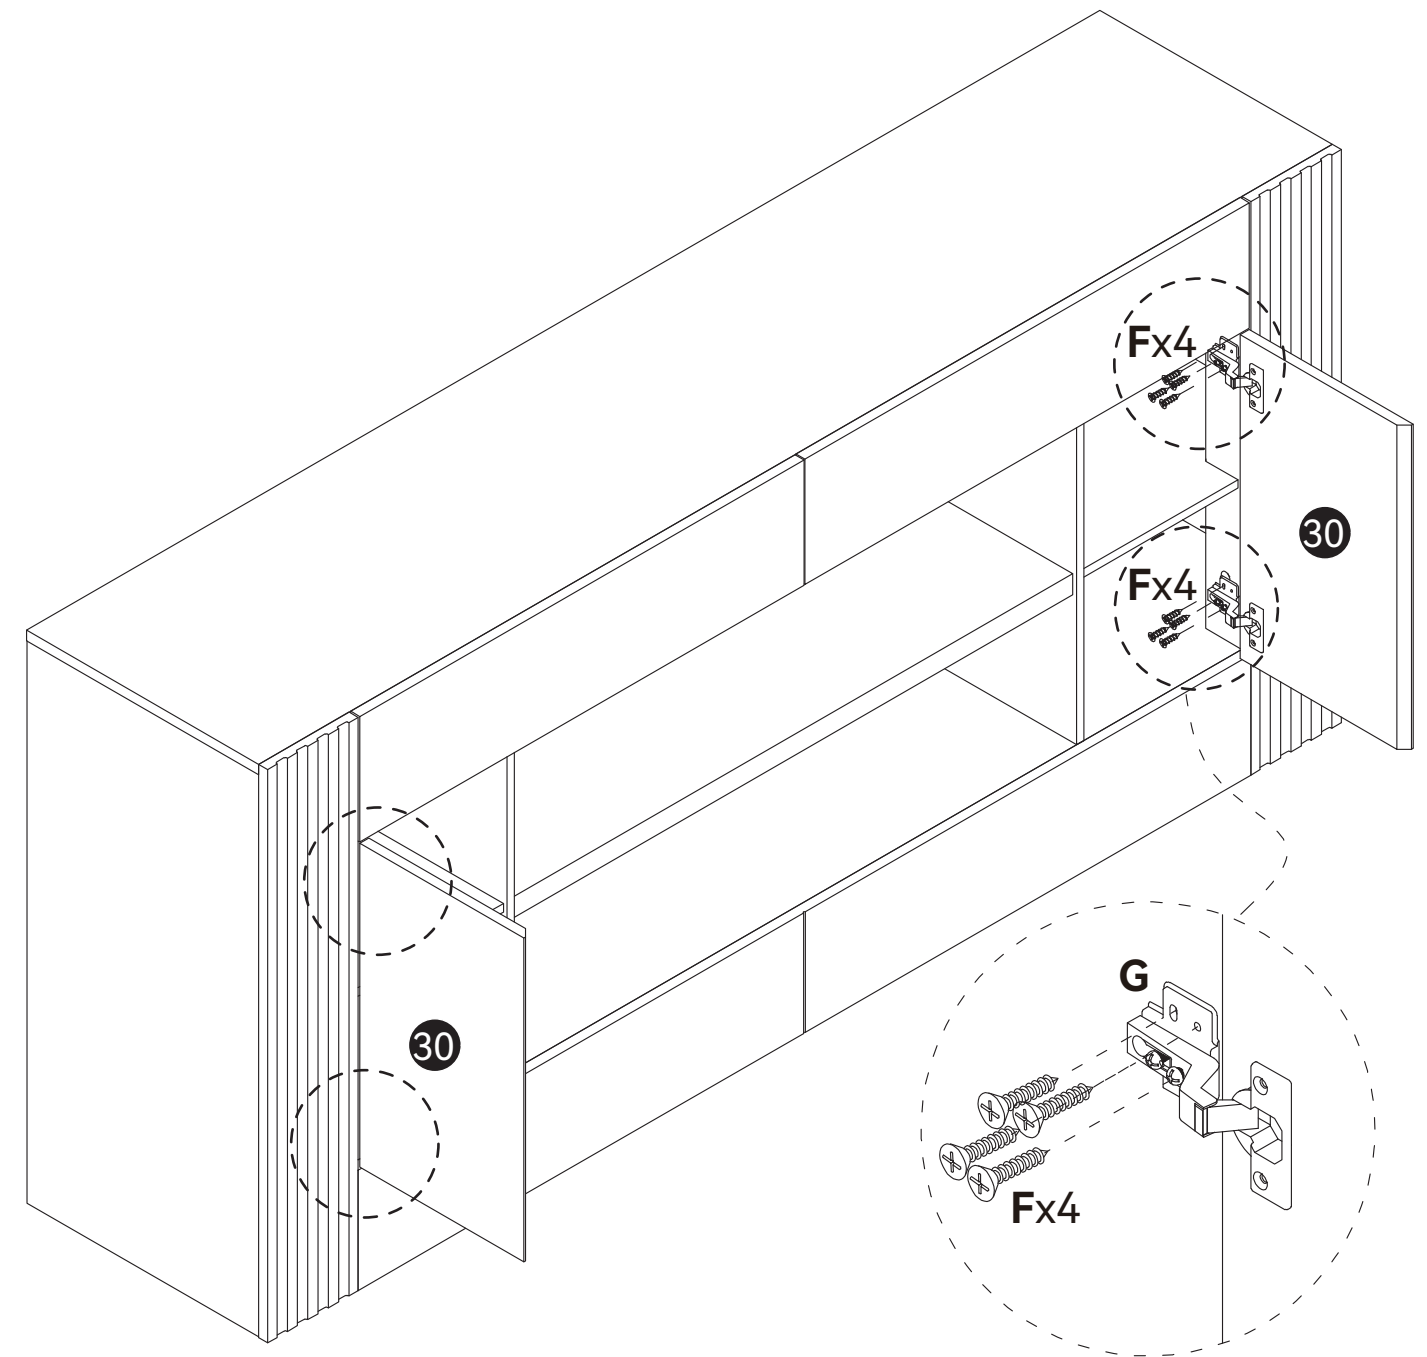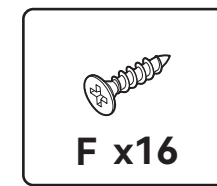  

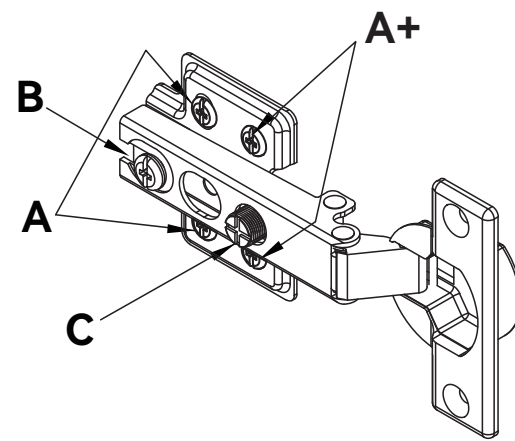 


Up and Down Adjustment

 1. Remove the 2 screws "A+" on the hinge.
2. Loosen the 2 screws "A" on the hinge. Adjust up or down.
3. Tighten the screws "A" and reinstall "A+".

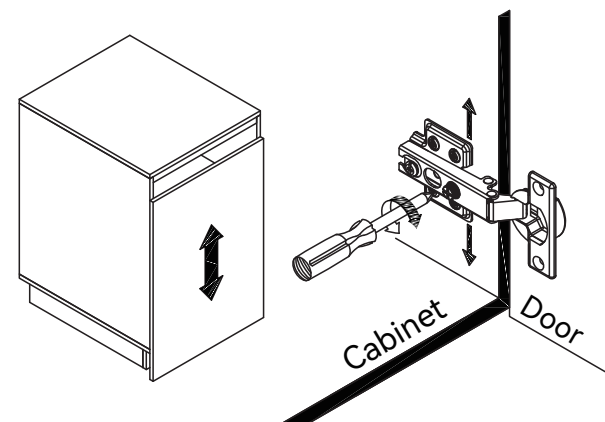

In and Out Adjustment

 1. Loosen the screw "B" and adjust the depth of the door.
2. If the depth of the door cannot be adjusted, simply loosen the screw "C" slightly to adjust the door forward and backward.
3. Tighten the screw "B" to secure in place.

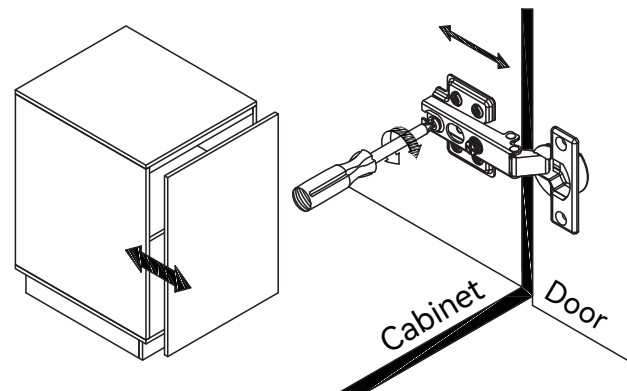

Side-to-Side Adjustment

1. Loosen the screw "C" to align the door horizontally.
2. Tighten the screw "C" to secure in place.

