

The product is shipped fully assembled and ready to use upon receipt.

There are two options for the LED light control switch:

Touch switch: Mounted on the cabinet for use

Remote control: Allows for remote operation

The touch switch is shipped by default. If you wish to use the remote control, please refer to the following steps.



Wireless Receiver Controller Installation Instructions




Step 1:
Locate the centralized control power box on the back of the cabinet.




Step 2:
Unplug the power cord of the original switch.



Step 3:
Take out the wireless receiver controller (with power cord).

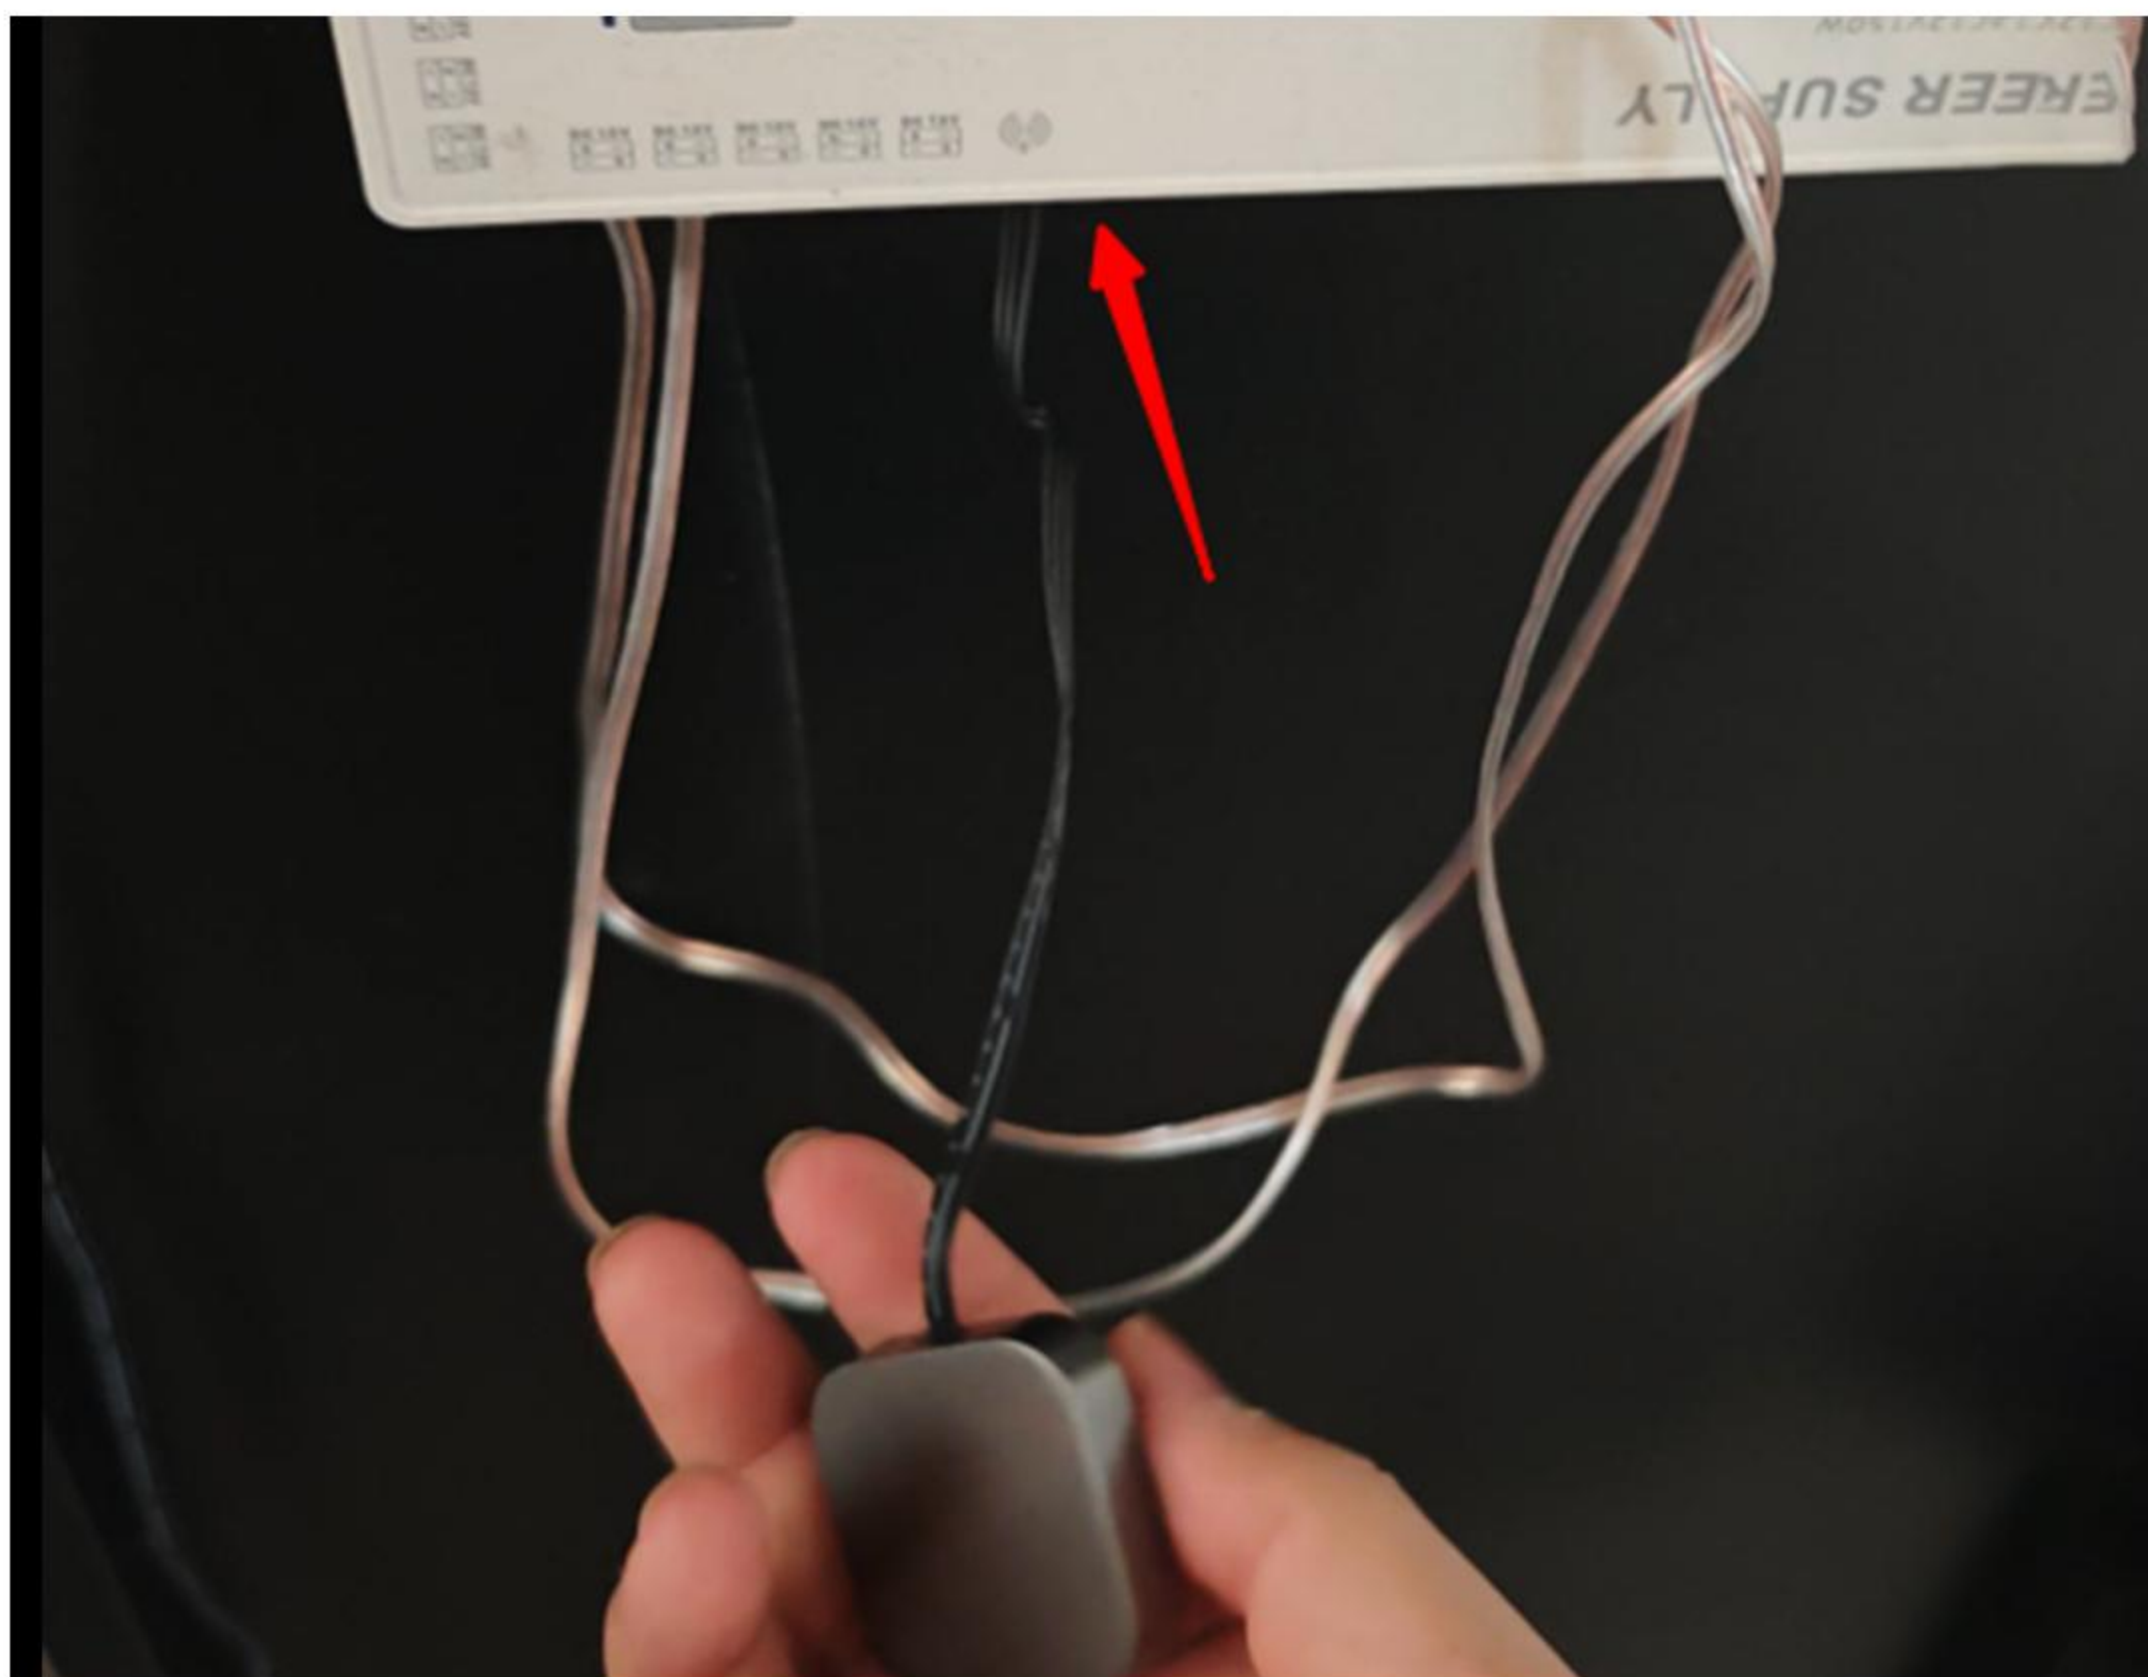

Step 4:
Plug the wireless receiver controller into the centralized control power box.

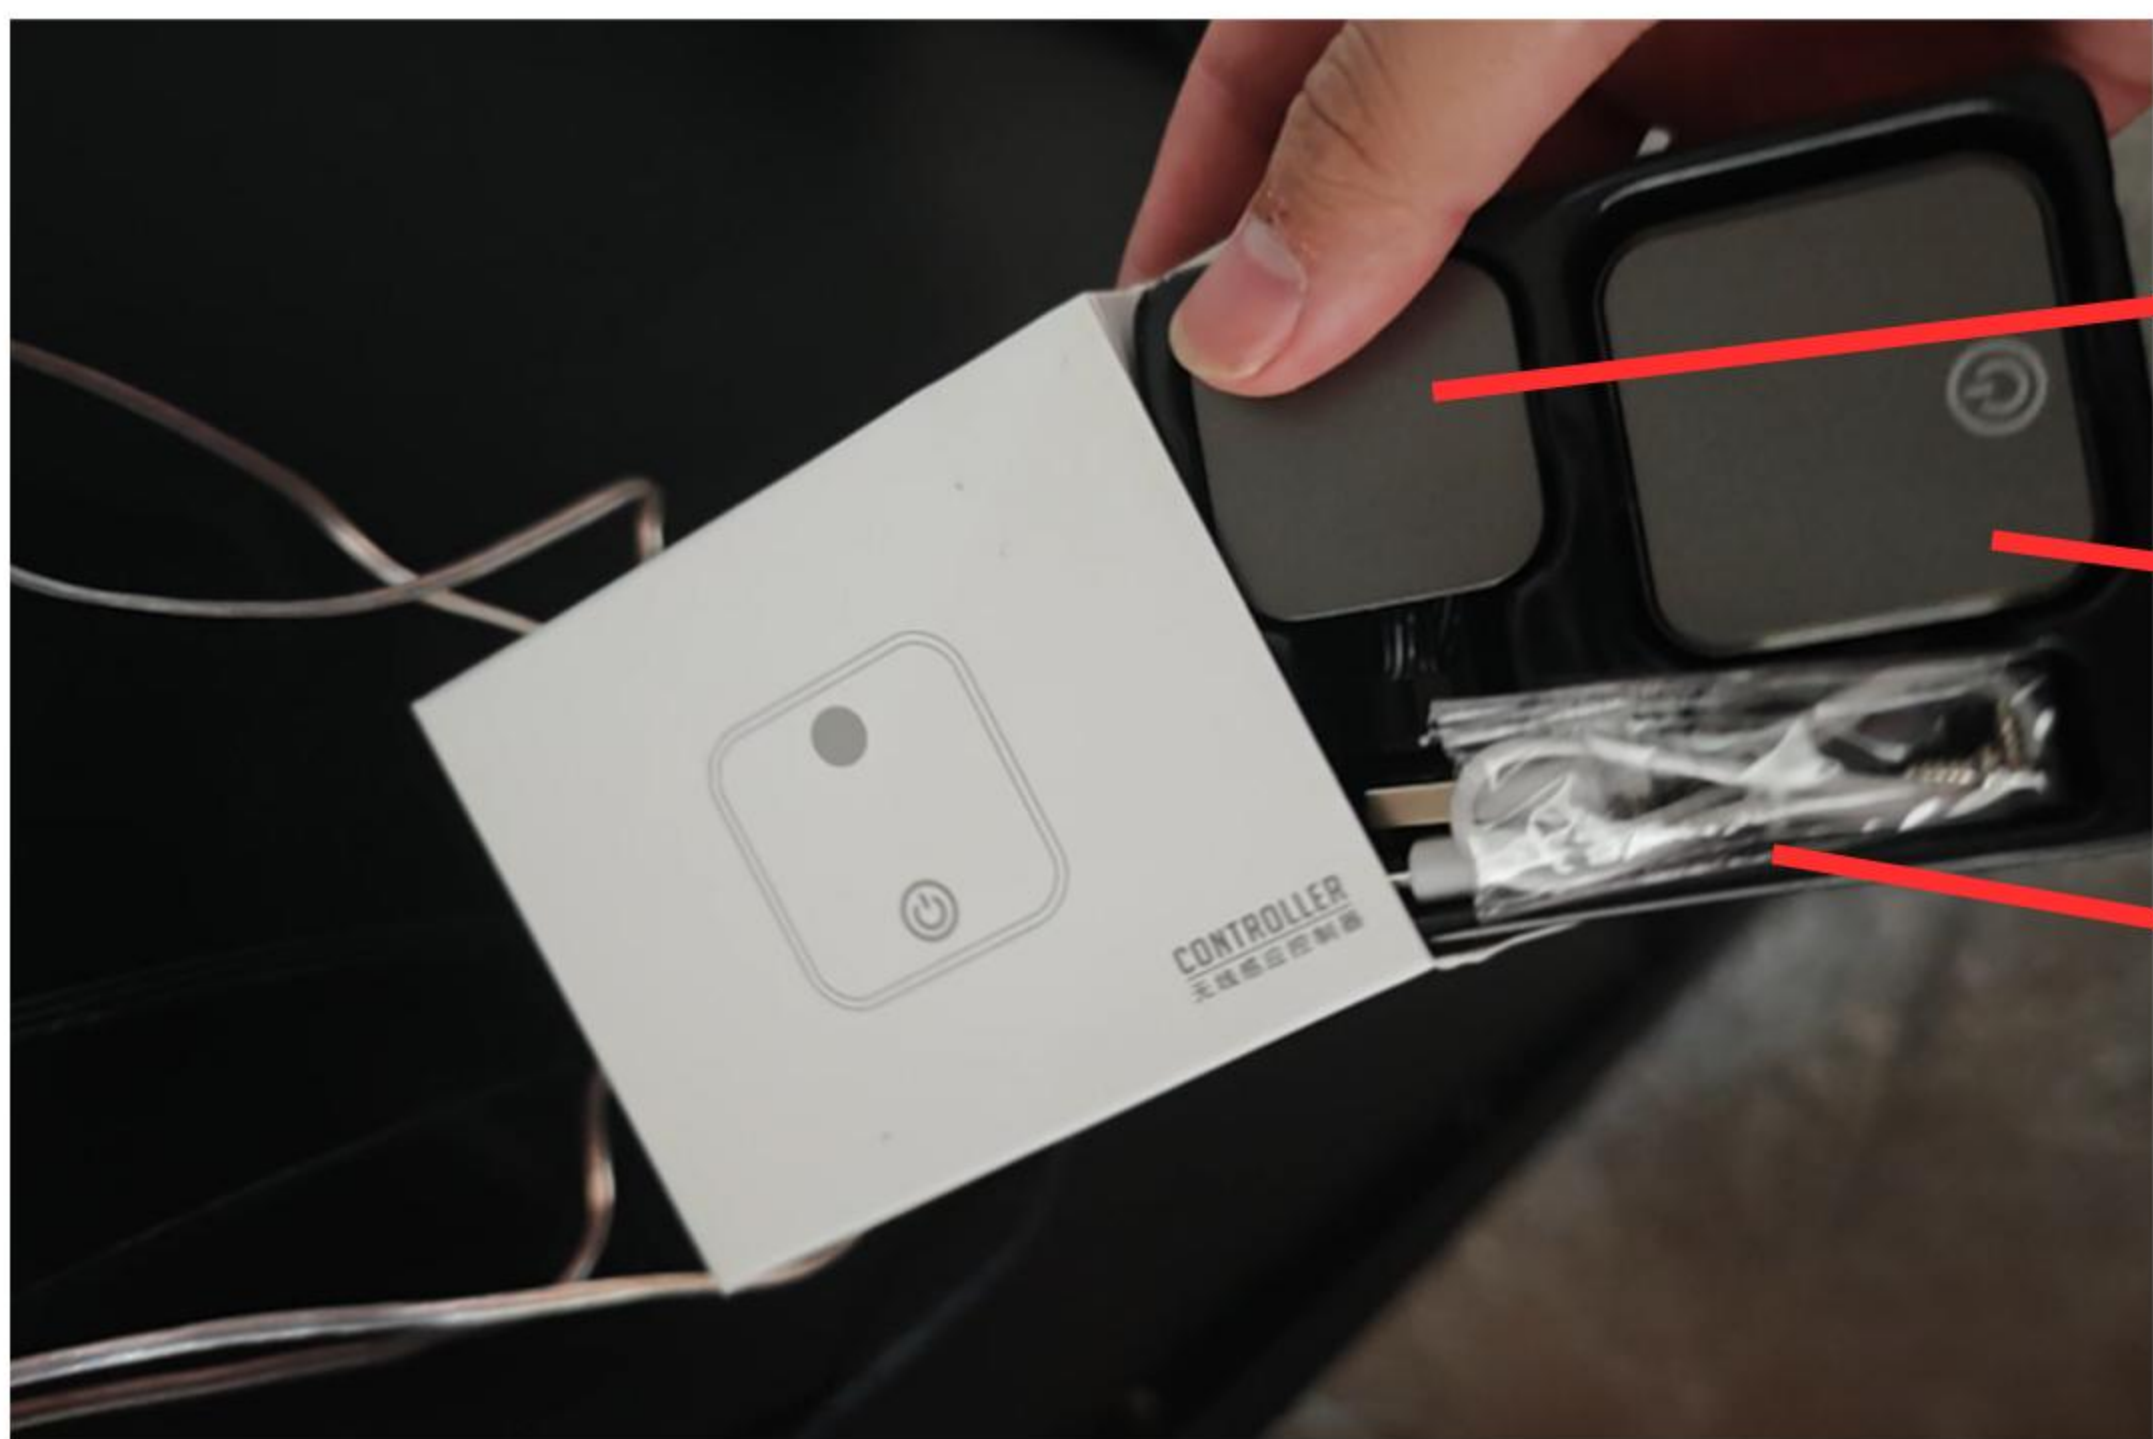

Wireless Receiver Controller

Remote Control

Charging cable