 
 




User Manual

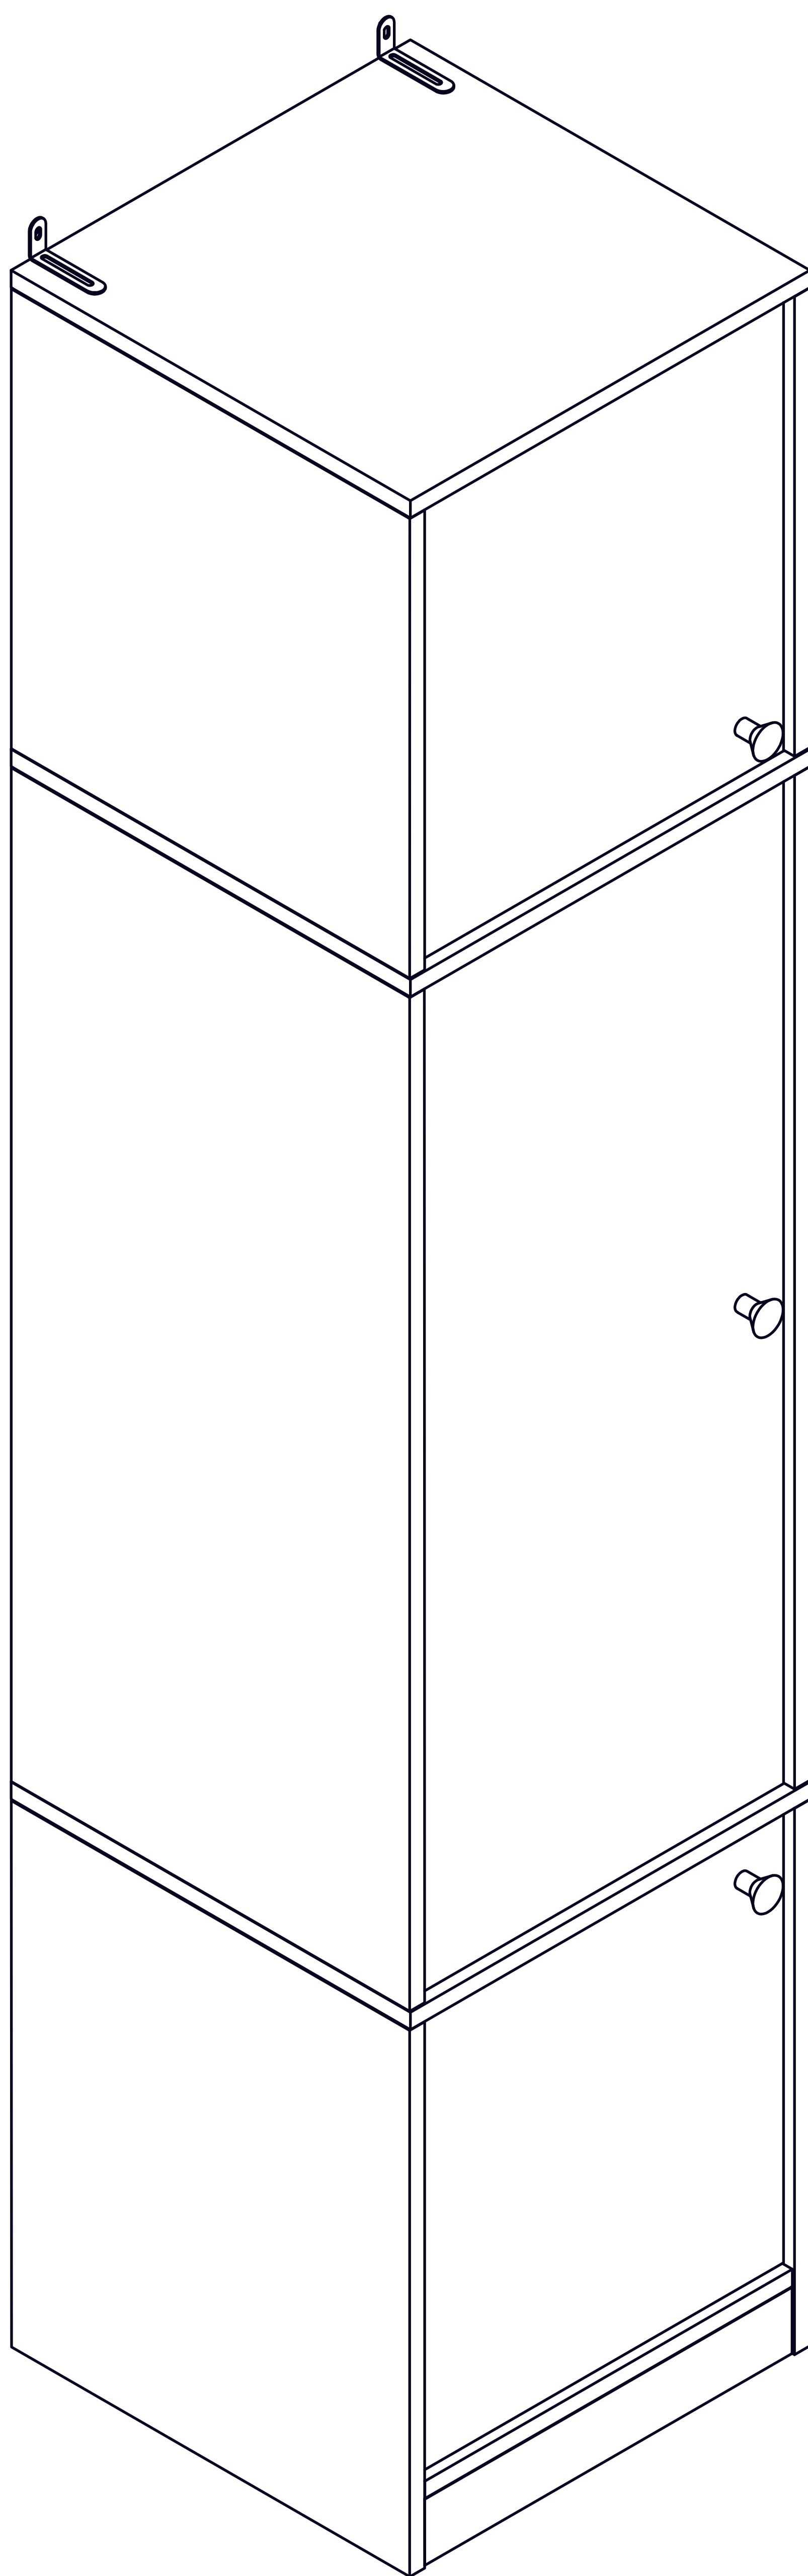

OMC25S101

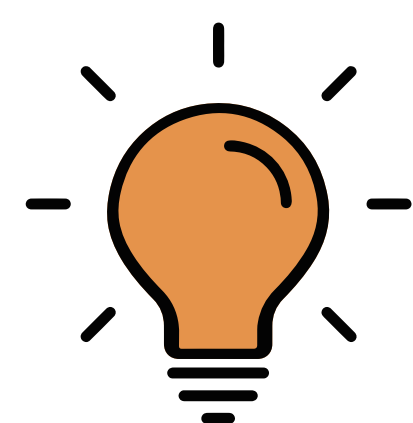

Please read the instruction manual before assembly. Scan the QR code on the right to view the installation video and electronic manual.

Please keep the manual safe and transfer it with the product.



 
 
Scan for the e-manual





Scan for the installation video



1. Please keep this manual in a safe place and pass it on if you transfer the product to someone else.

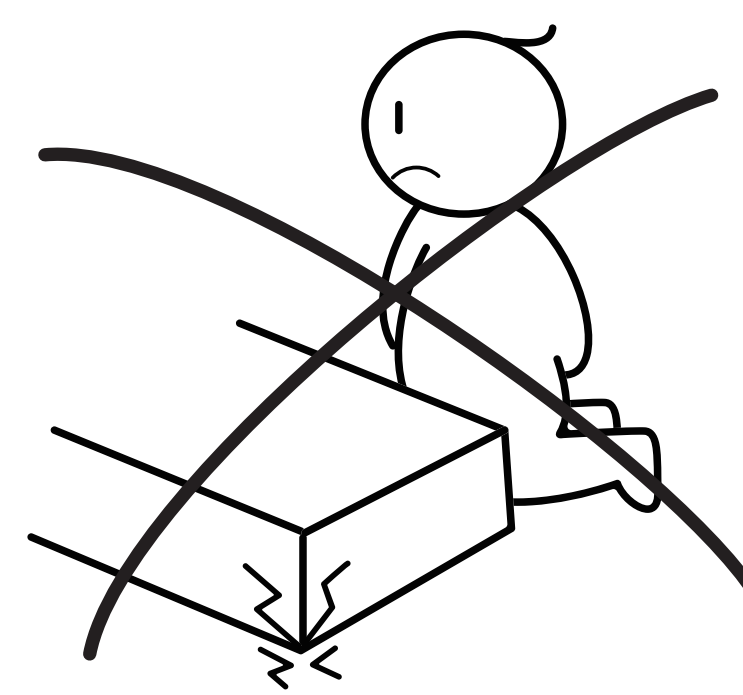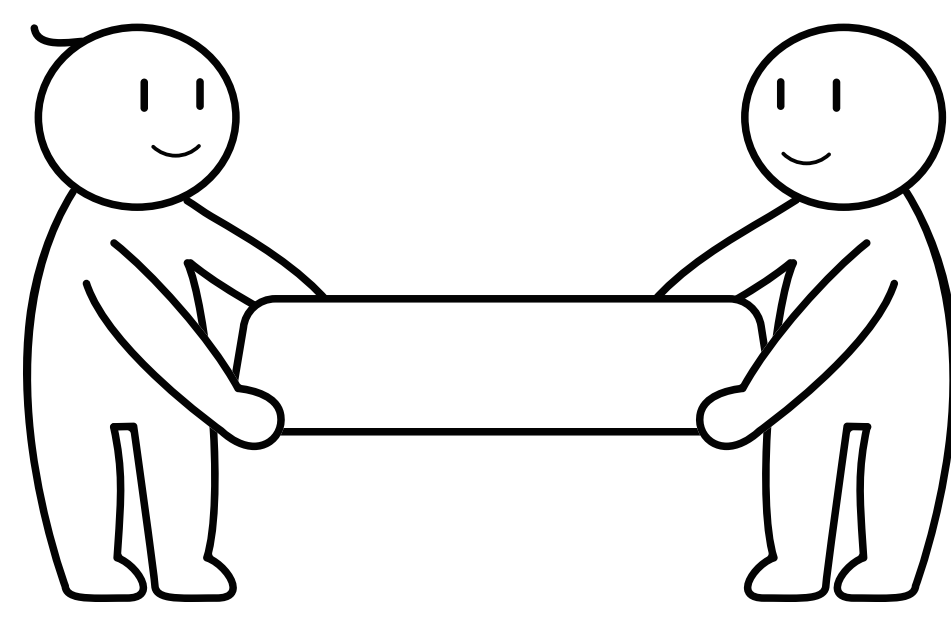

  2. Choose a clean, flat and spacious area for assembly, and avoid hard surfaces that could damage the product.

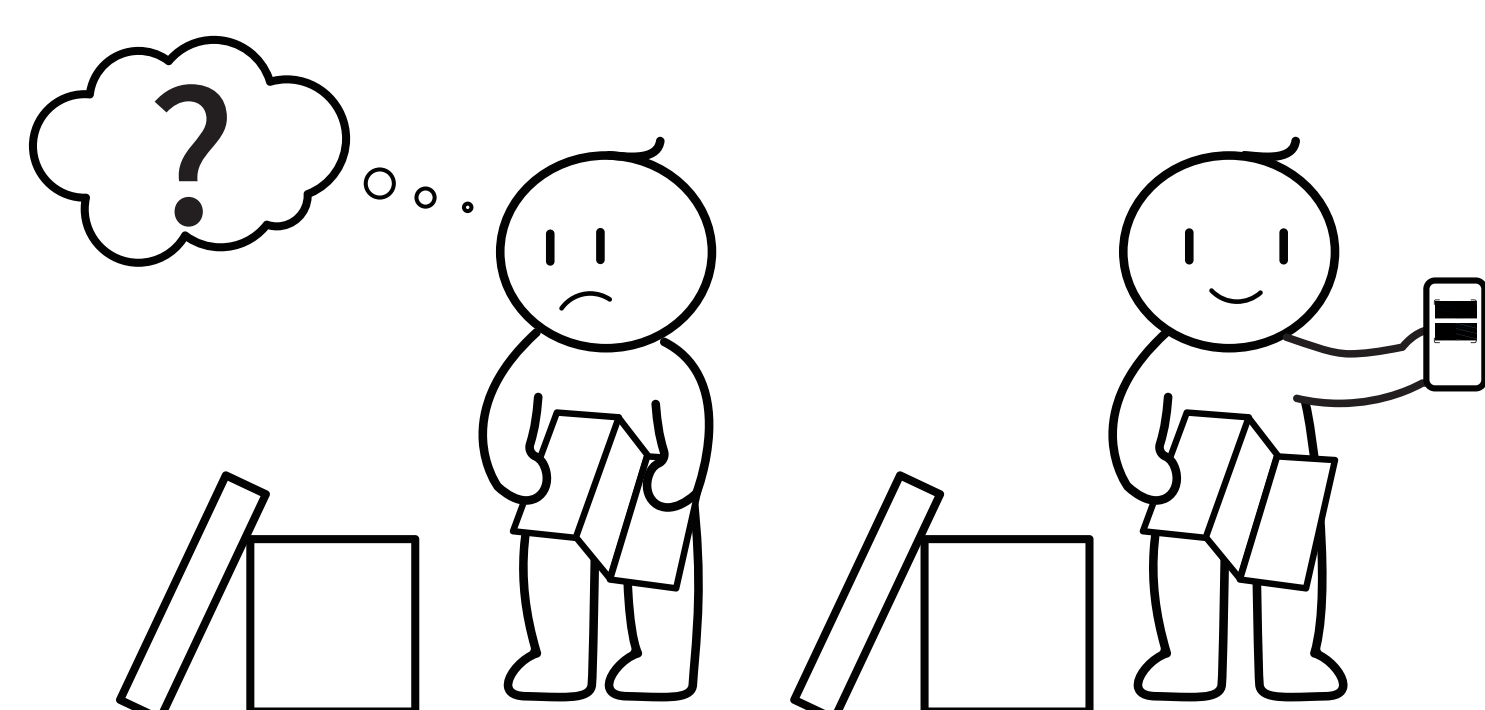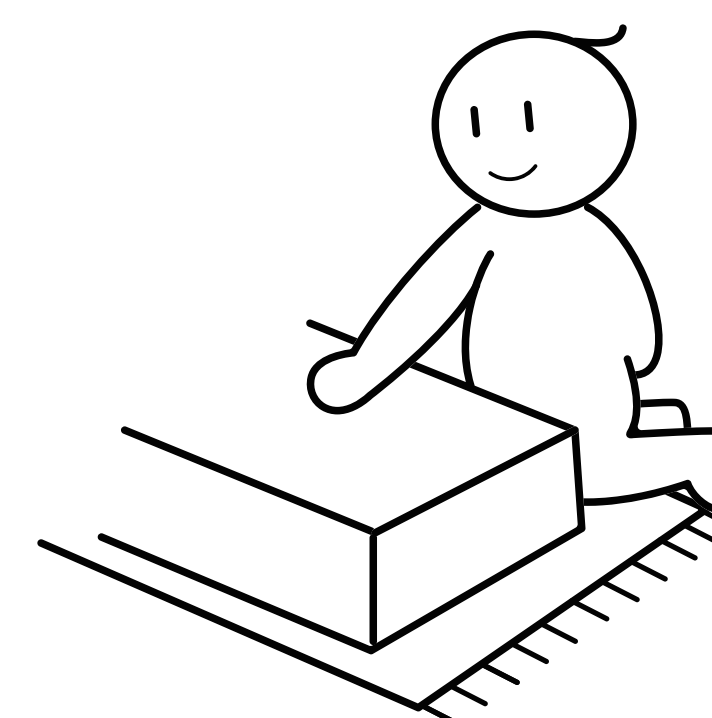

Scan the QR code to access.

1. Official after-sales support service
2. Product installation video
3. Warranty activation service

! If you encounter any problems during the installation process, please scan the QR code to contact us for assistance.

! Anti-tipping warning **!**

Furniture tip-over can cause serious or fatal injuries.

To prevent such incidents, please follow the recommendations below:



- Install the supplied tip-over restraint kit as instructed.
- Keep children from climbing on or leaning against the product.
- Do not place a TV or other heavy items on it unless it is designed to support them.
- If this product includes drawers:
 - Store heavier items in the bottom drawer.
 - Open only one drawer at a time to avoid instability.
 - Do not remove or tamper with drawers.

Note: The included anti-tip device reduces— but does not fully eliminate — the risk of tip-over. Please use this product with caution.

Warning

 
- This product is for indoor use only. Using the product outside of its intended purpose and/or modifying it beyond its original design may result in personal injury and/or product damage.
- This product must be assembled and used according to the instructions.
- The seller assumes no responsibility or liability for any damage caused by improper assembly or misuse.
- Children must not assemble this product. Keep small parts out of children's reach during assembly, as swallowing or inhaling them may be fatal.
- Children must not climb or stand on this product to avoid tipping and potential injury.
- Do not use this product if there are defects and/or missing parts, as this may cause damage or injury.
- If this product is equipped with an anti-tip device, be sure to install it to prevent the product from tipping over and causing unnecessary injury.
- If this product involves electrical components, keep it away from water or damp environments to avoid electric leakage or short circuits that may cause injury.
- If the product does not have wheels at the bottom, it cannot be moved. Do not drag it, as doing so may loosen or damage the product.

Maintenance Tips


- Place the product on a flat, stable surface to avoid uneven stress and potential damage.
- Periodically check the tightness of all screws during use. Retighten them if necessary to ensure structural integrity.
- Use heat-resistant pads for hot items. Keep the product away from air-conditioning vents or radiators by at least 1.5 meters. Do not place it in any high-temperature area to ensure longevity.
- Wipe off any water on the furniture surface promptly. Avoid exposing the product to long-term humidity to prevent mold.
- Do not place any corrosive substances (including alcohol, aromatherapy oils, nail polish remover, etc.) on the surface.

Parts list


Please prepare
the following tools:

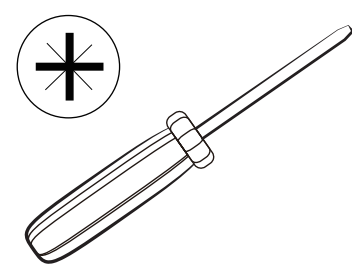


screwdriver

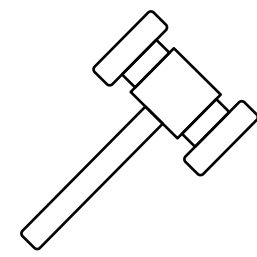 



hammer

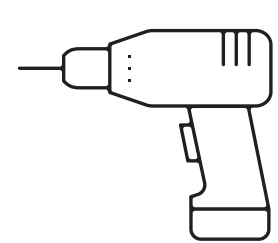 

electric drill

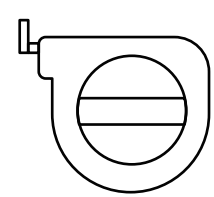 


tape measure

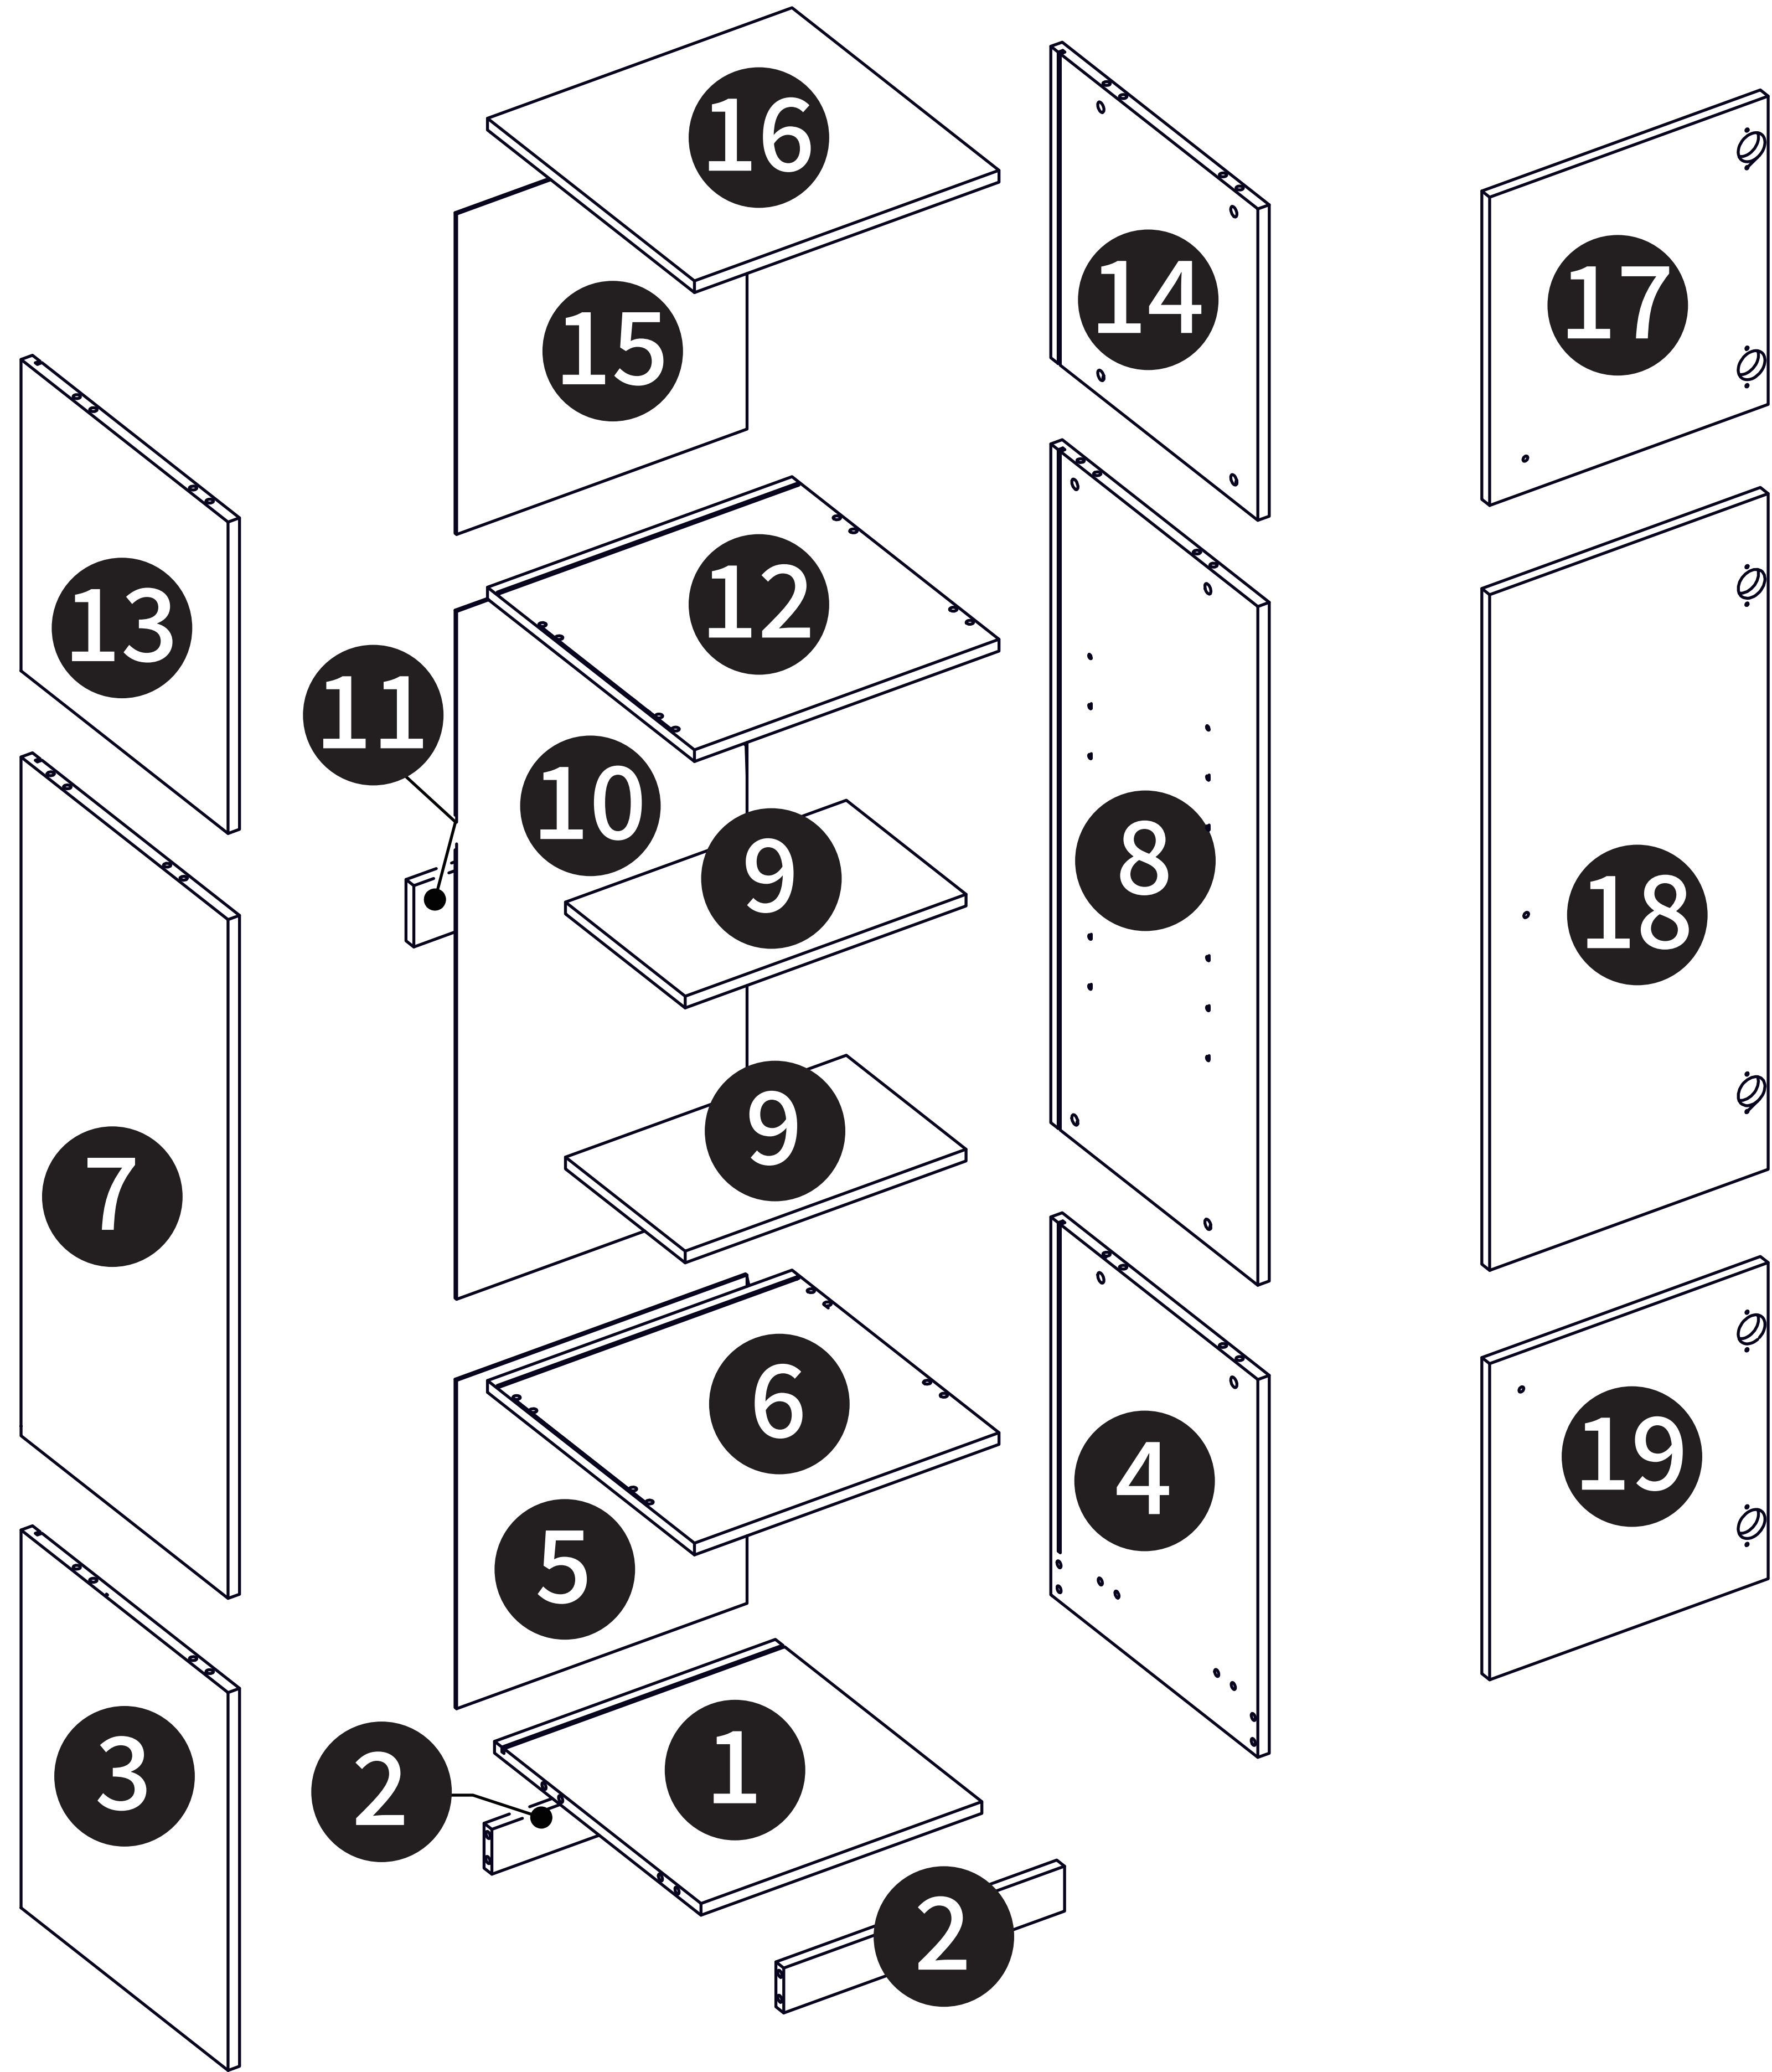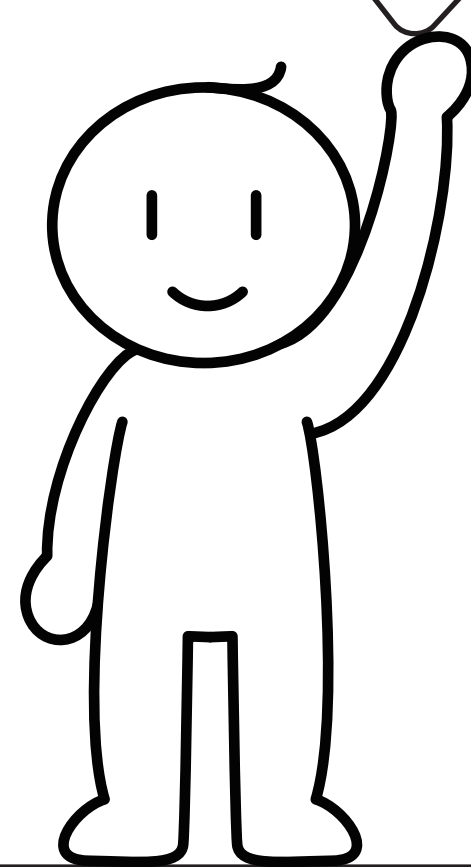  


Before installation, check that all boards and parts match the manual and distinguish similar parts by size. If anything is missing, scan the QR code to contact us. Note: The product ships in a complete package.

 A*30

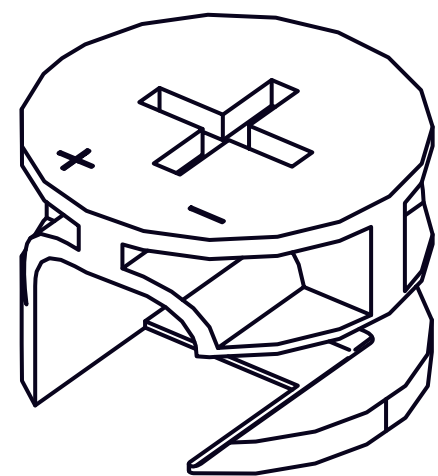


cam wheel

 B*30

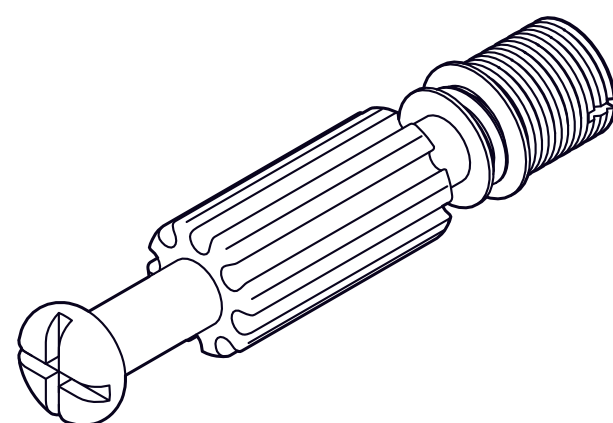


cam bolt

 C*30

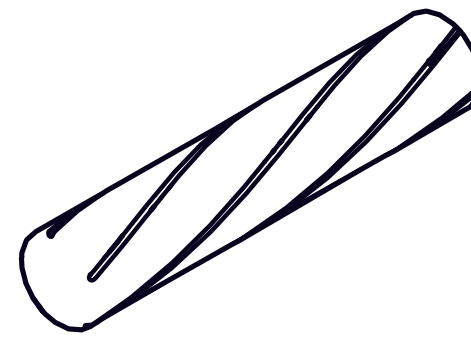


wooden dowel

 D*2

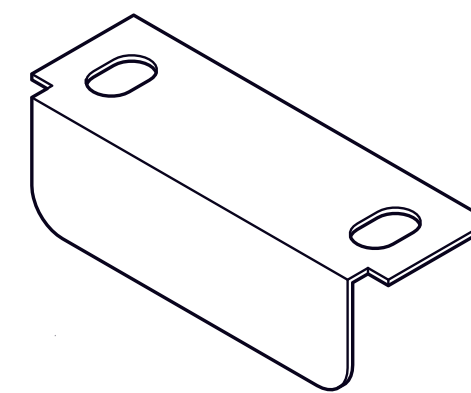


door stopper

 E*42

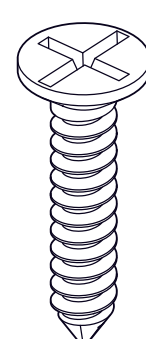


short screw

 F*8

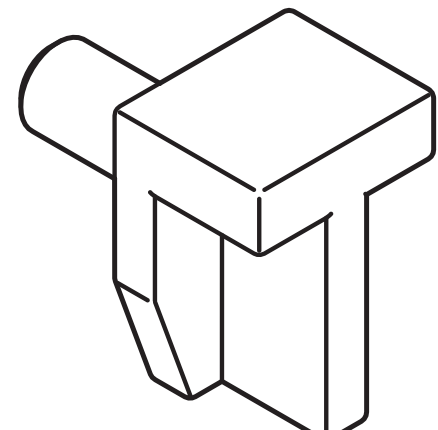


shelf pin

 G*6

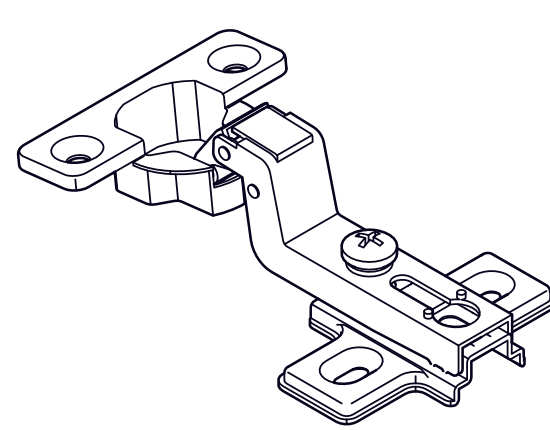


hinge

 I*3

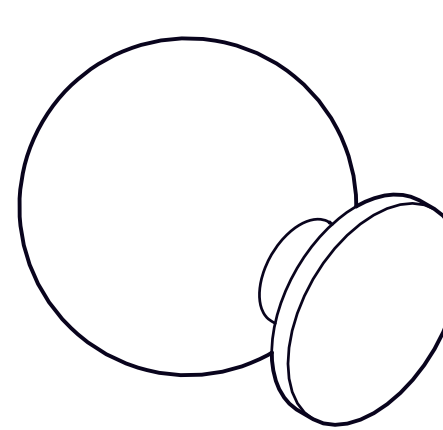


handle

 J*3

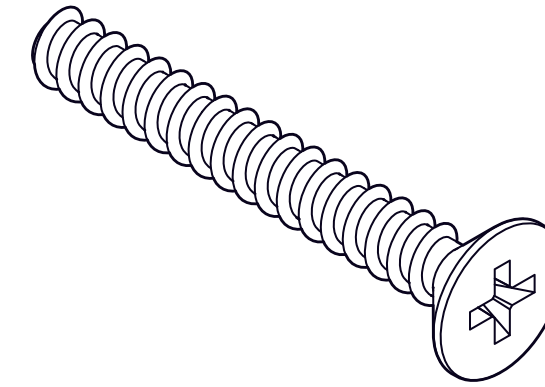


flat-head screw

 K*12

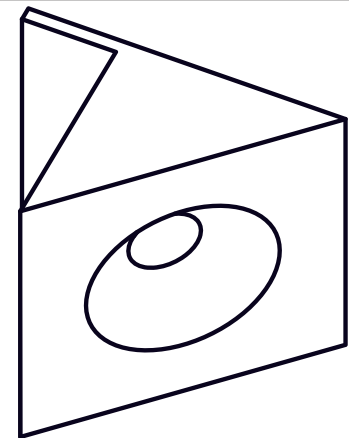


back panel
fastener

 L*2

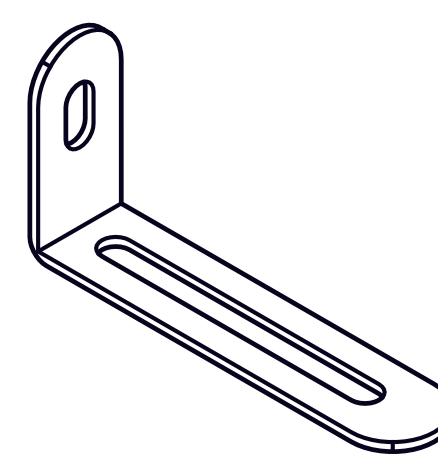


anti-tip device

 M*2

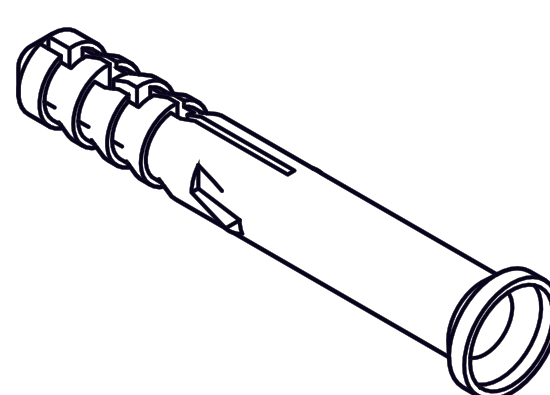


wall plug

 N*2

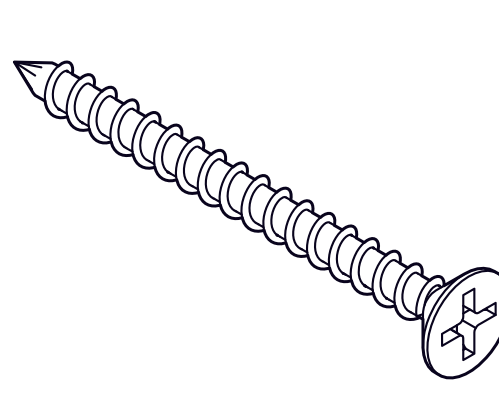


long screw

 P*30

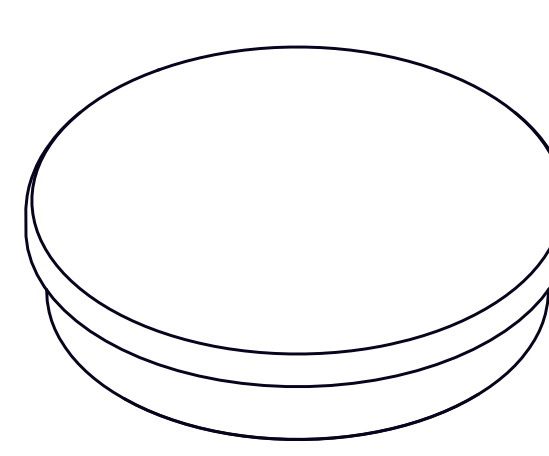

cover cap

 
FA*16


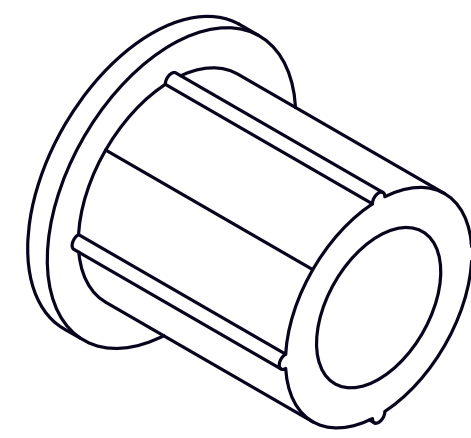


Shelf Pin
Hole Cover



1

   As shown in the figure, hammer the black Cam Nut (B.1) into panels 3 and 4 first, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

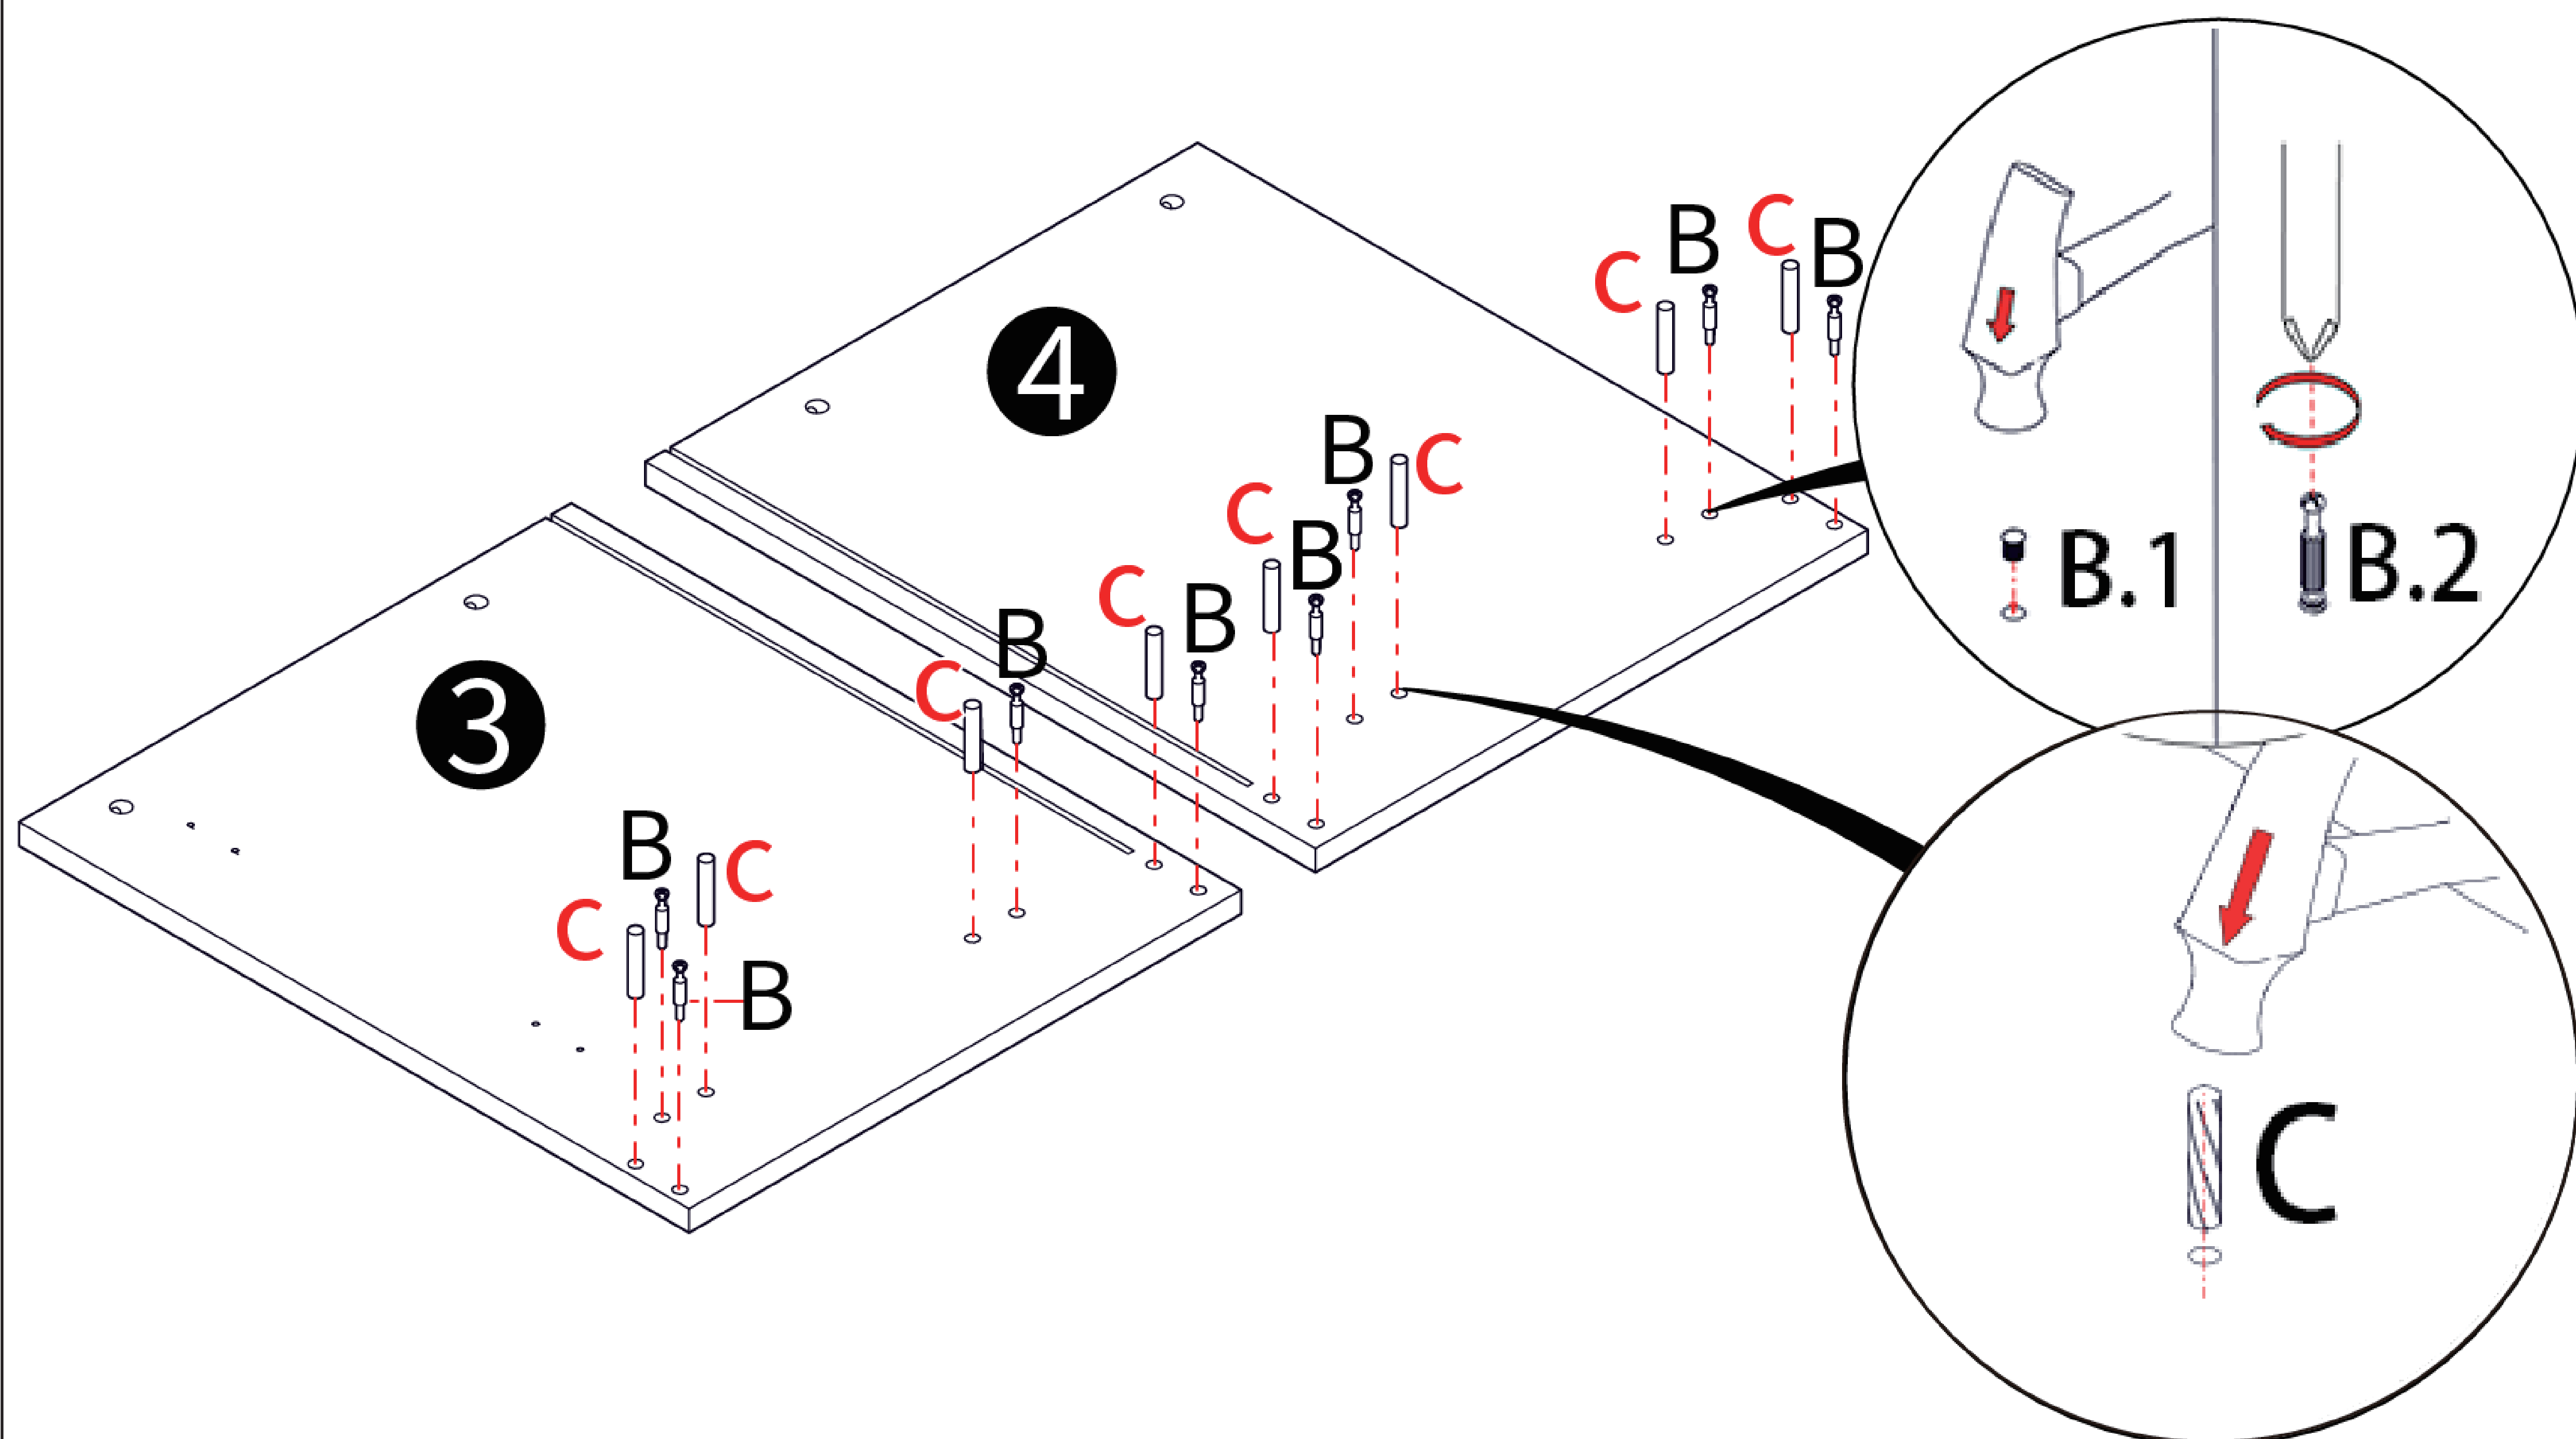

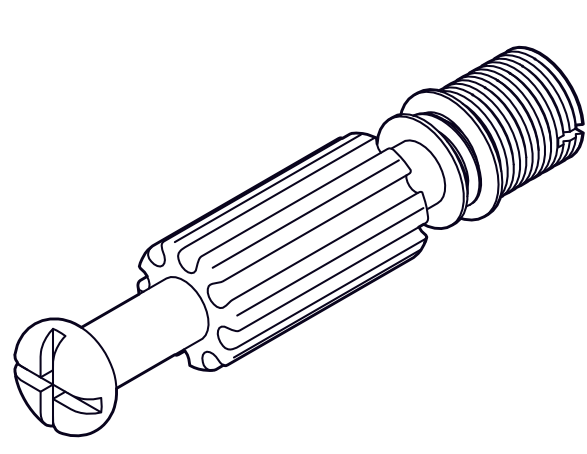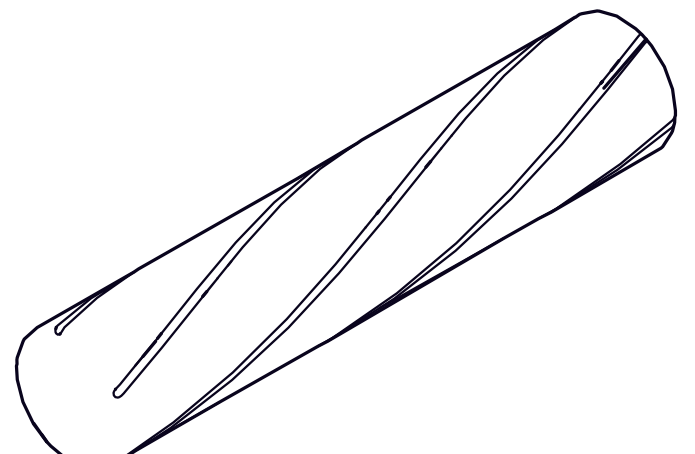
B*8	C*8
	
Cam bolts	wooden dowels

  Insert the wooden dowels (C) into Panels 3 and 4.

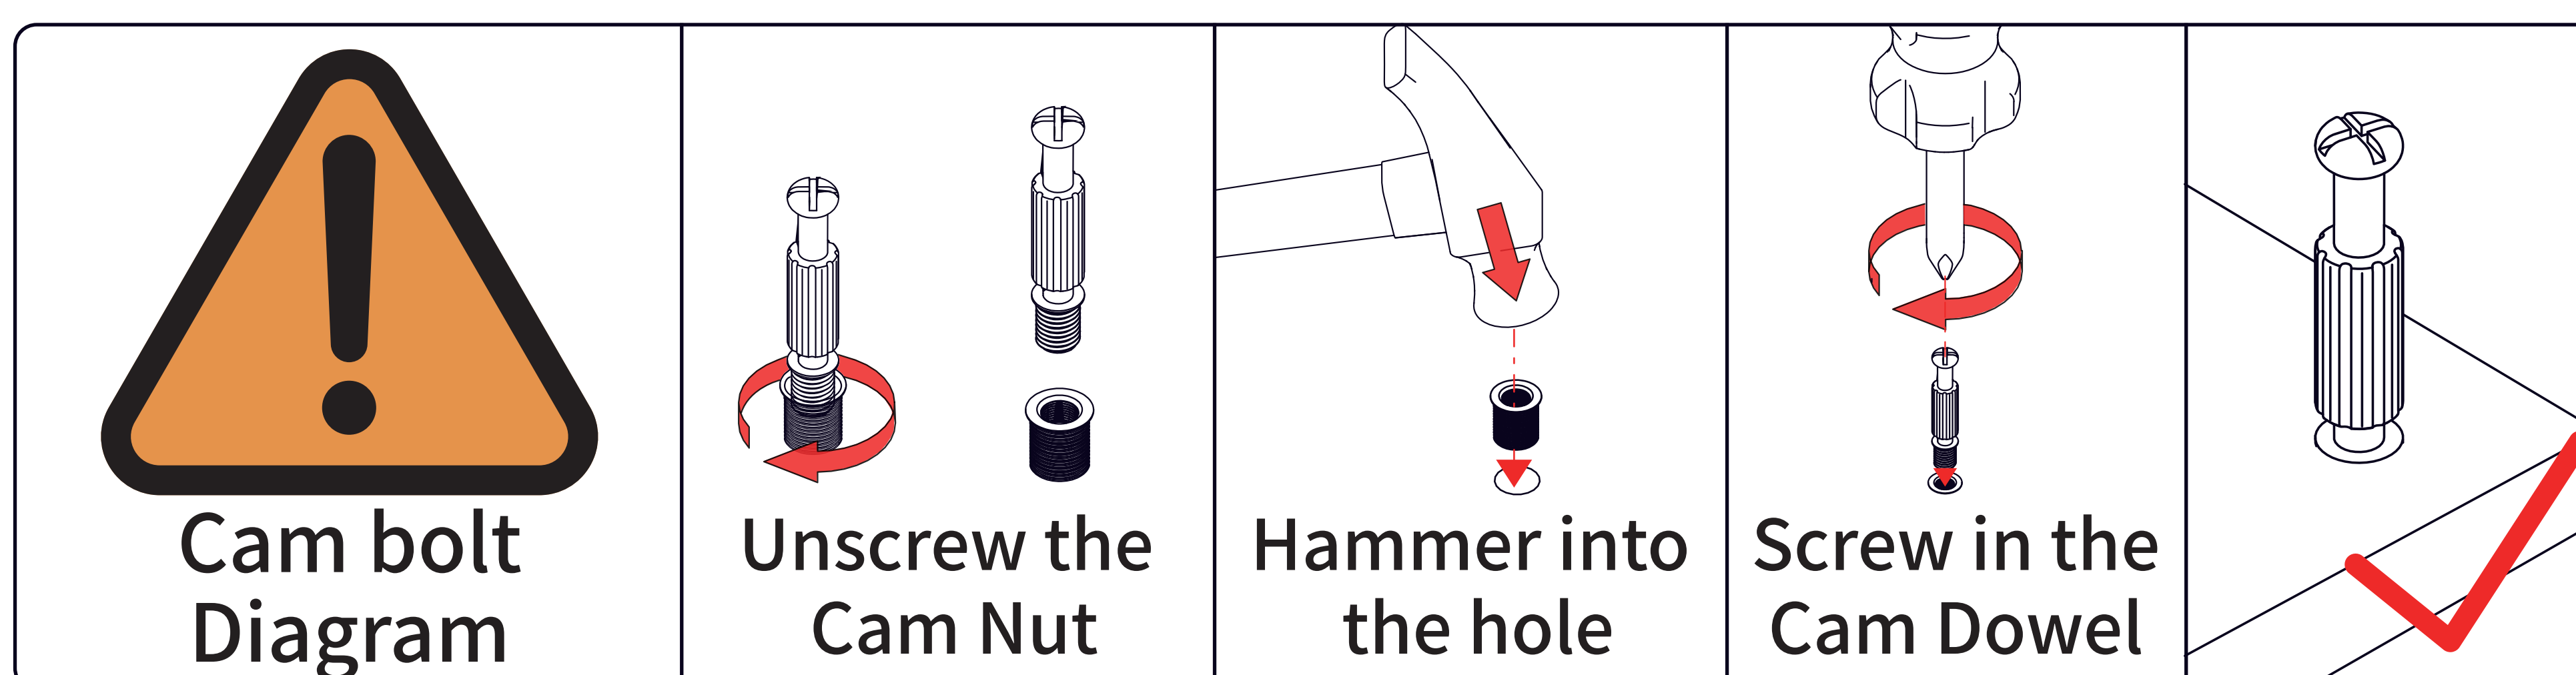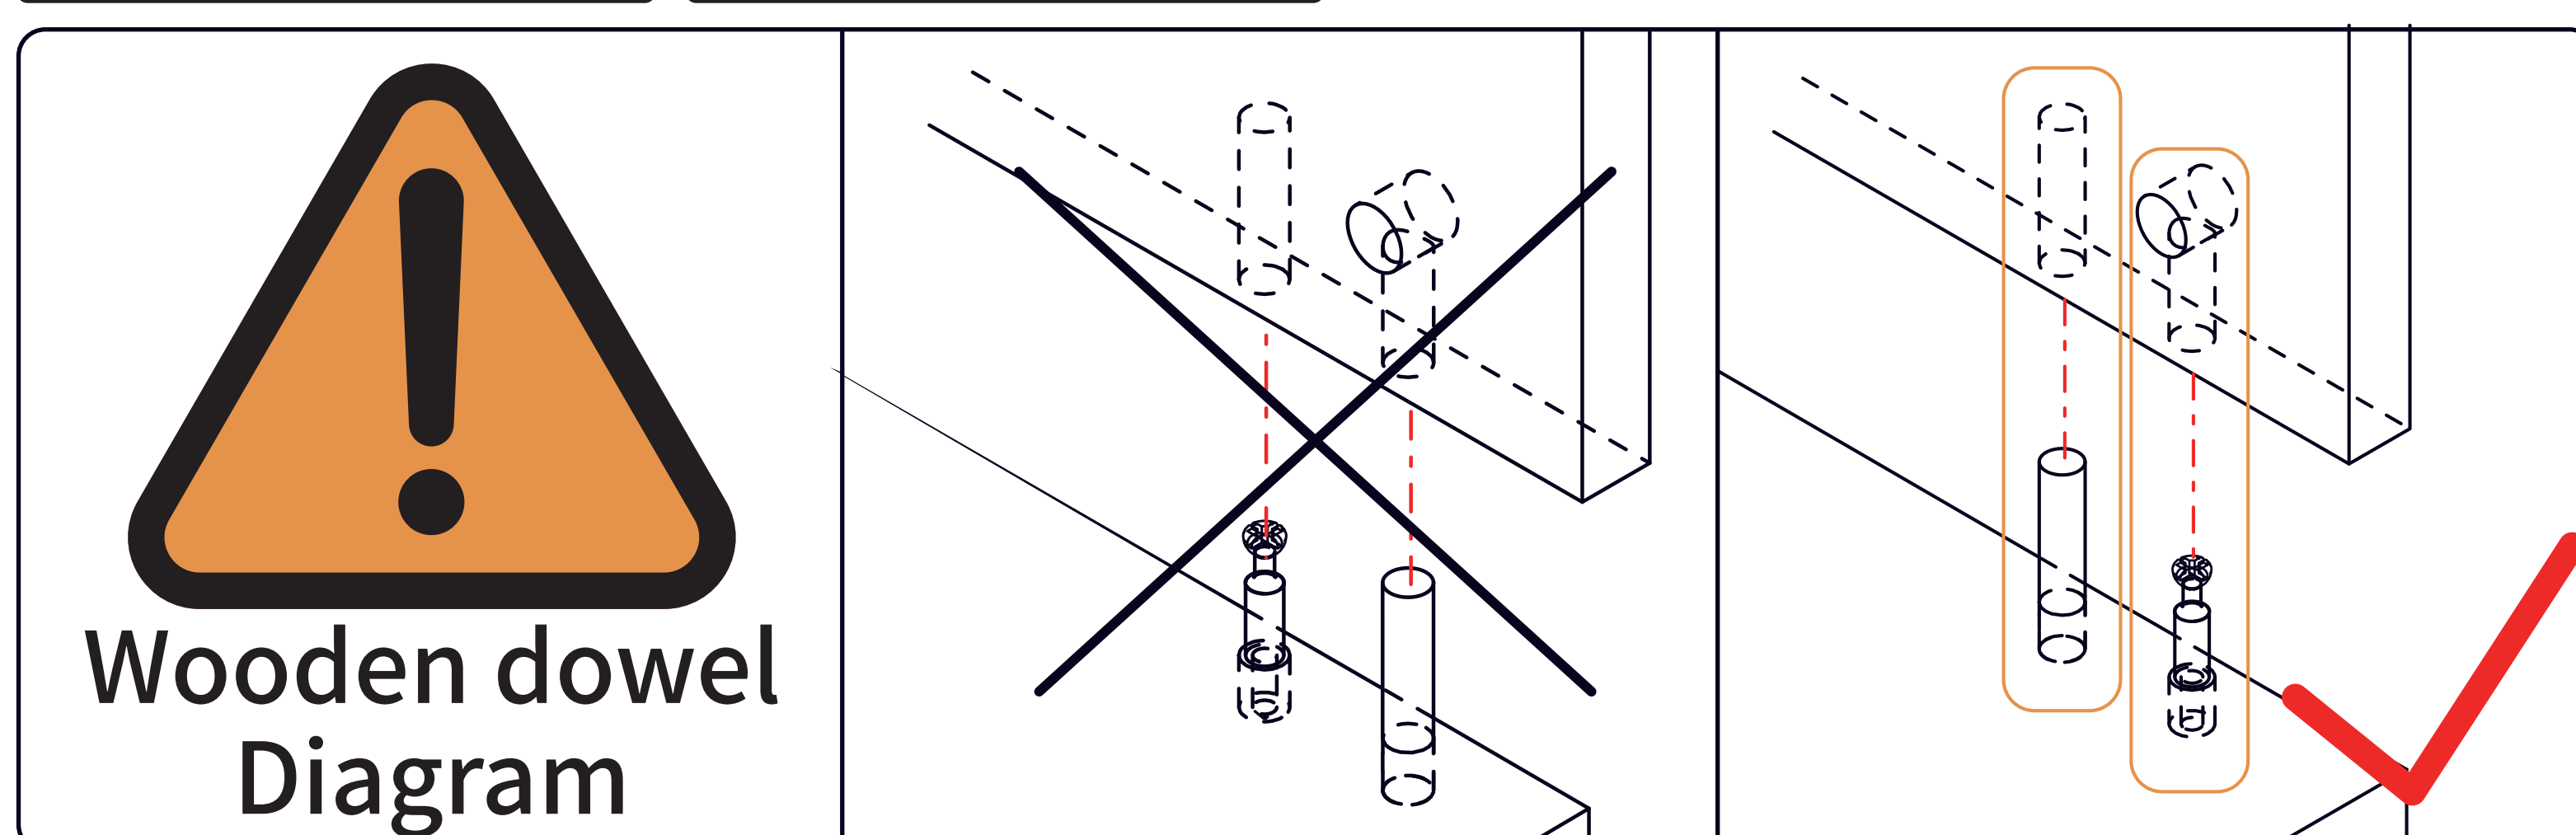

2

 
As shown in the figure, connect panel 3 to panels 1 and 2, and press the Cam wheel (A) into panels 1 and 2. Then rotate to tighten.

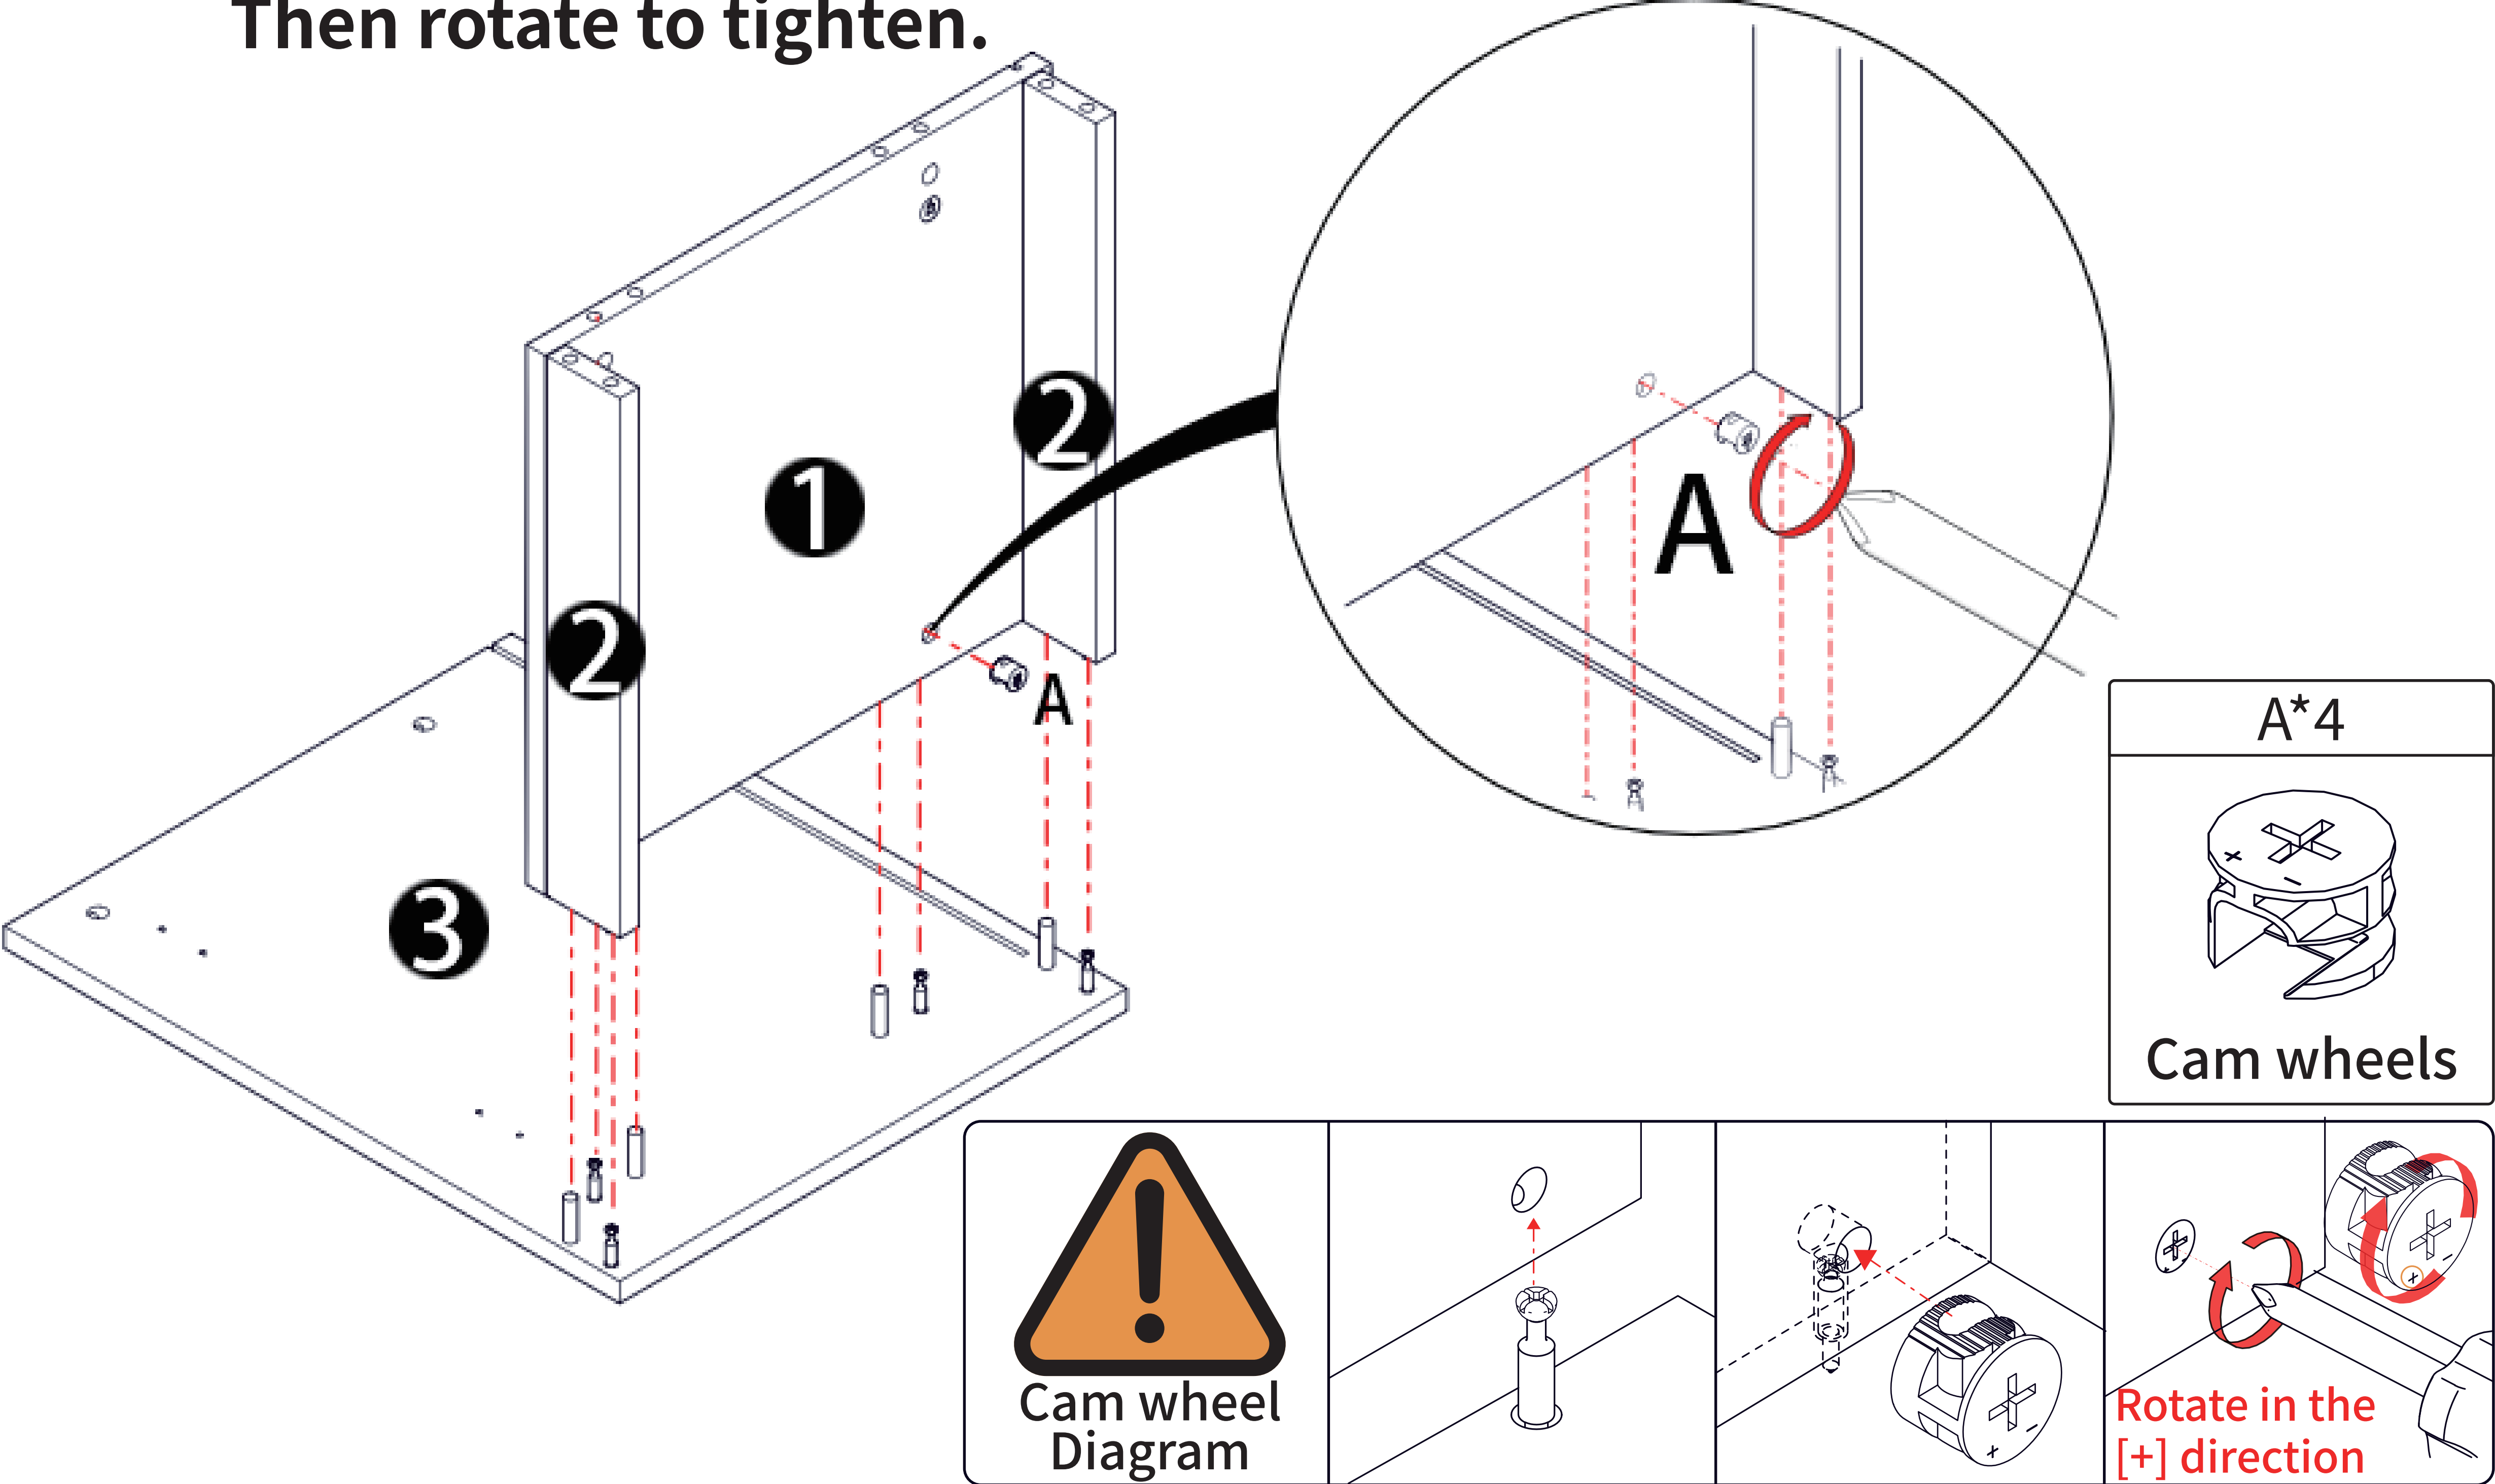

3

then connect panel 4 to panels 1 and 2, and press the Cam wheel (A) into panels 1 and 2. Then rotate to tighten.


 
First rotate panel 4 by 180°

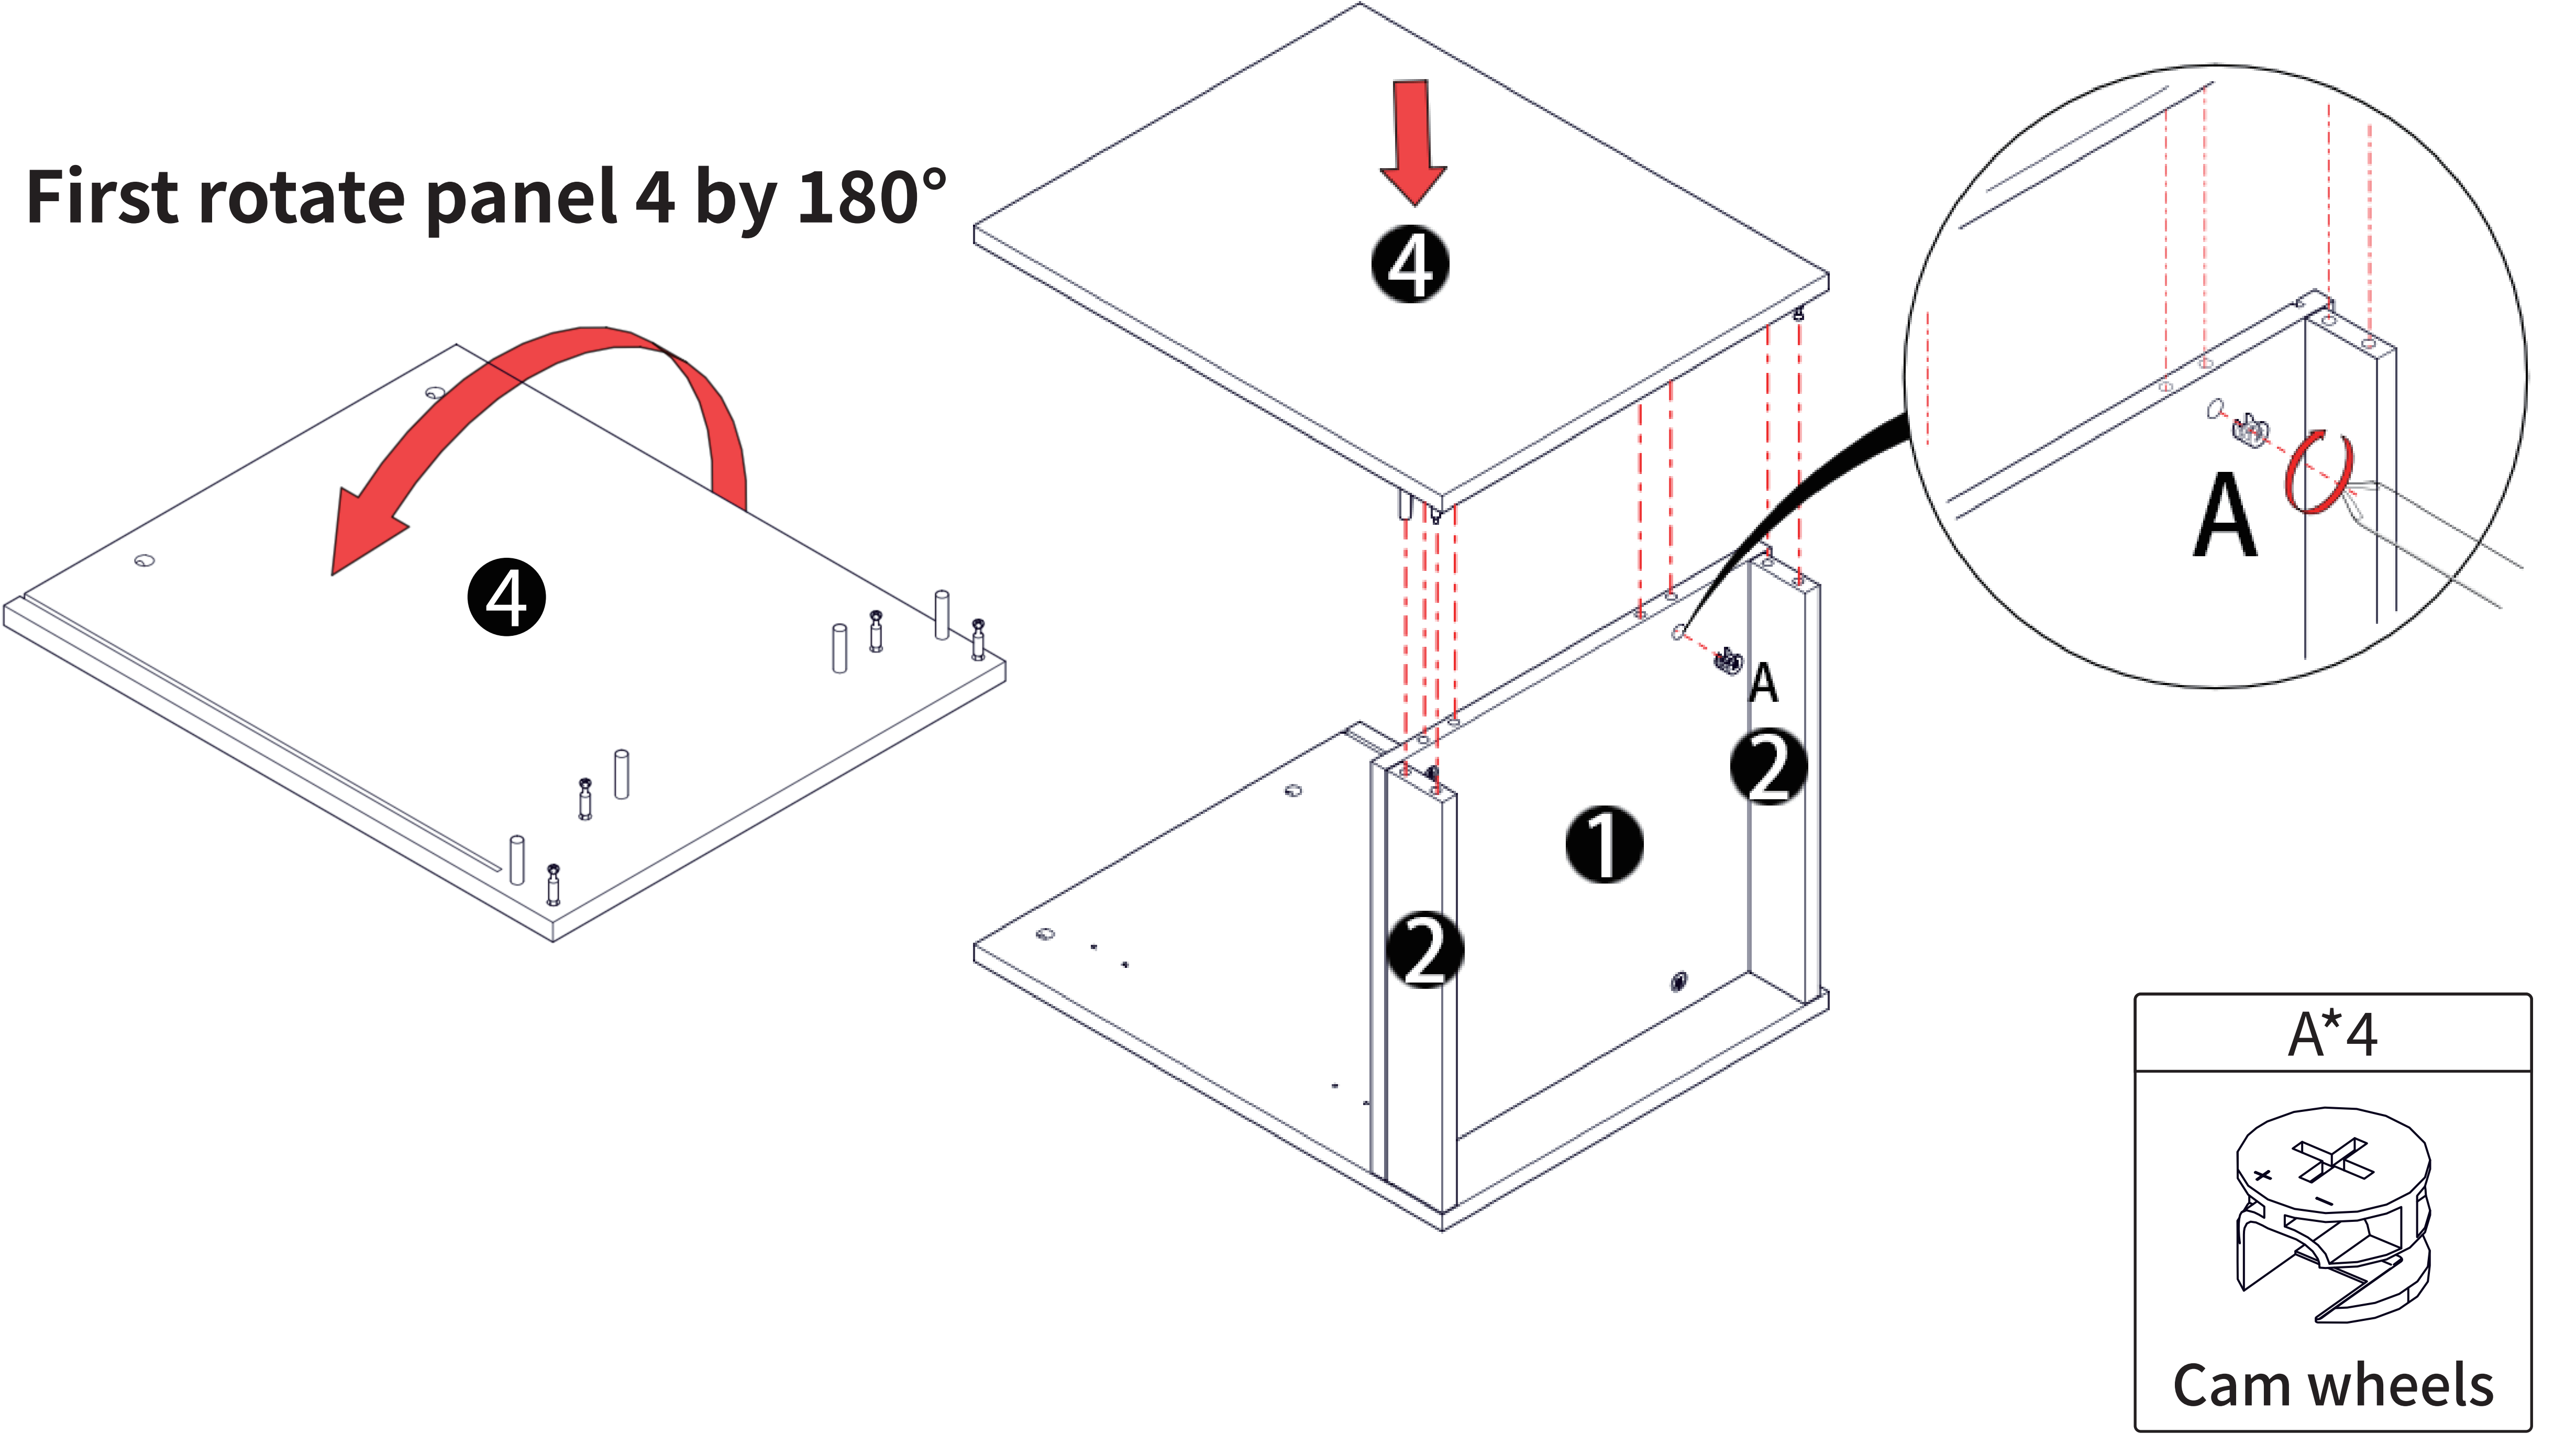

4




then insert Back Panel 5 along the groove.

  Rotate the cabinet body 90°



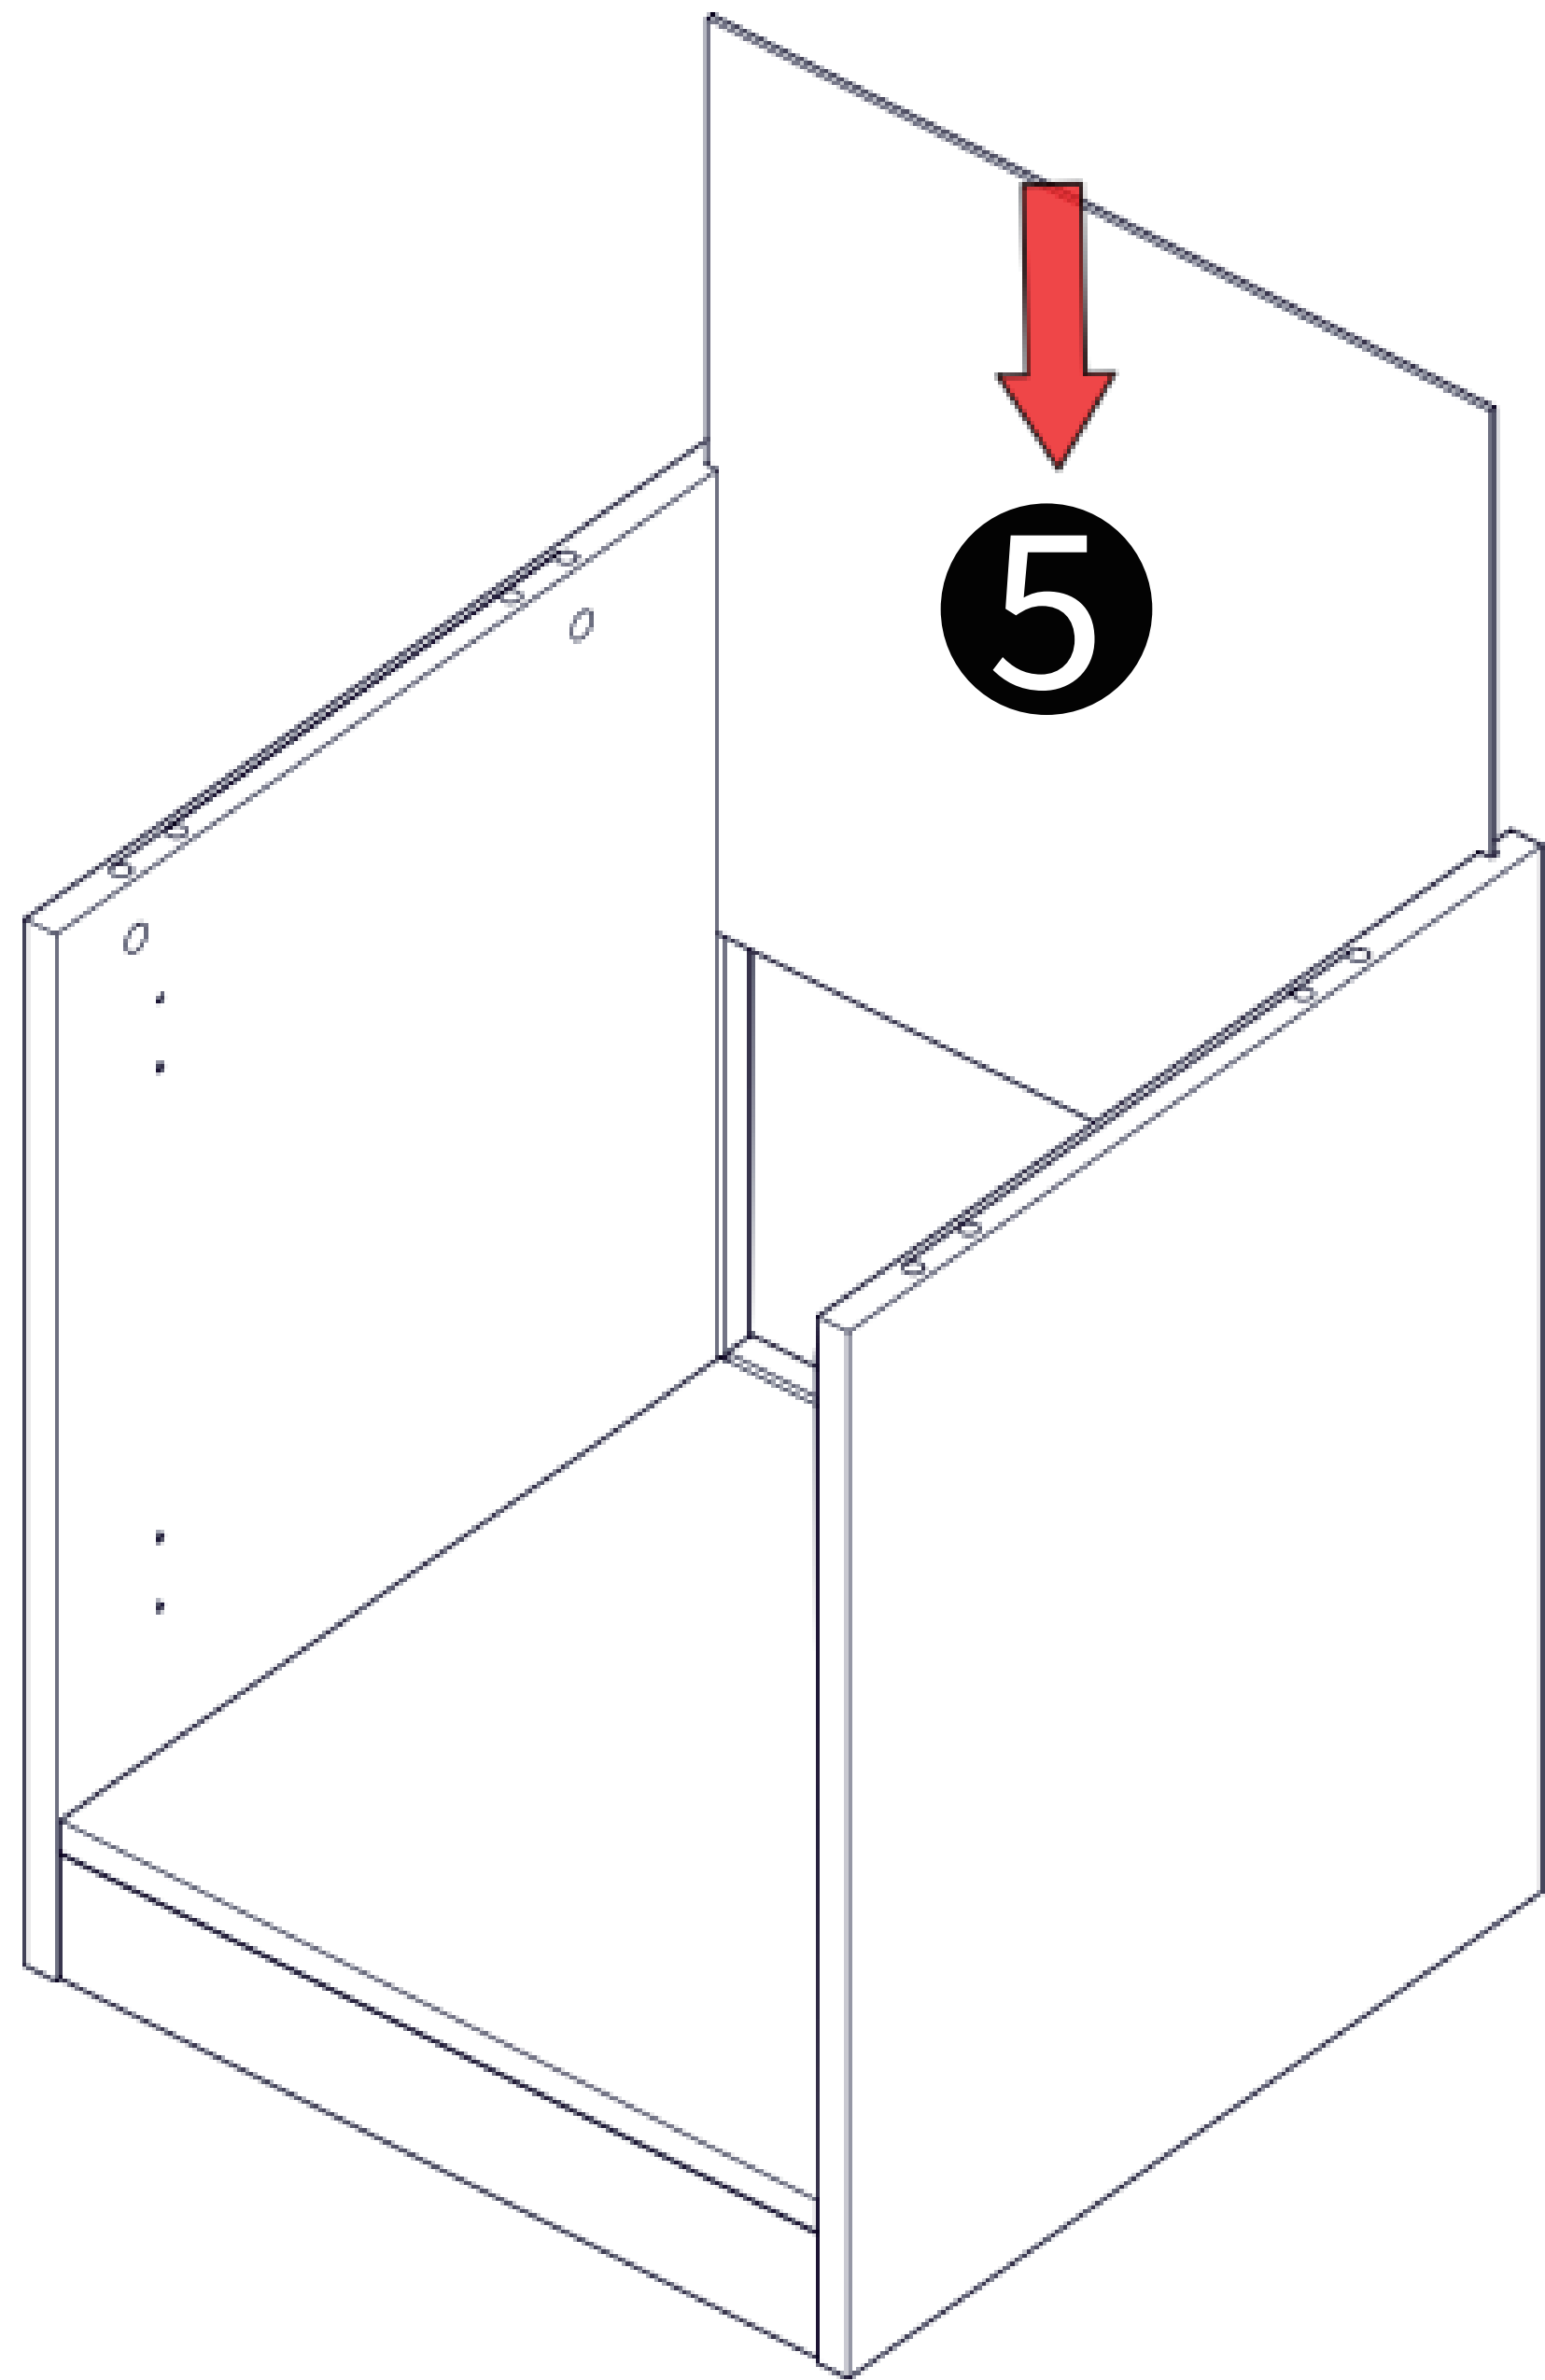
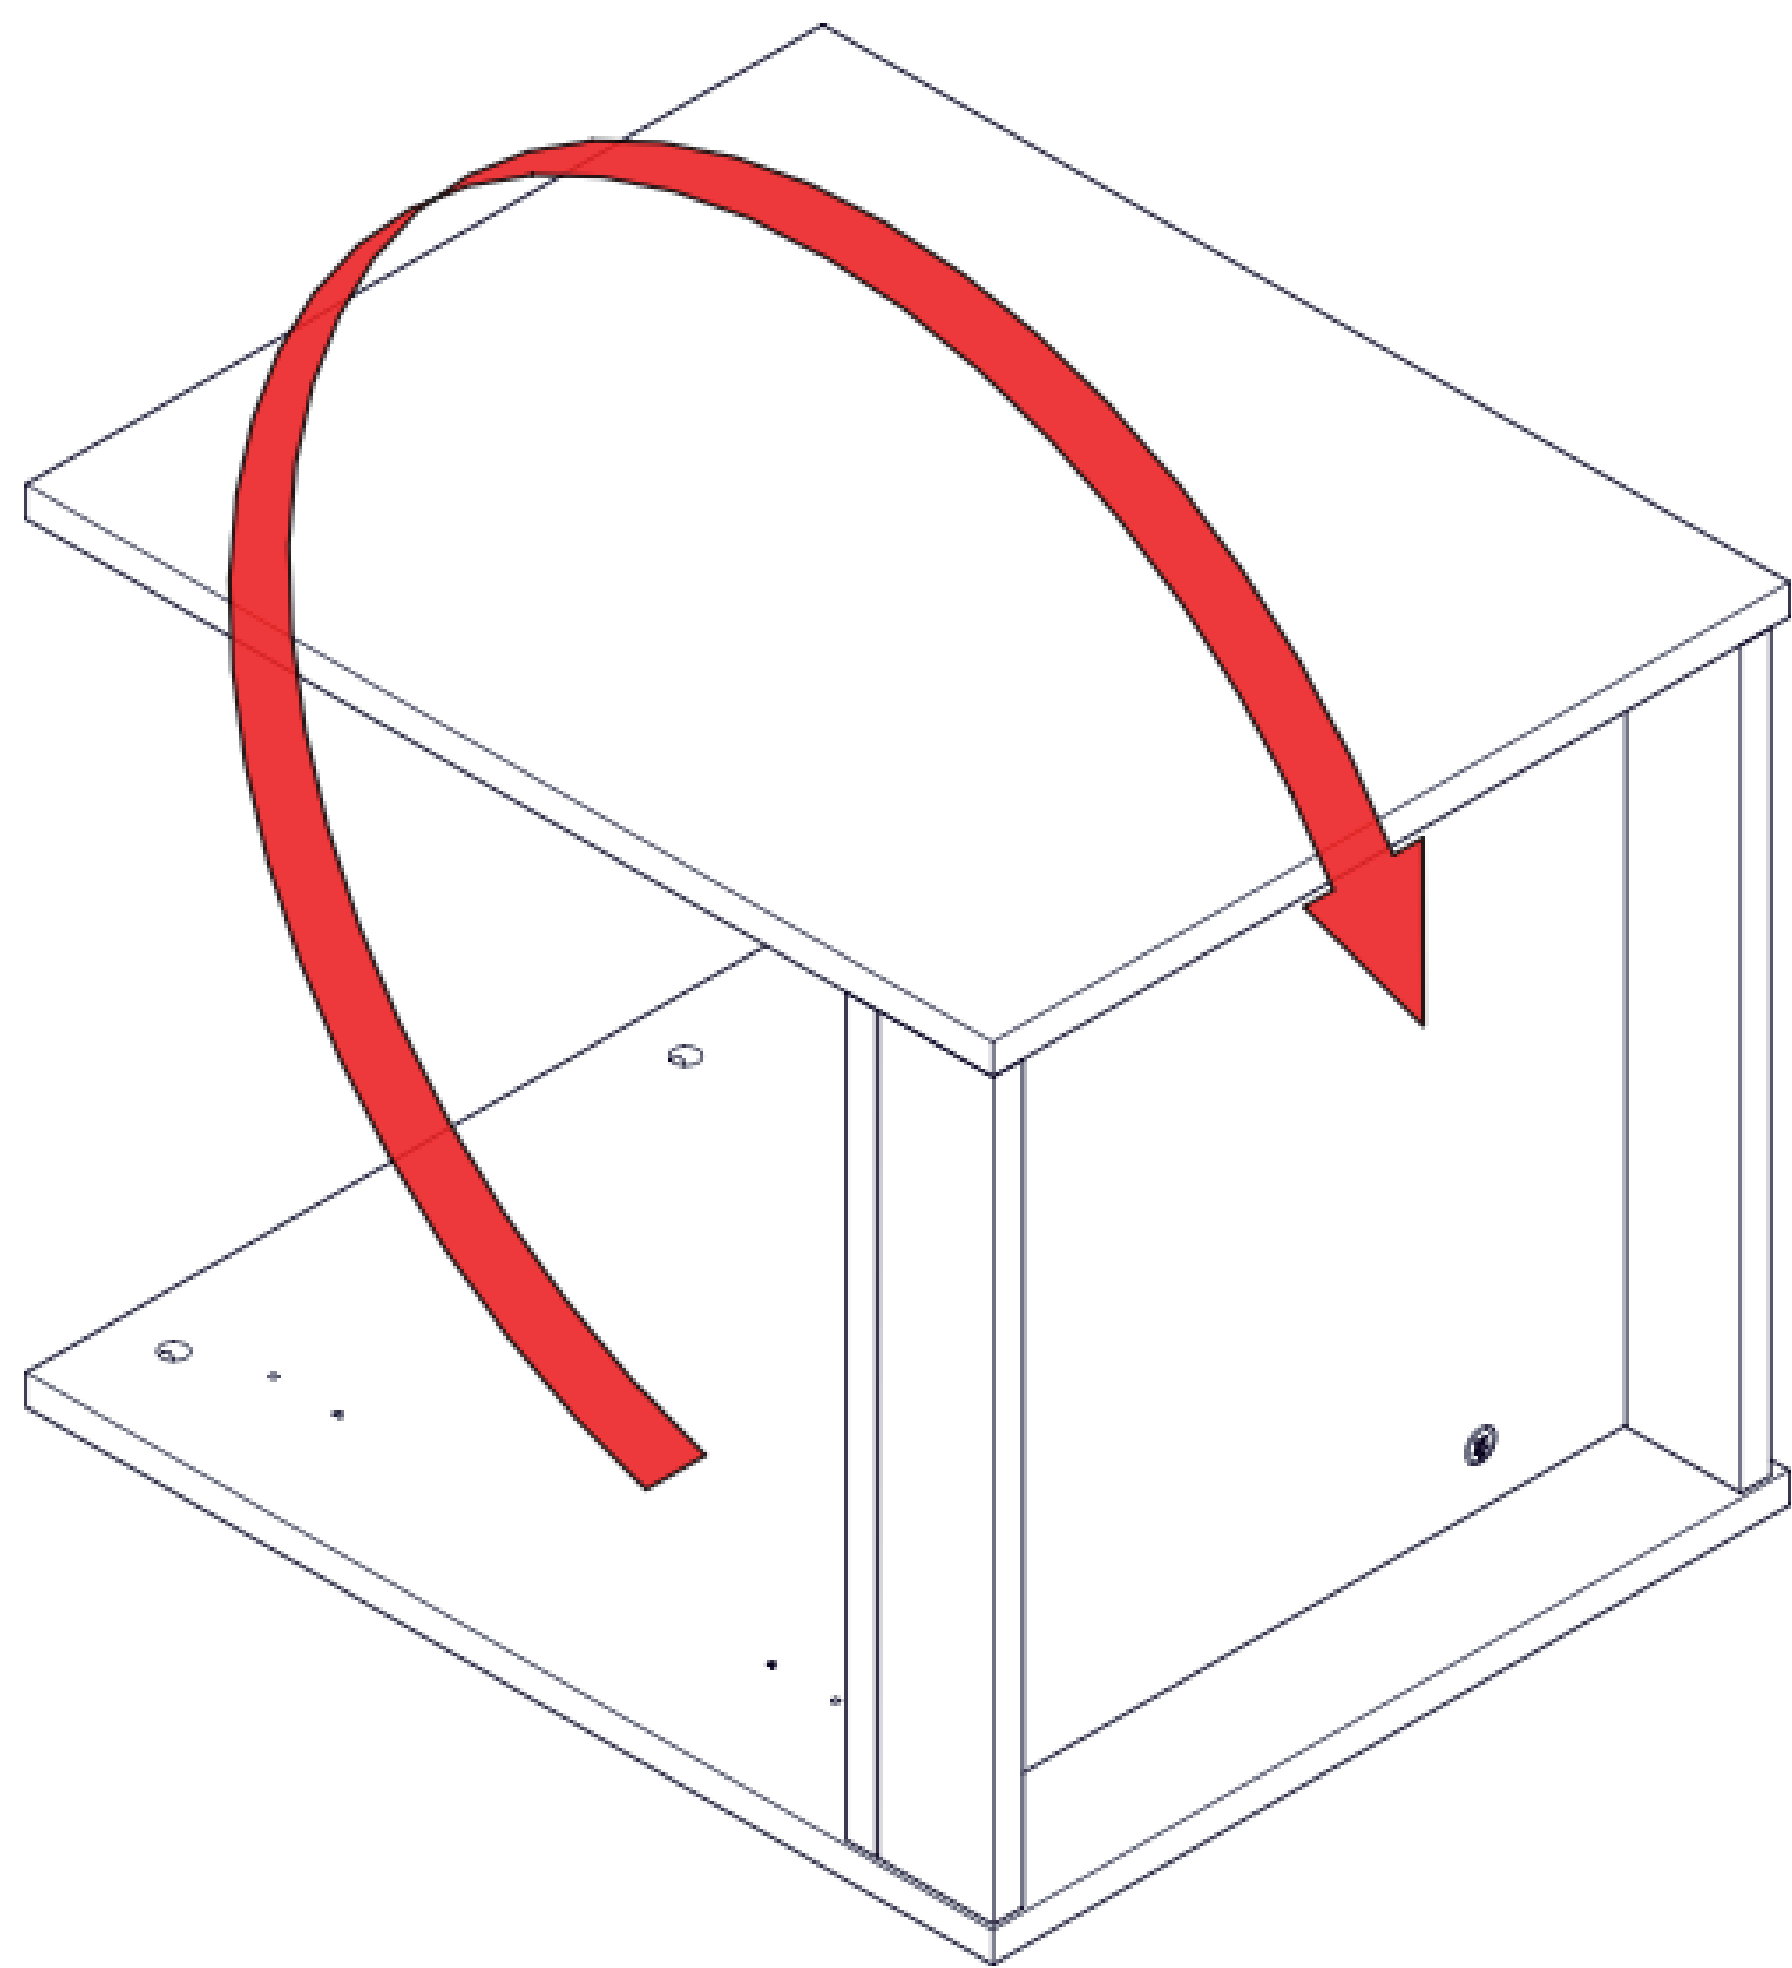


5

   As shown in the figure, hammer the black Cam Nut (B.1) into panel 6 first, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

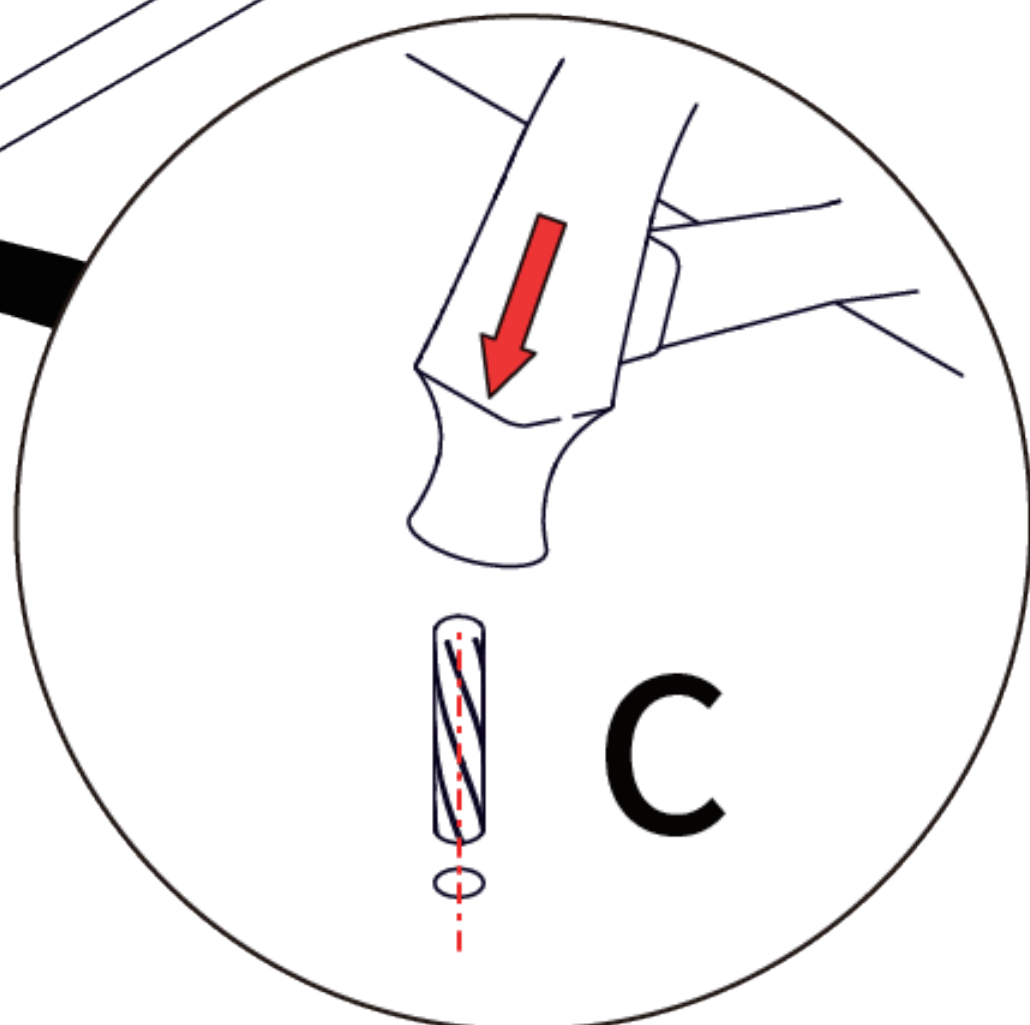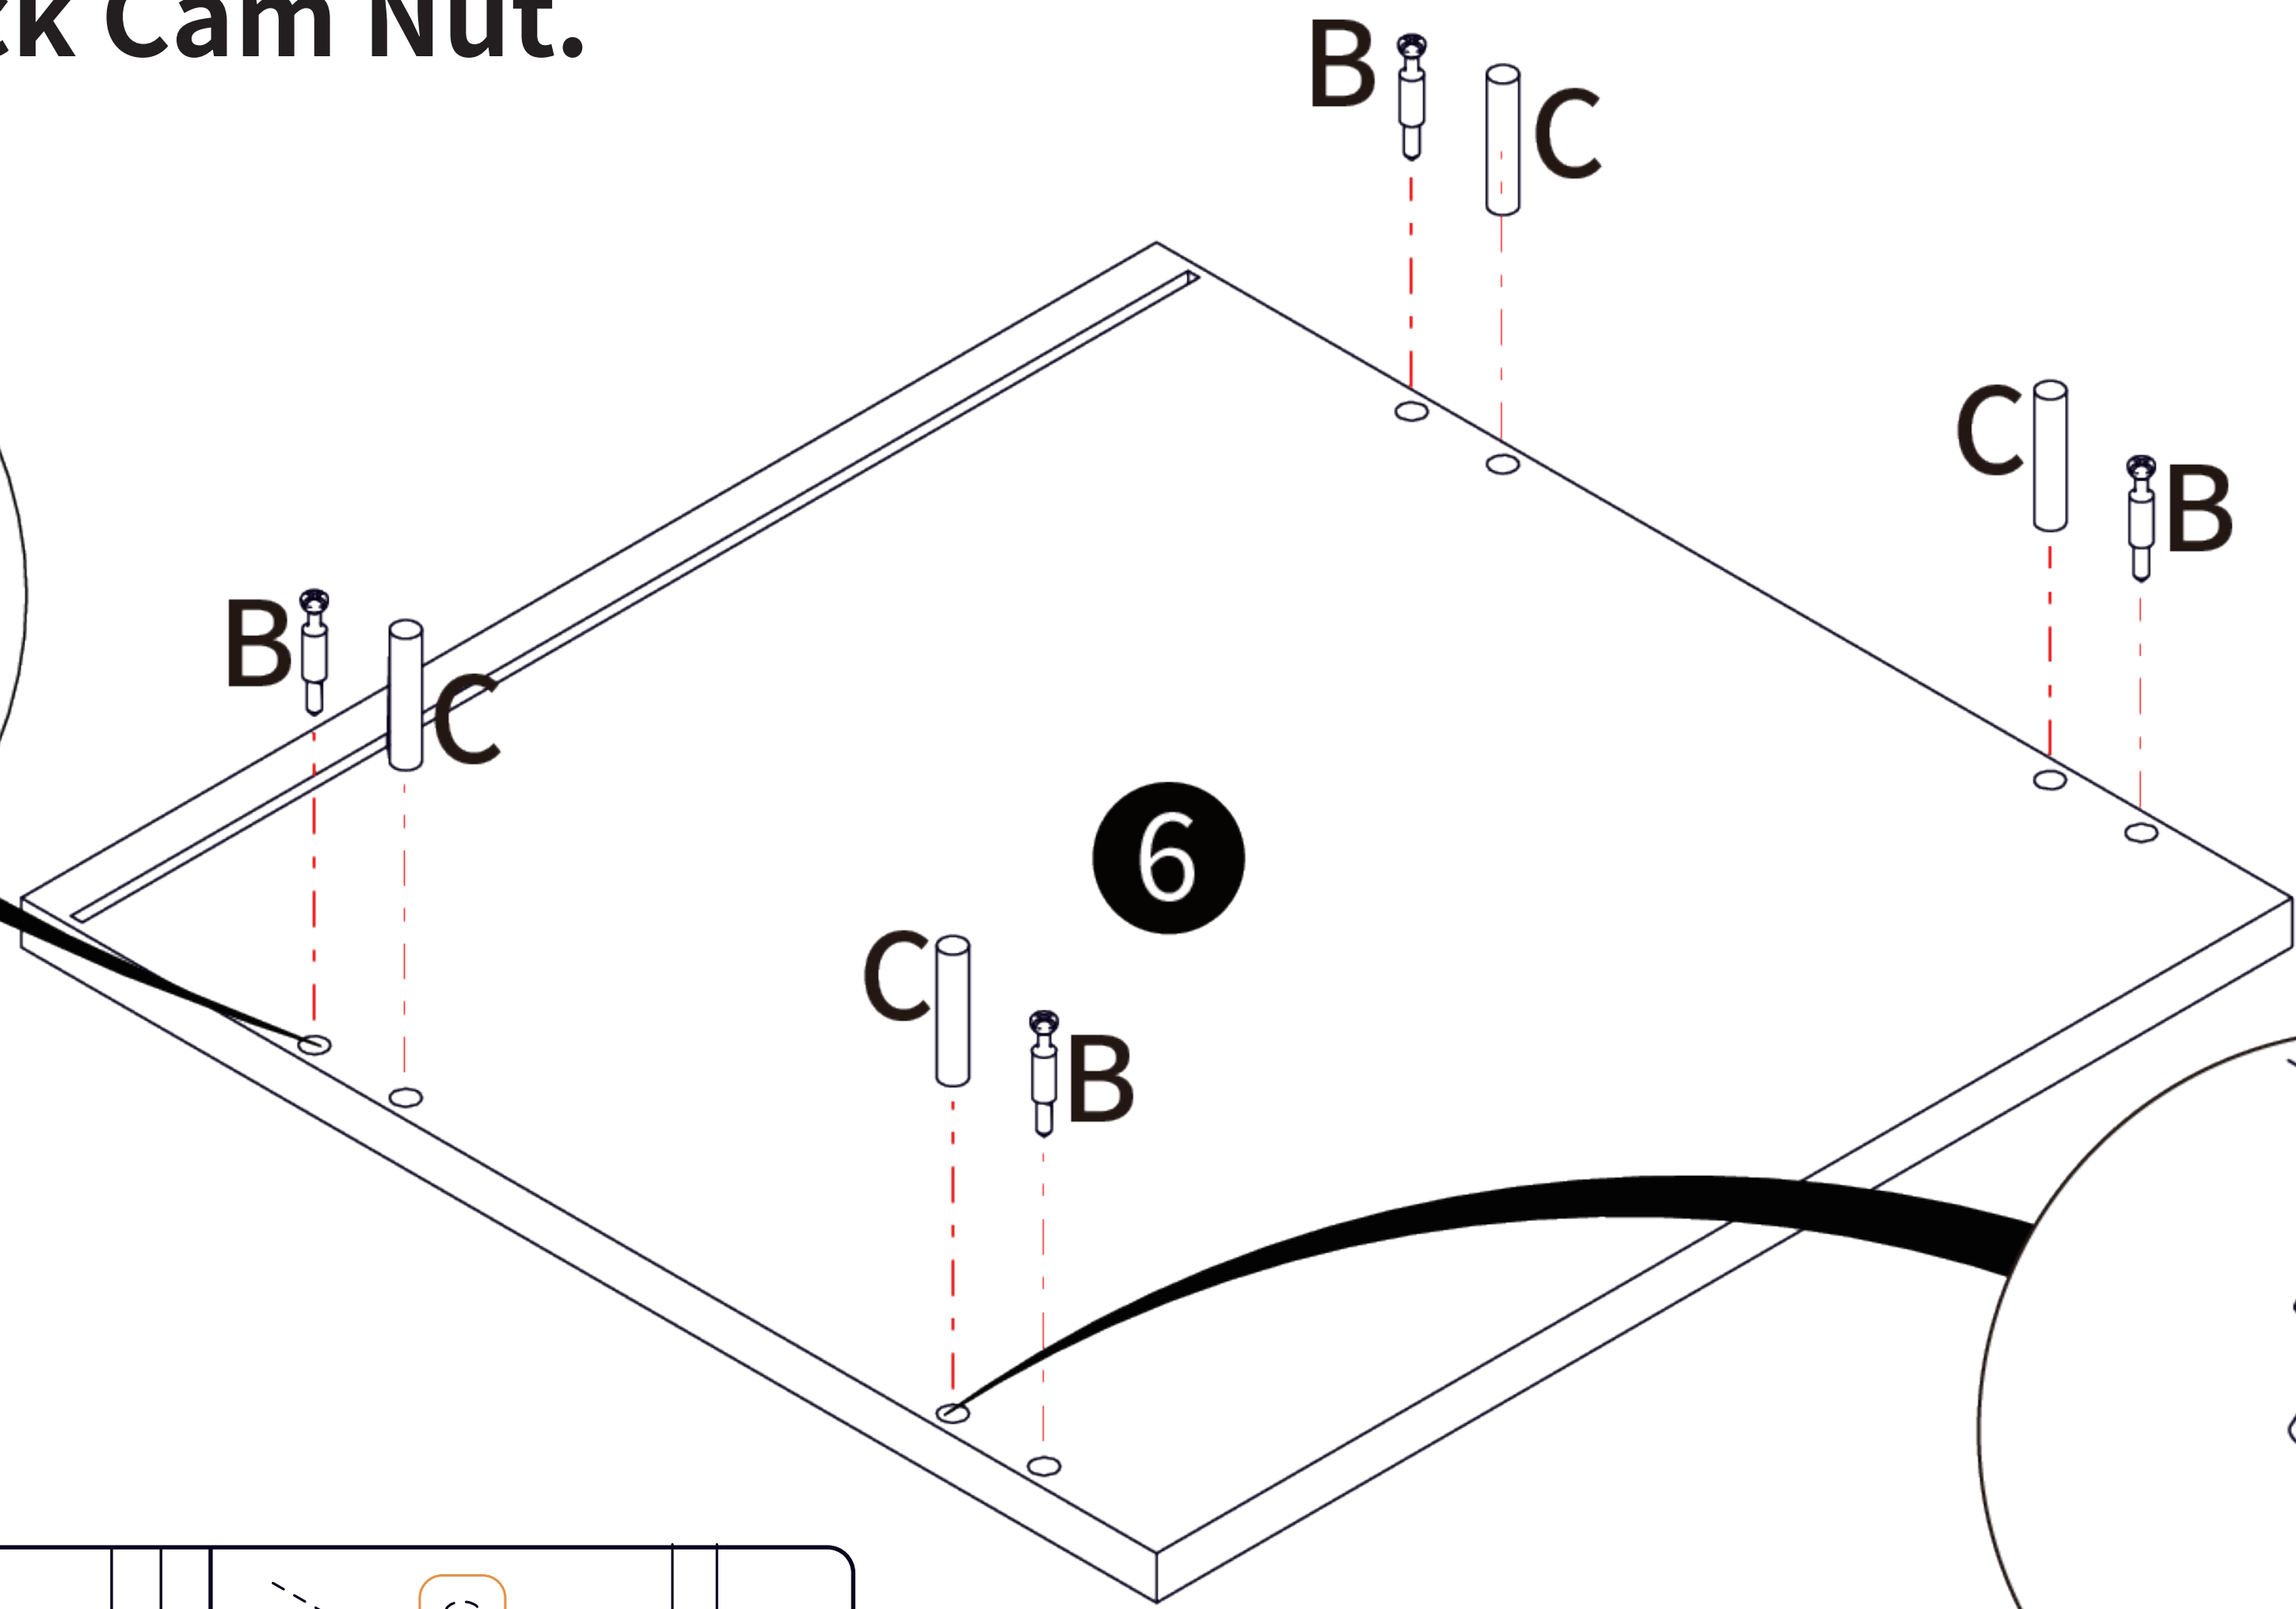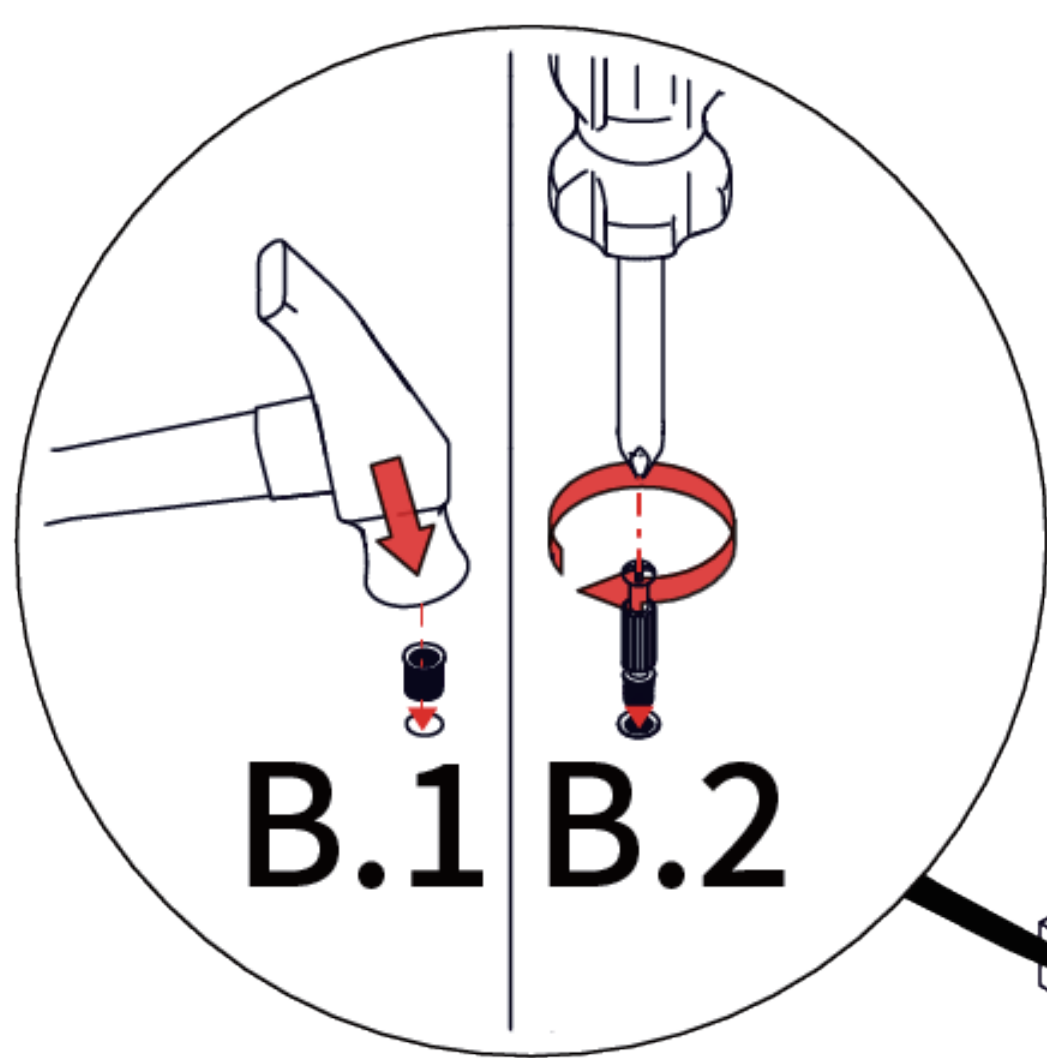

  
 
 
Insert the wooden dowels (C) into panel 6.

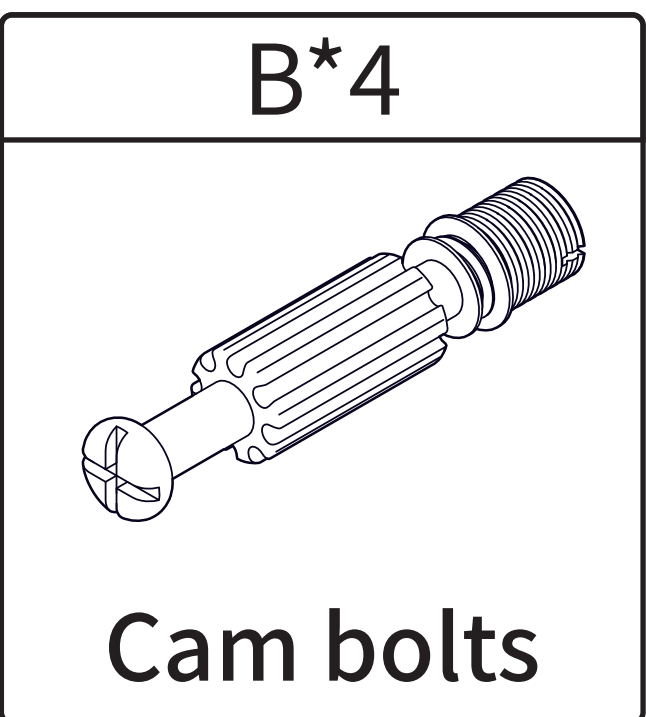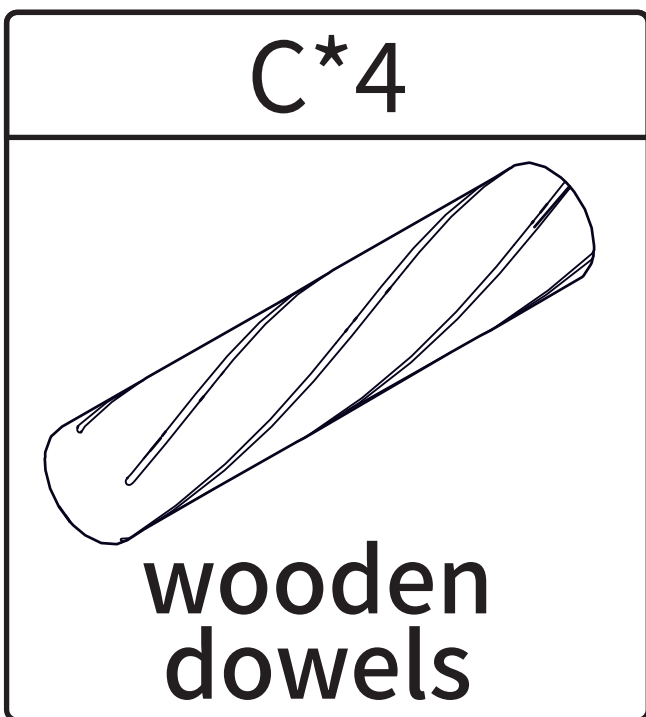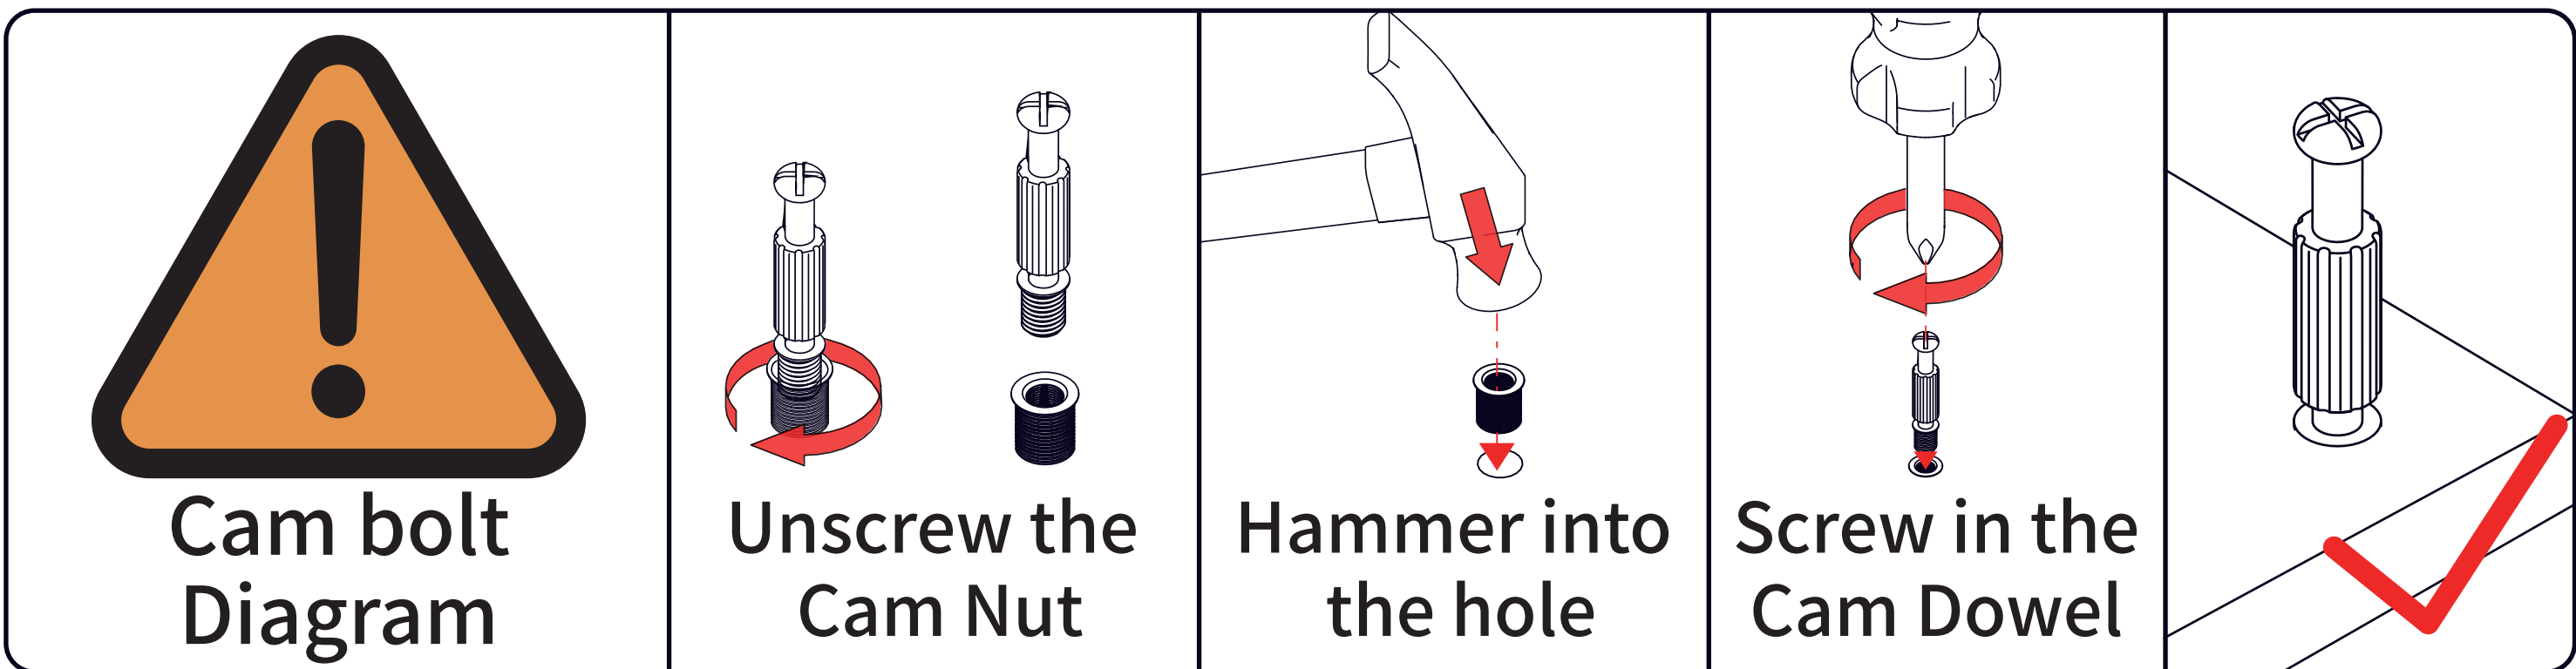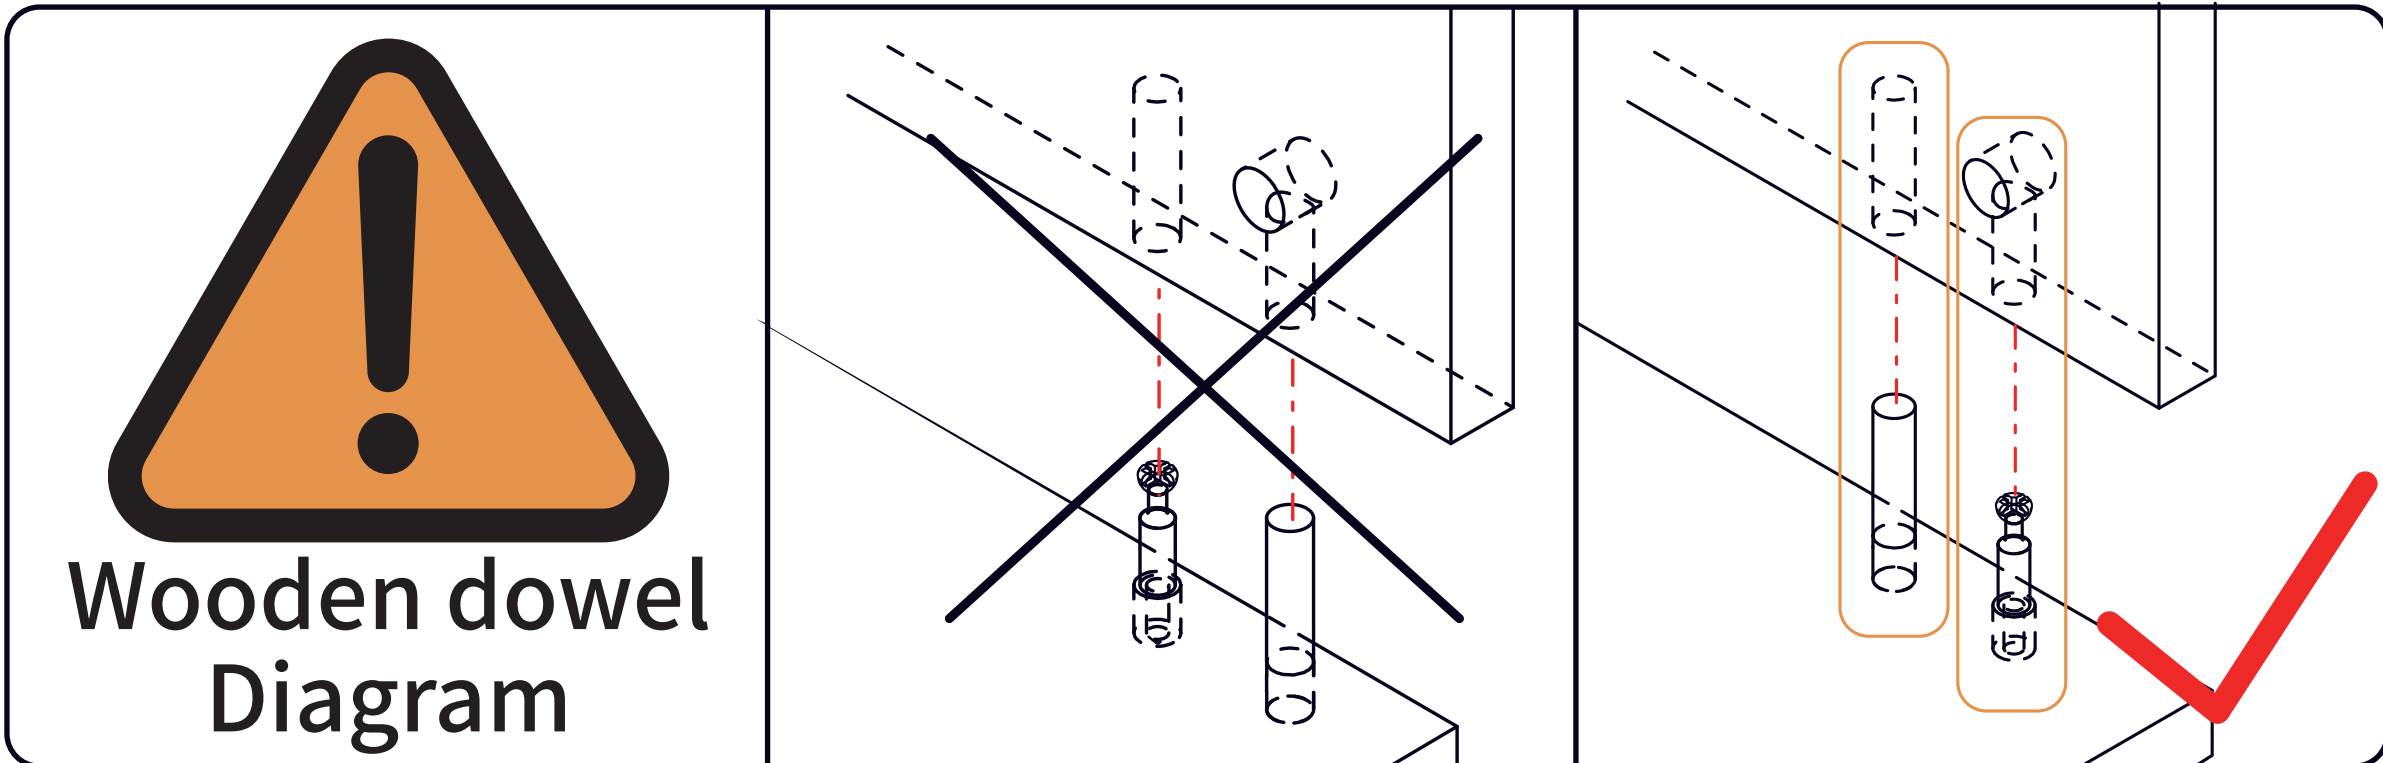


6

Connect panel 6 to panels 3, 4, and 5,
and press the Cam wheel (A) into panels 3 and 4.
Then rotate to tighten.

 
 
 
First rotate panel 6 by 180°

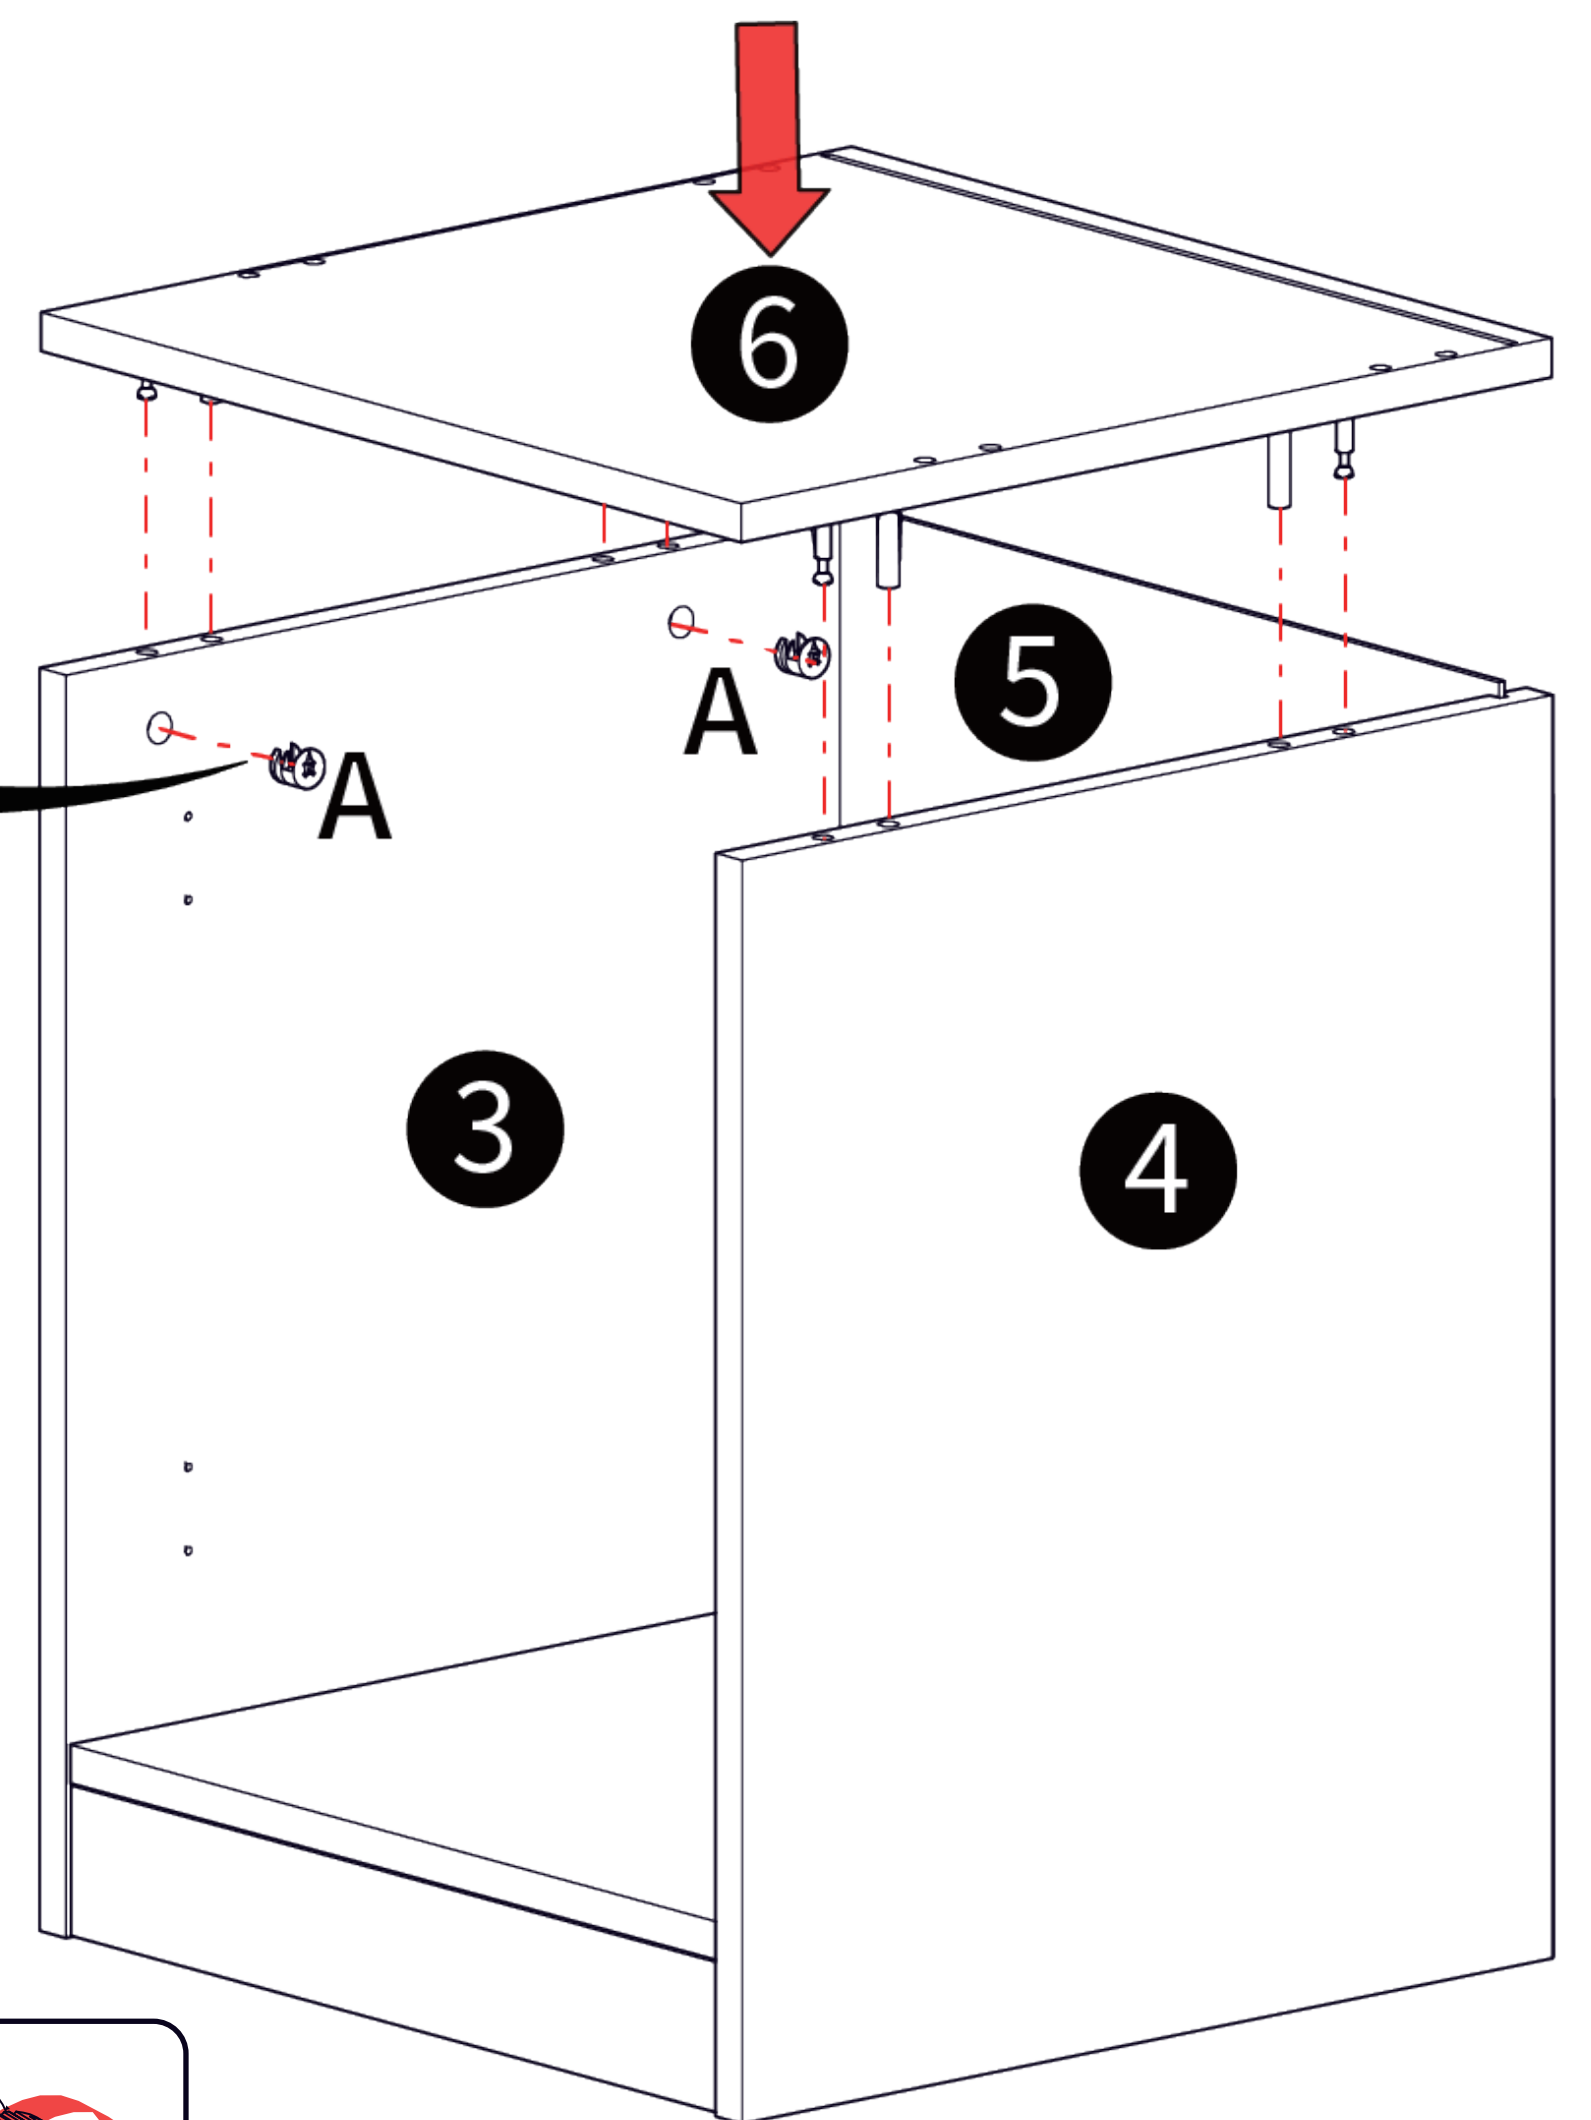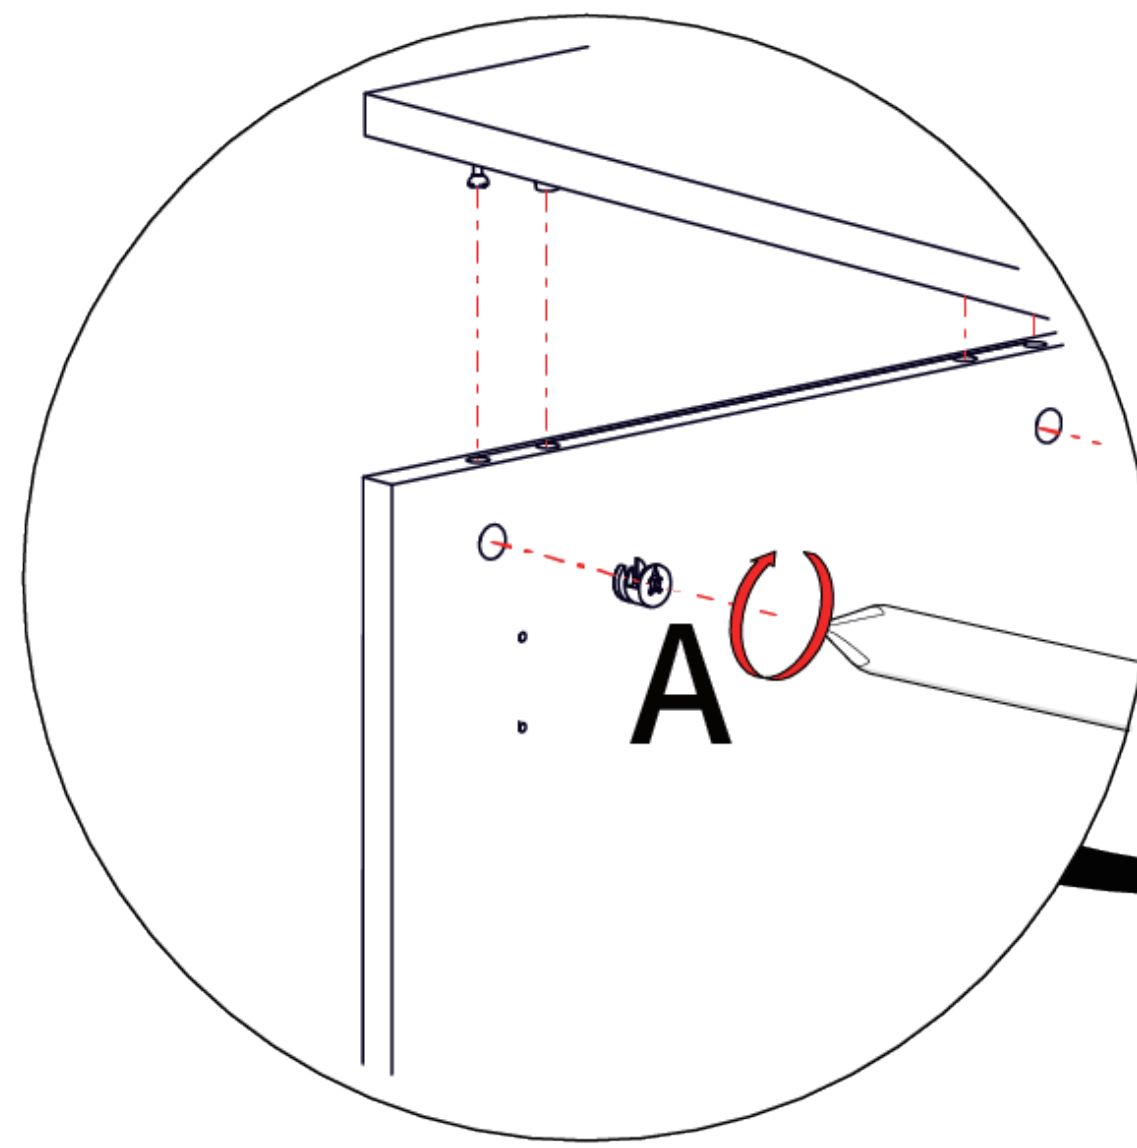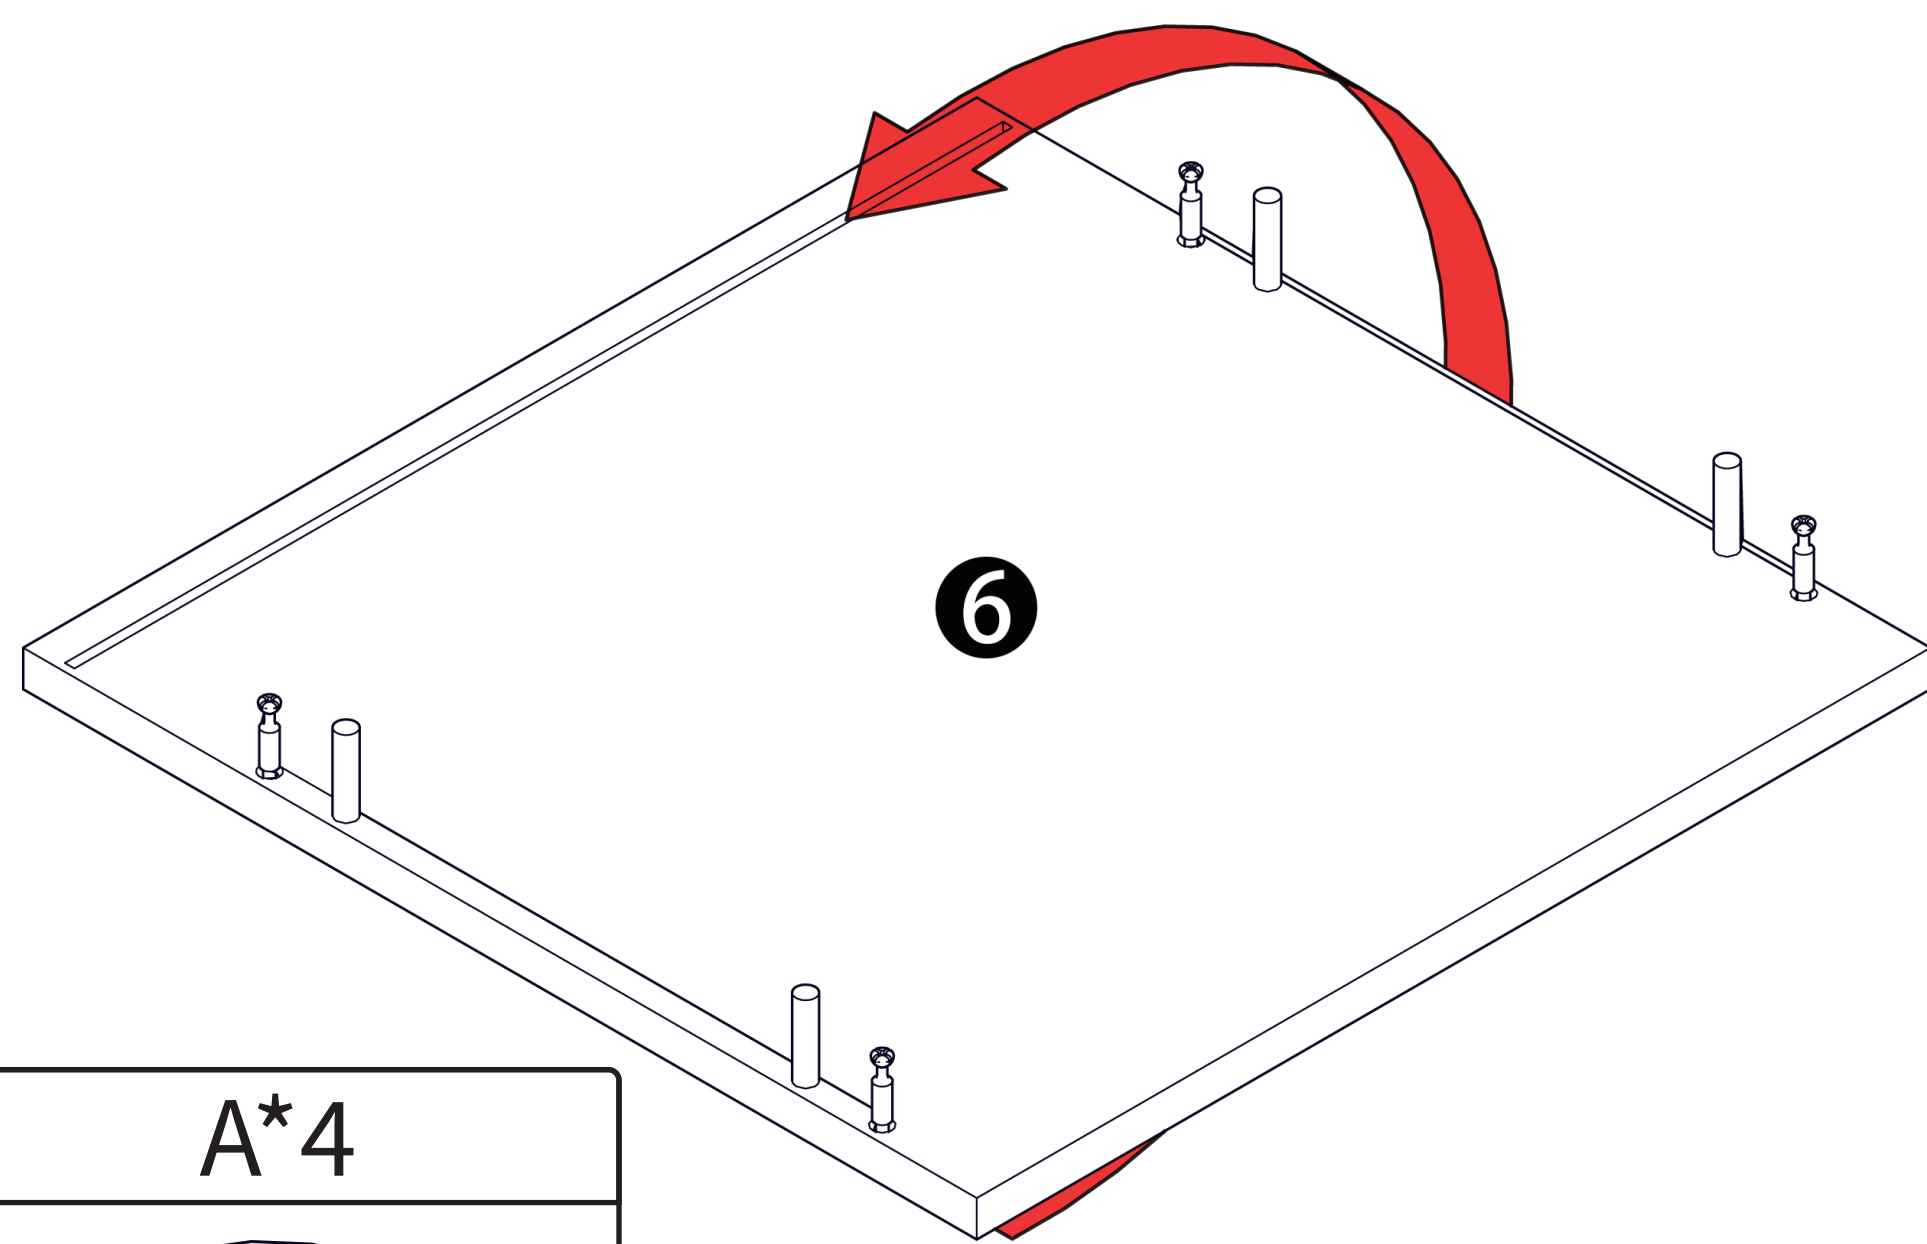

A*4

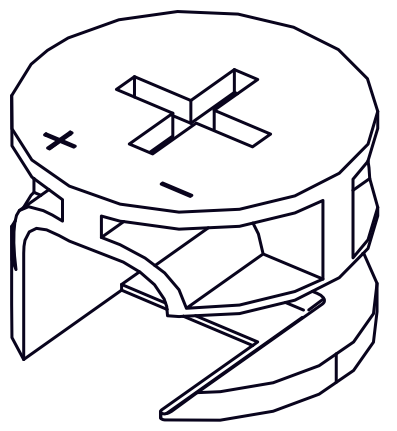 


Cam wheels

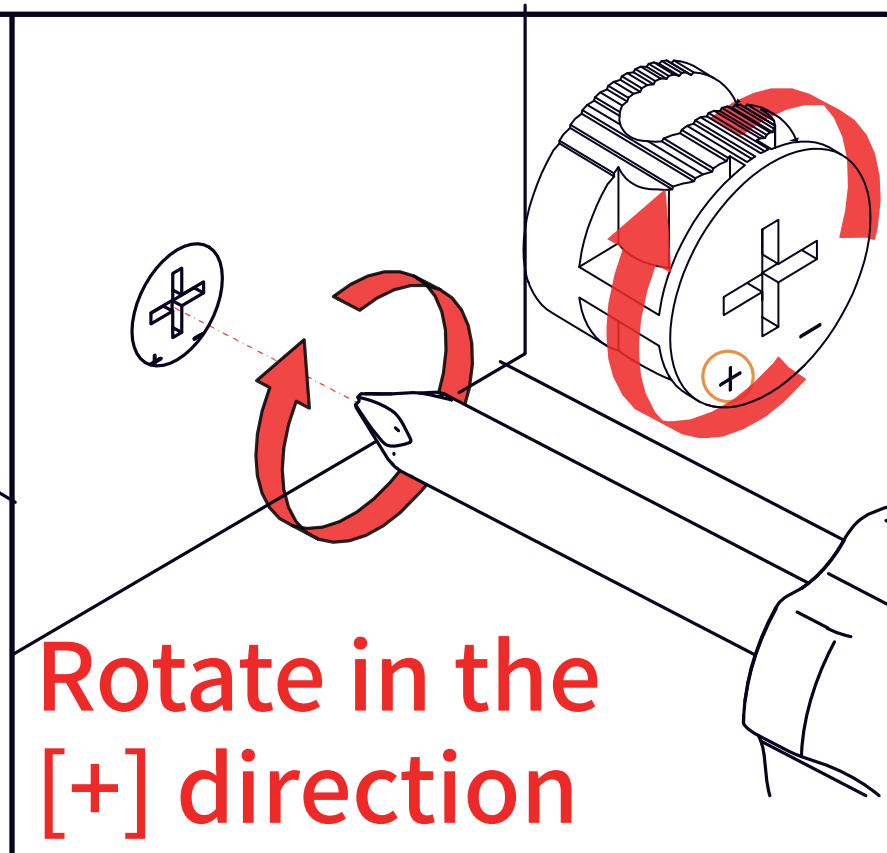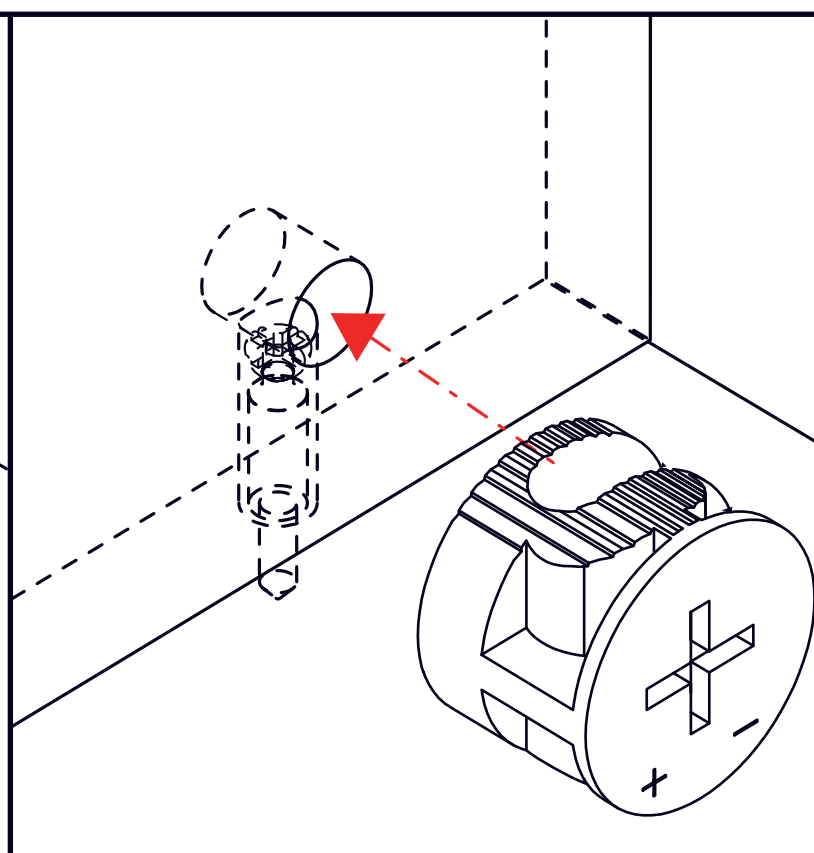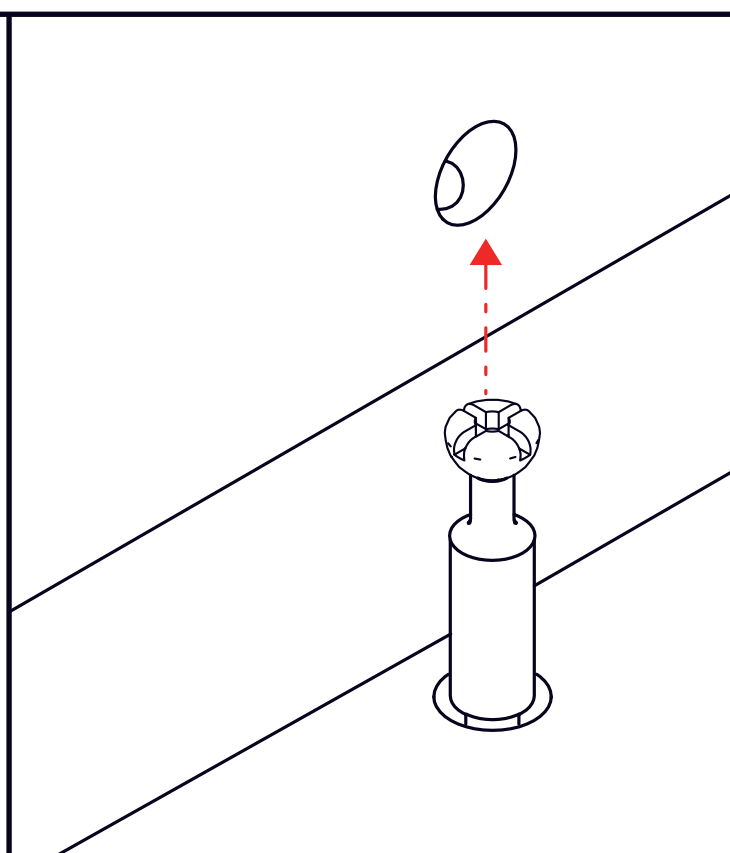   Cam wheel
Diagram

Rotate in the
[+] direction


7

 B*4

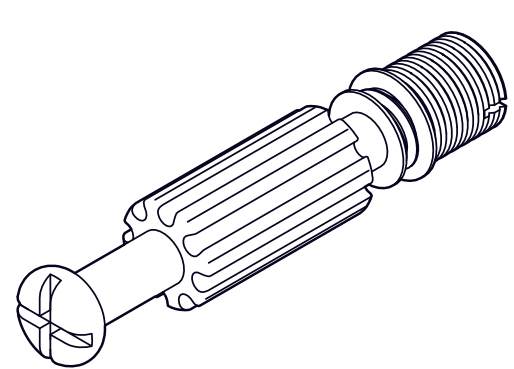


Cam bolts

 C*4

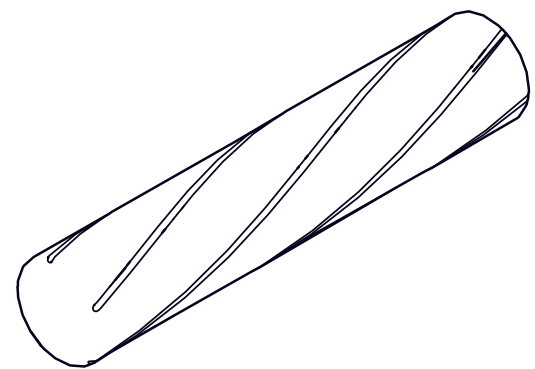


wooden dowels

 As shown in the figure,
hammer the black Cam
Nut (B.1) into panel 6 first,
then use a screwdriver to
screw the cam bolt (B.2)
into the black Cam Nut.







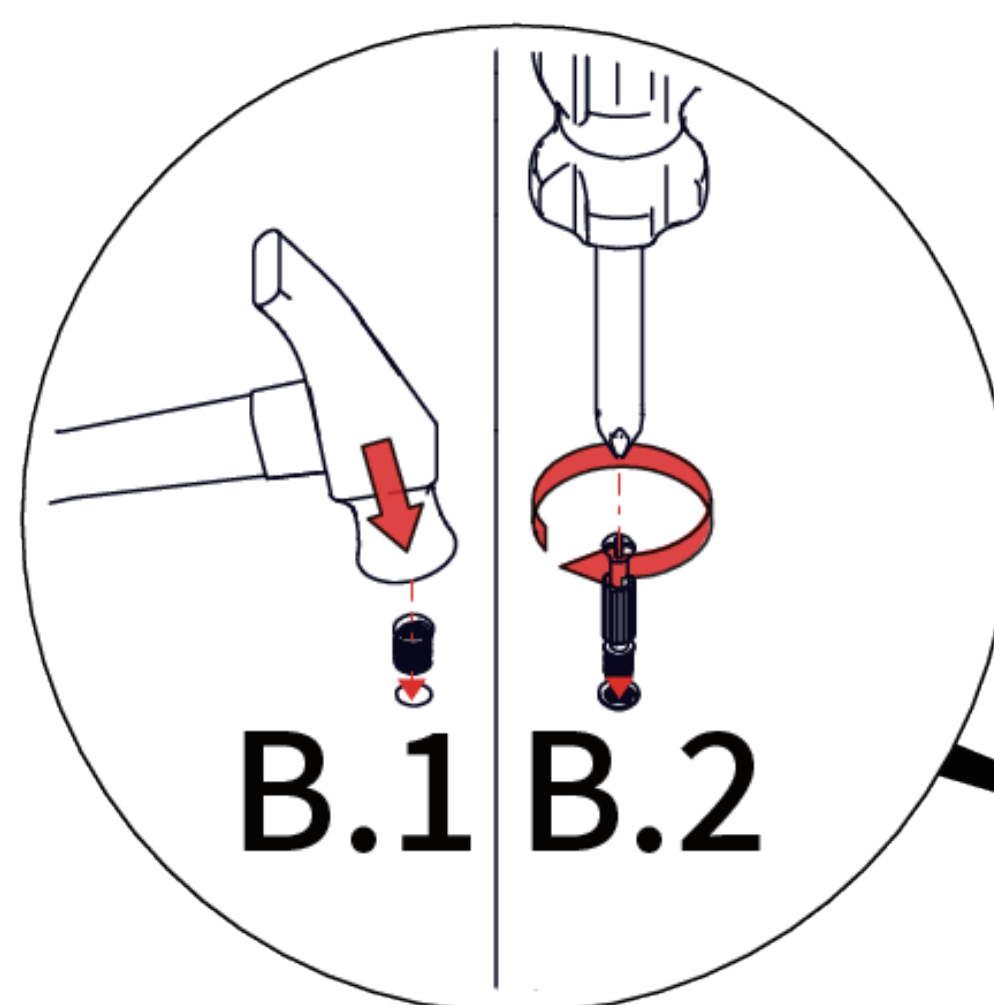


B.1 B.2

 Insert the wooden
dowels (C) into panel 6.

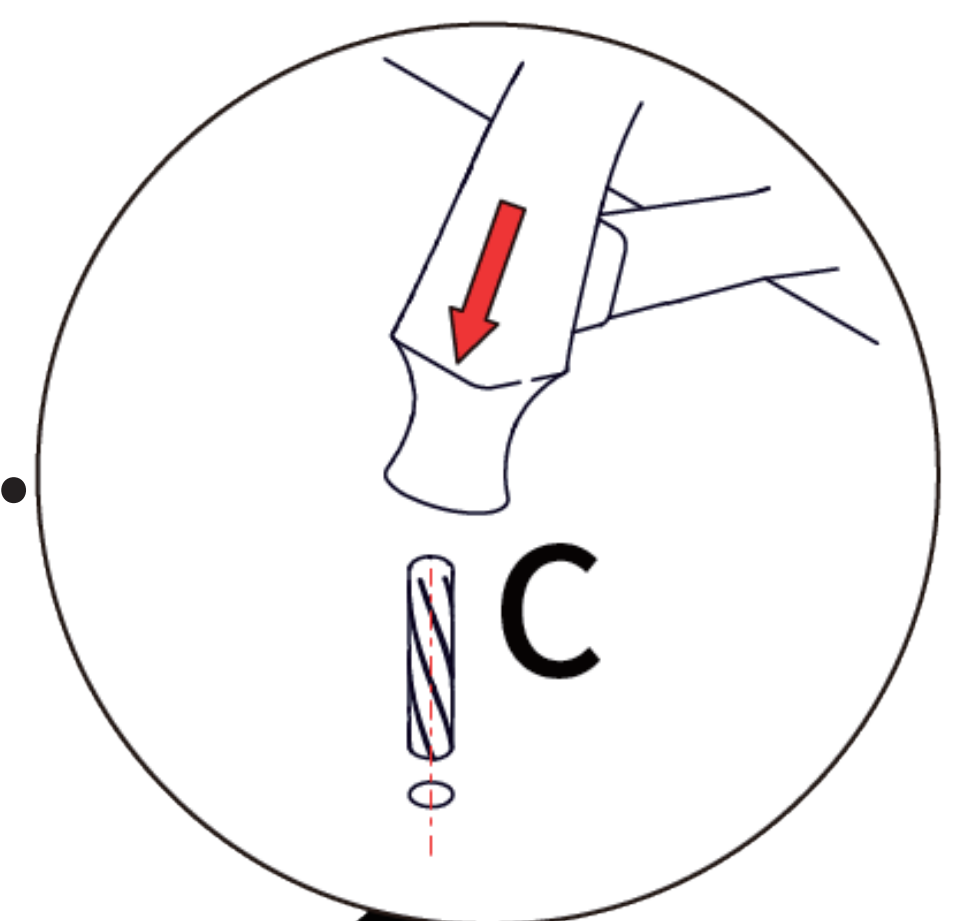










C B

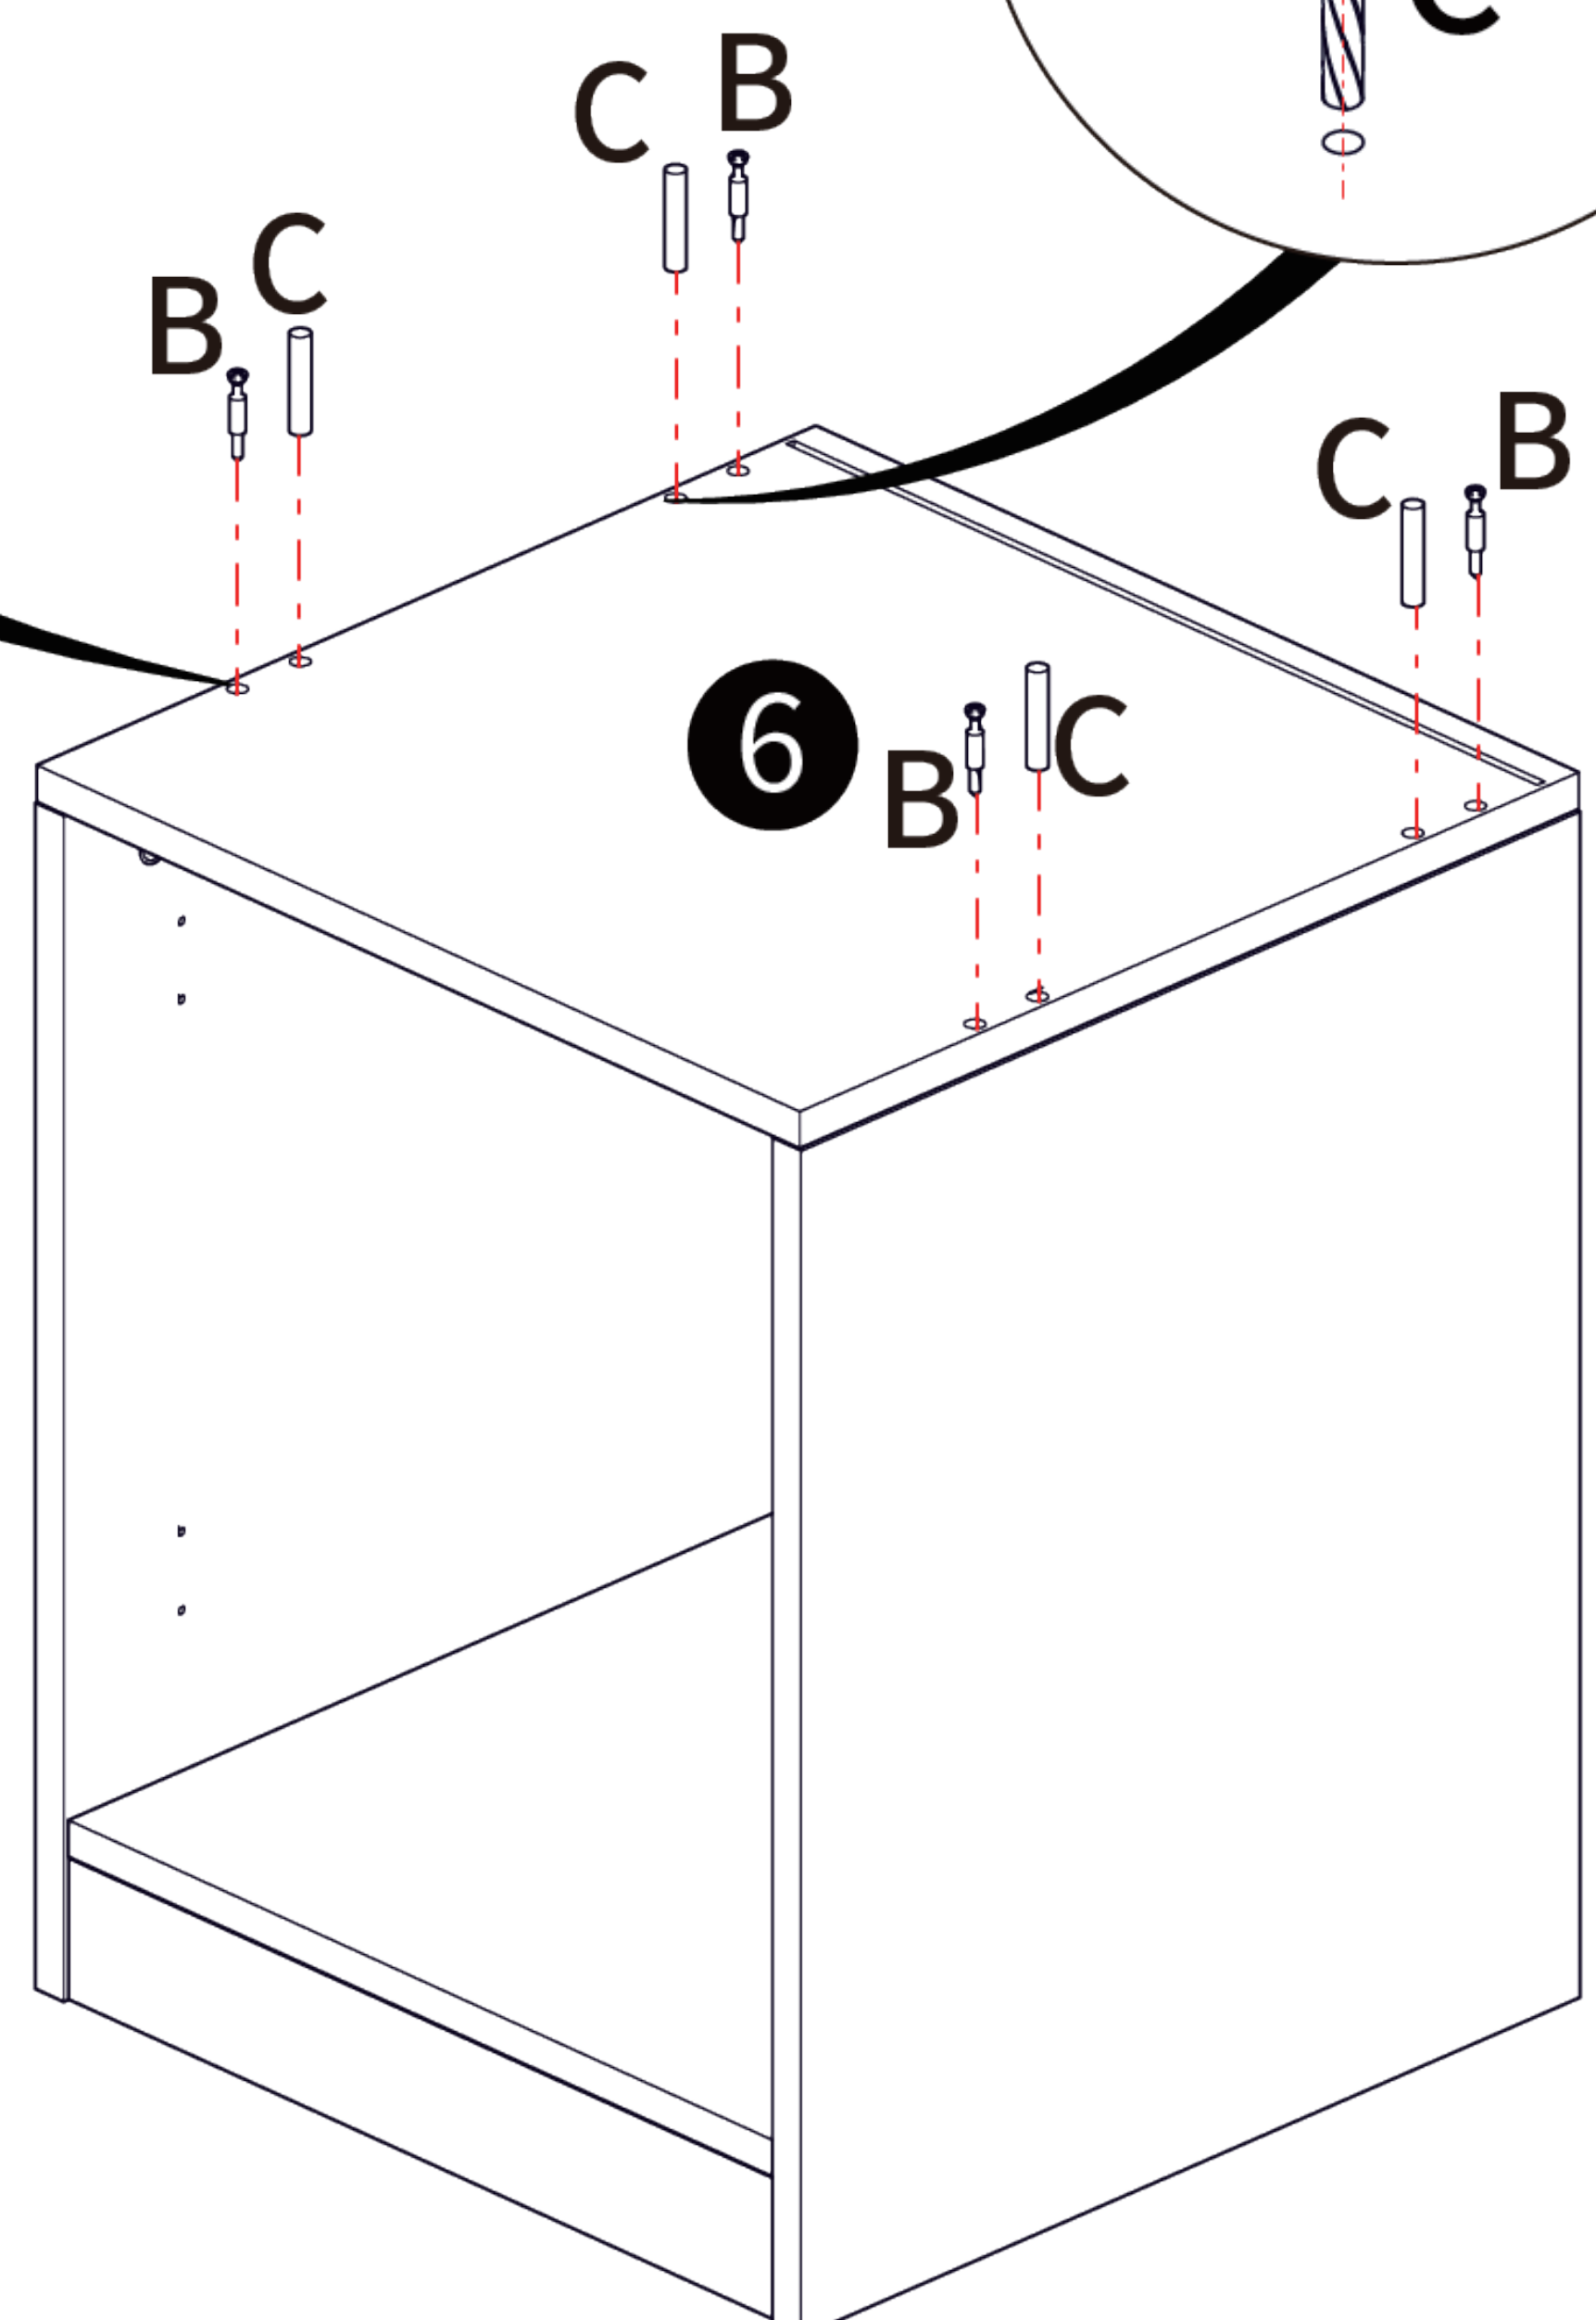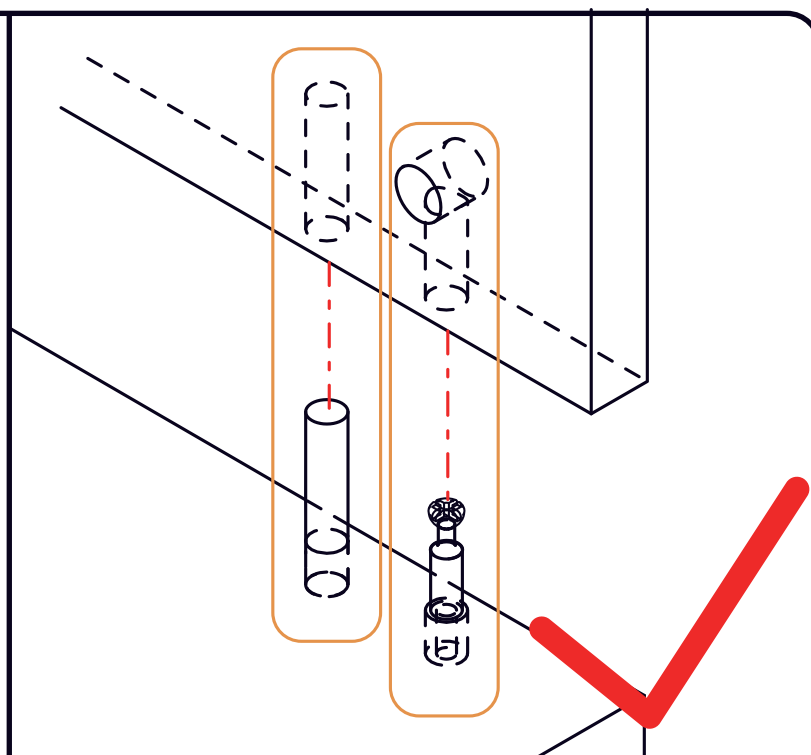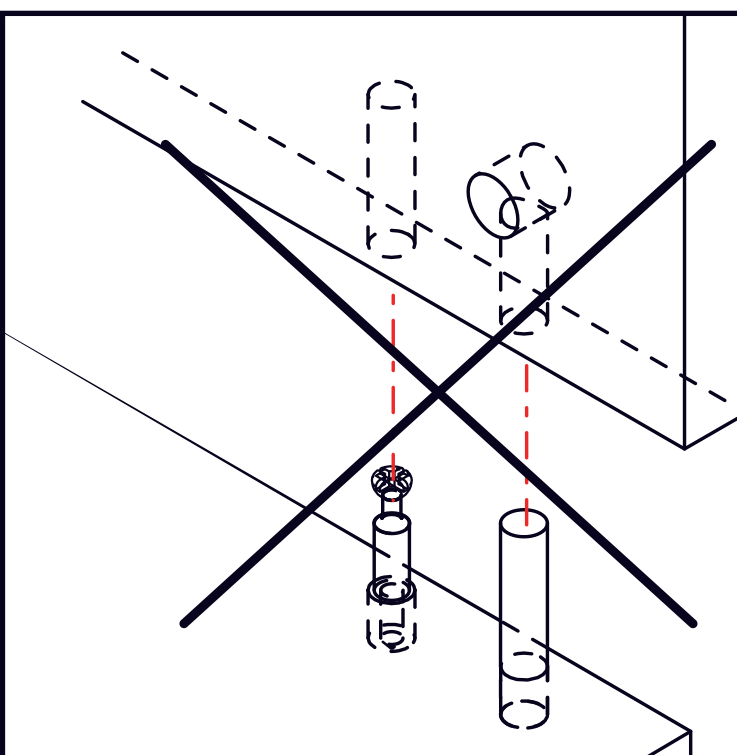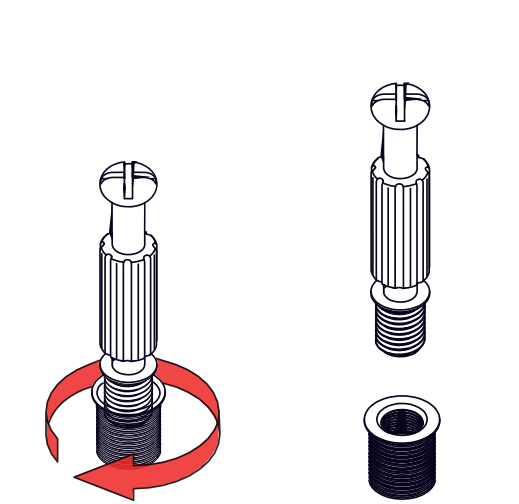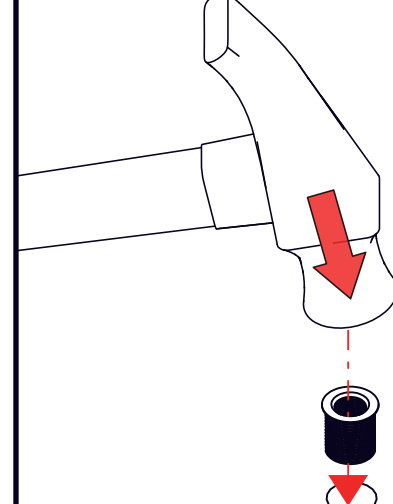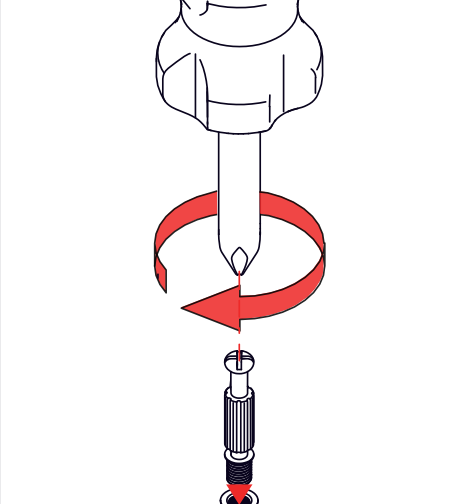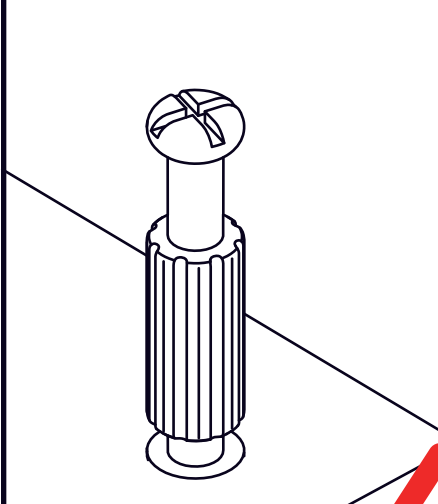       Wooden dowel
DiagramCam bolt
DiagramUnscrew the
Cam NutHammer into
the holeScrew in the
Cam Dowel

8


As shown in the figure, hammer the black Cam Nut (B.1) into panels 7 and 8, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

         Insert the wooden dowels (C) into panels 7 and 8.

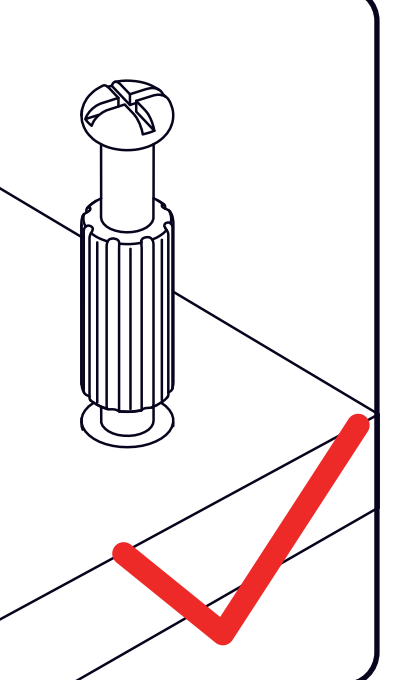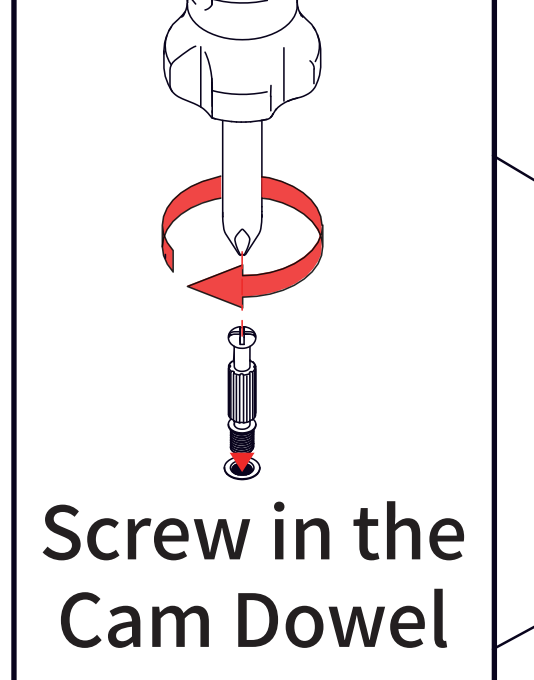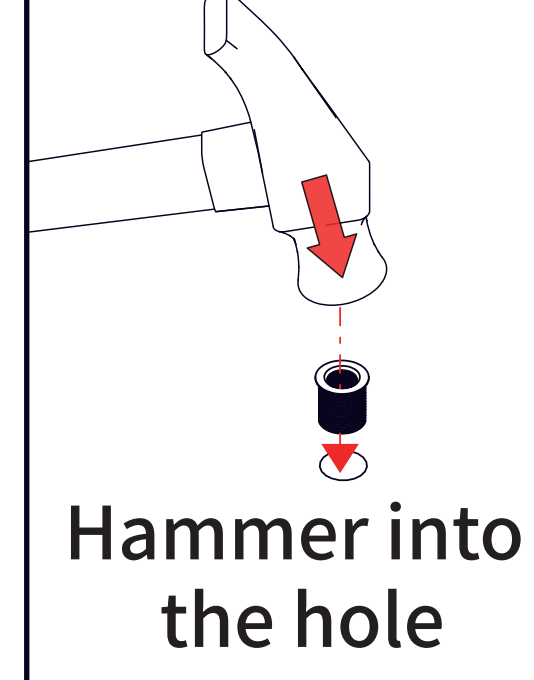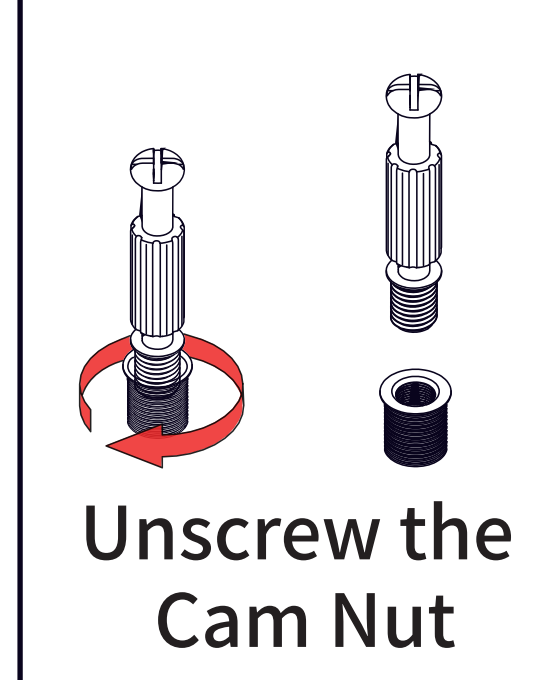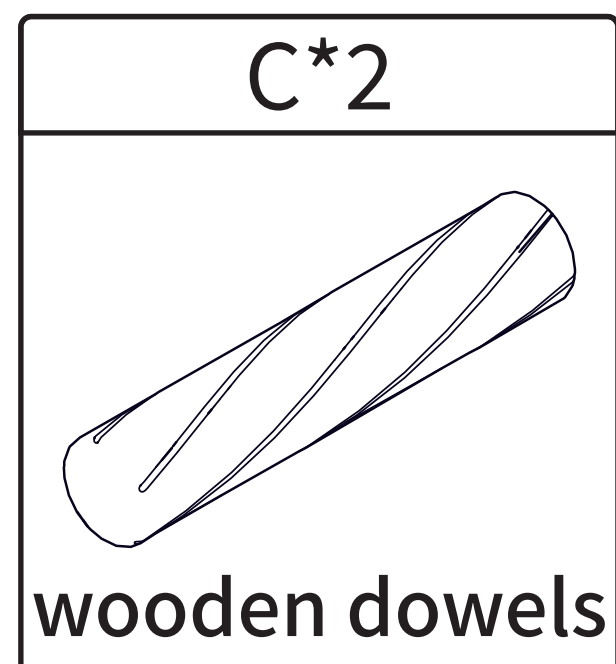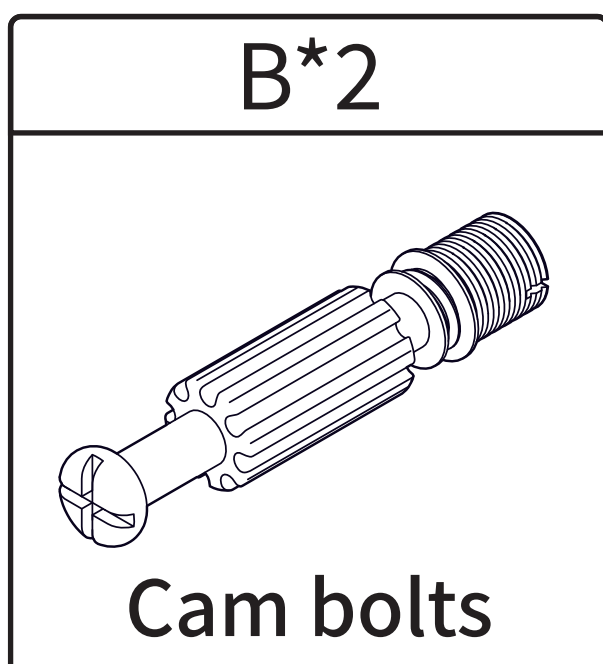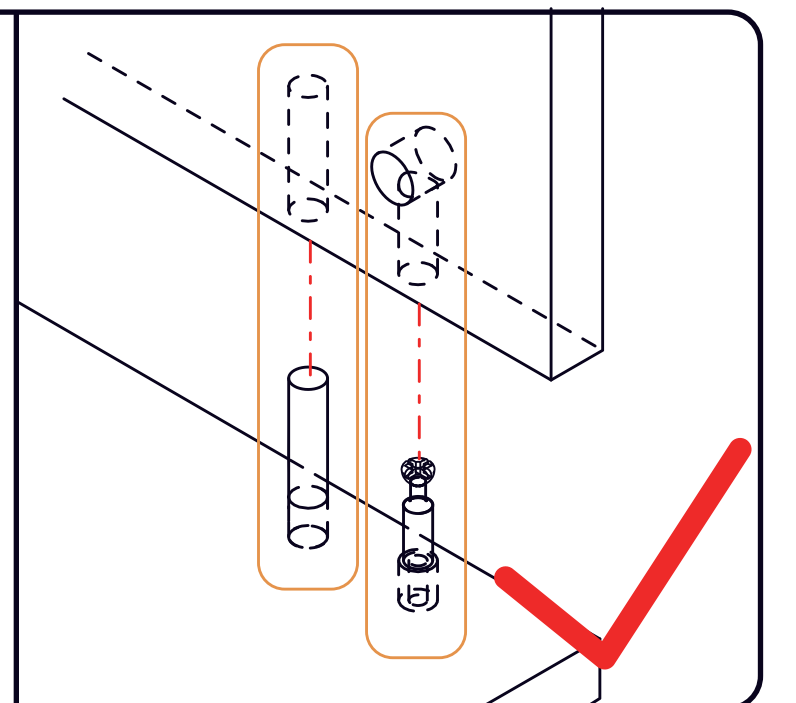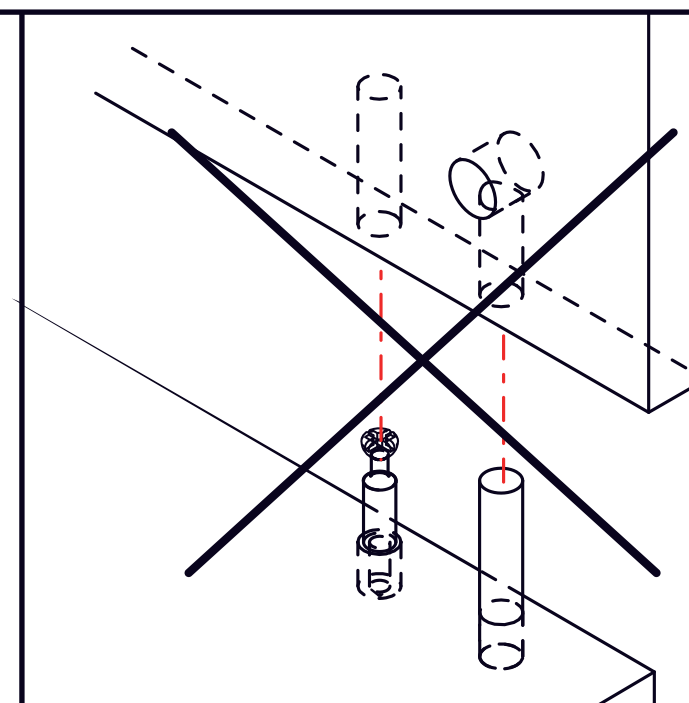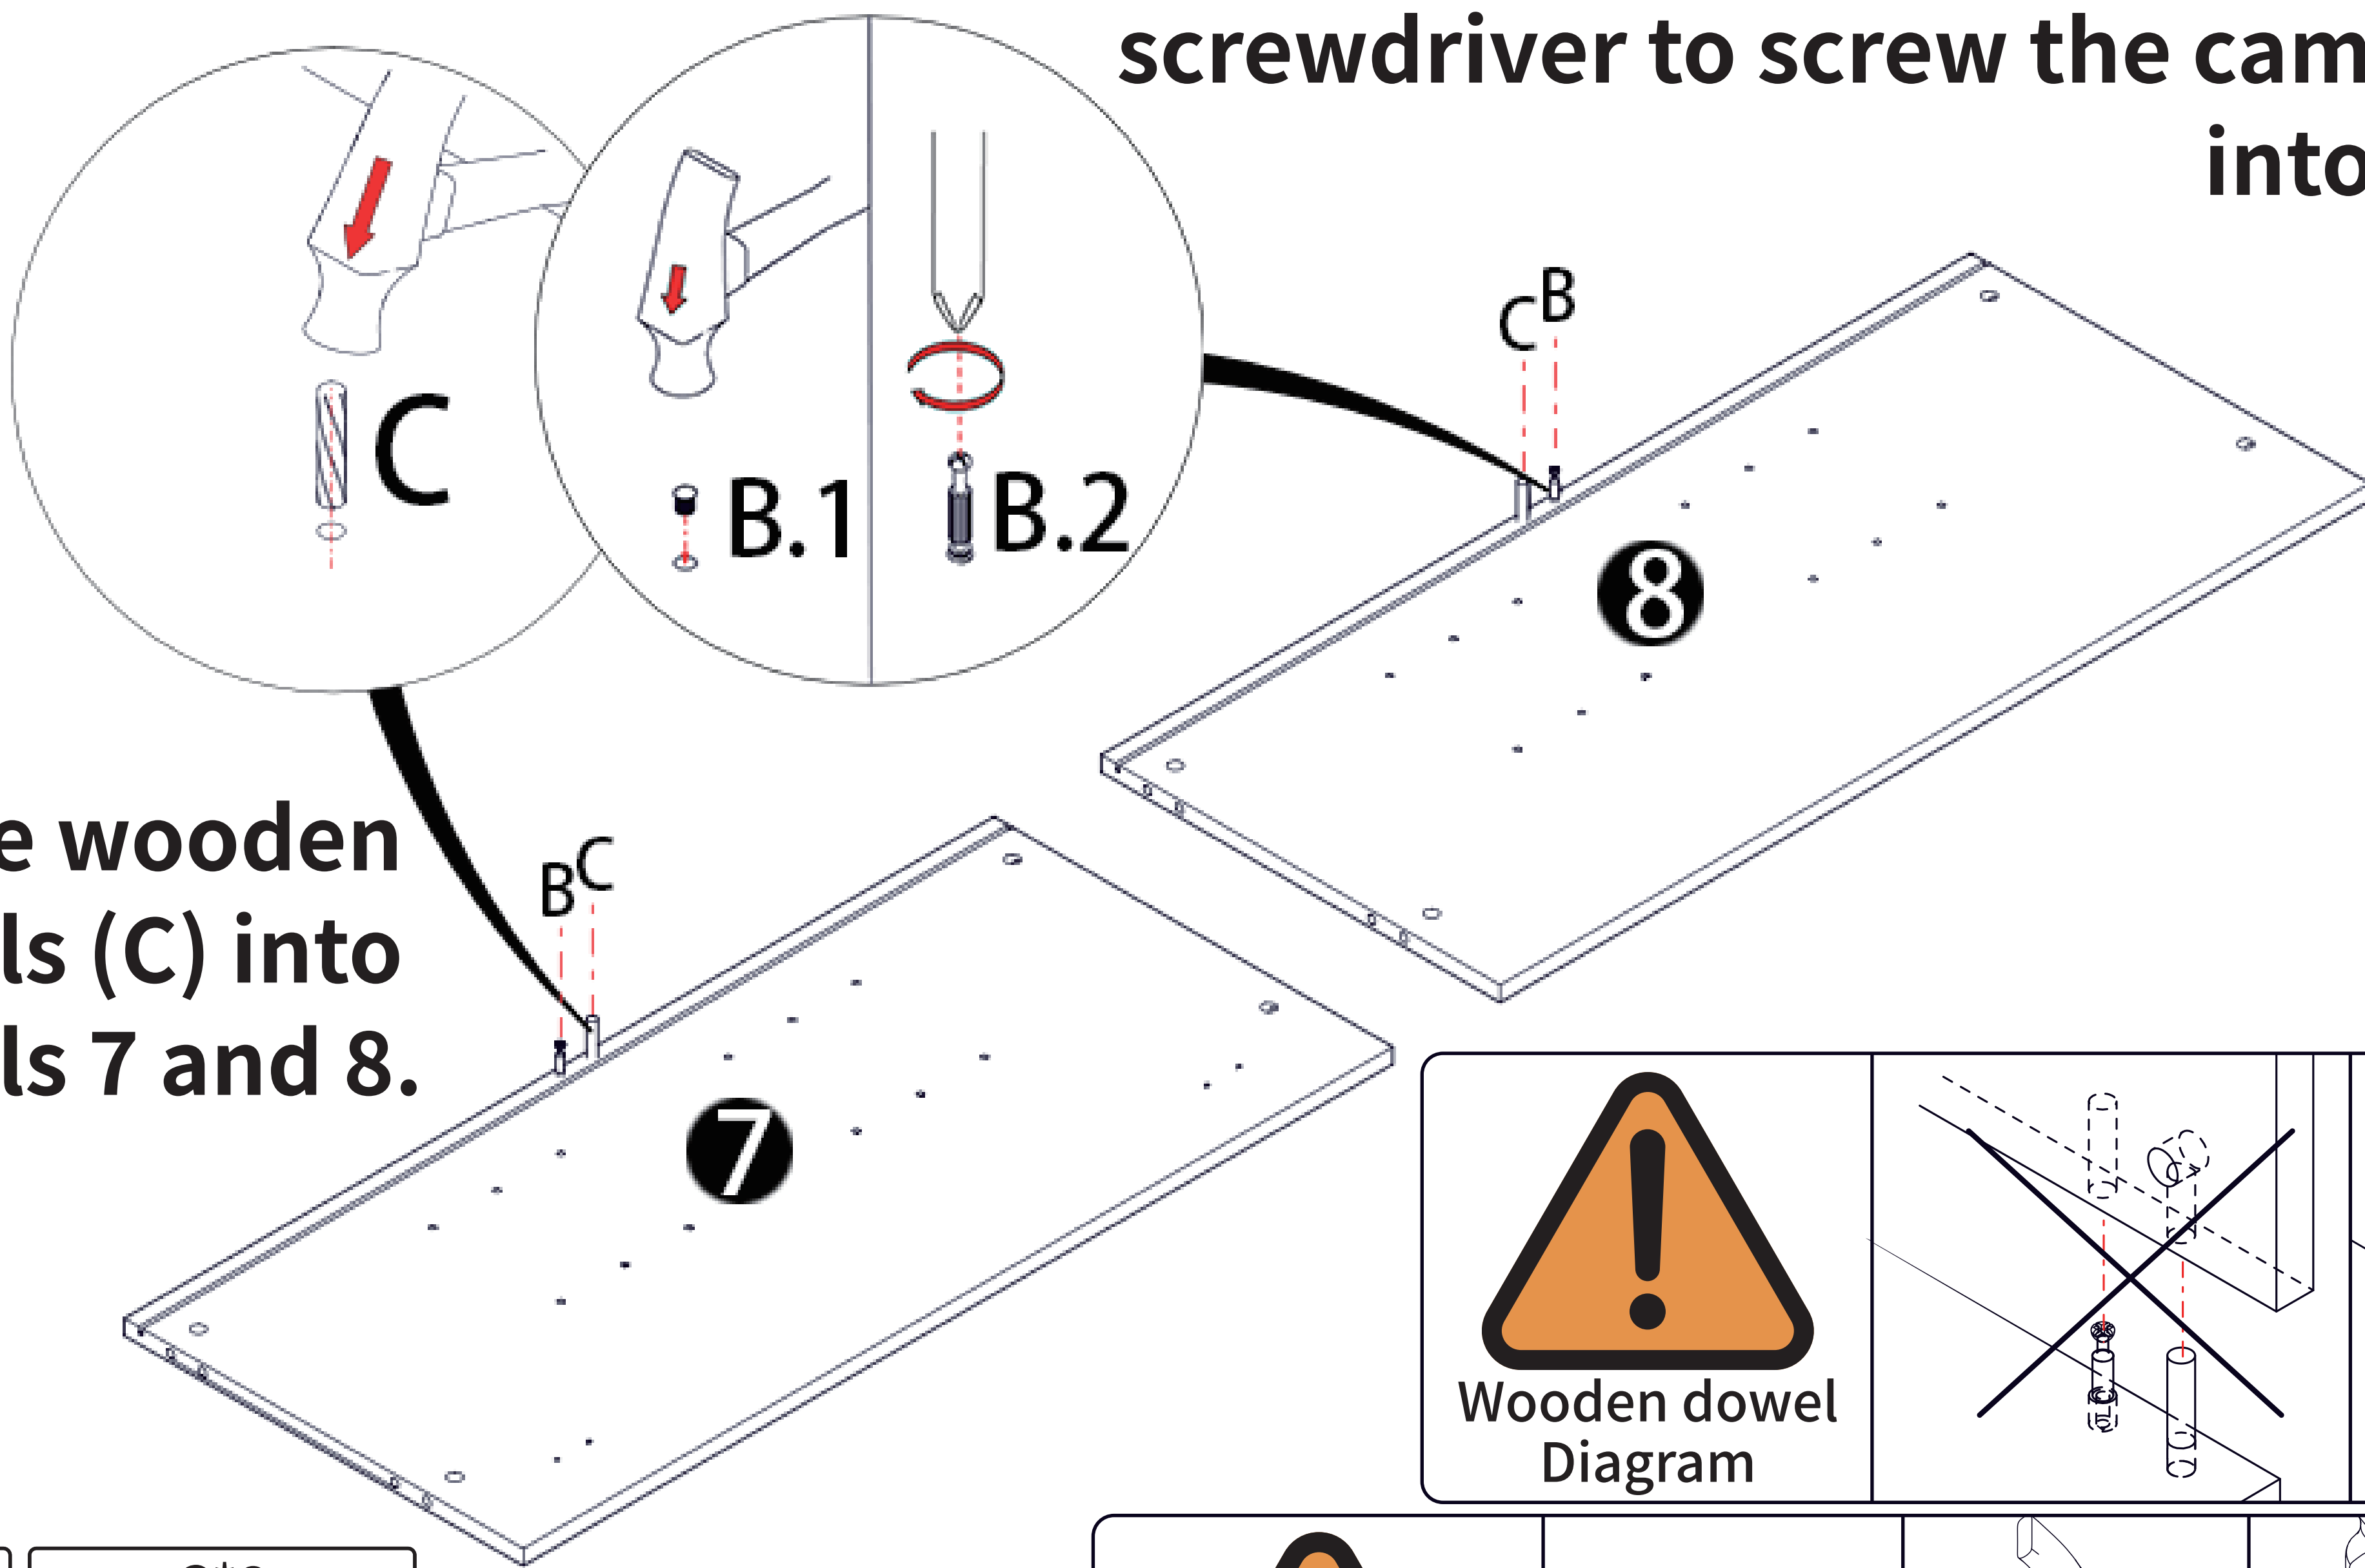


9



 
As shown in the figure, connect panel 11 to panel 7, and press the Cam wheel (A) into panel 11. Then rotate to tighten.

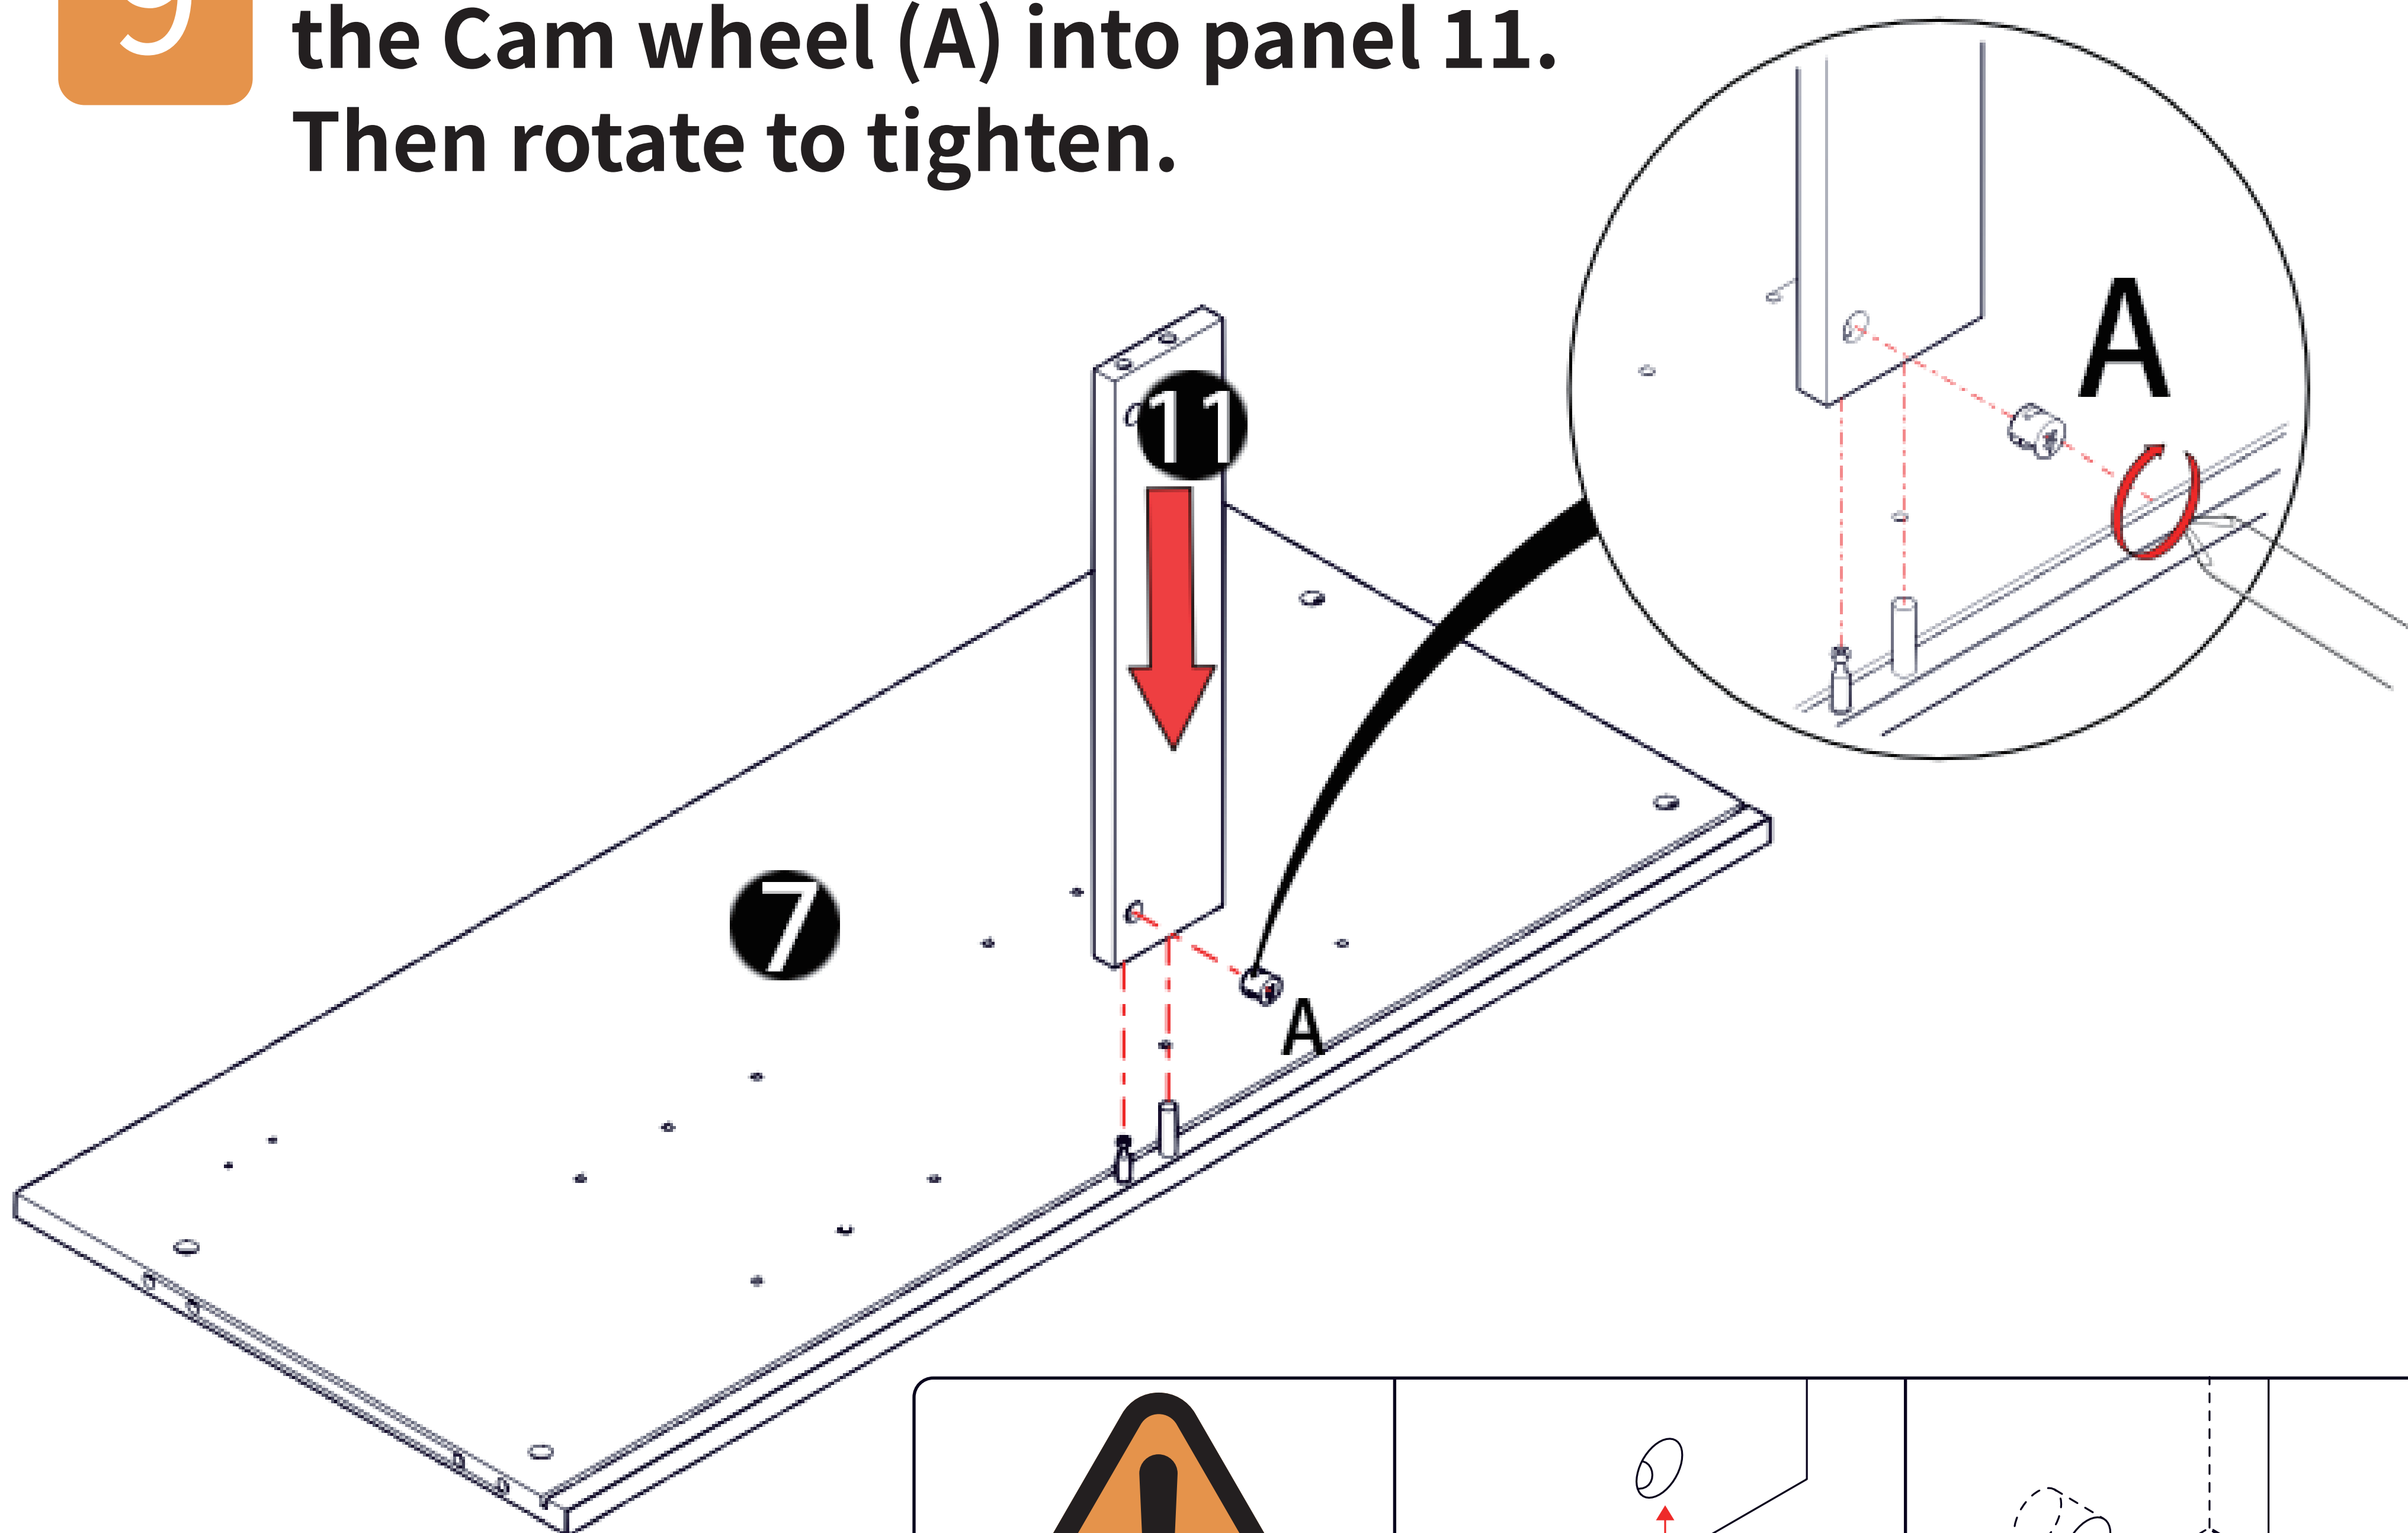

A*1

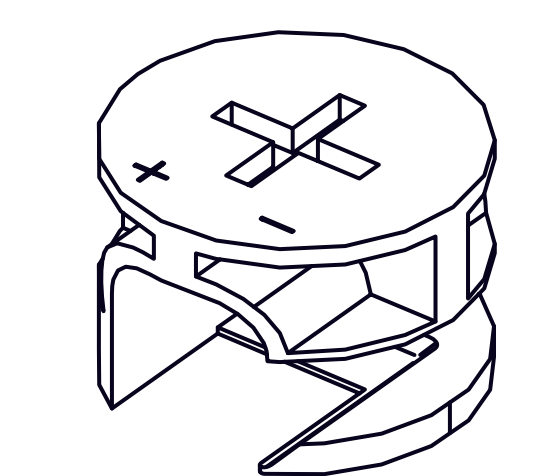 



Cam wheel

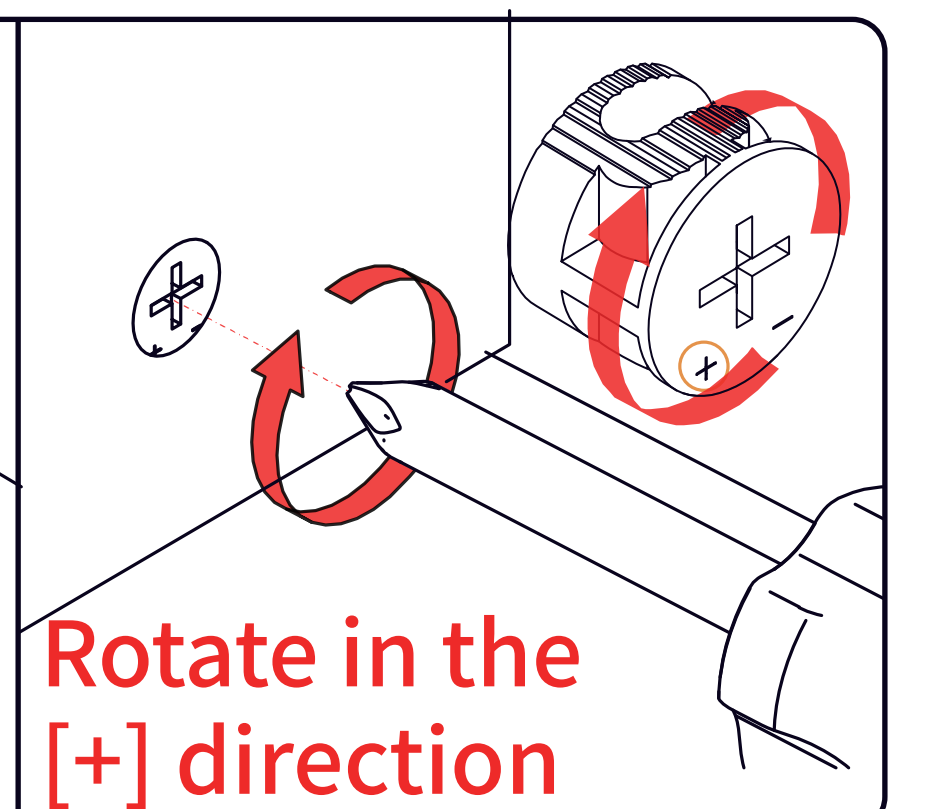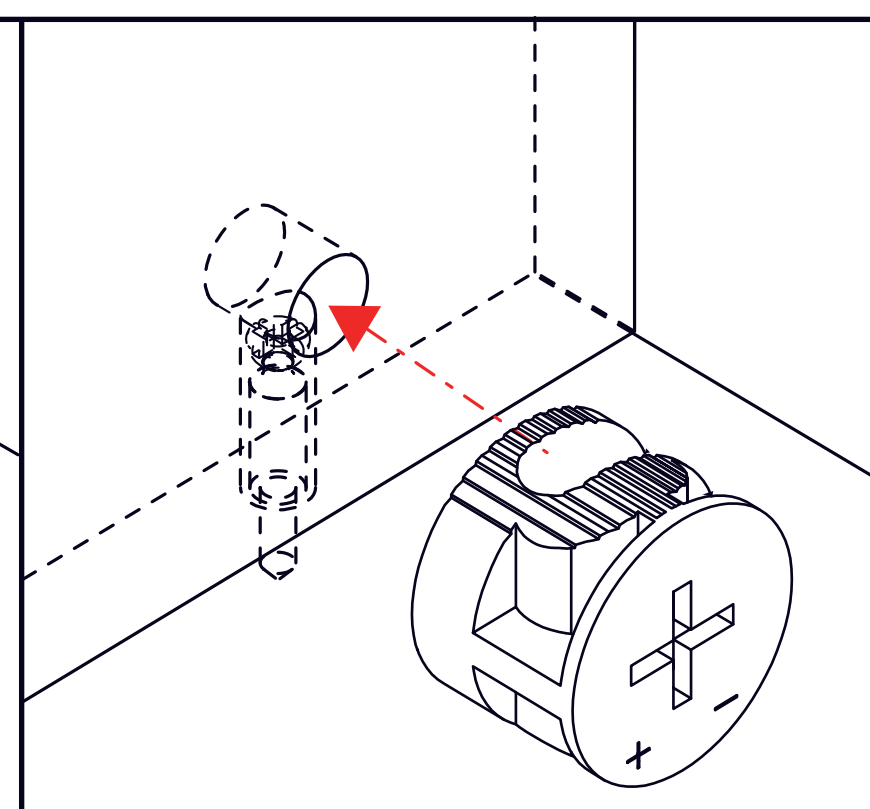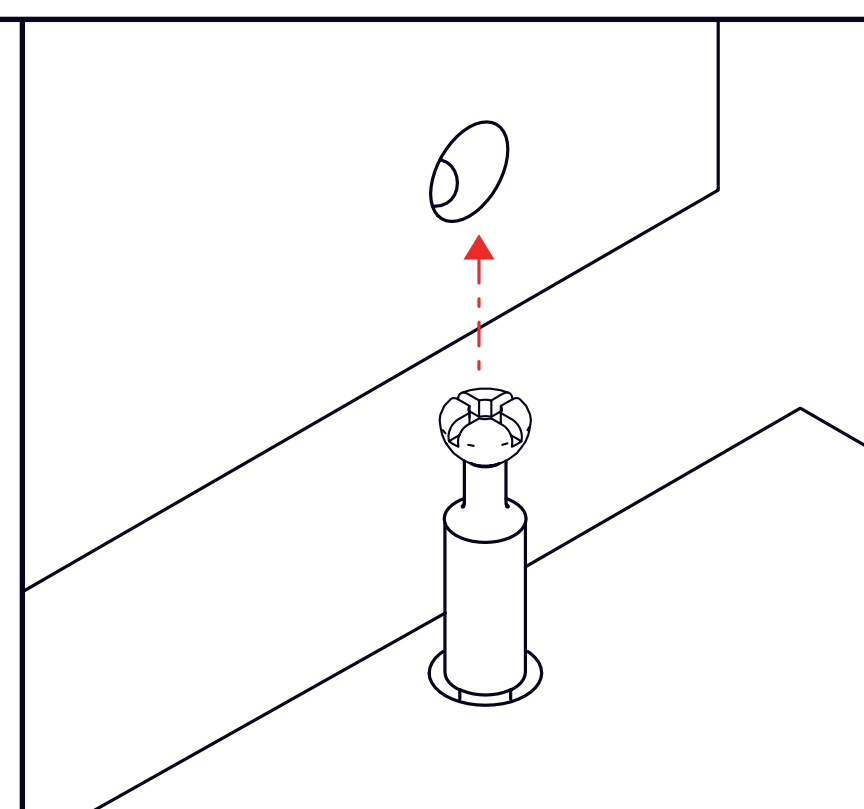   


10

then connect panel 8 to panels 7 and 11, and
press the Cam wheel (A) into panel 11.
Then rotate to tighten.

  First rotate the cabinet 90°

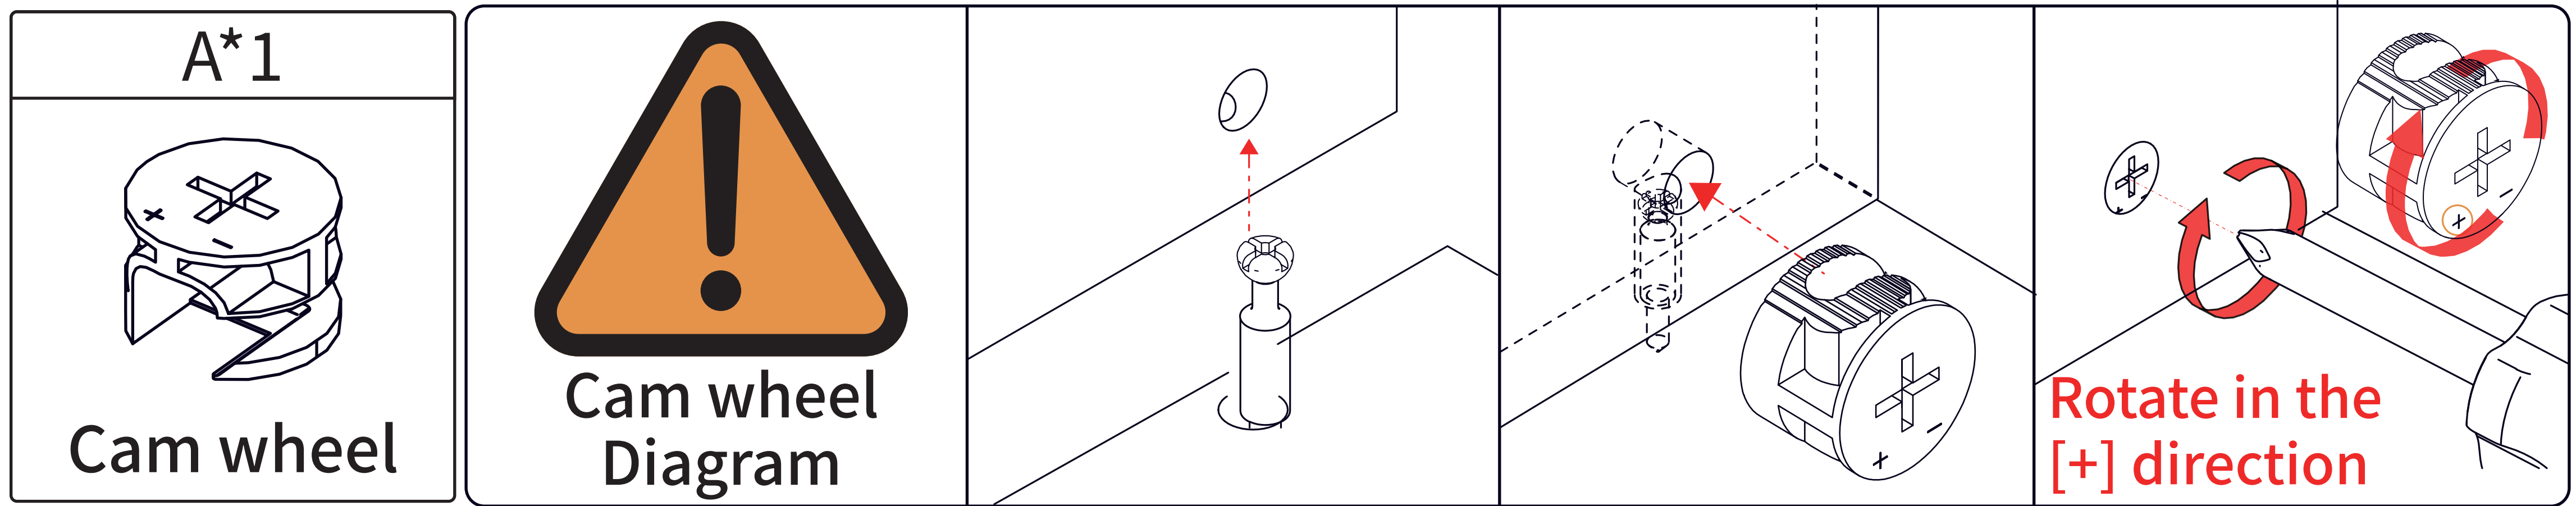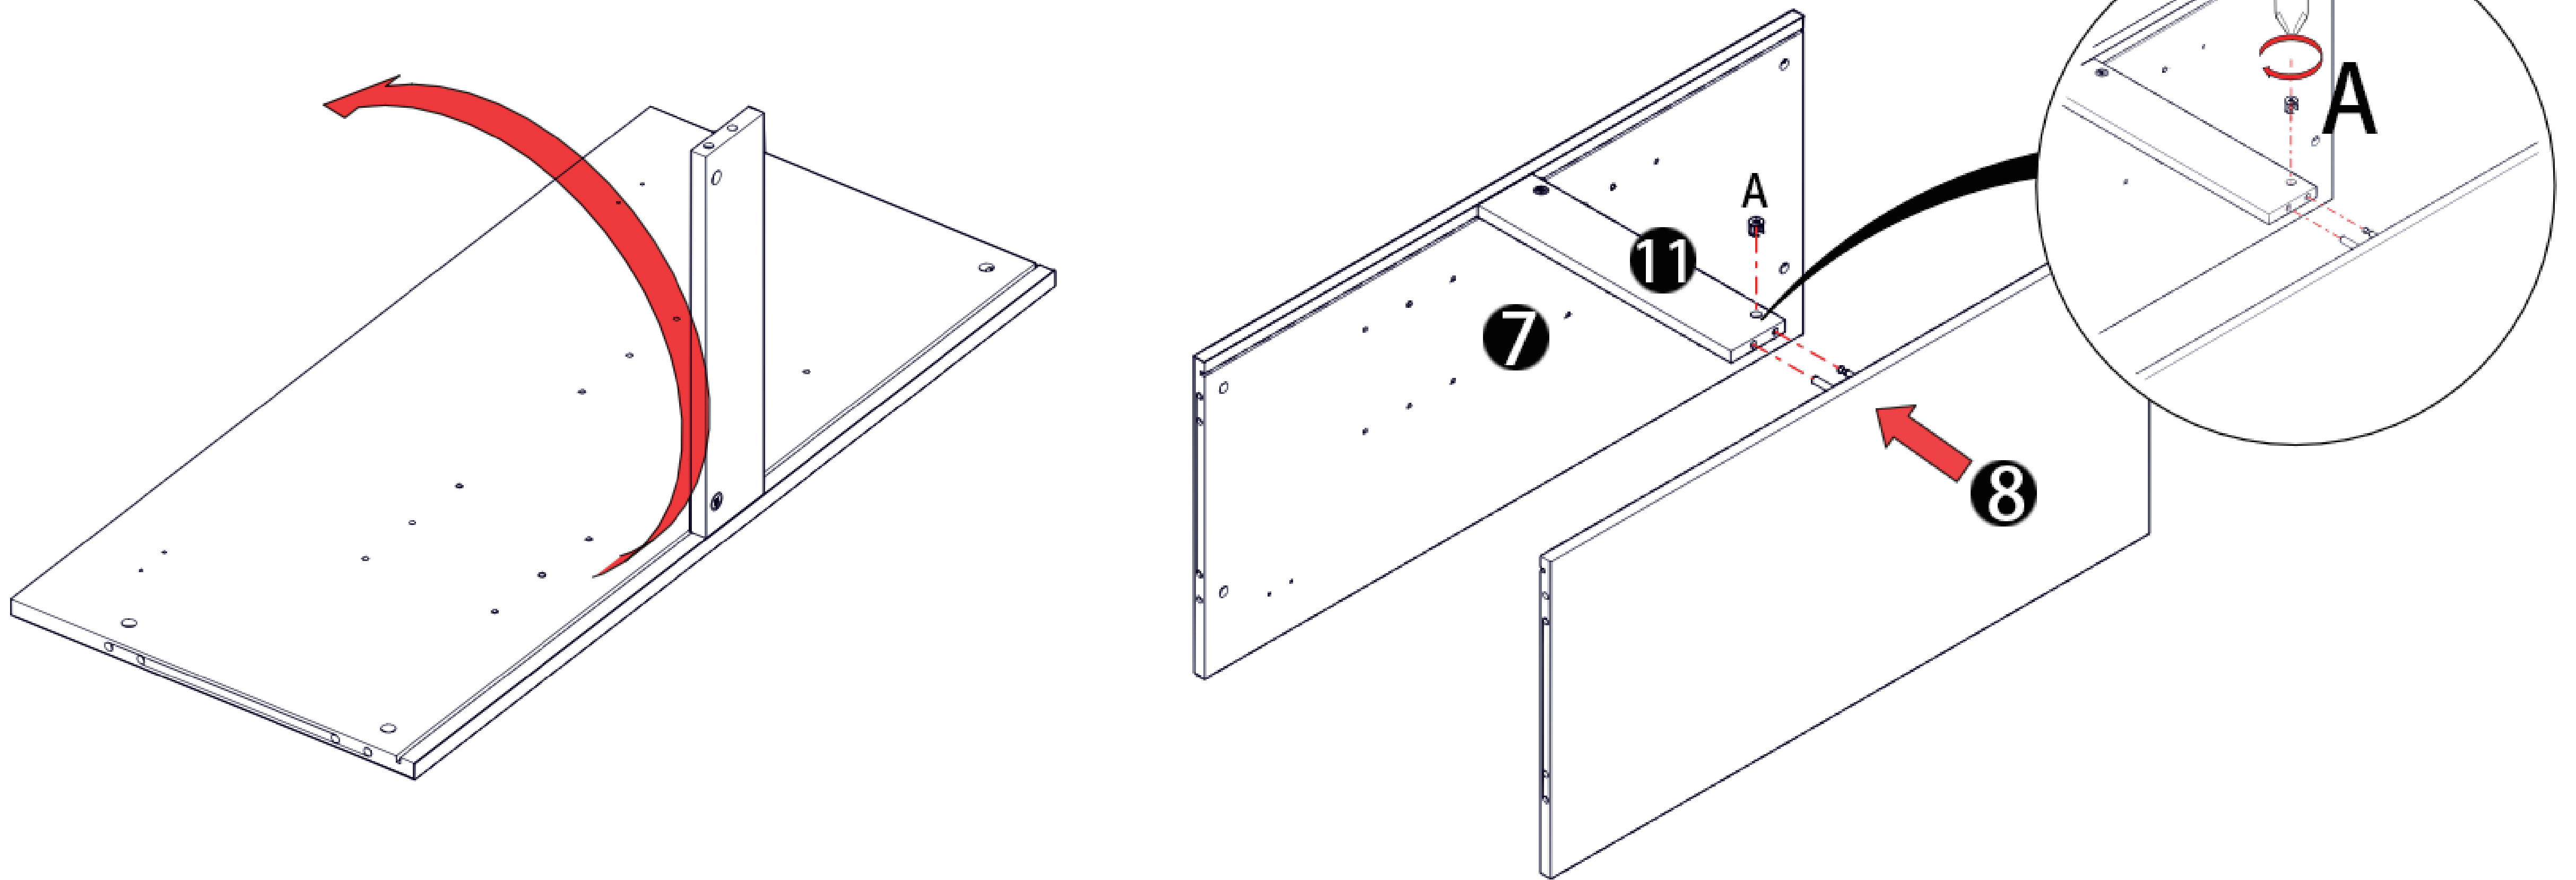


11

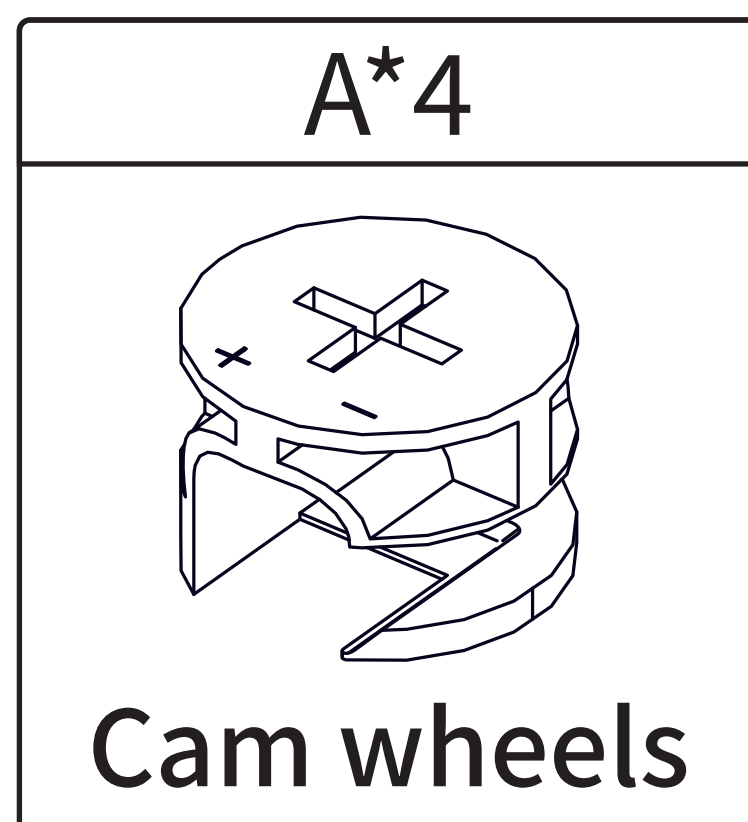 


then connect panel 7, 8, and 11 to panel 6,
and press the Cam wheel (A) into panel 7 and 8.


 
First rotate the cabinet 90°

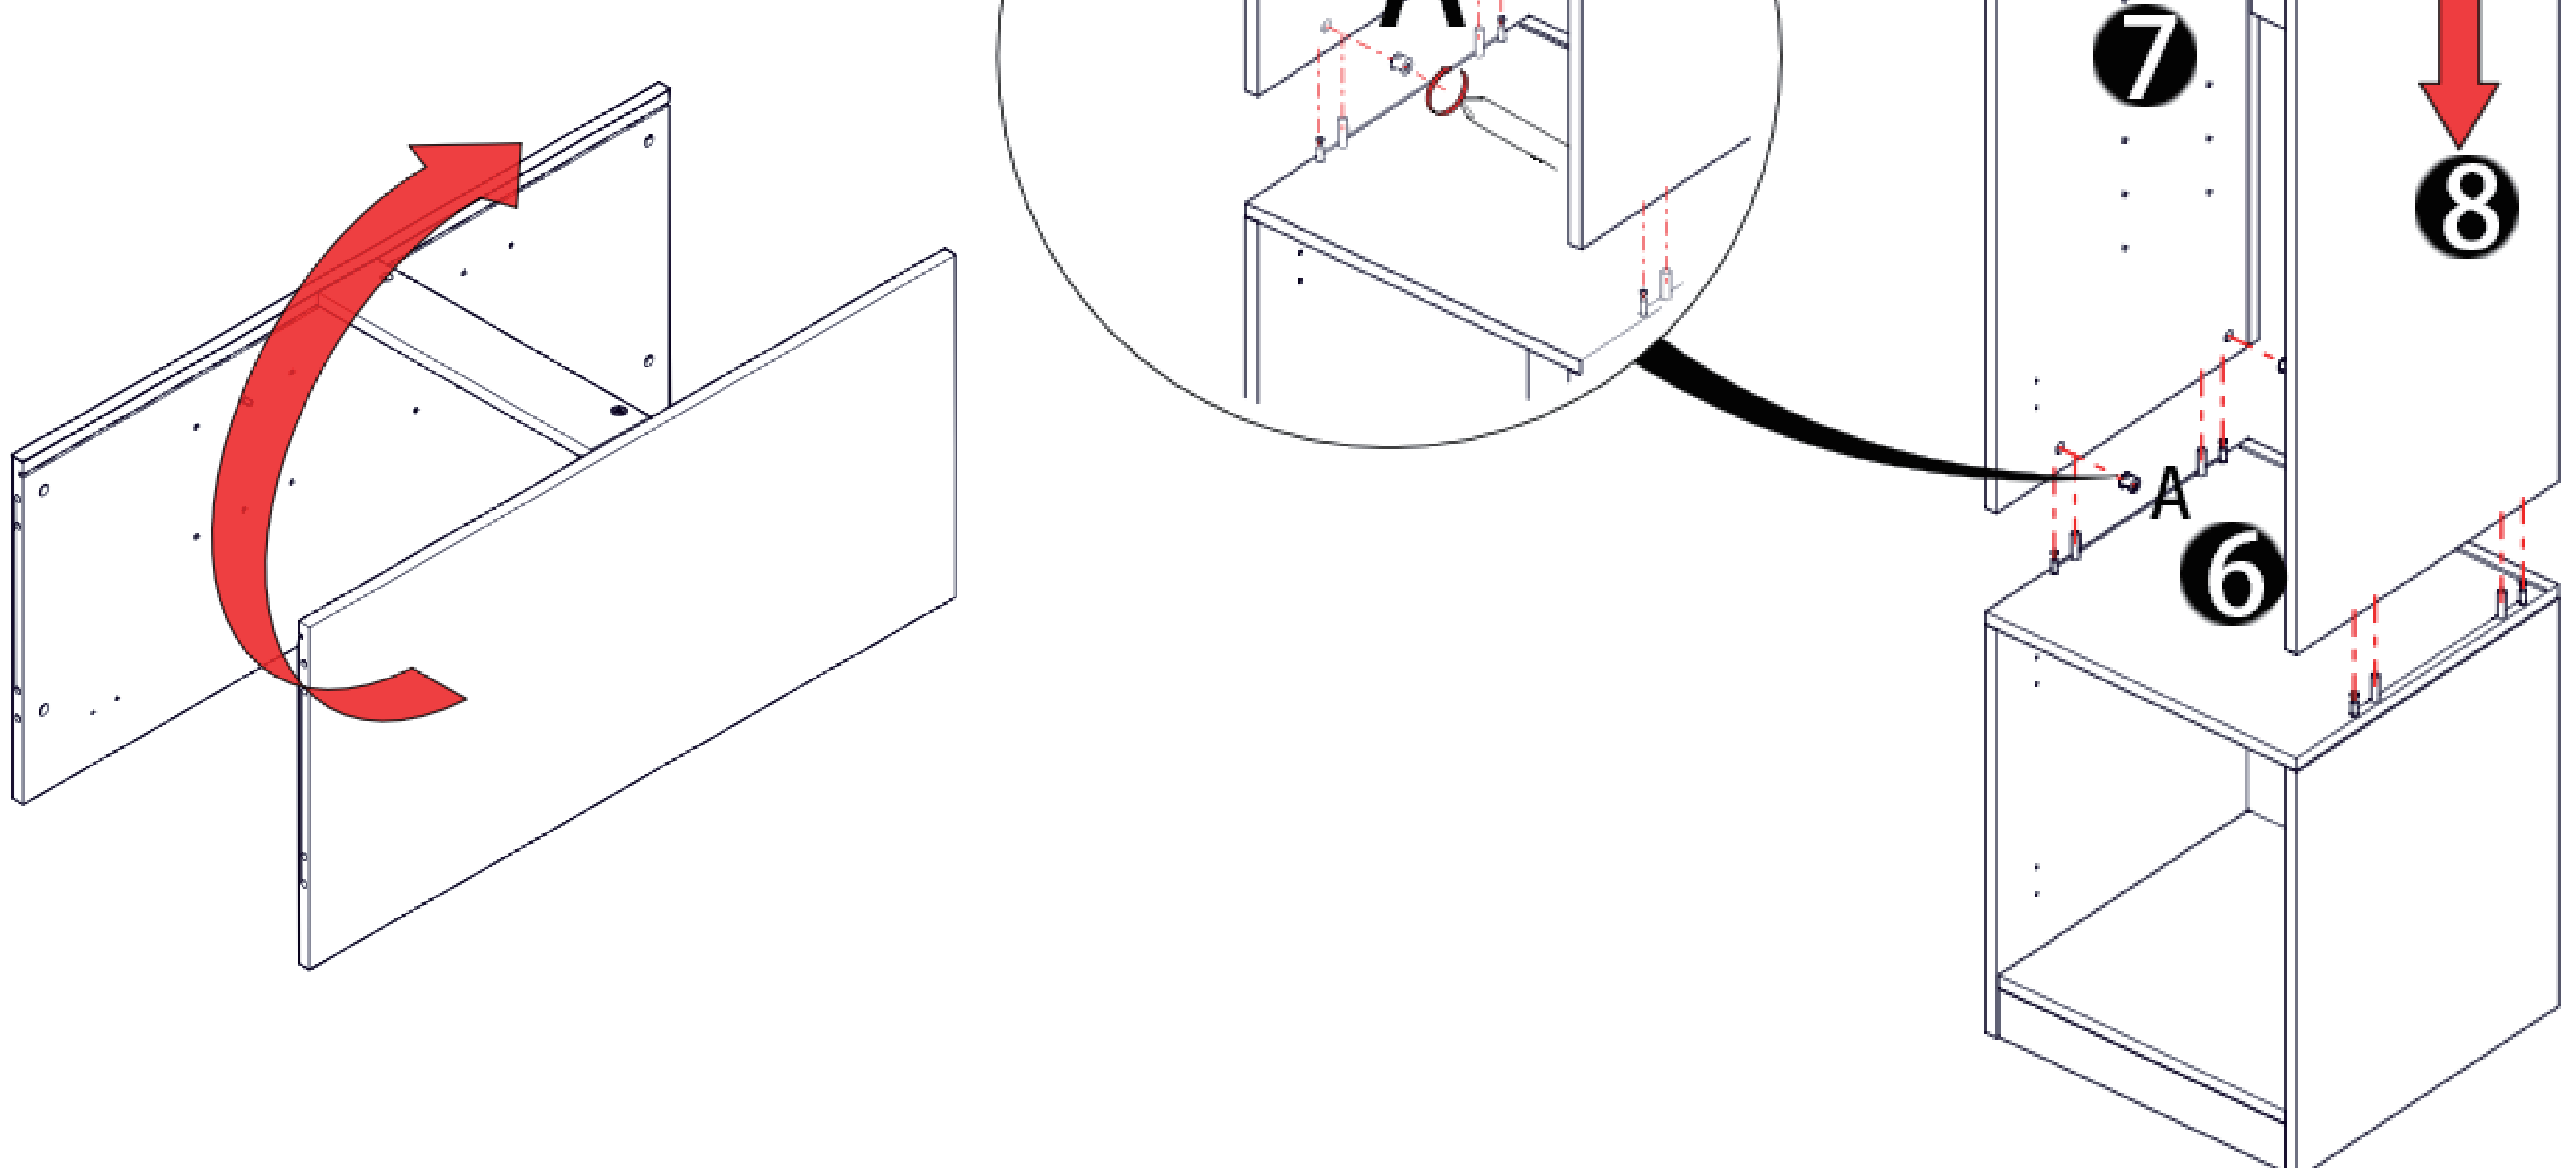

12

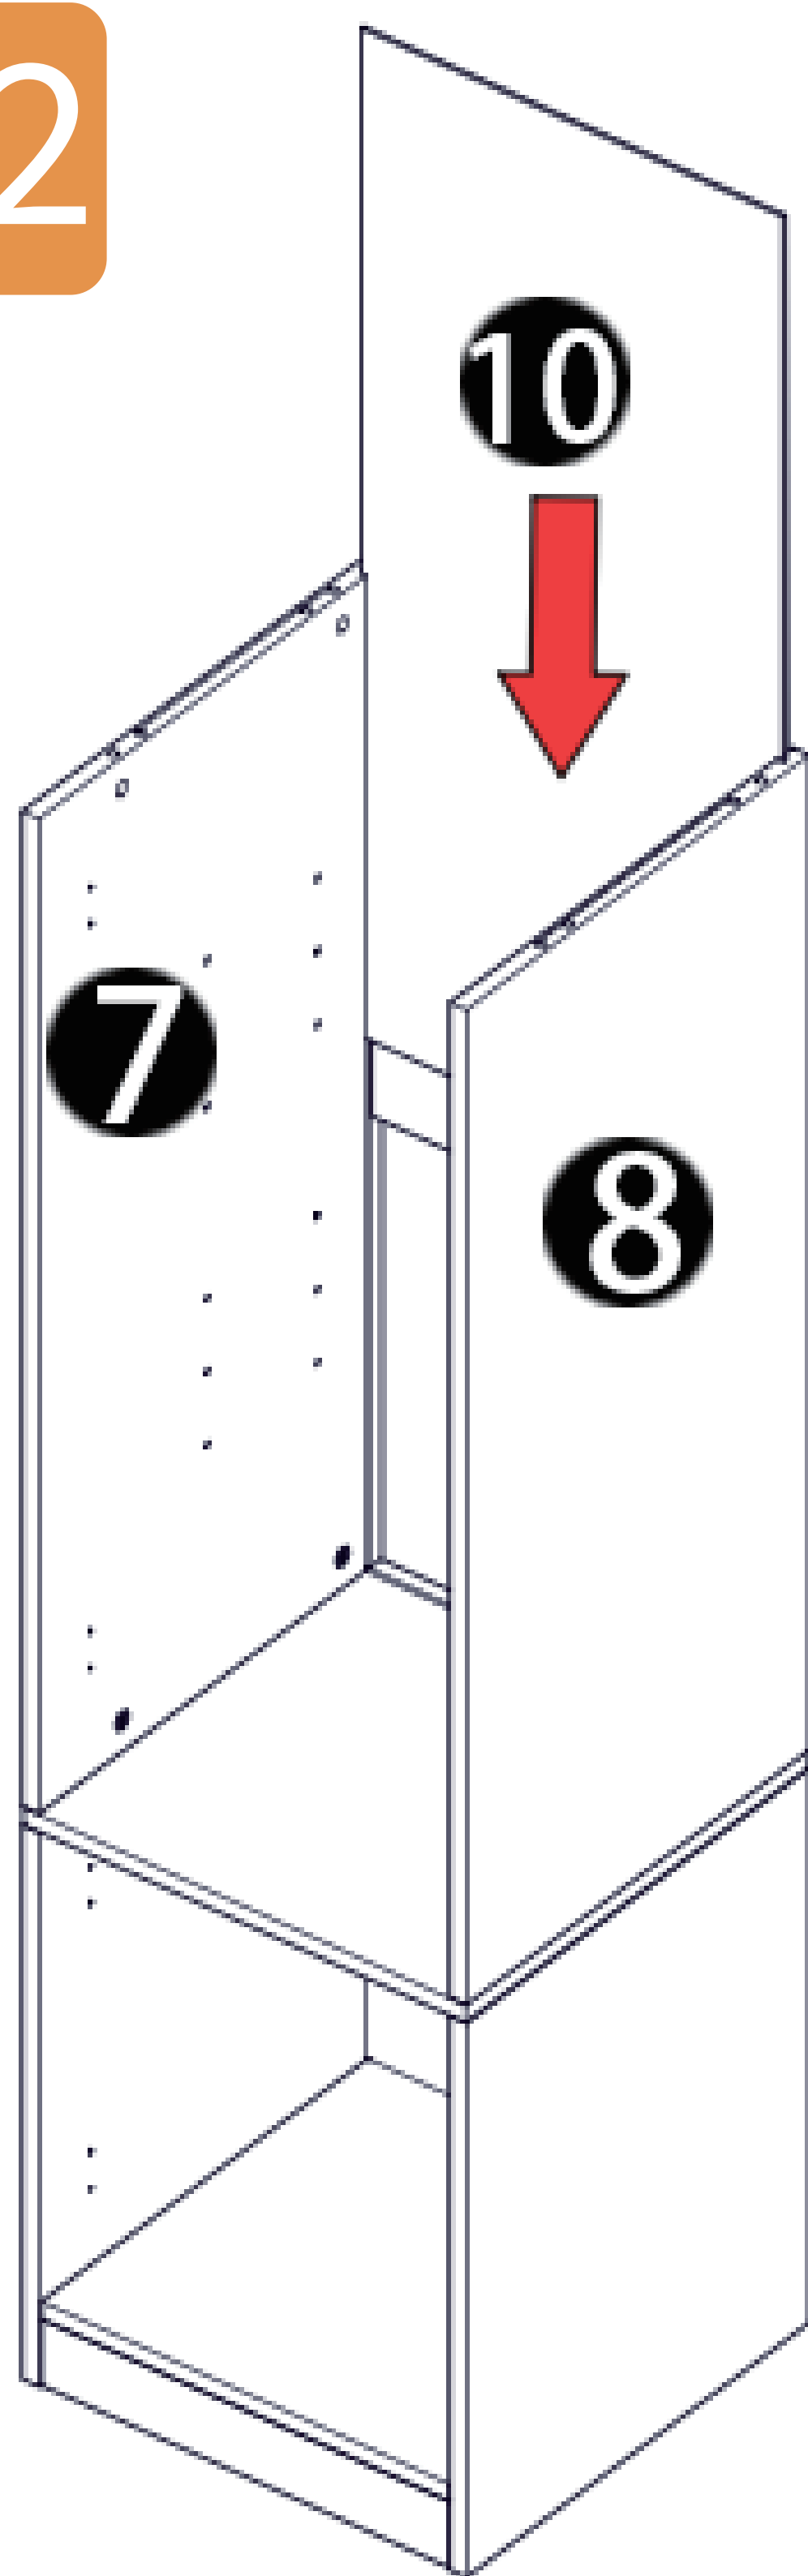 


  As shown in the illustration,
insert Back Panel 10 along the groove.

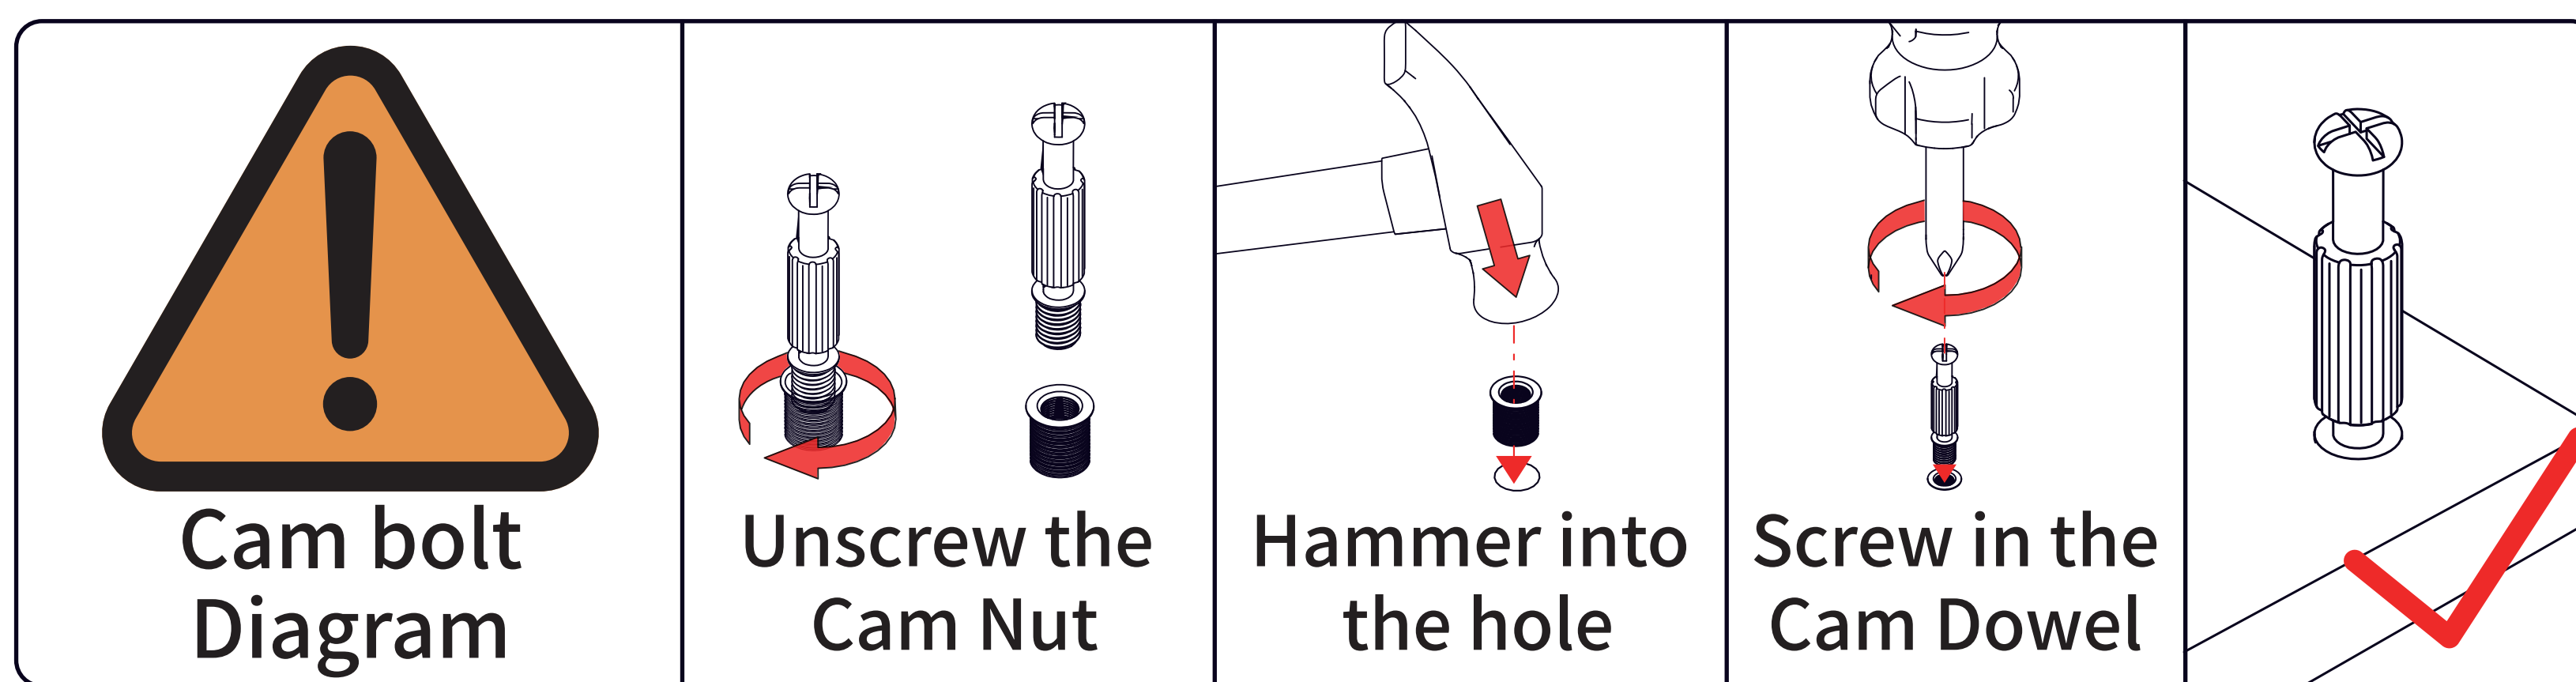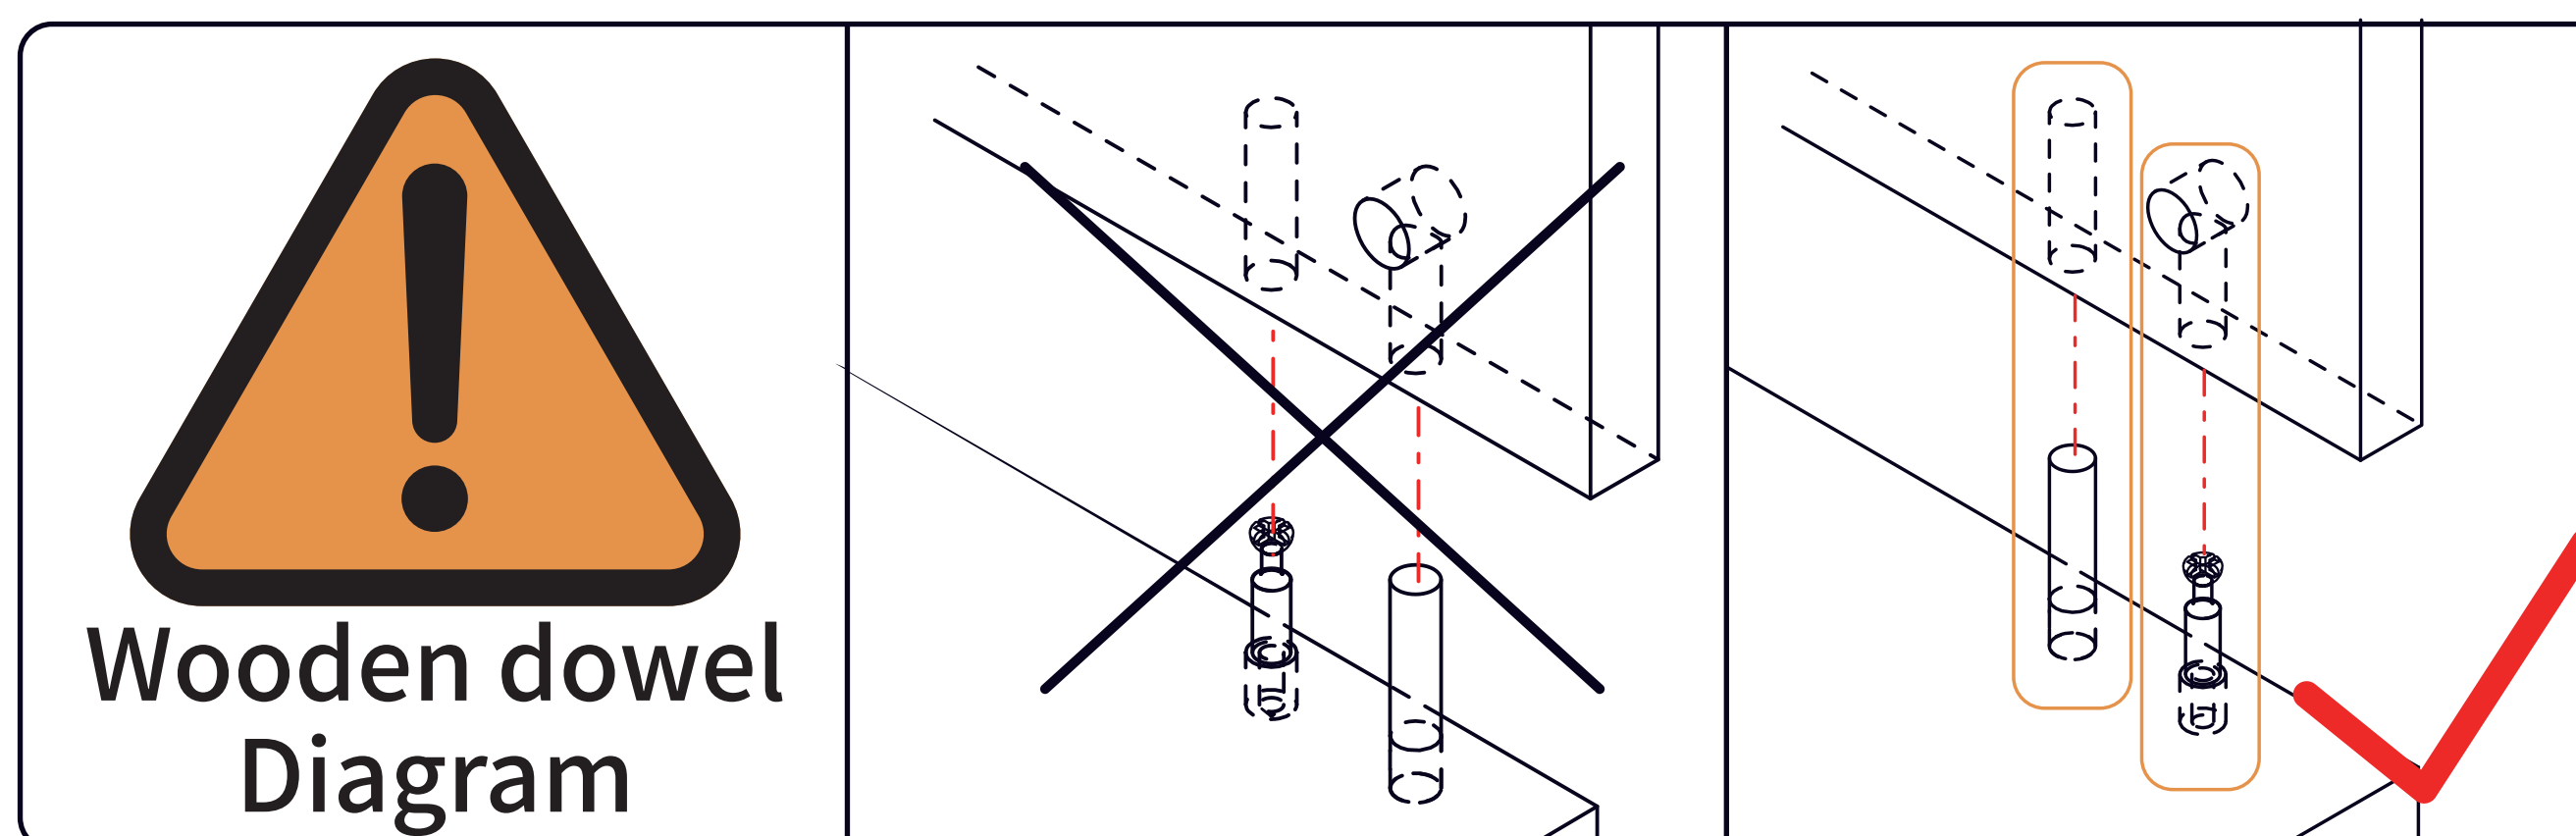


13

 As shown in the figure, hammer the black
Cam Nut (B.1) into panel 12 first, then use a
screwdriver to screw the cam bolt (B.2) into the
black Cam Nut.

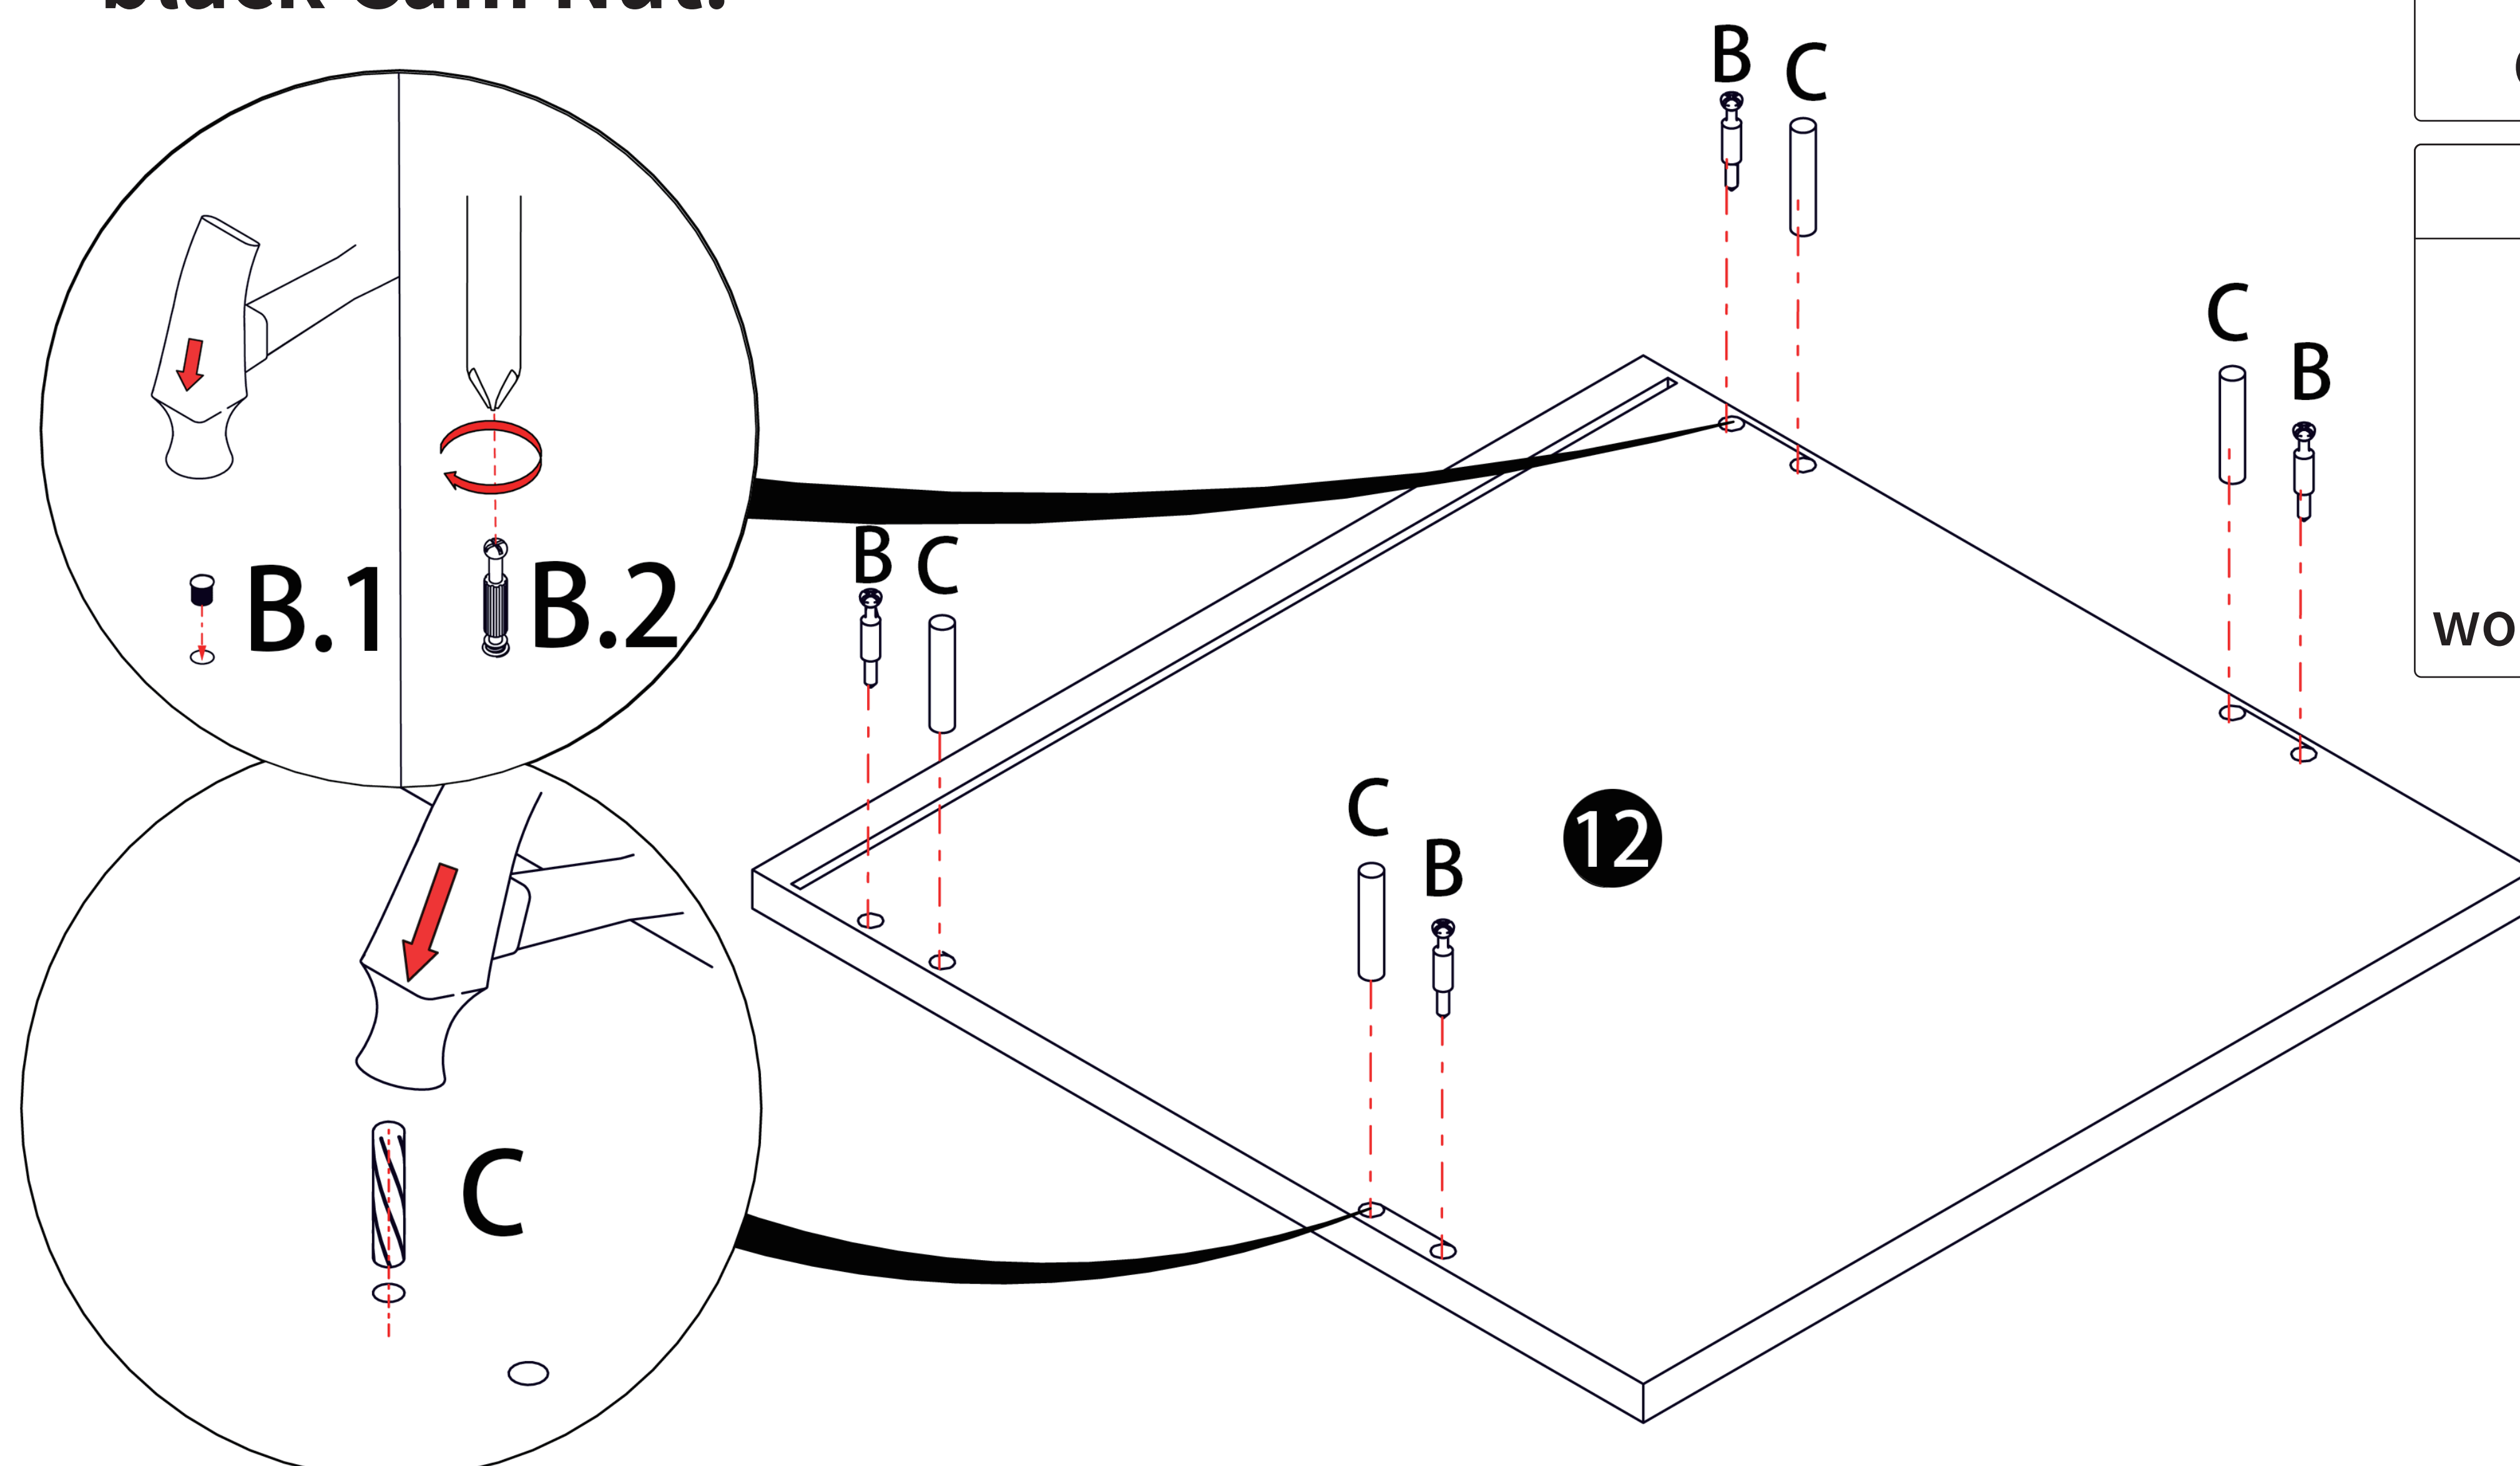


B*4

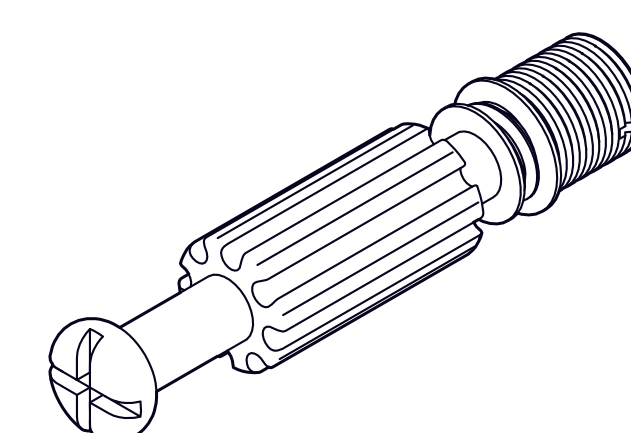 

Cam bolts

 C*4

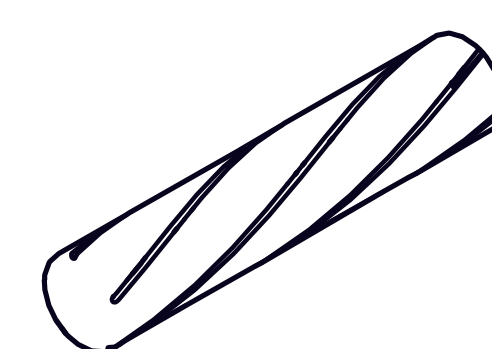


wooden dowels

Insert the wooden dowels (C) into panel 12.

14


then connect panel 12 to panels 7 and 8,
and press the Cam wheel (A) into panels 7 and 8.
Then rotate to tighten.

 First rotate panel 12 by 180°


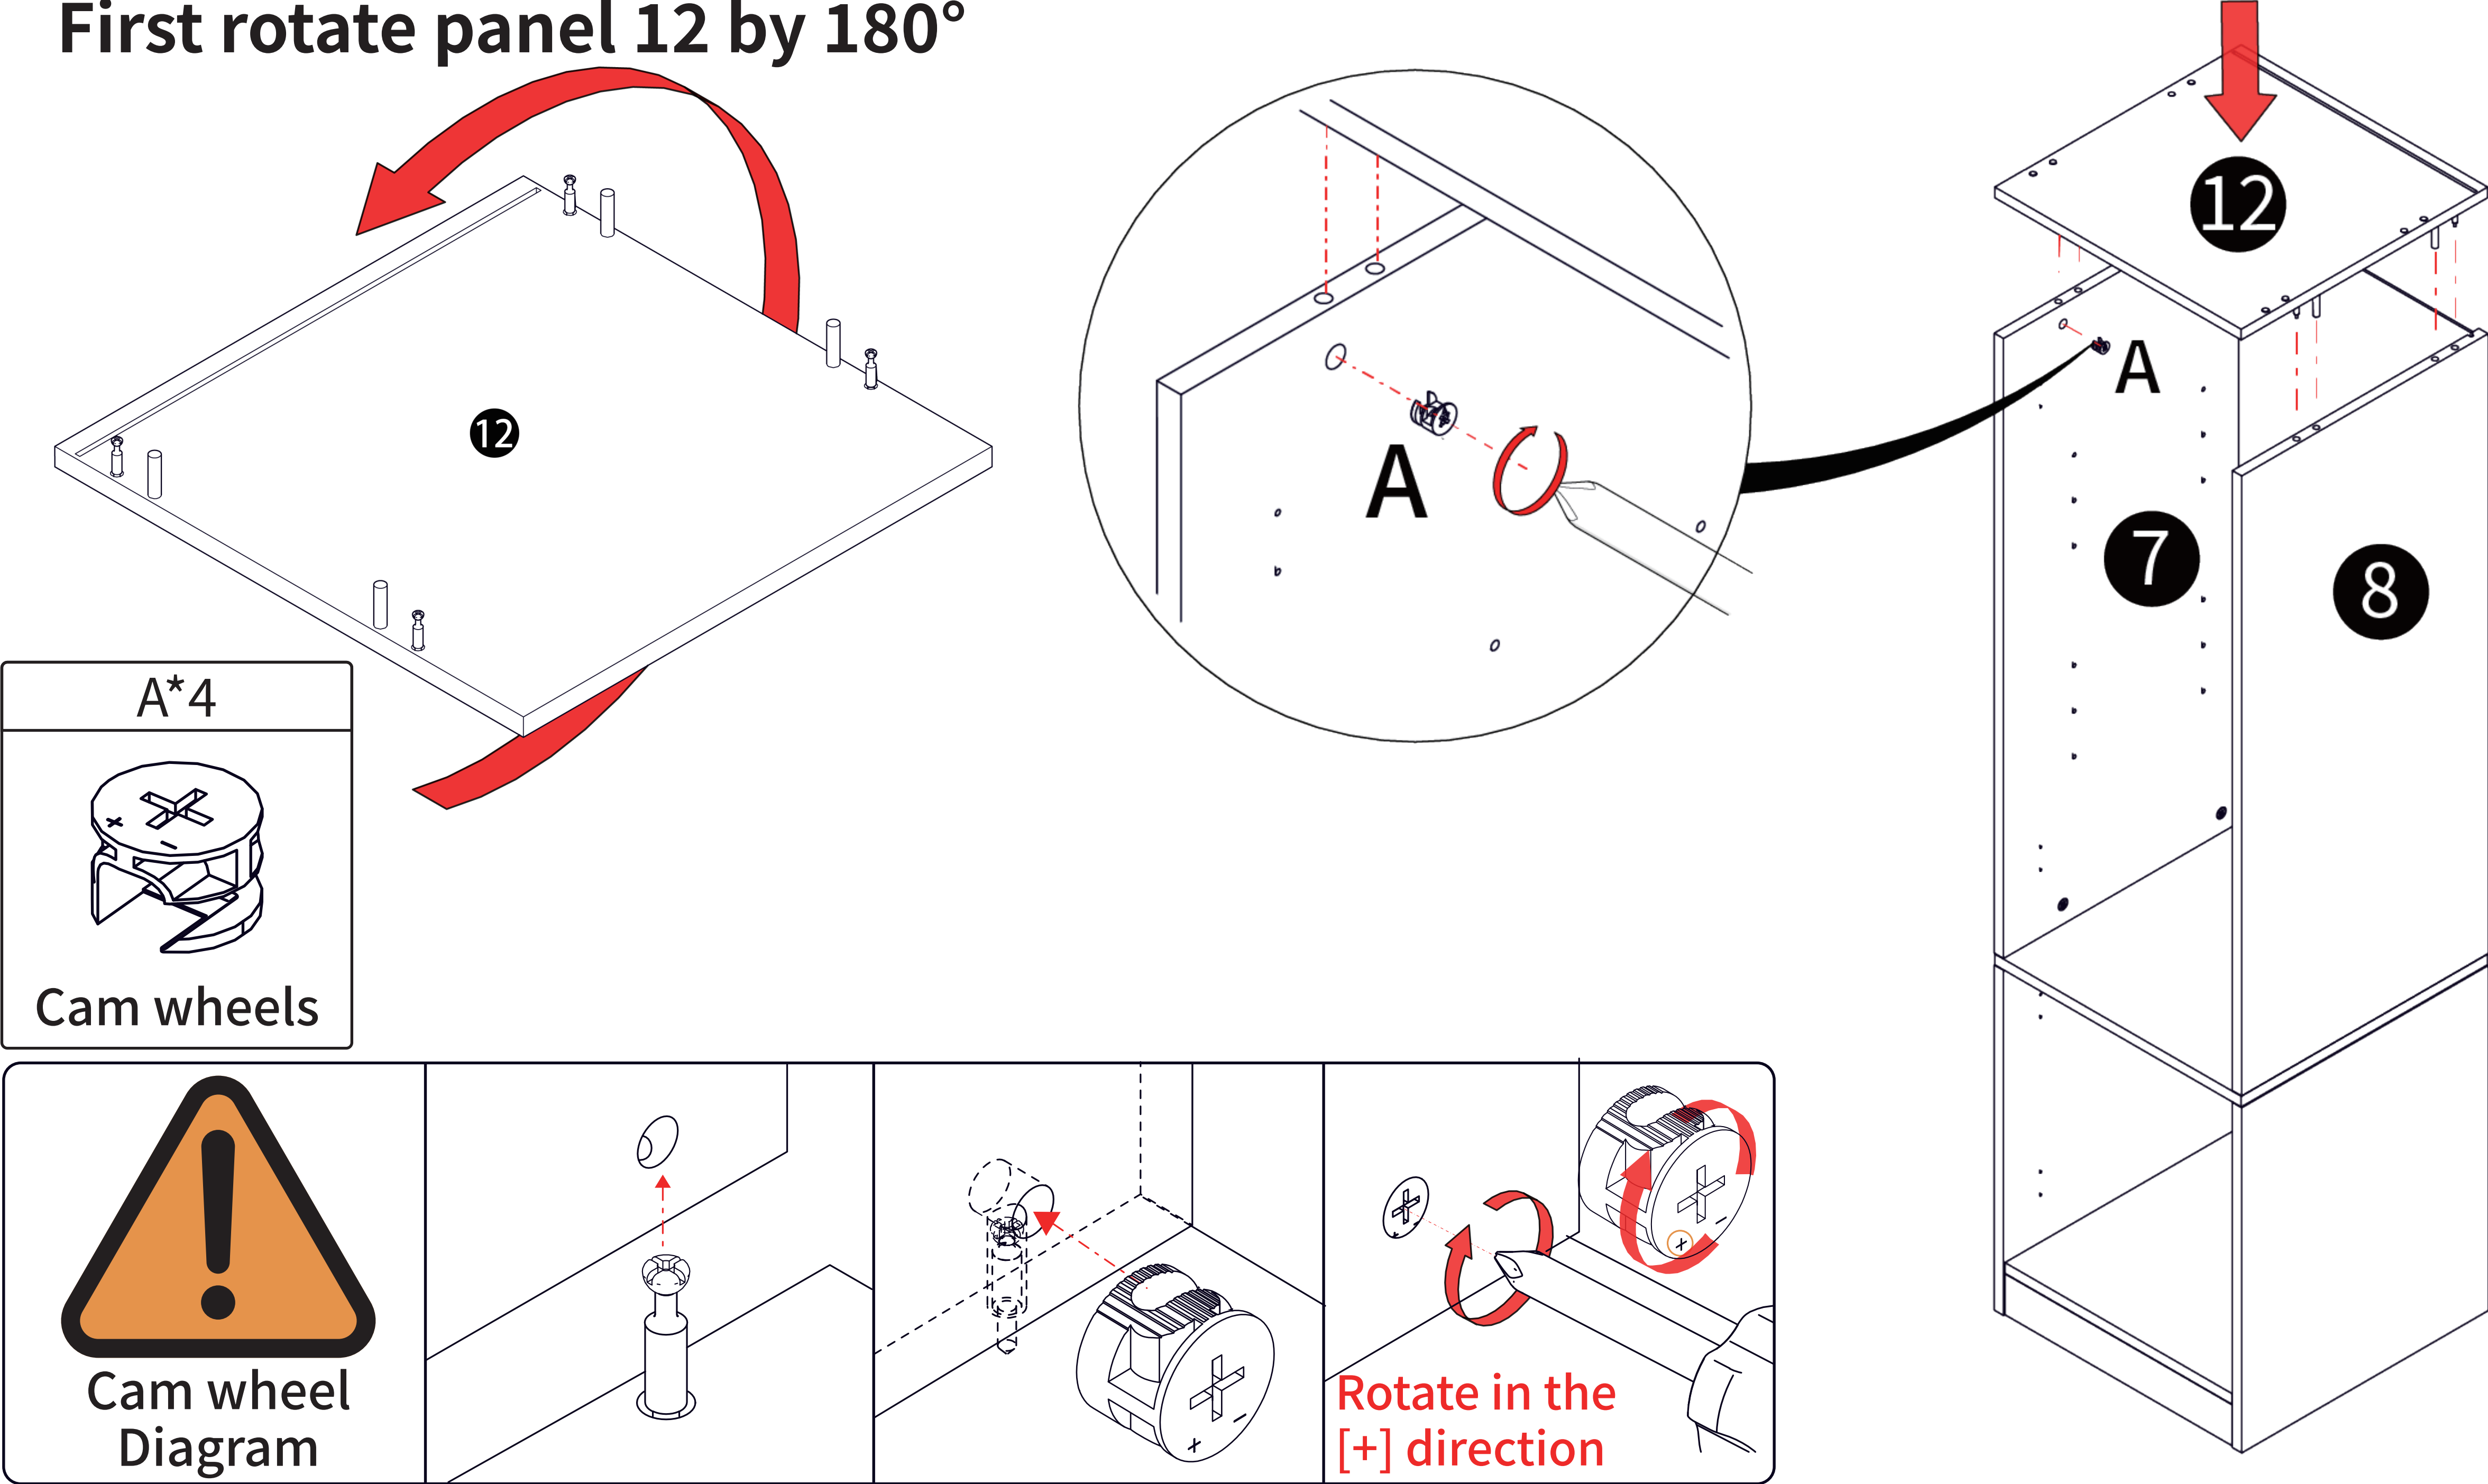


15

 
As shown in the figure, hammer the black Cam Nut (B.1) into panel 12 first, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

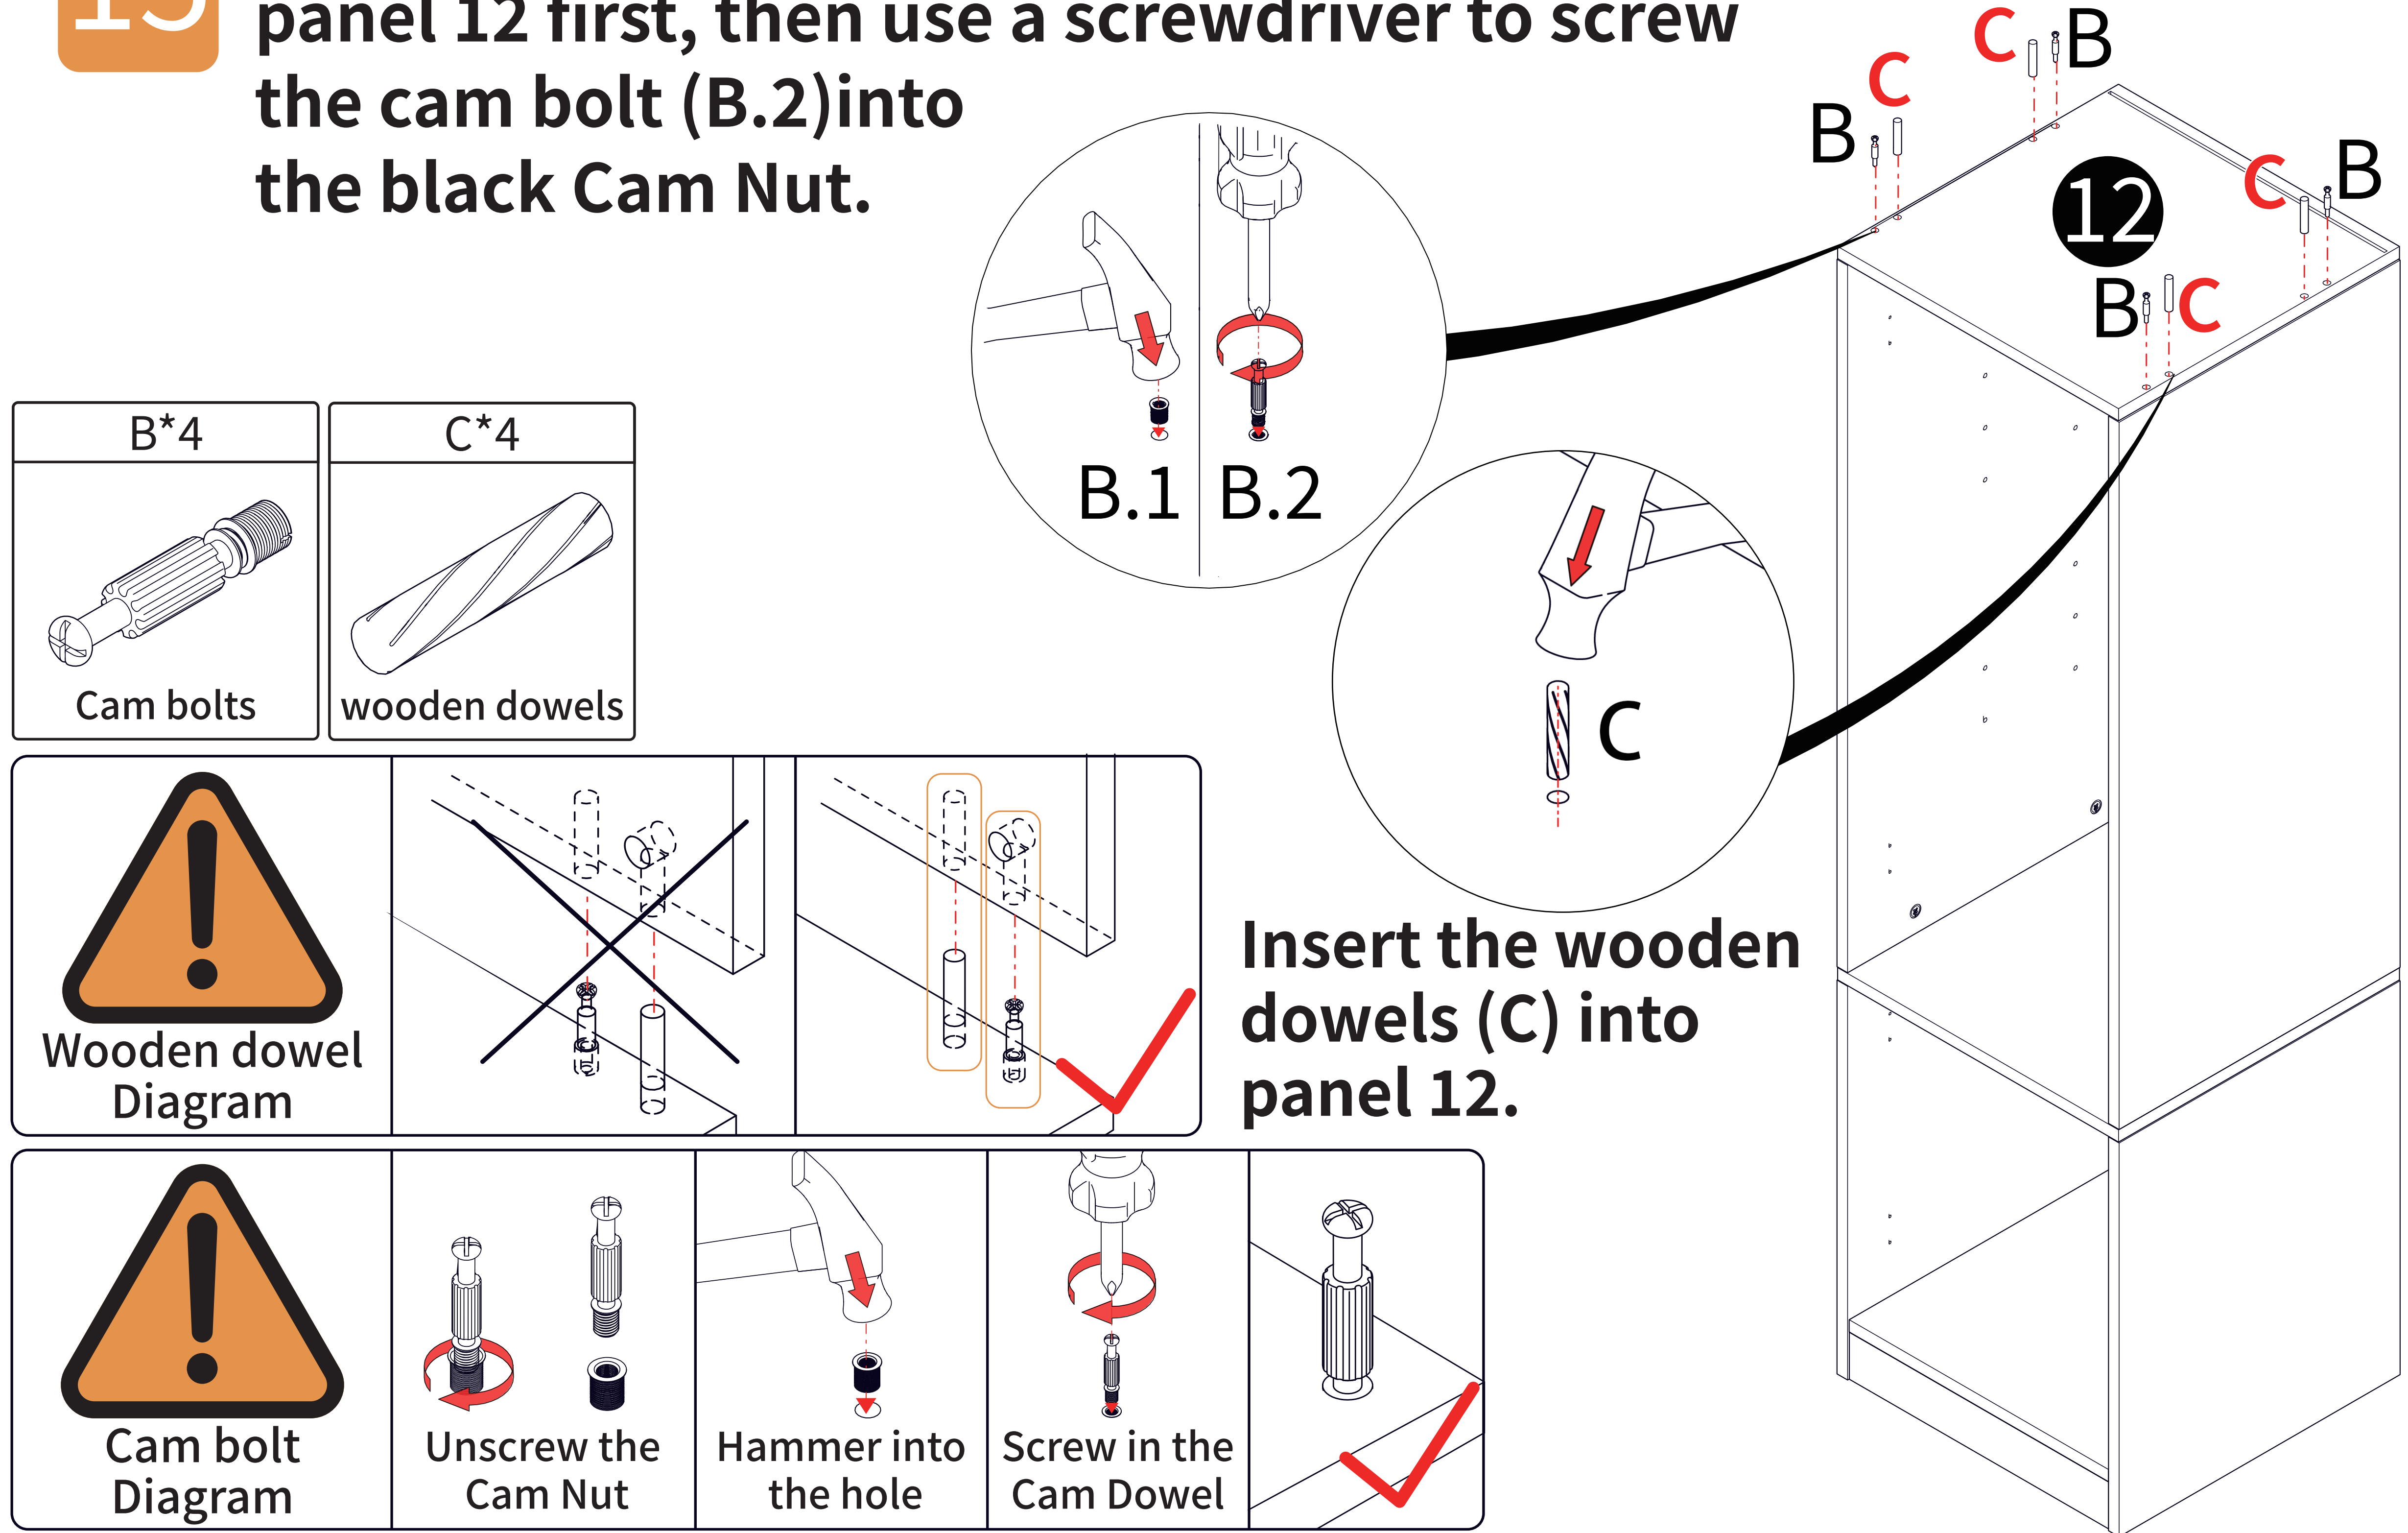

16

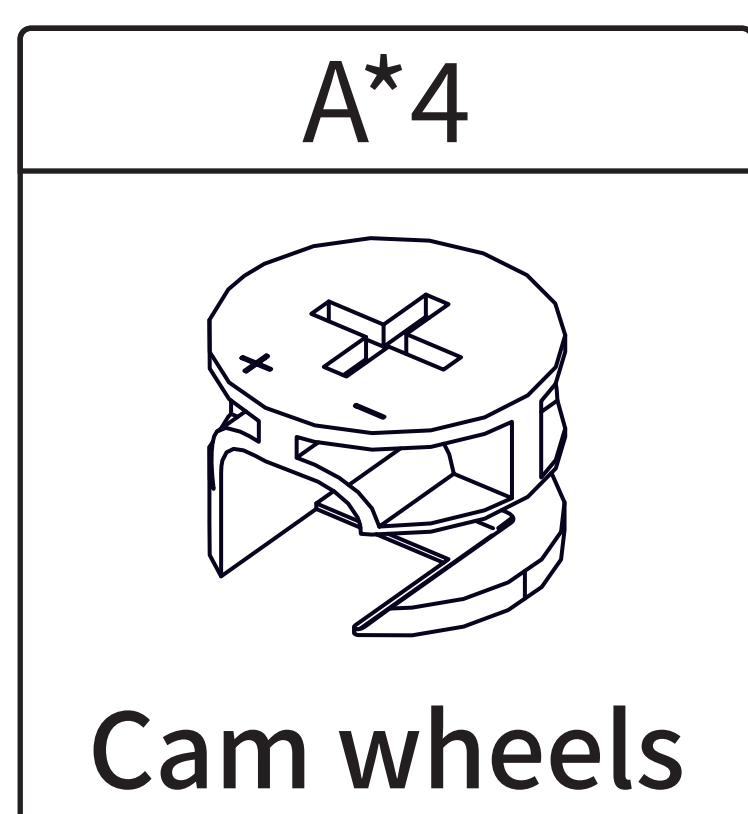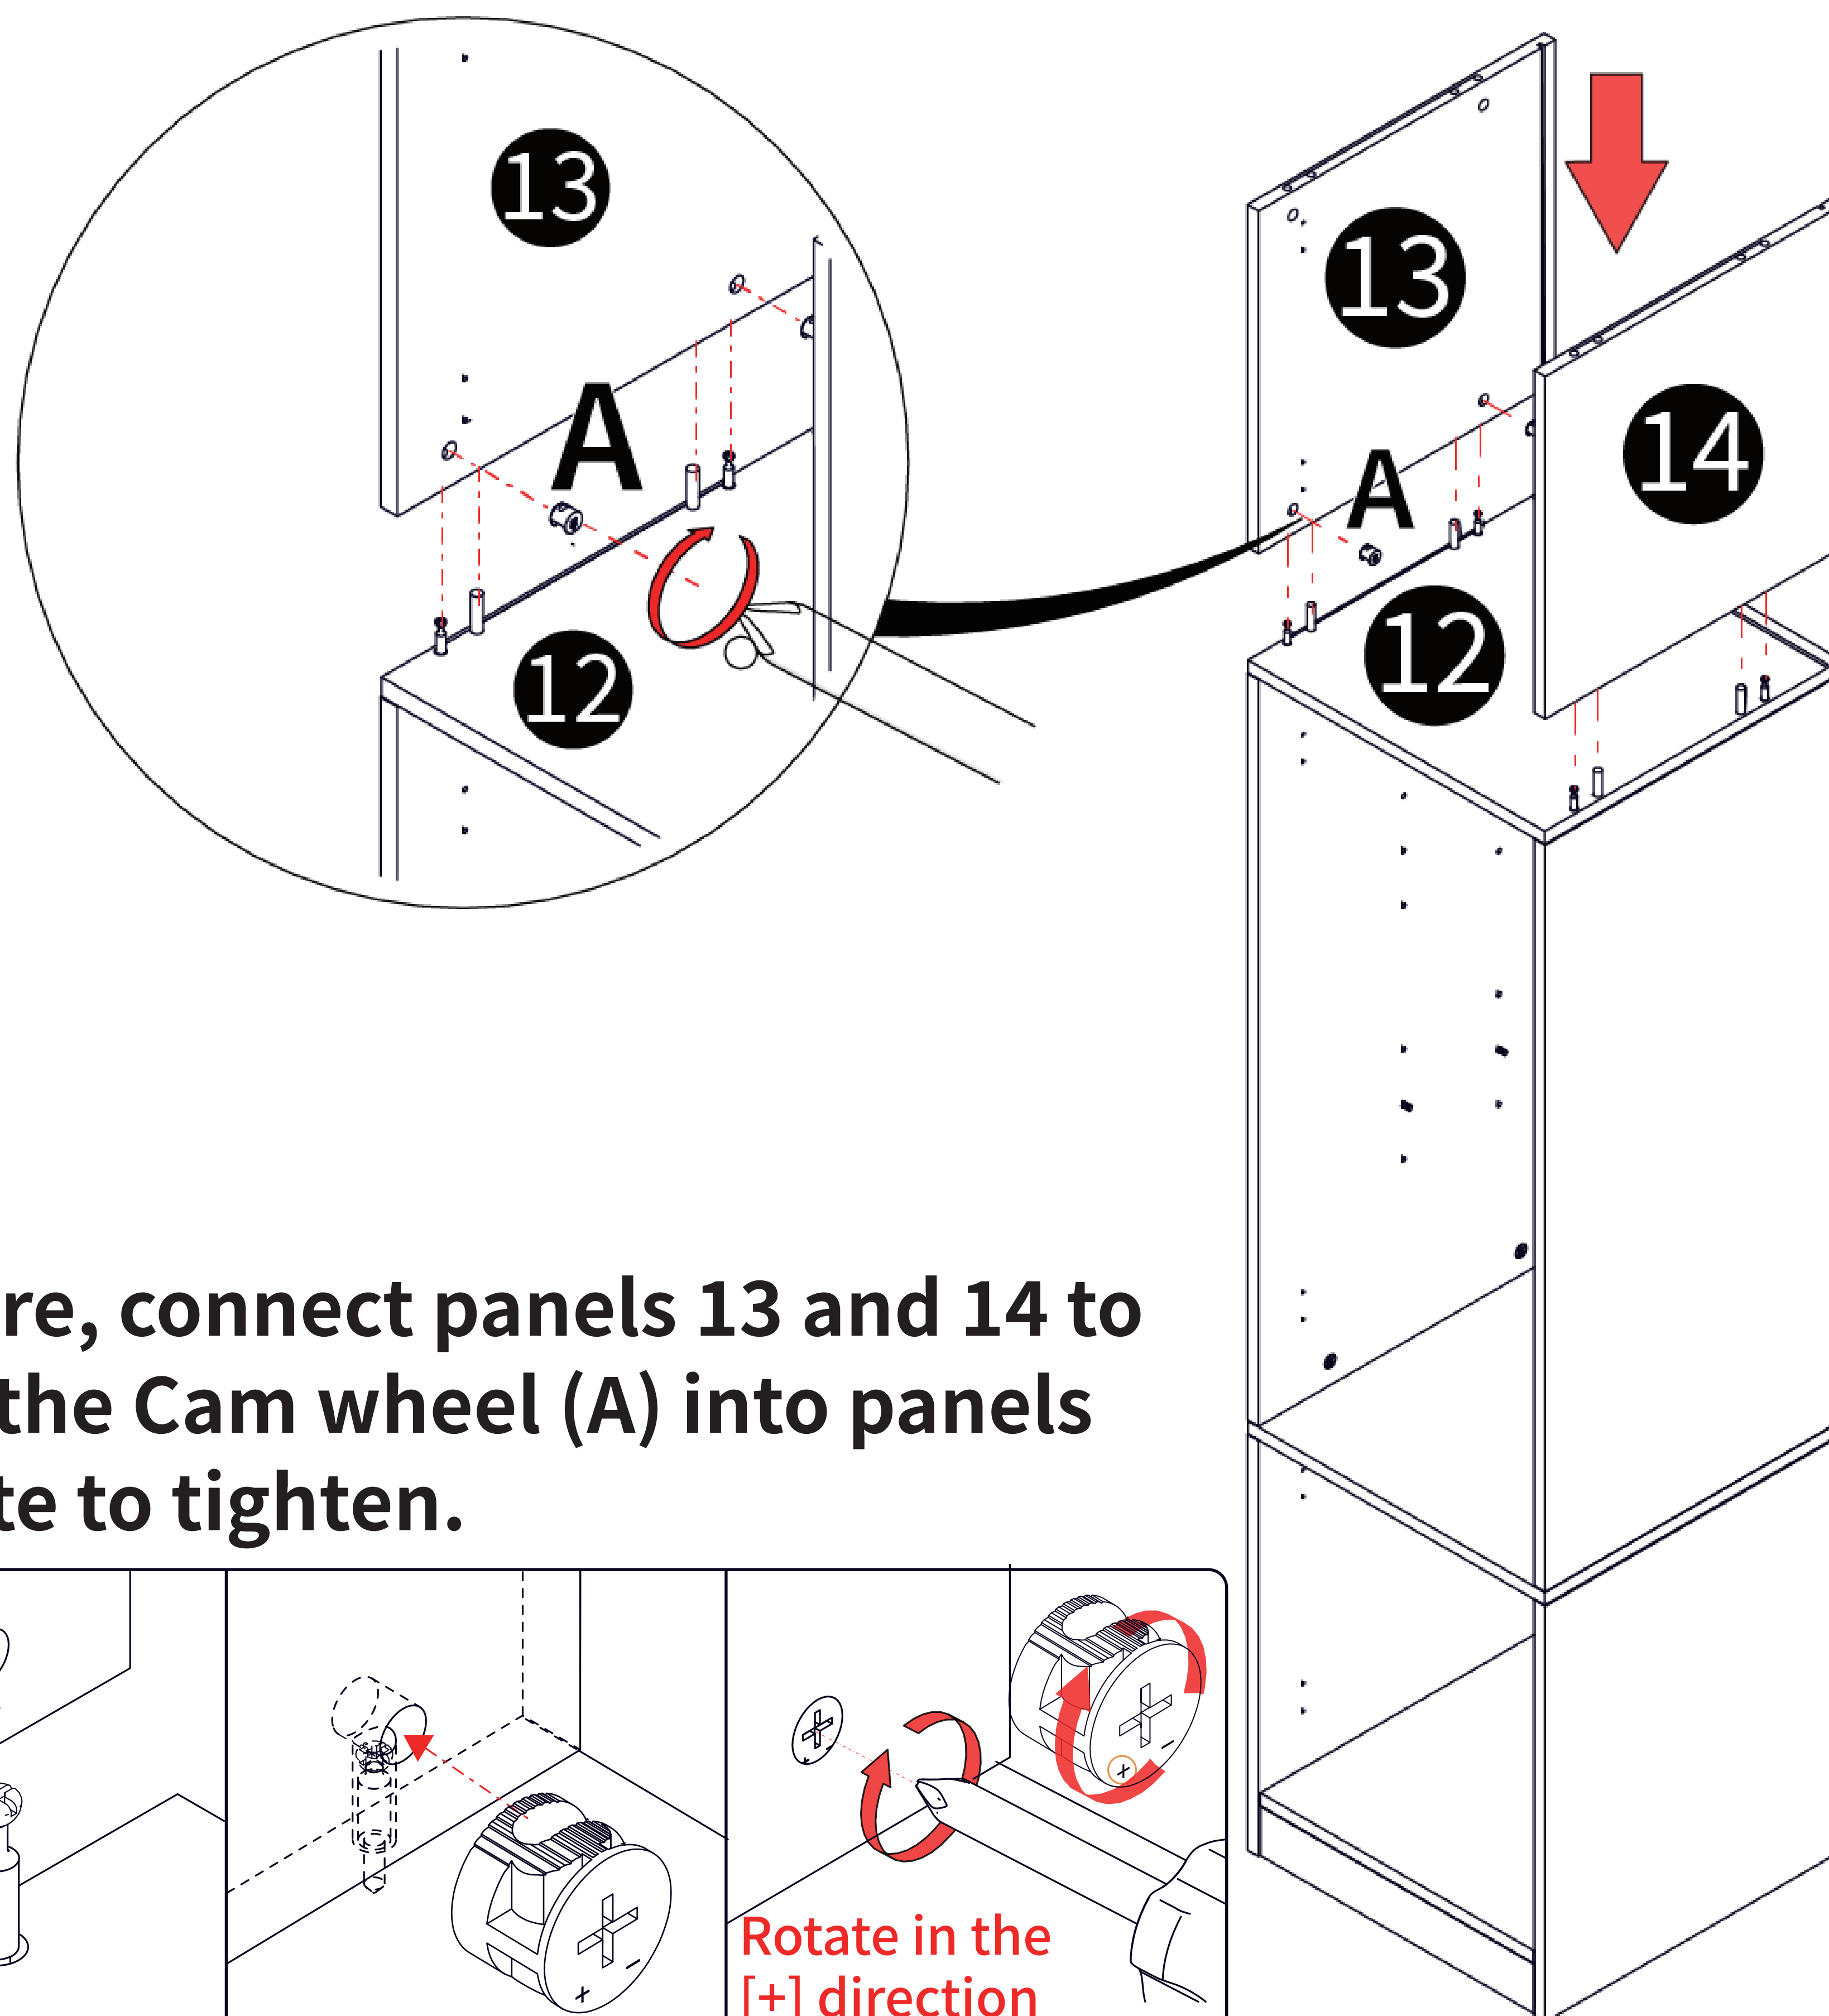  


 As shown in the figure, connect panels 13 and 14 to panel 12, and press the Cam wheel (A) into panels 13 and 14. Then rotate to tighten.

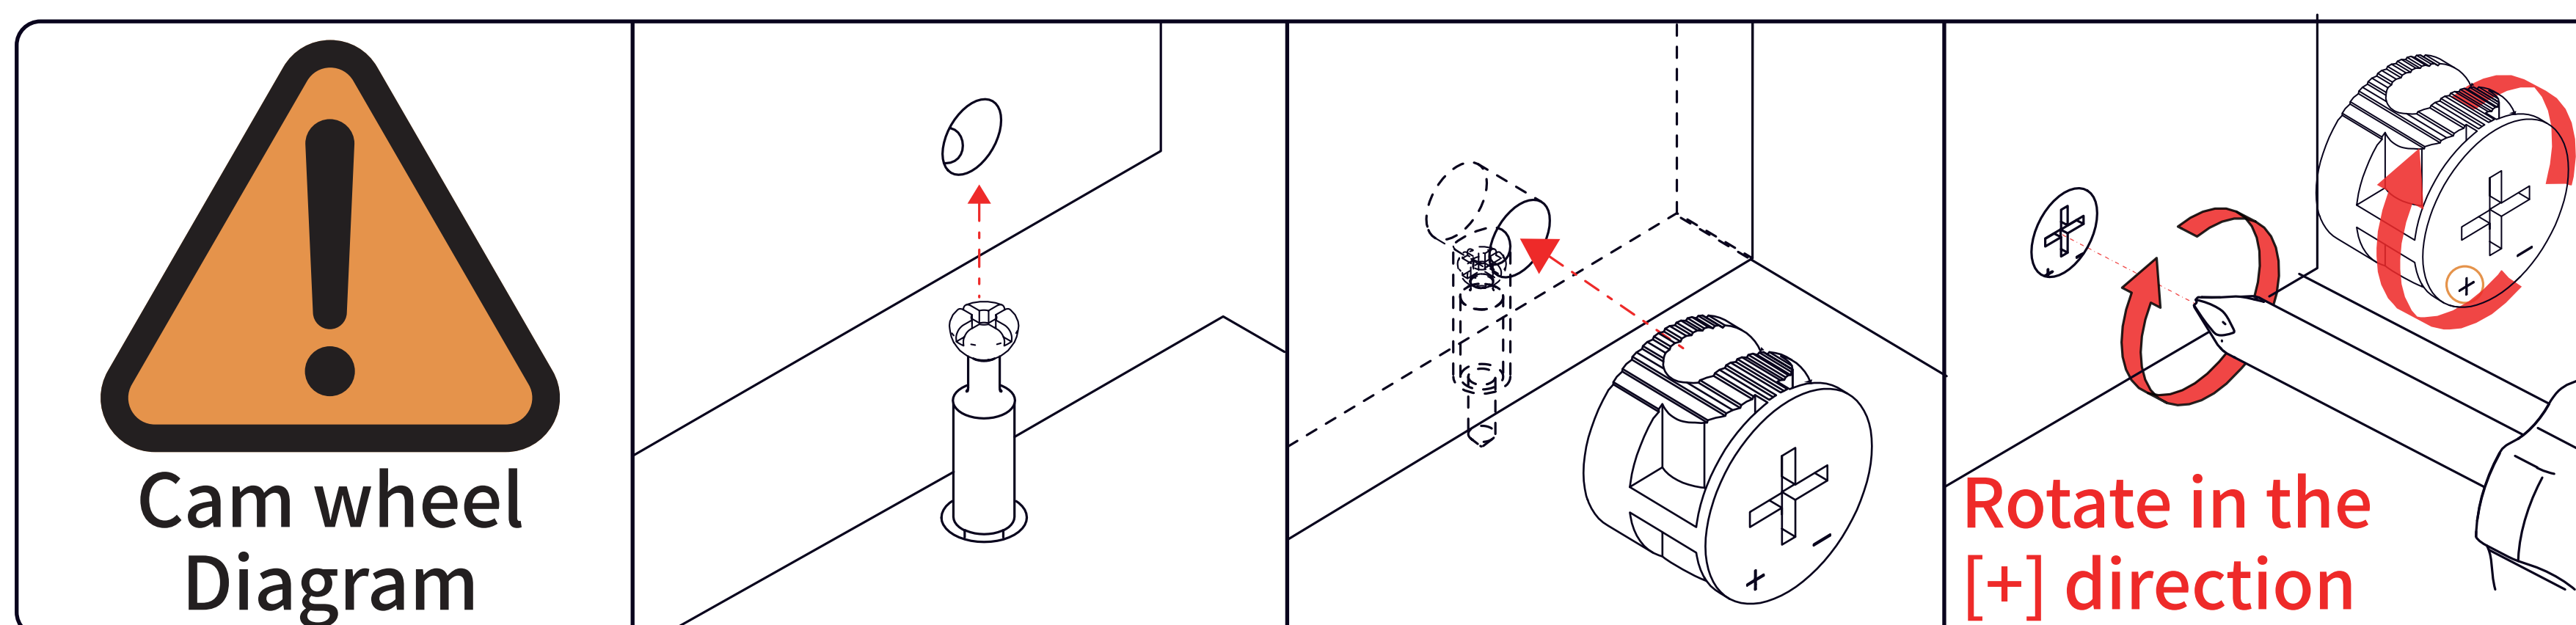


17


 
As shown in the illustration, insert Back Panel 15 along the groove.

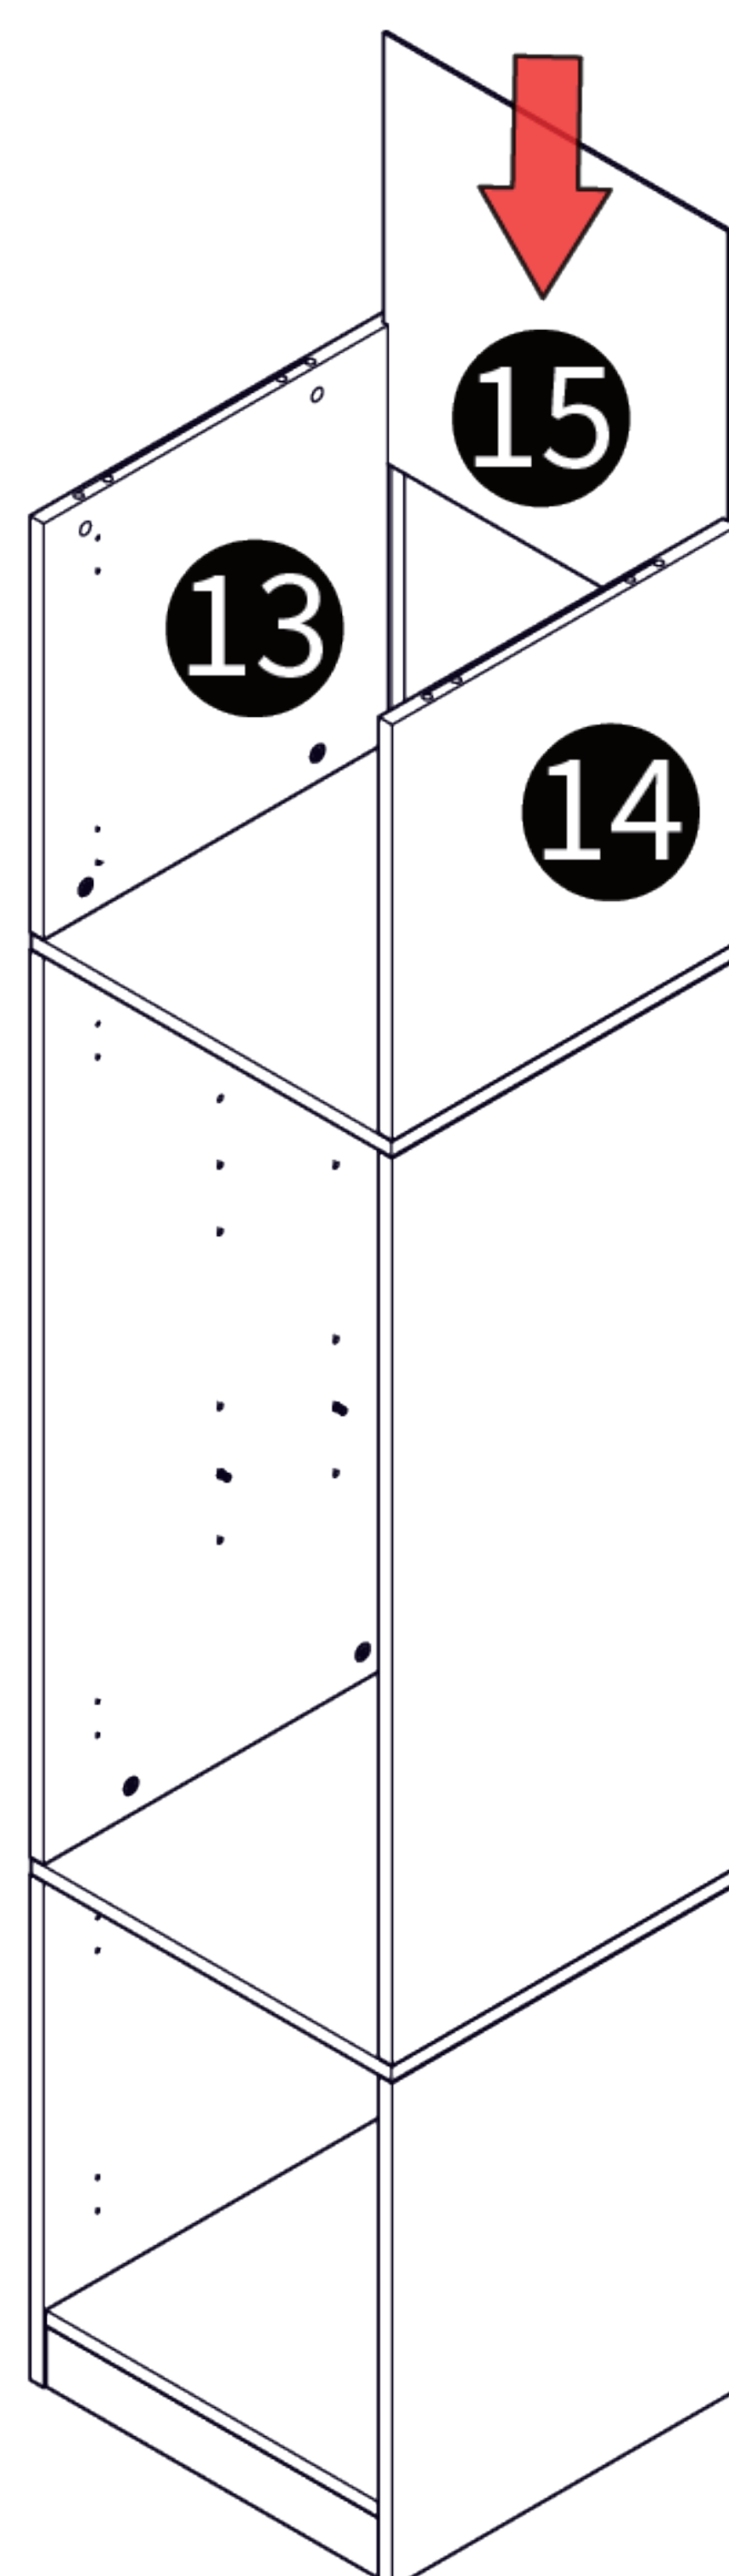

 As shown in the figure, hammer the black Cam Nut (B.1) into panel 16 first, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

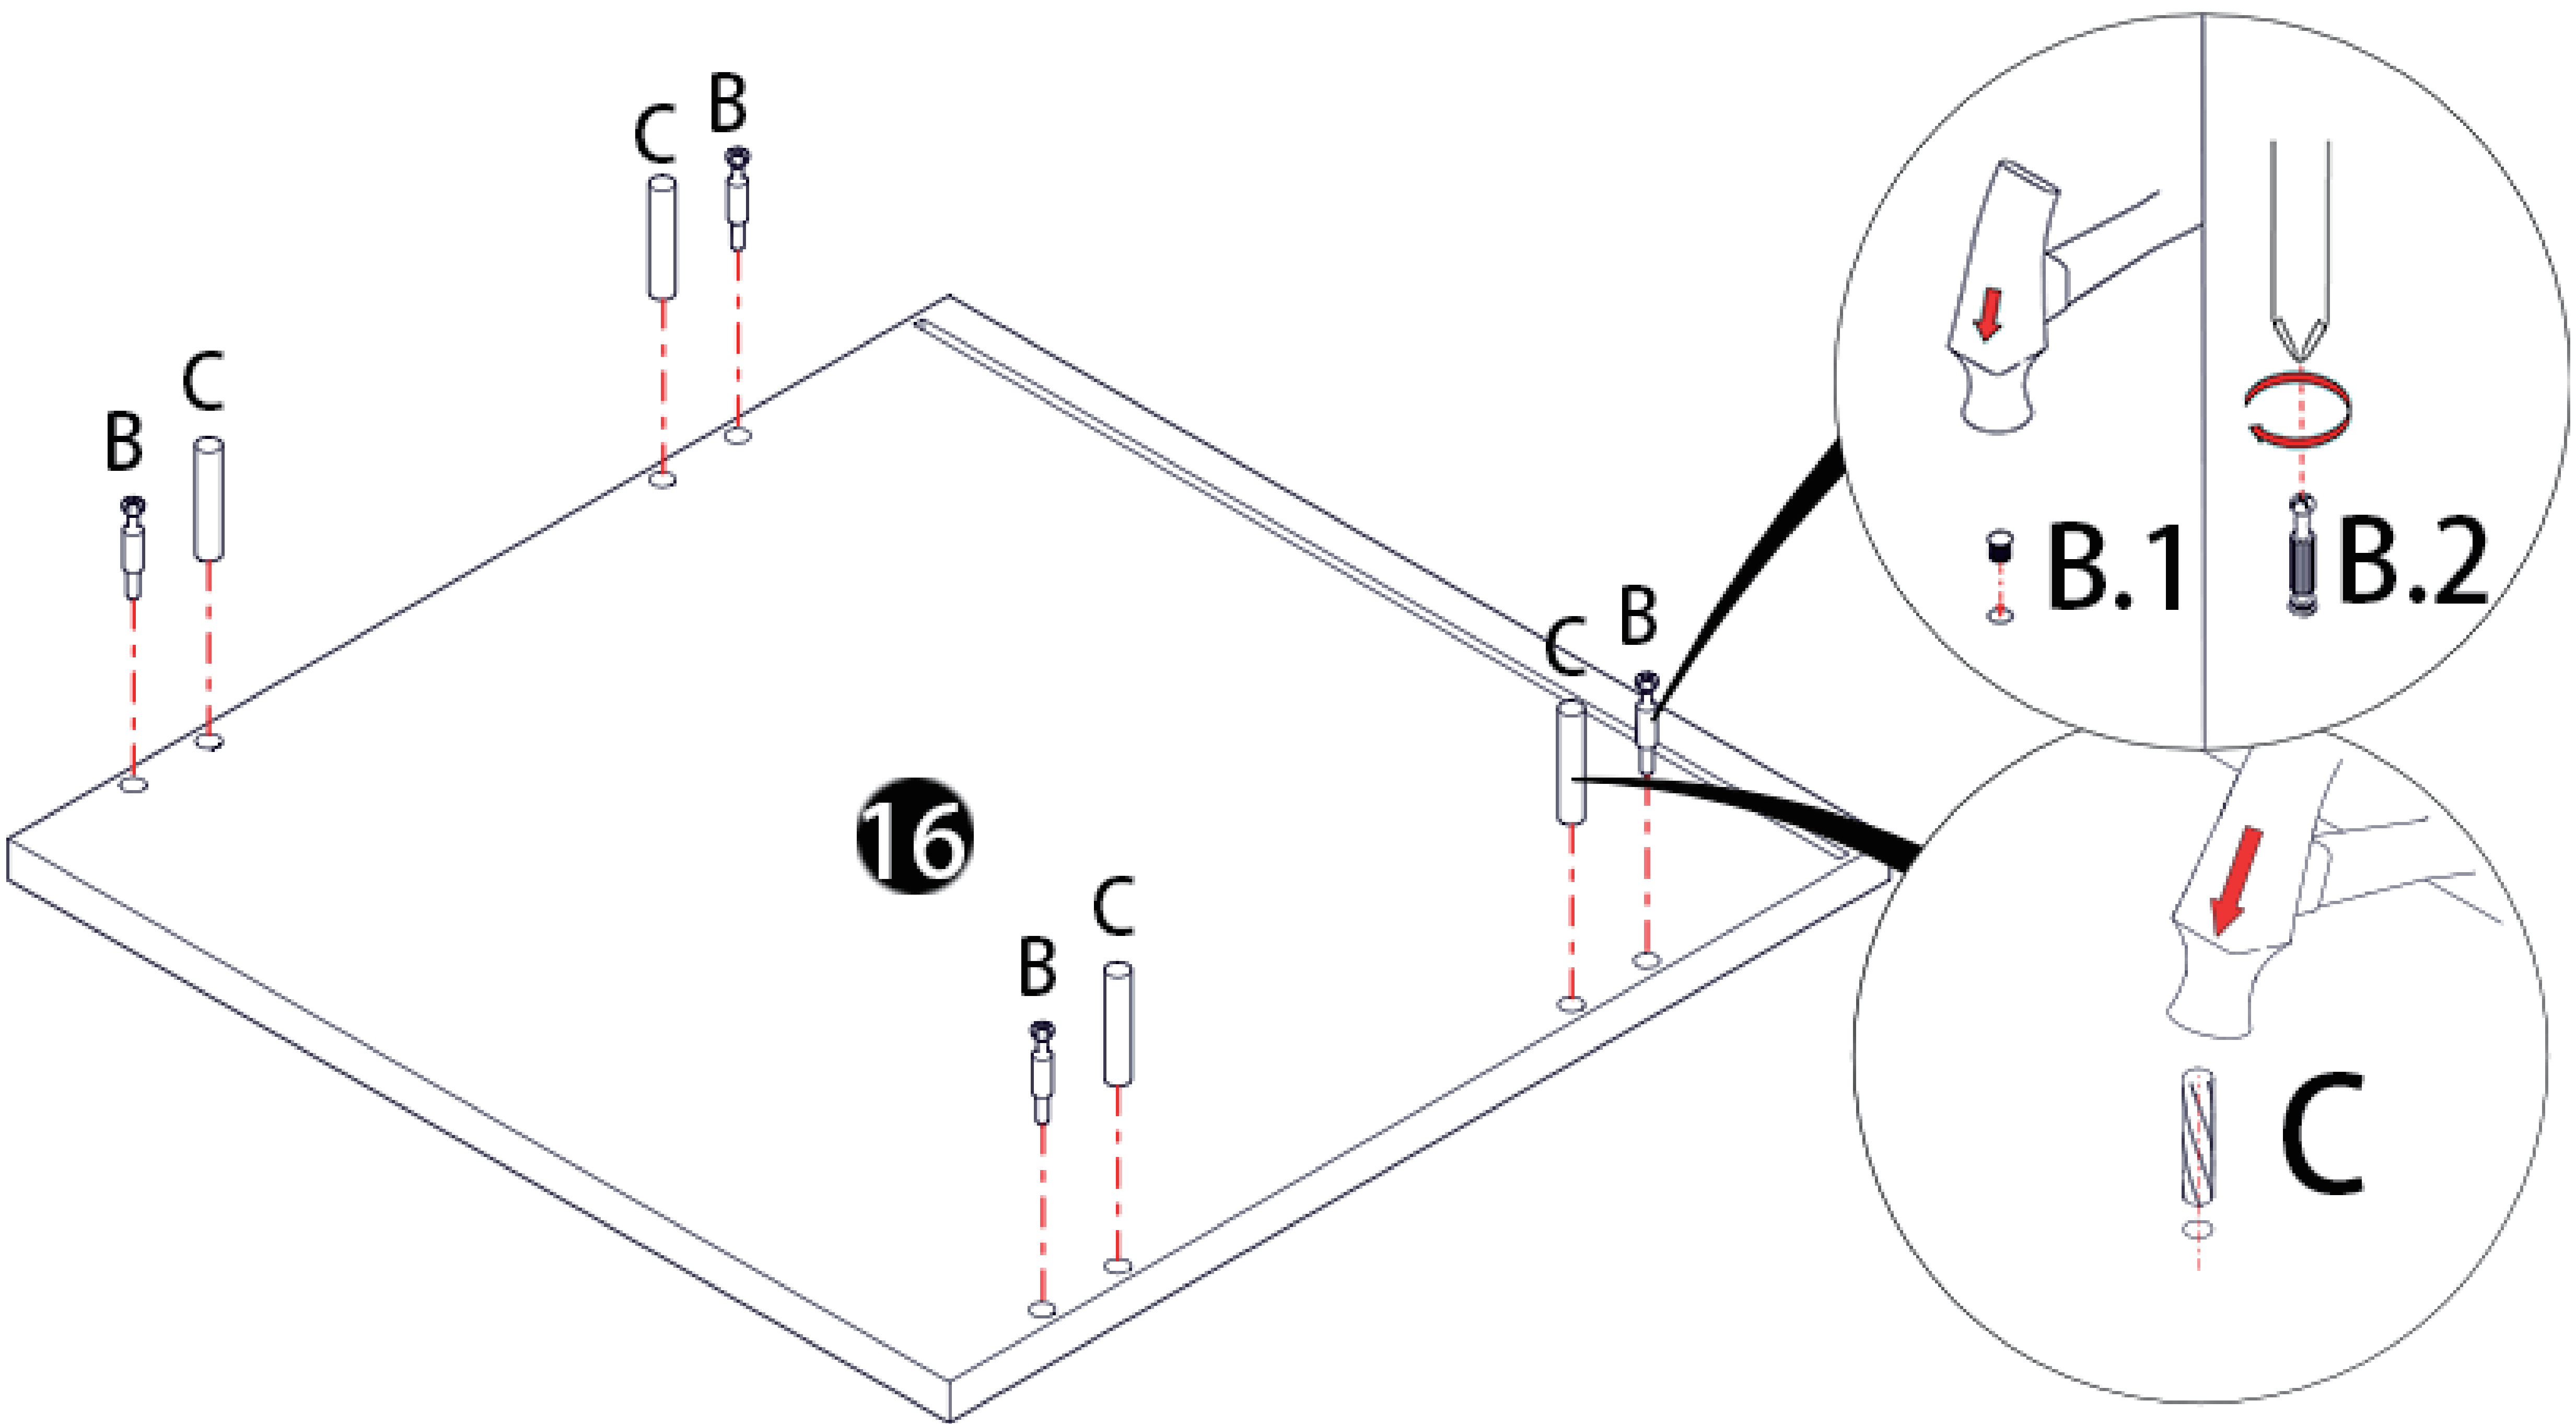


  
Insert the wooden dowels (C) into panel 16.

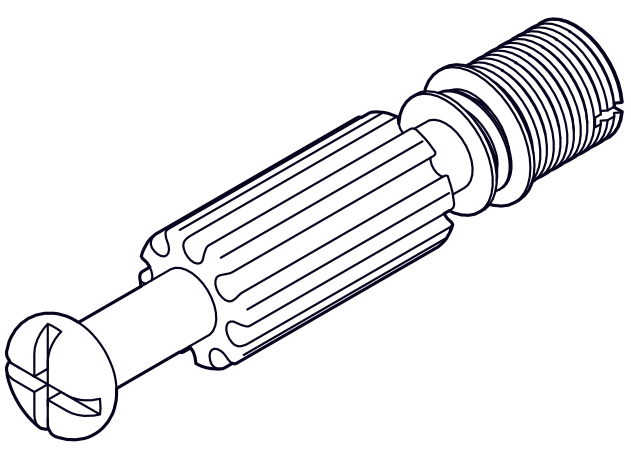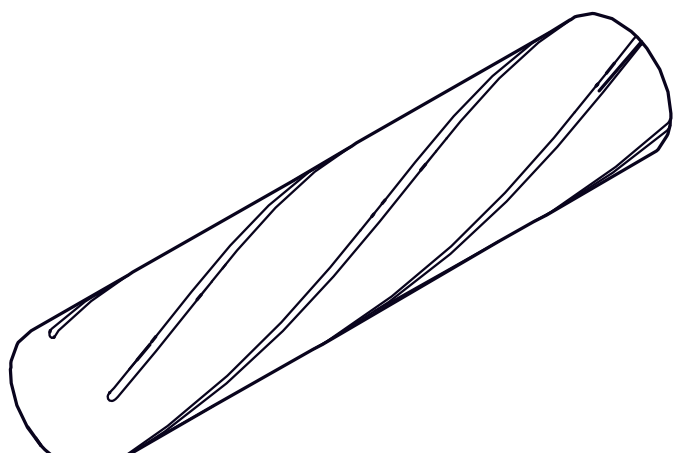B*4	C*4
	
Cam bolts	wooden dowels



  Wooden dowel Diagram

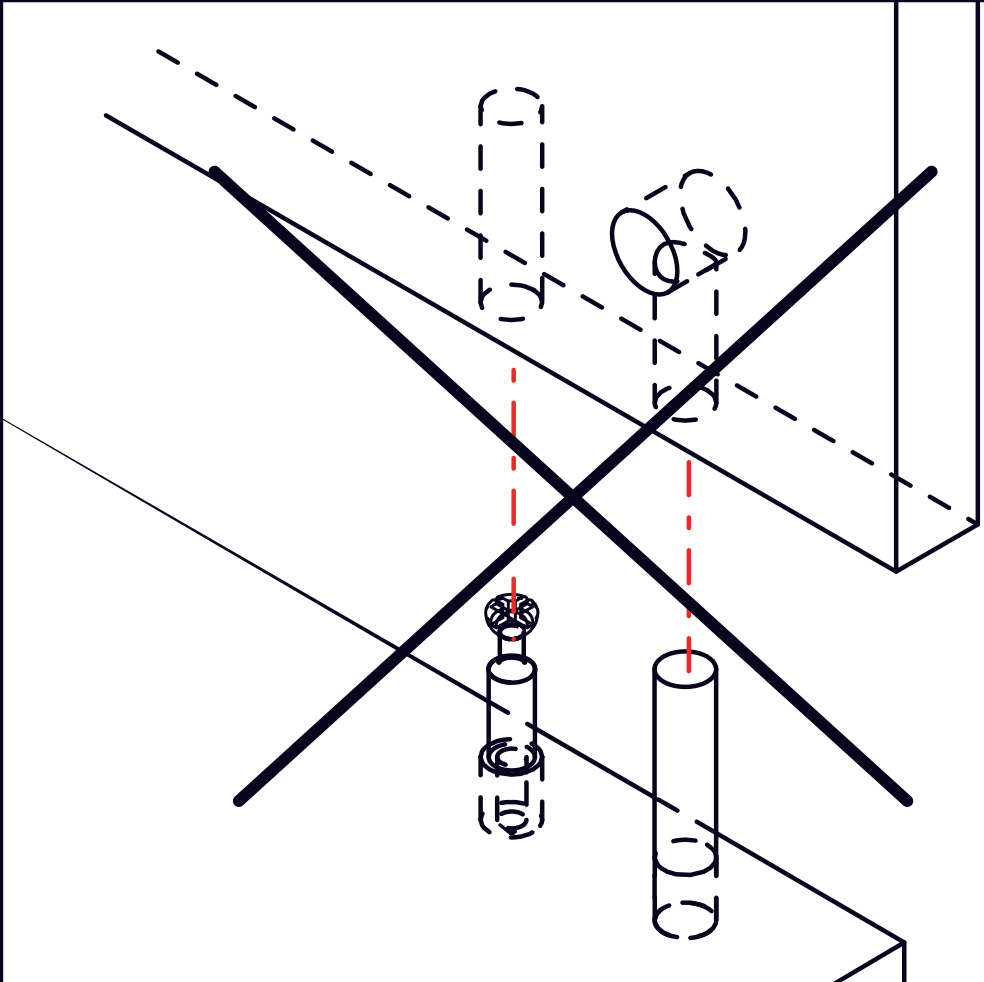

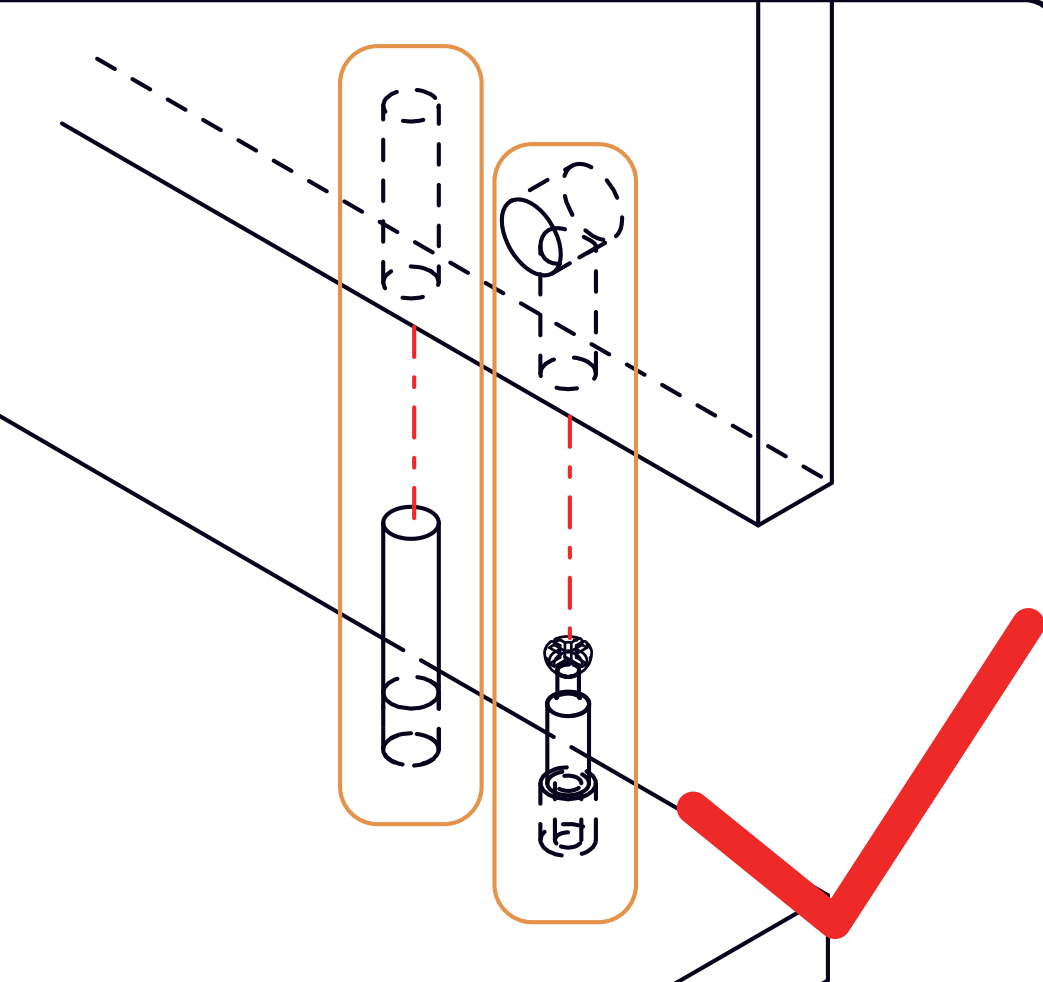





Cam bolt Diagram



 
Unscrew the Cam Nut

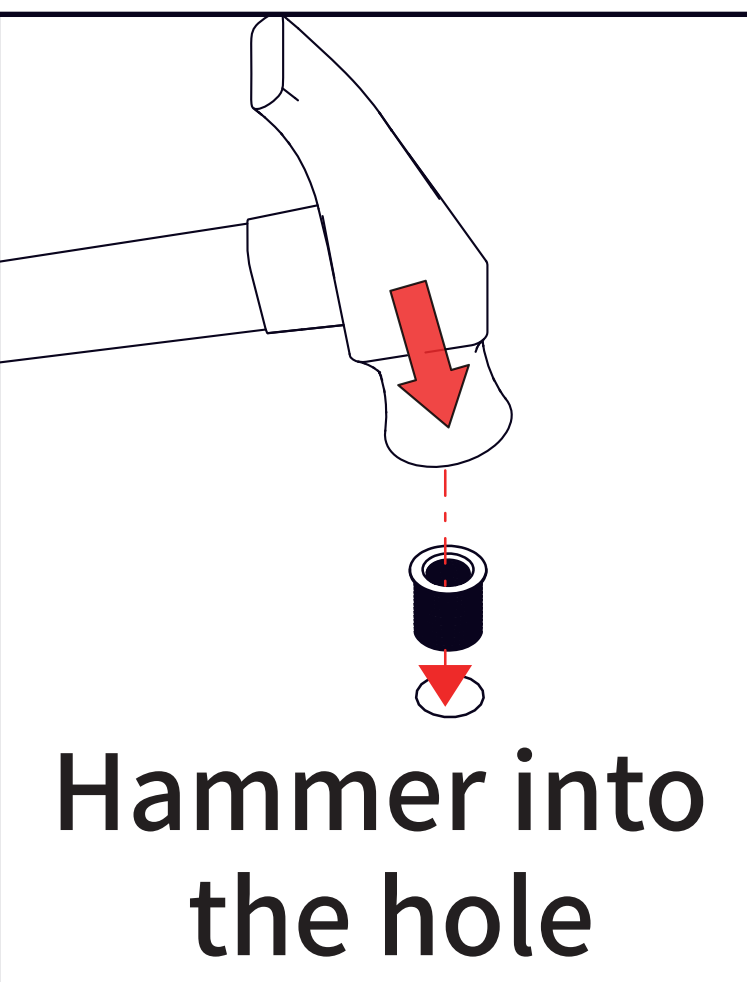



Hammer into the hole

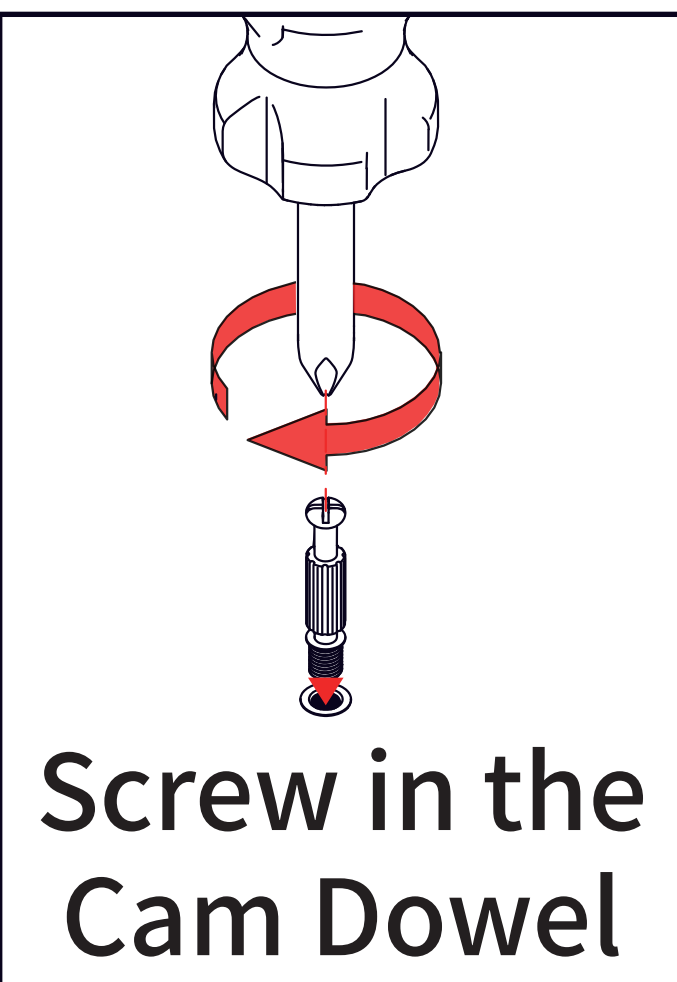 


Screw in the Cam Dowel

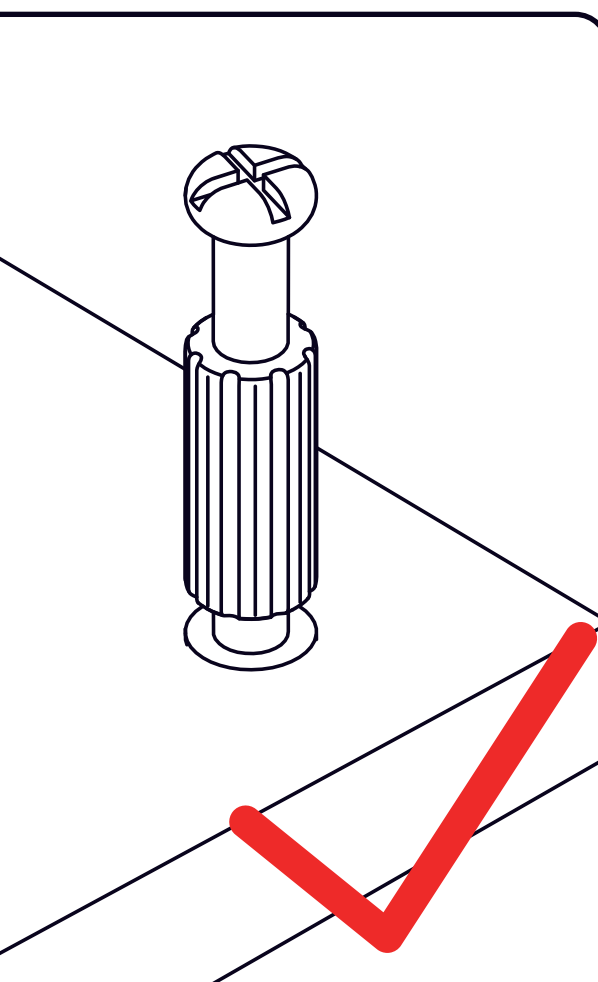 




19

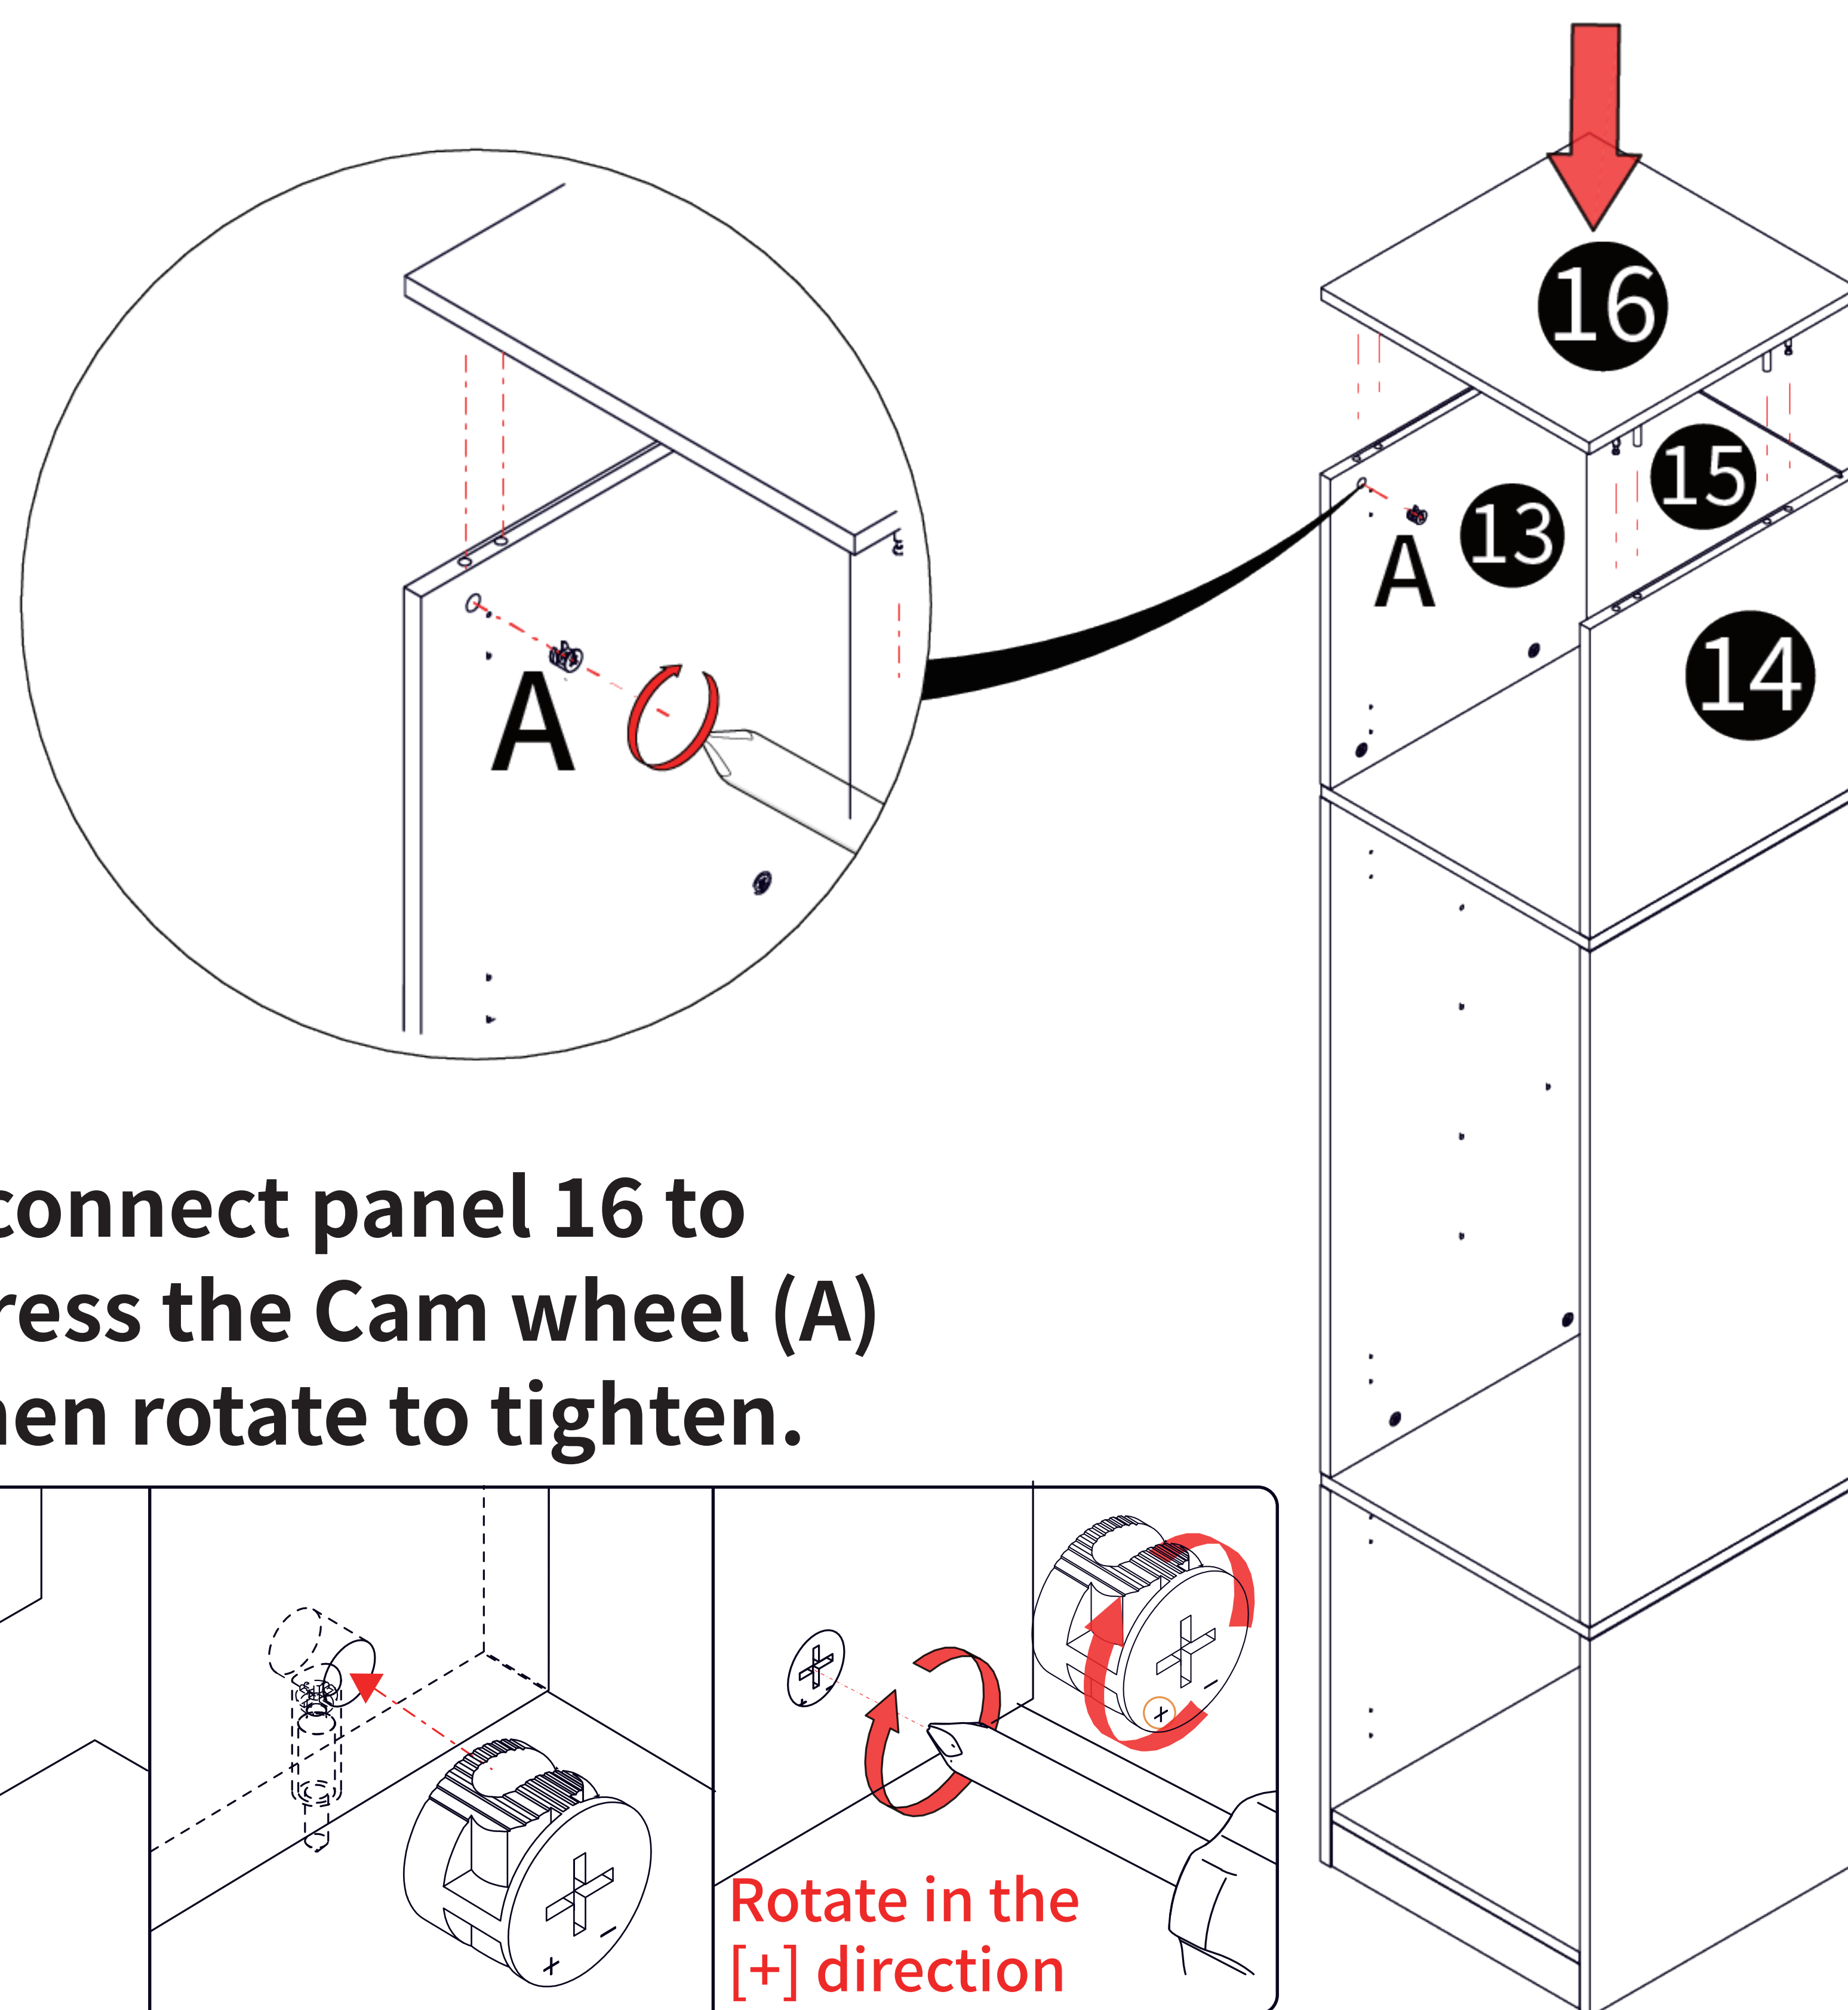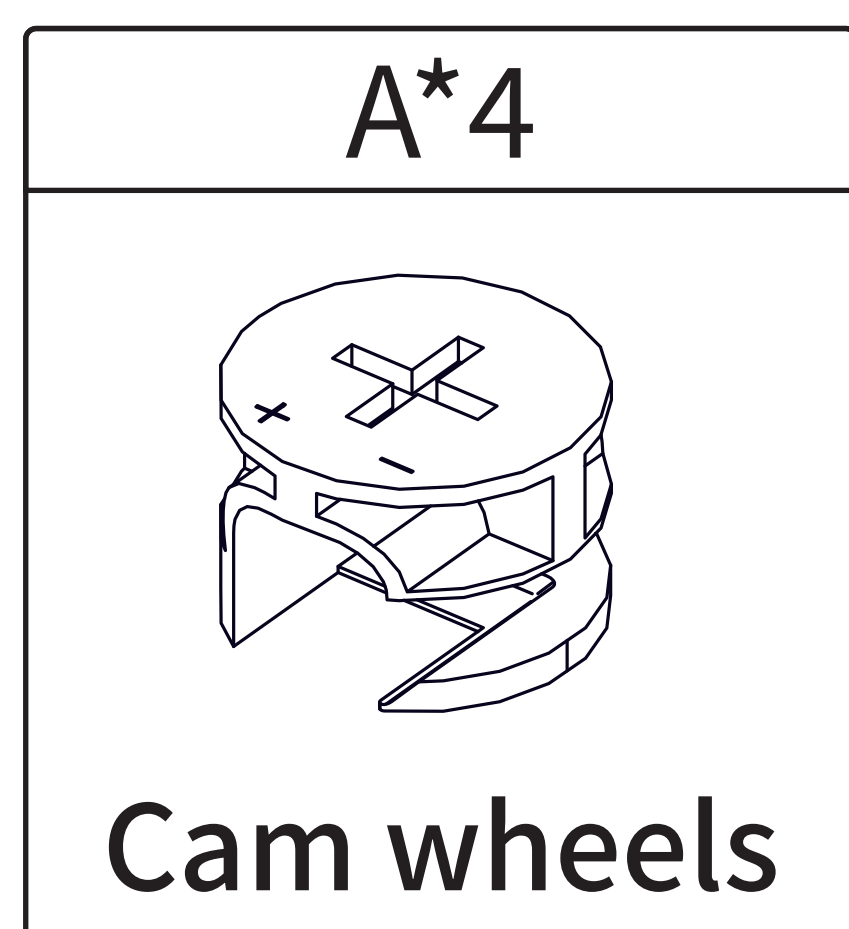  

 As shown in the figure, connect panel 16 to panels 13 and 14, and press the Cam wheel (A) into panels 13 and 14. Then rotate to tighten.

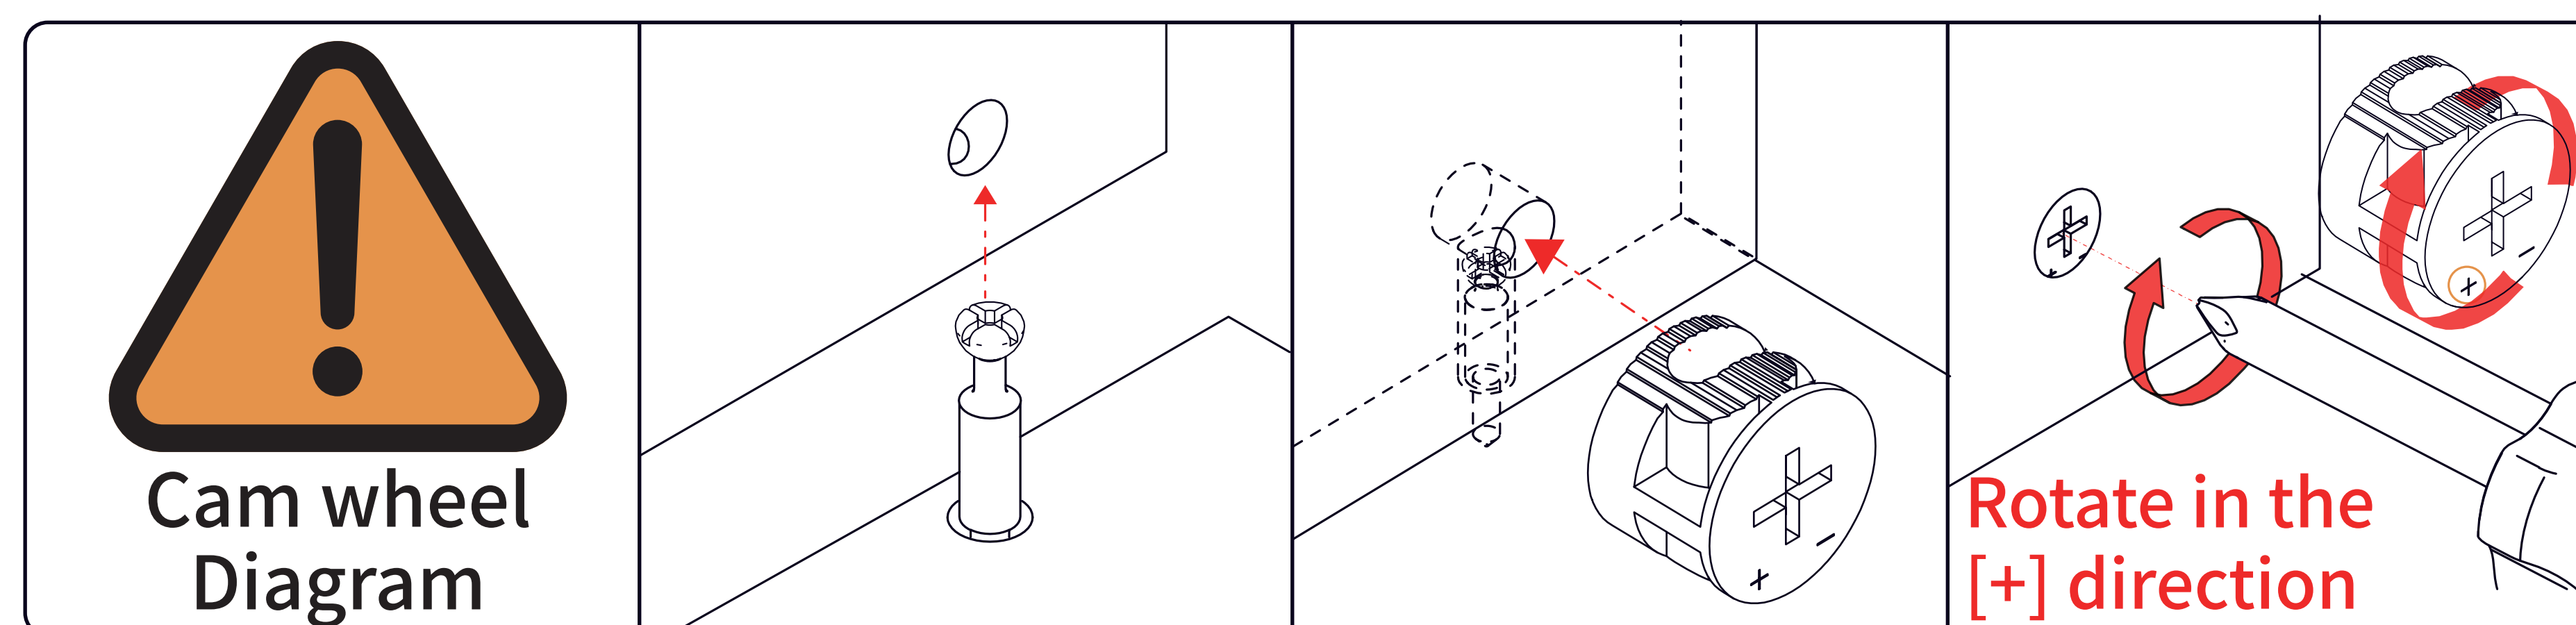

20

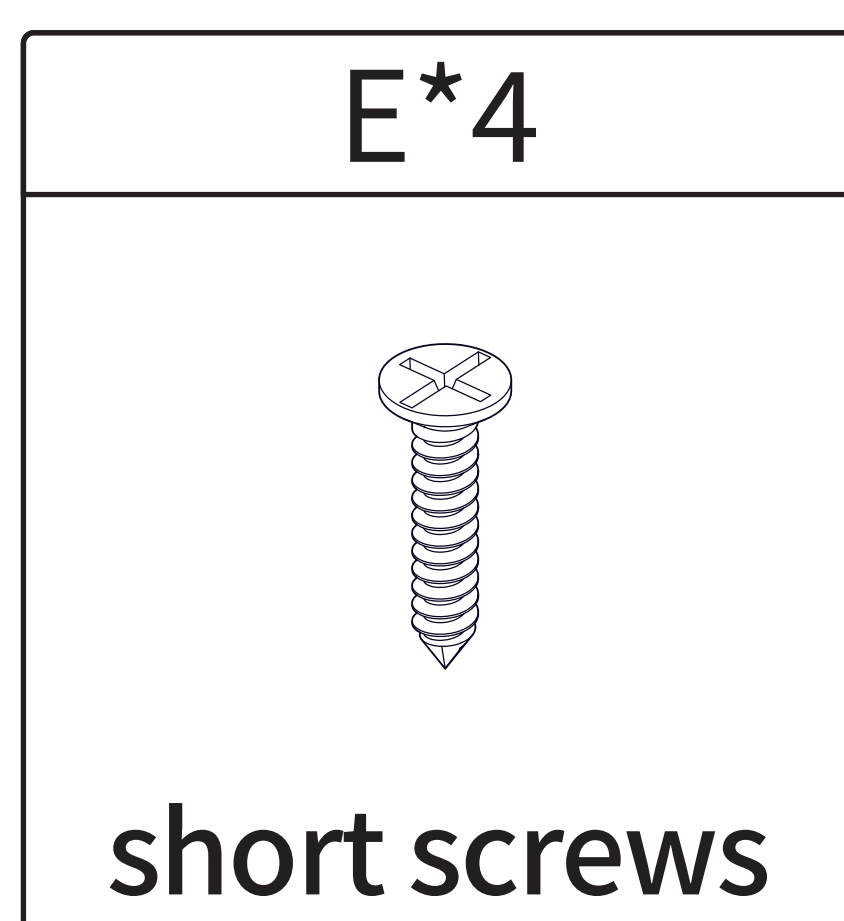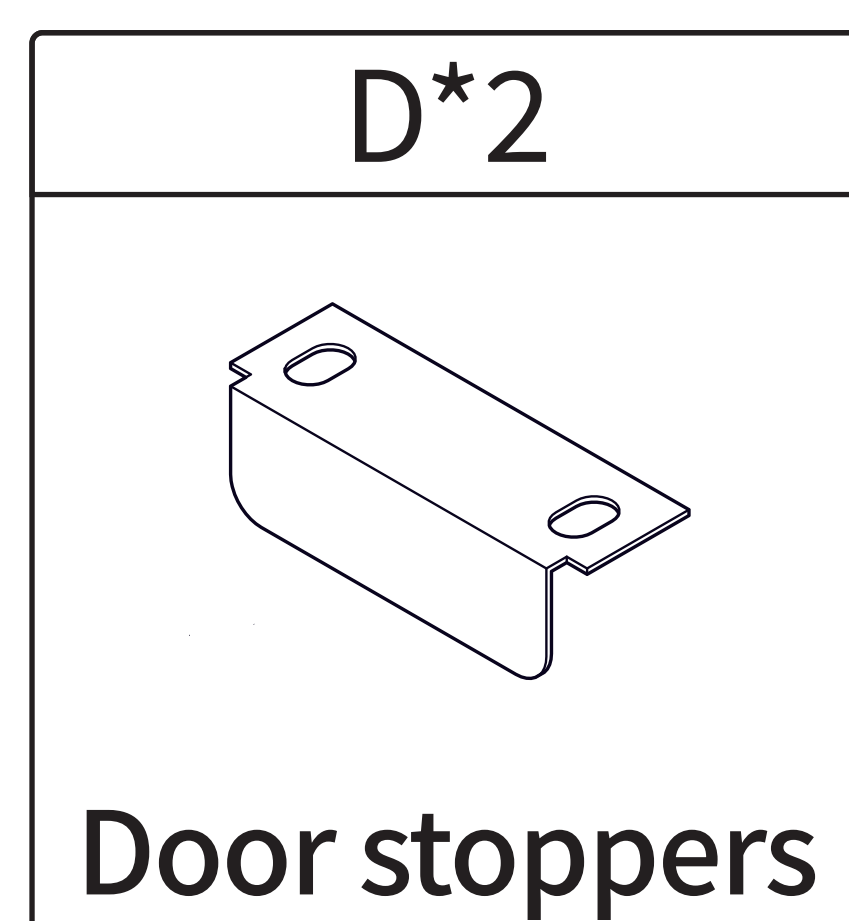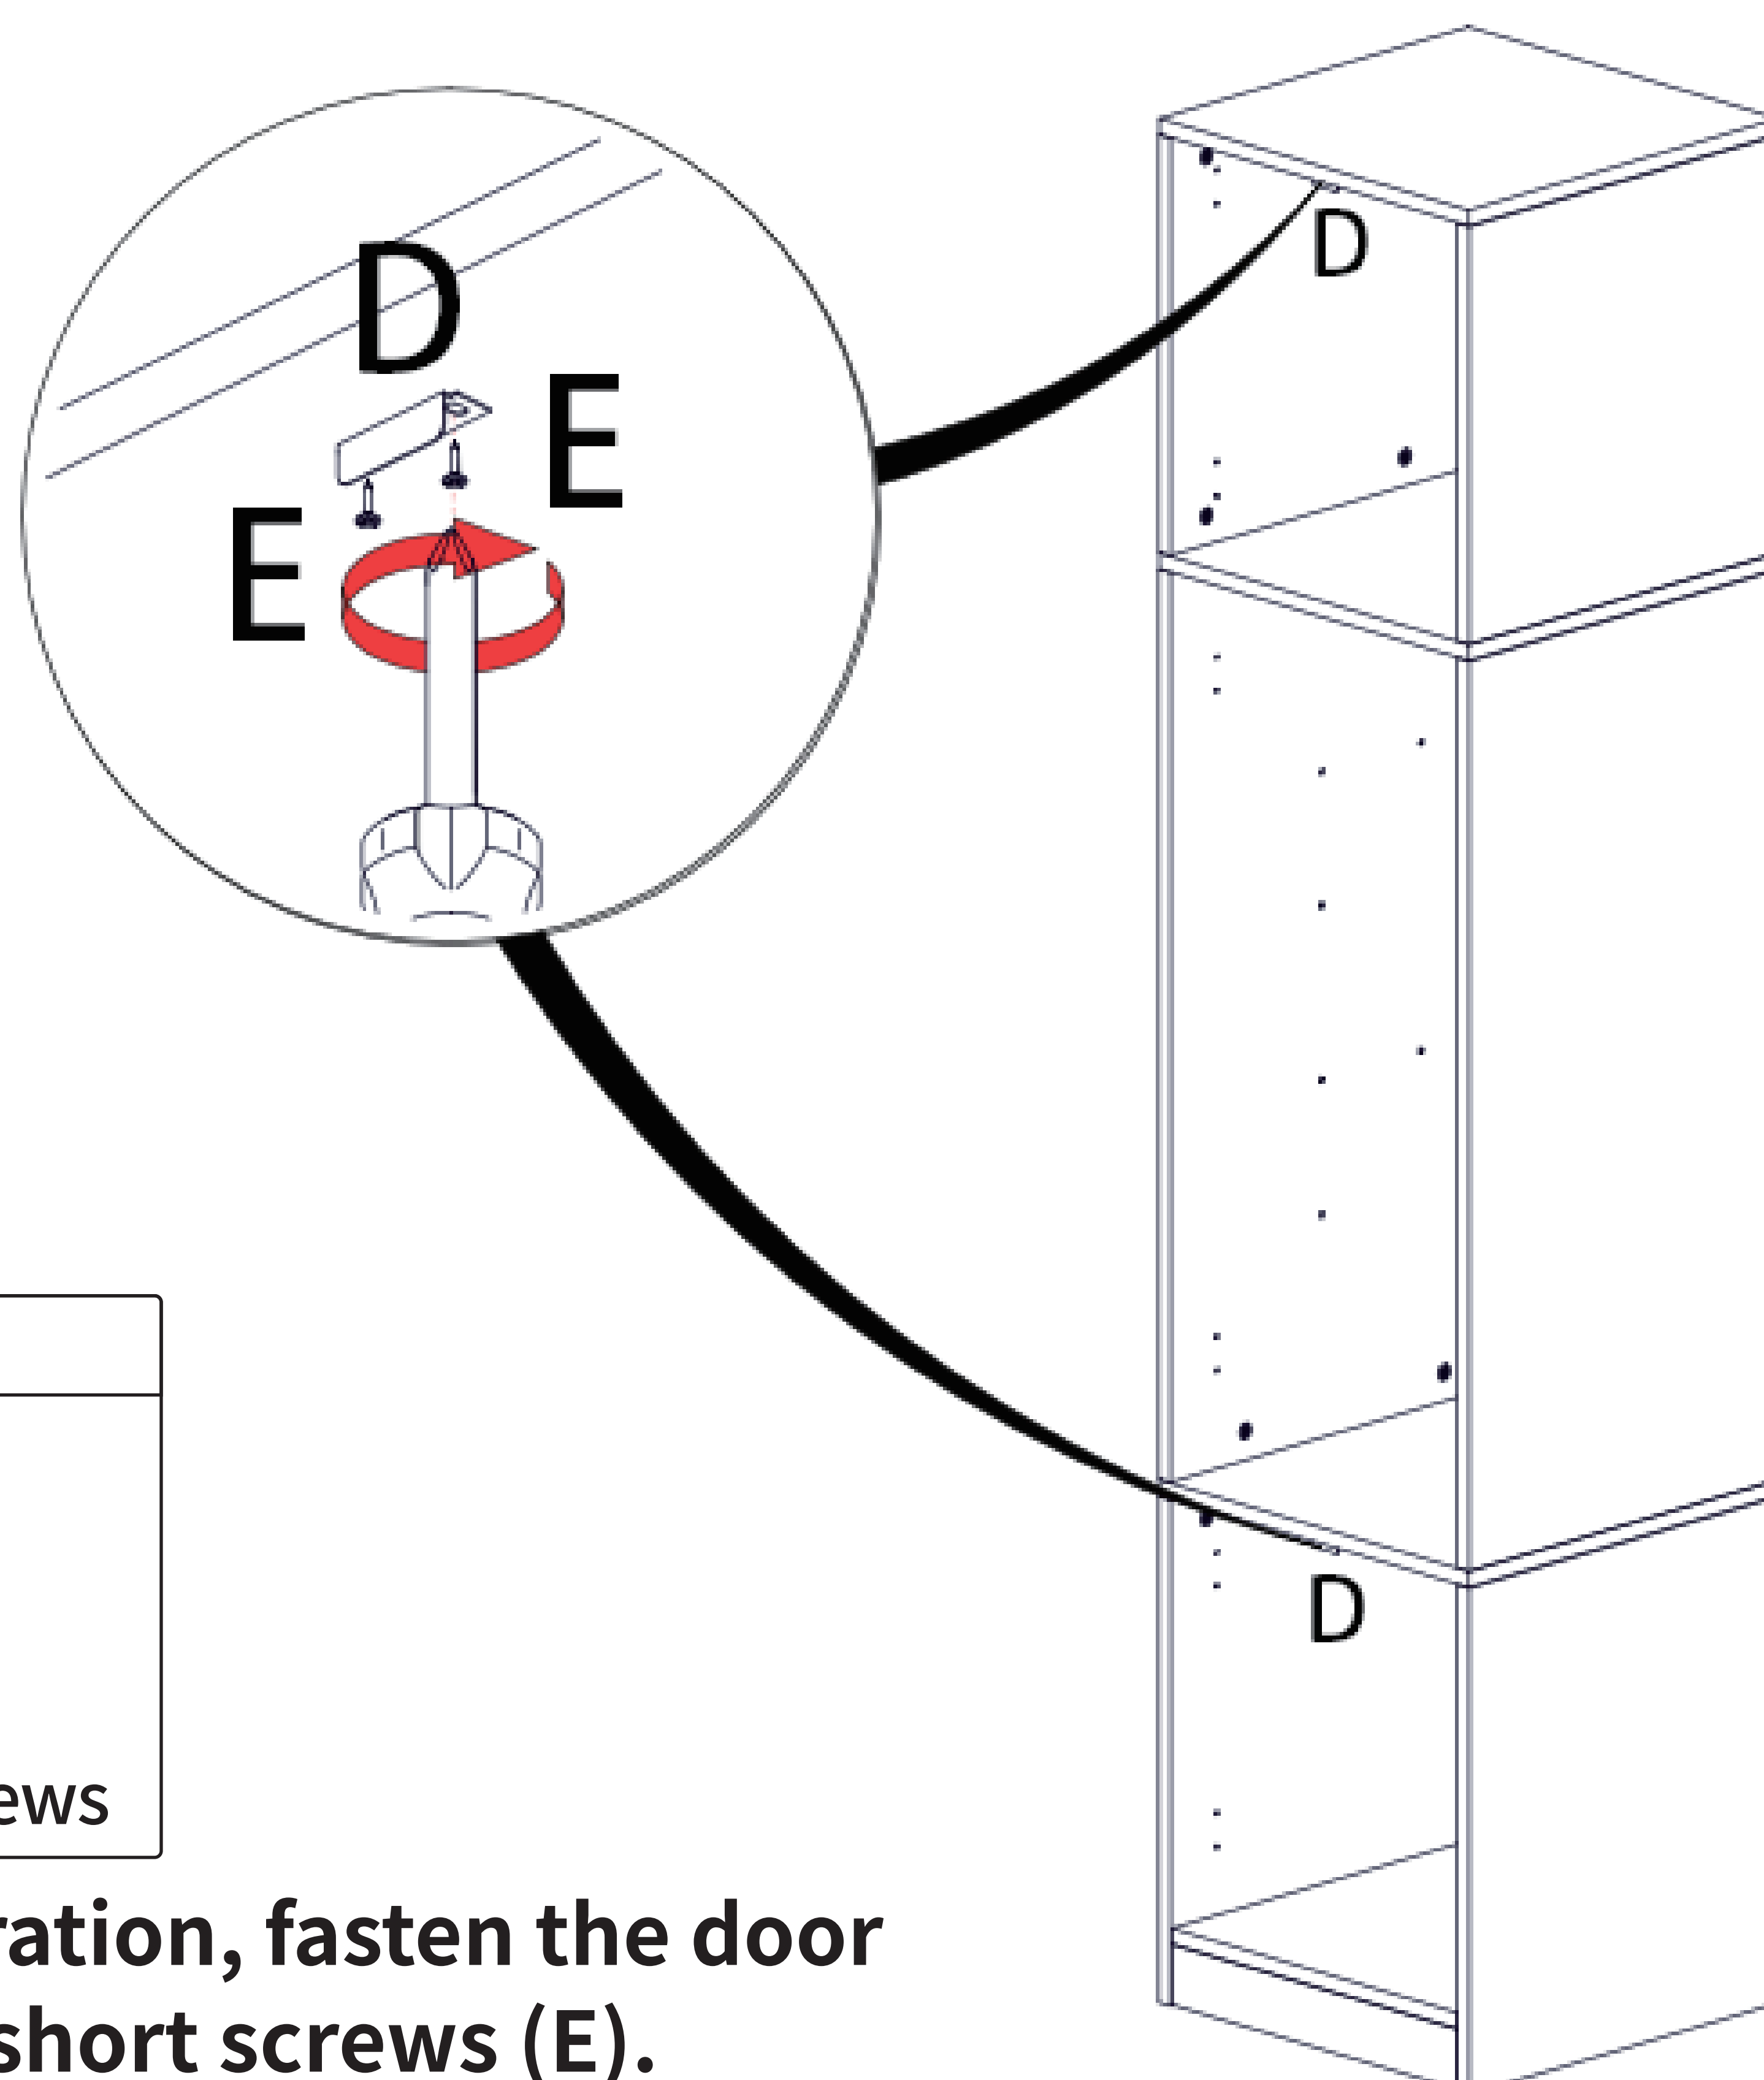   



As shown in the illustration, fasten the door stopper (D) using the short screws (E).

21

Insert the shelf pins (F) into Panels 7 and 8



then place Panel 9 onto the shelf pins. Next

  Next, insert the shelf pin hole covers (FA) into the adjustment holes on panels 7 and 8.

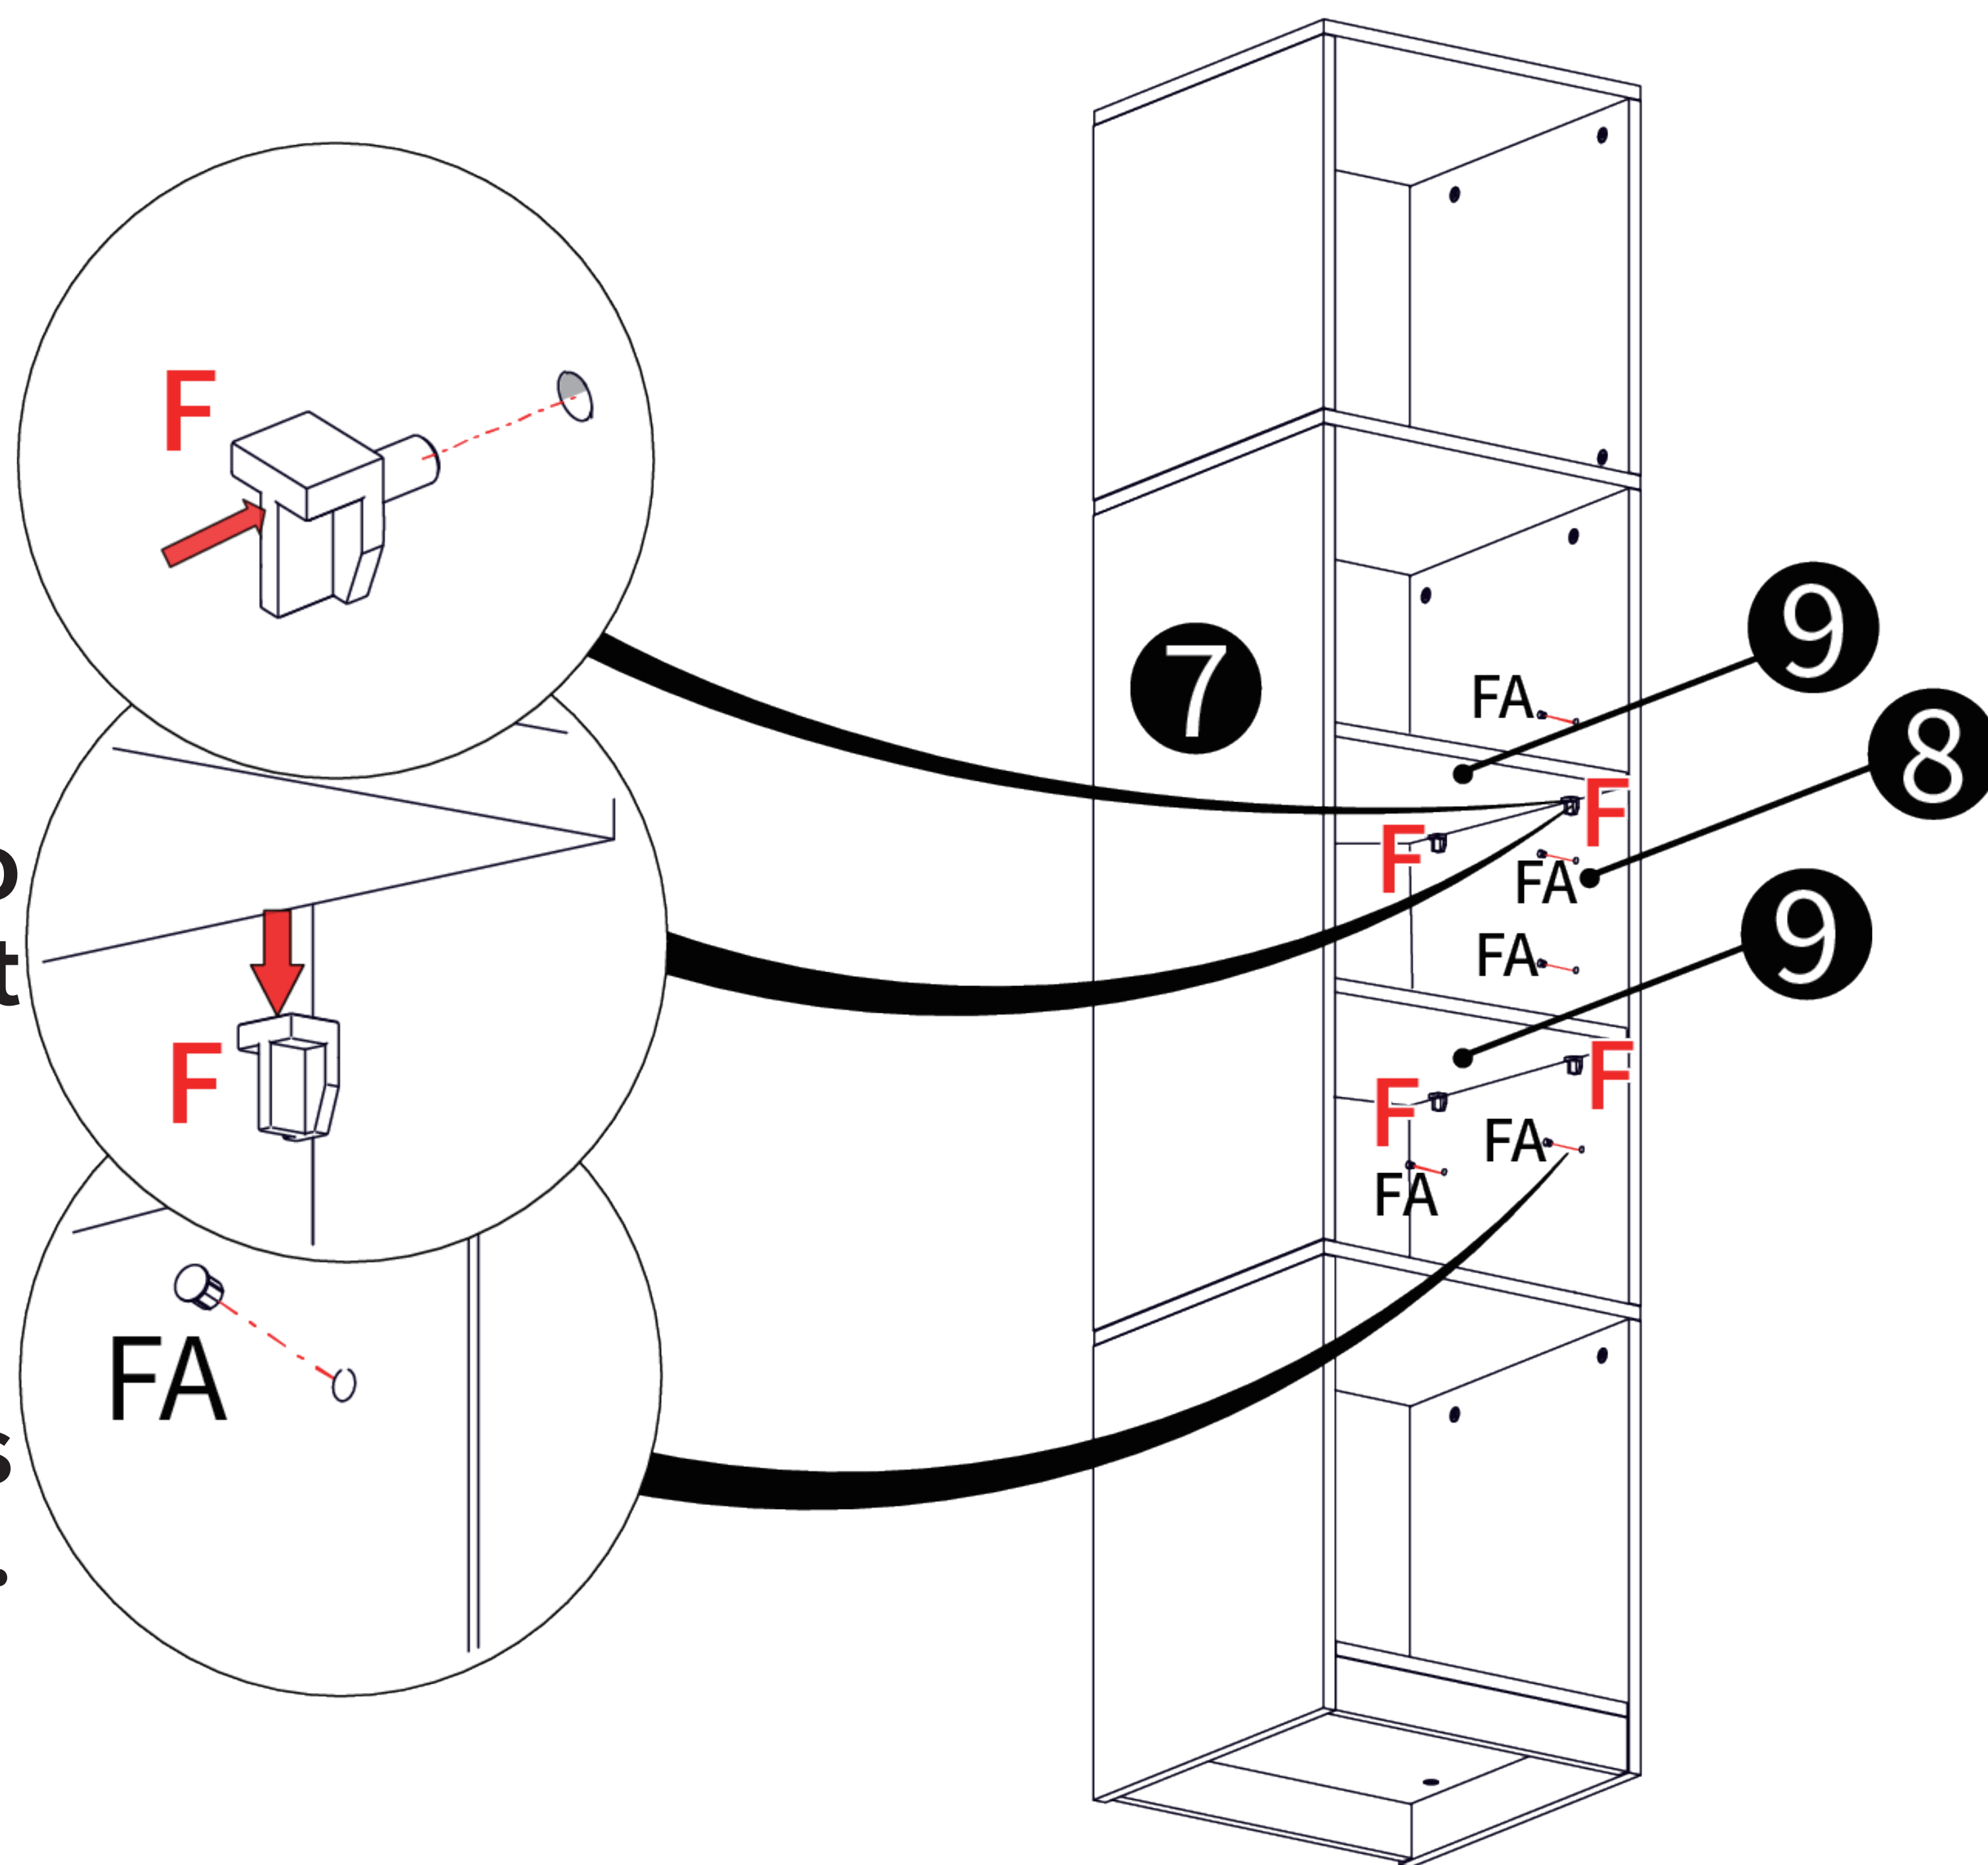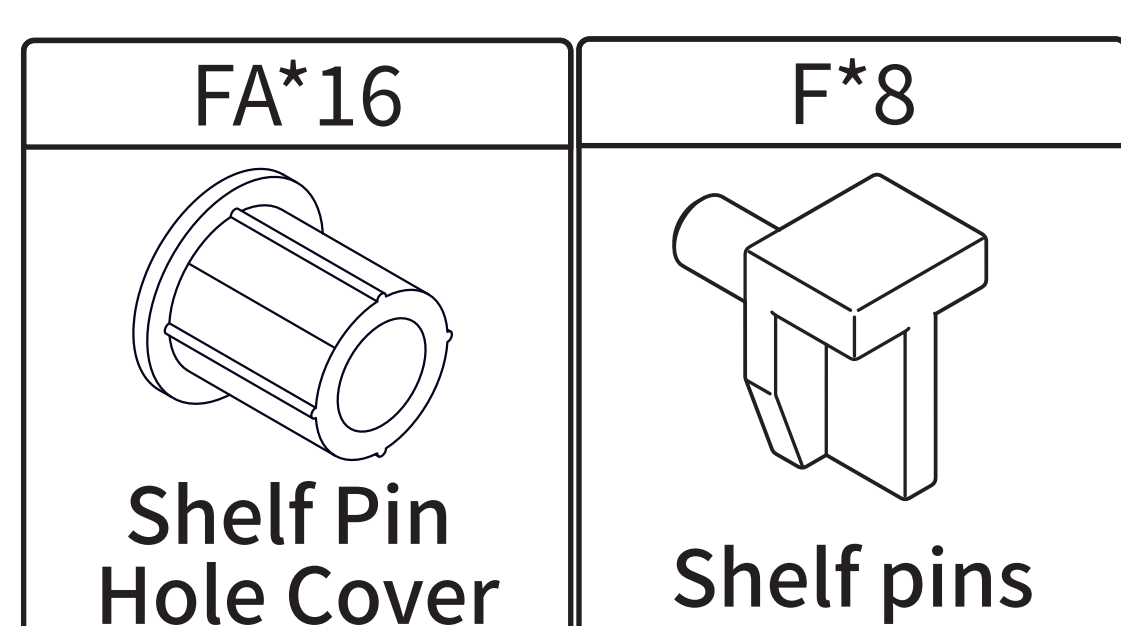


22

 
 
As shown in the illustration, fasten the hinges (G) to Panels 17 and 19 using the short screws (E).

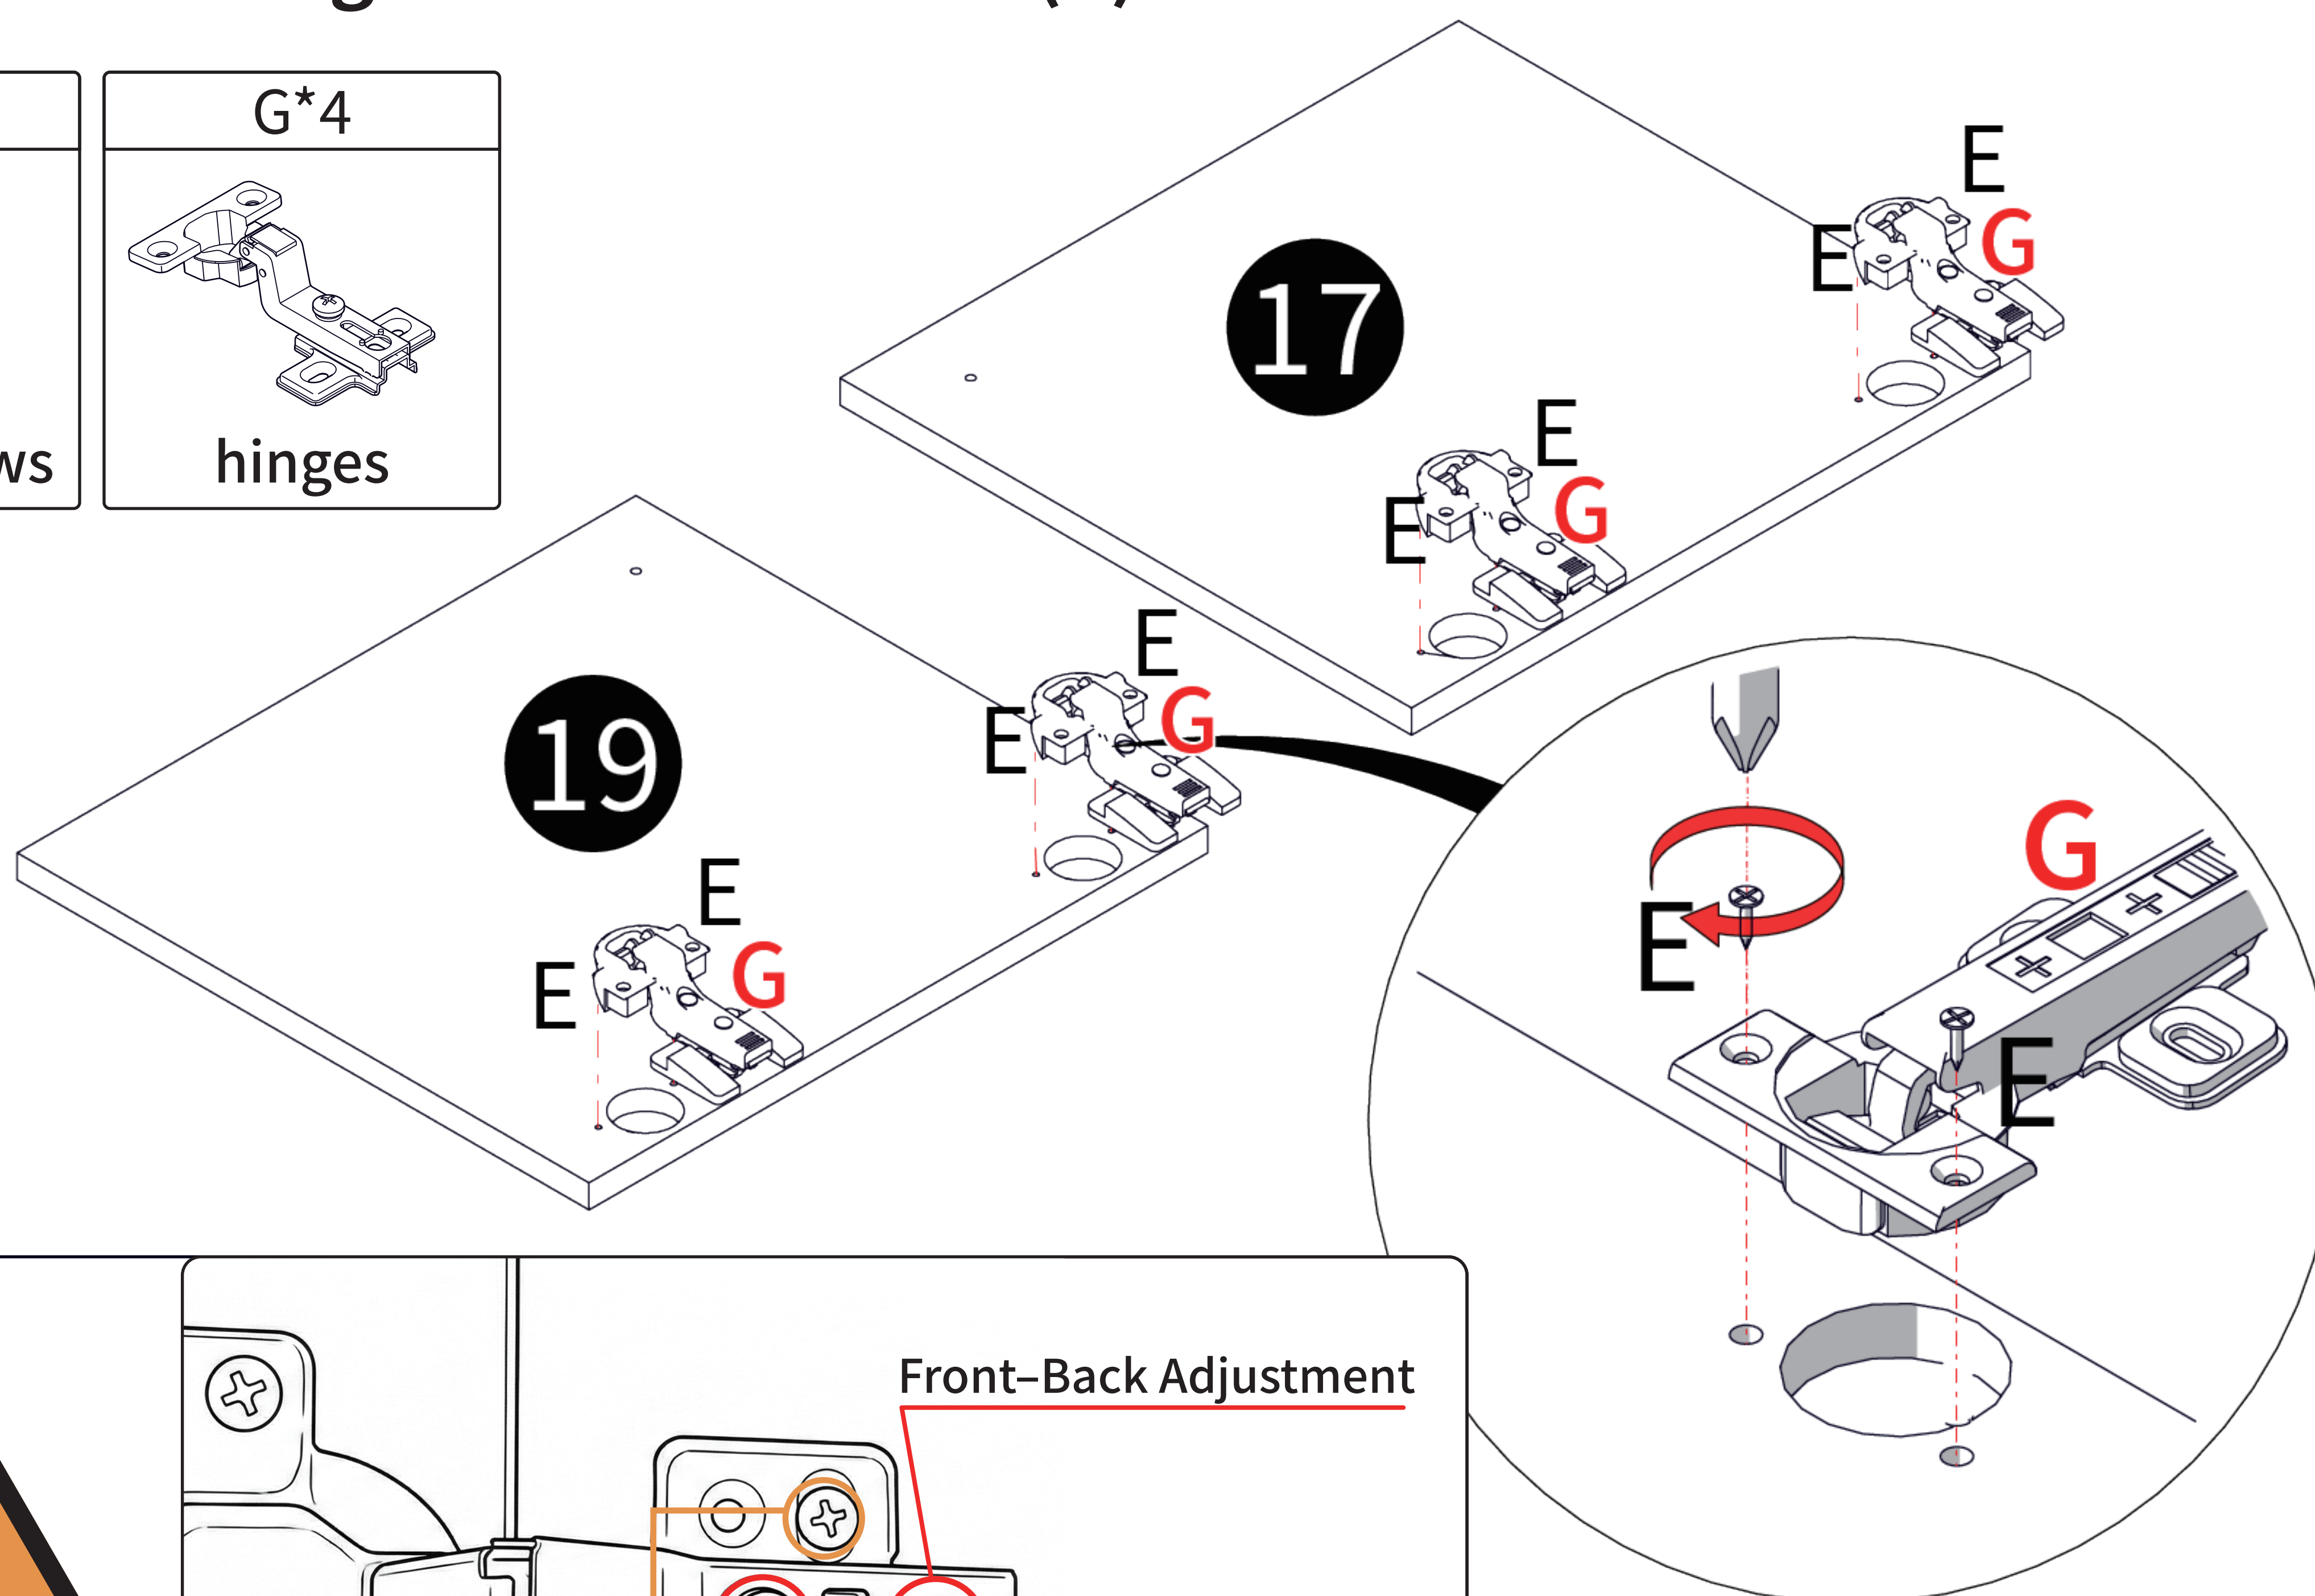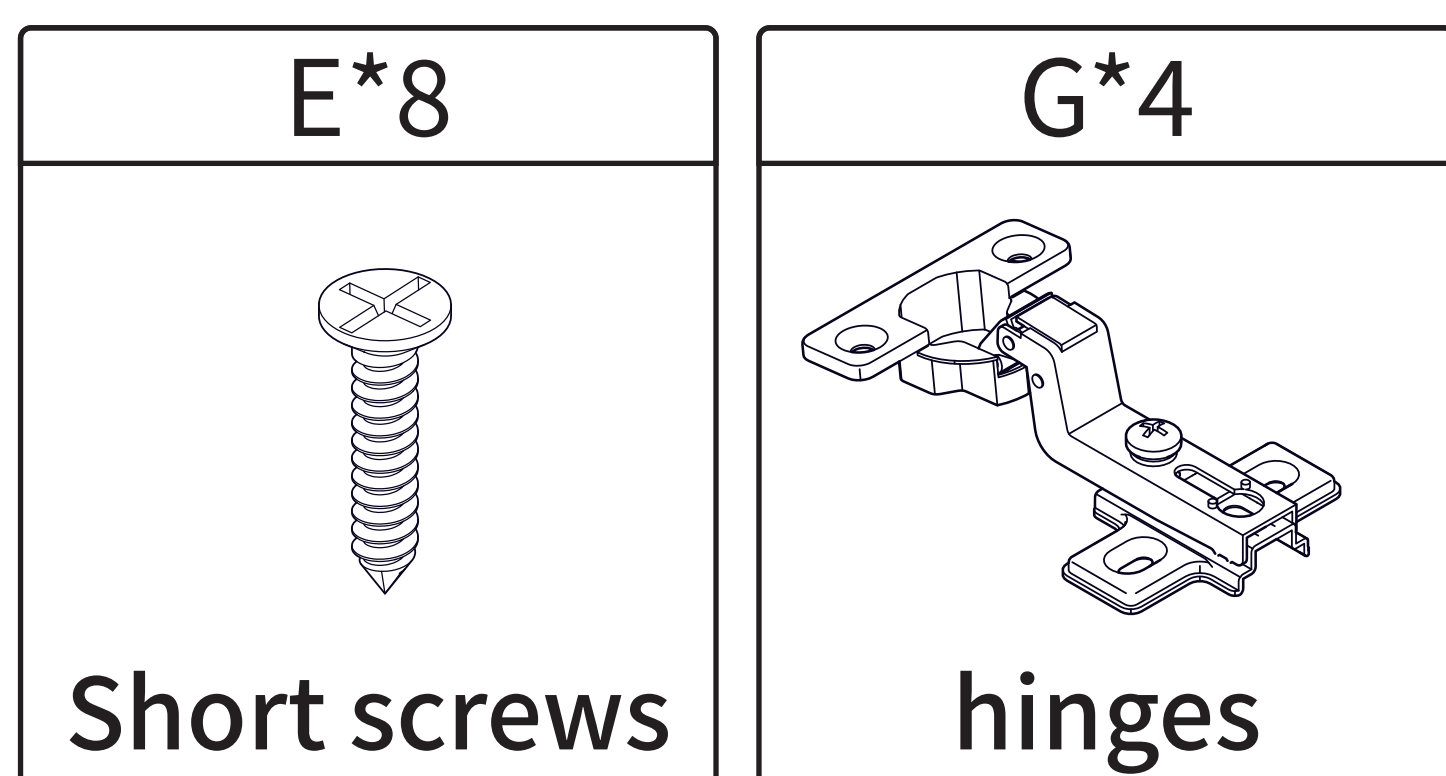


 Hinge Adjustment Method
Adjust if needed.

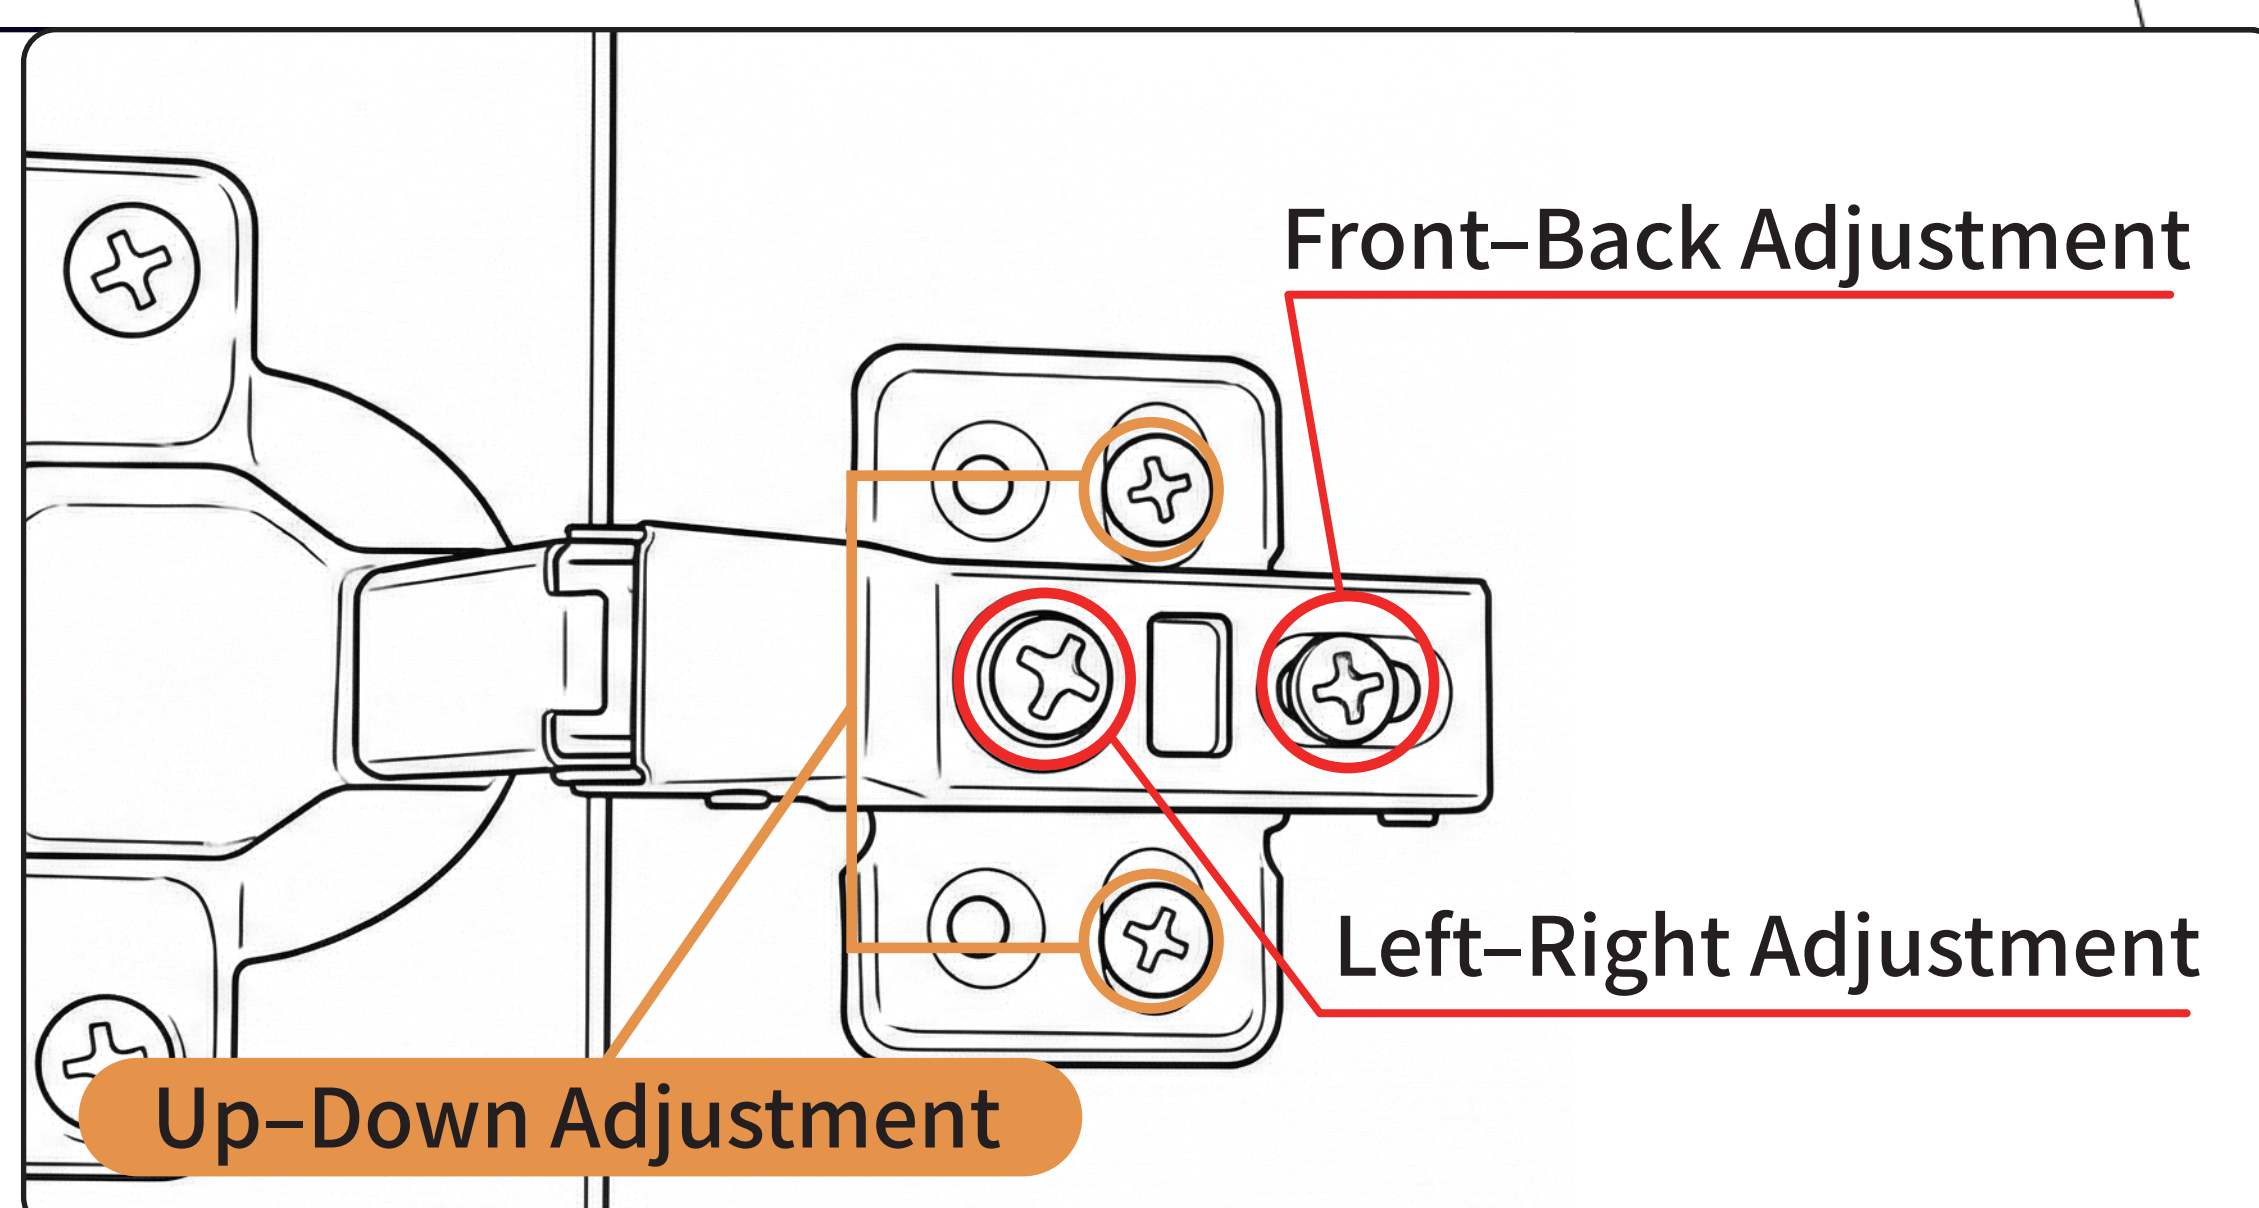


  23 As shown in the figure, use the short screws (E) to fasten the hinges (G) to panel 18.

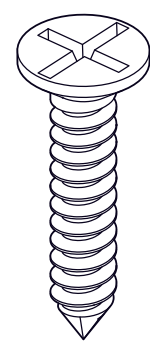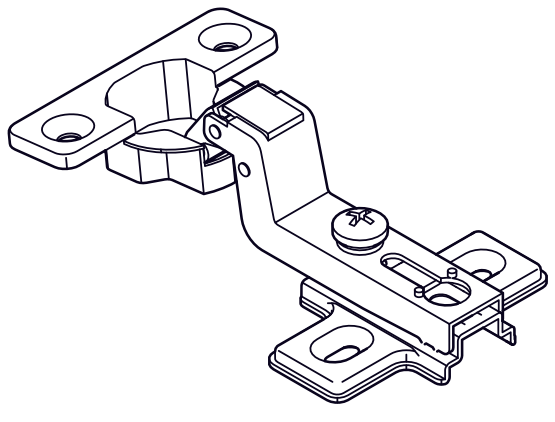
E*4	G*2
	
Short screws	hinges

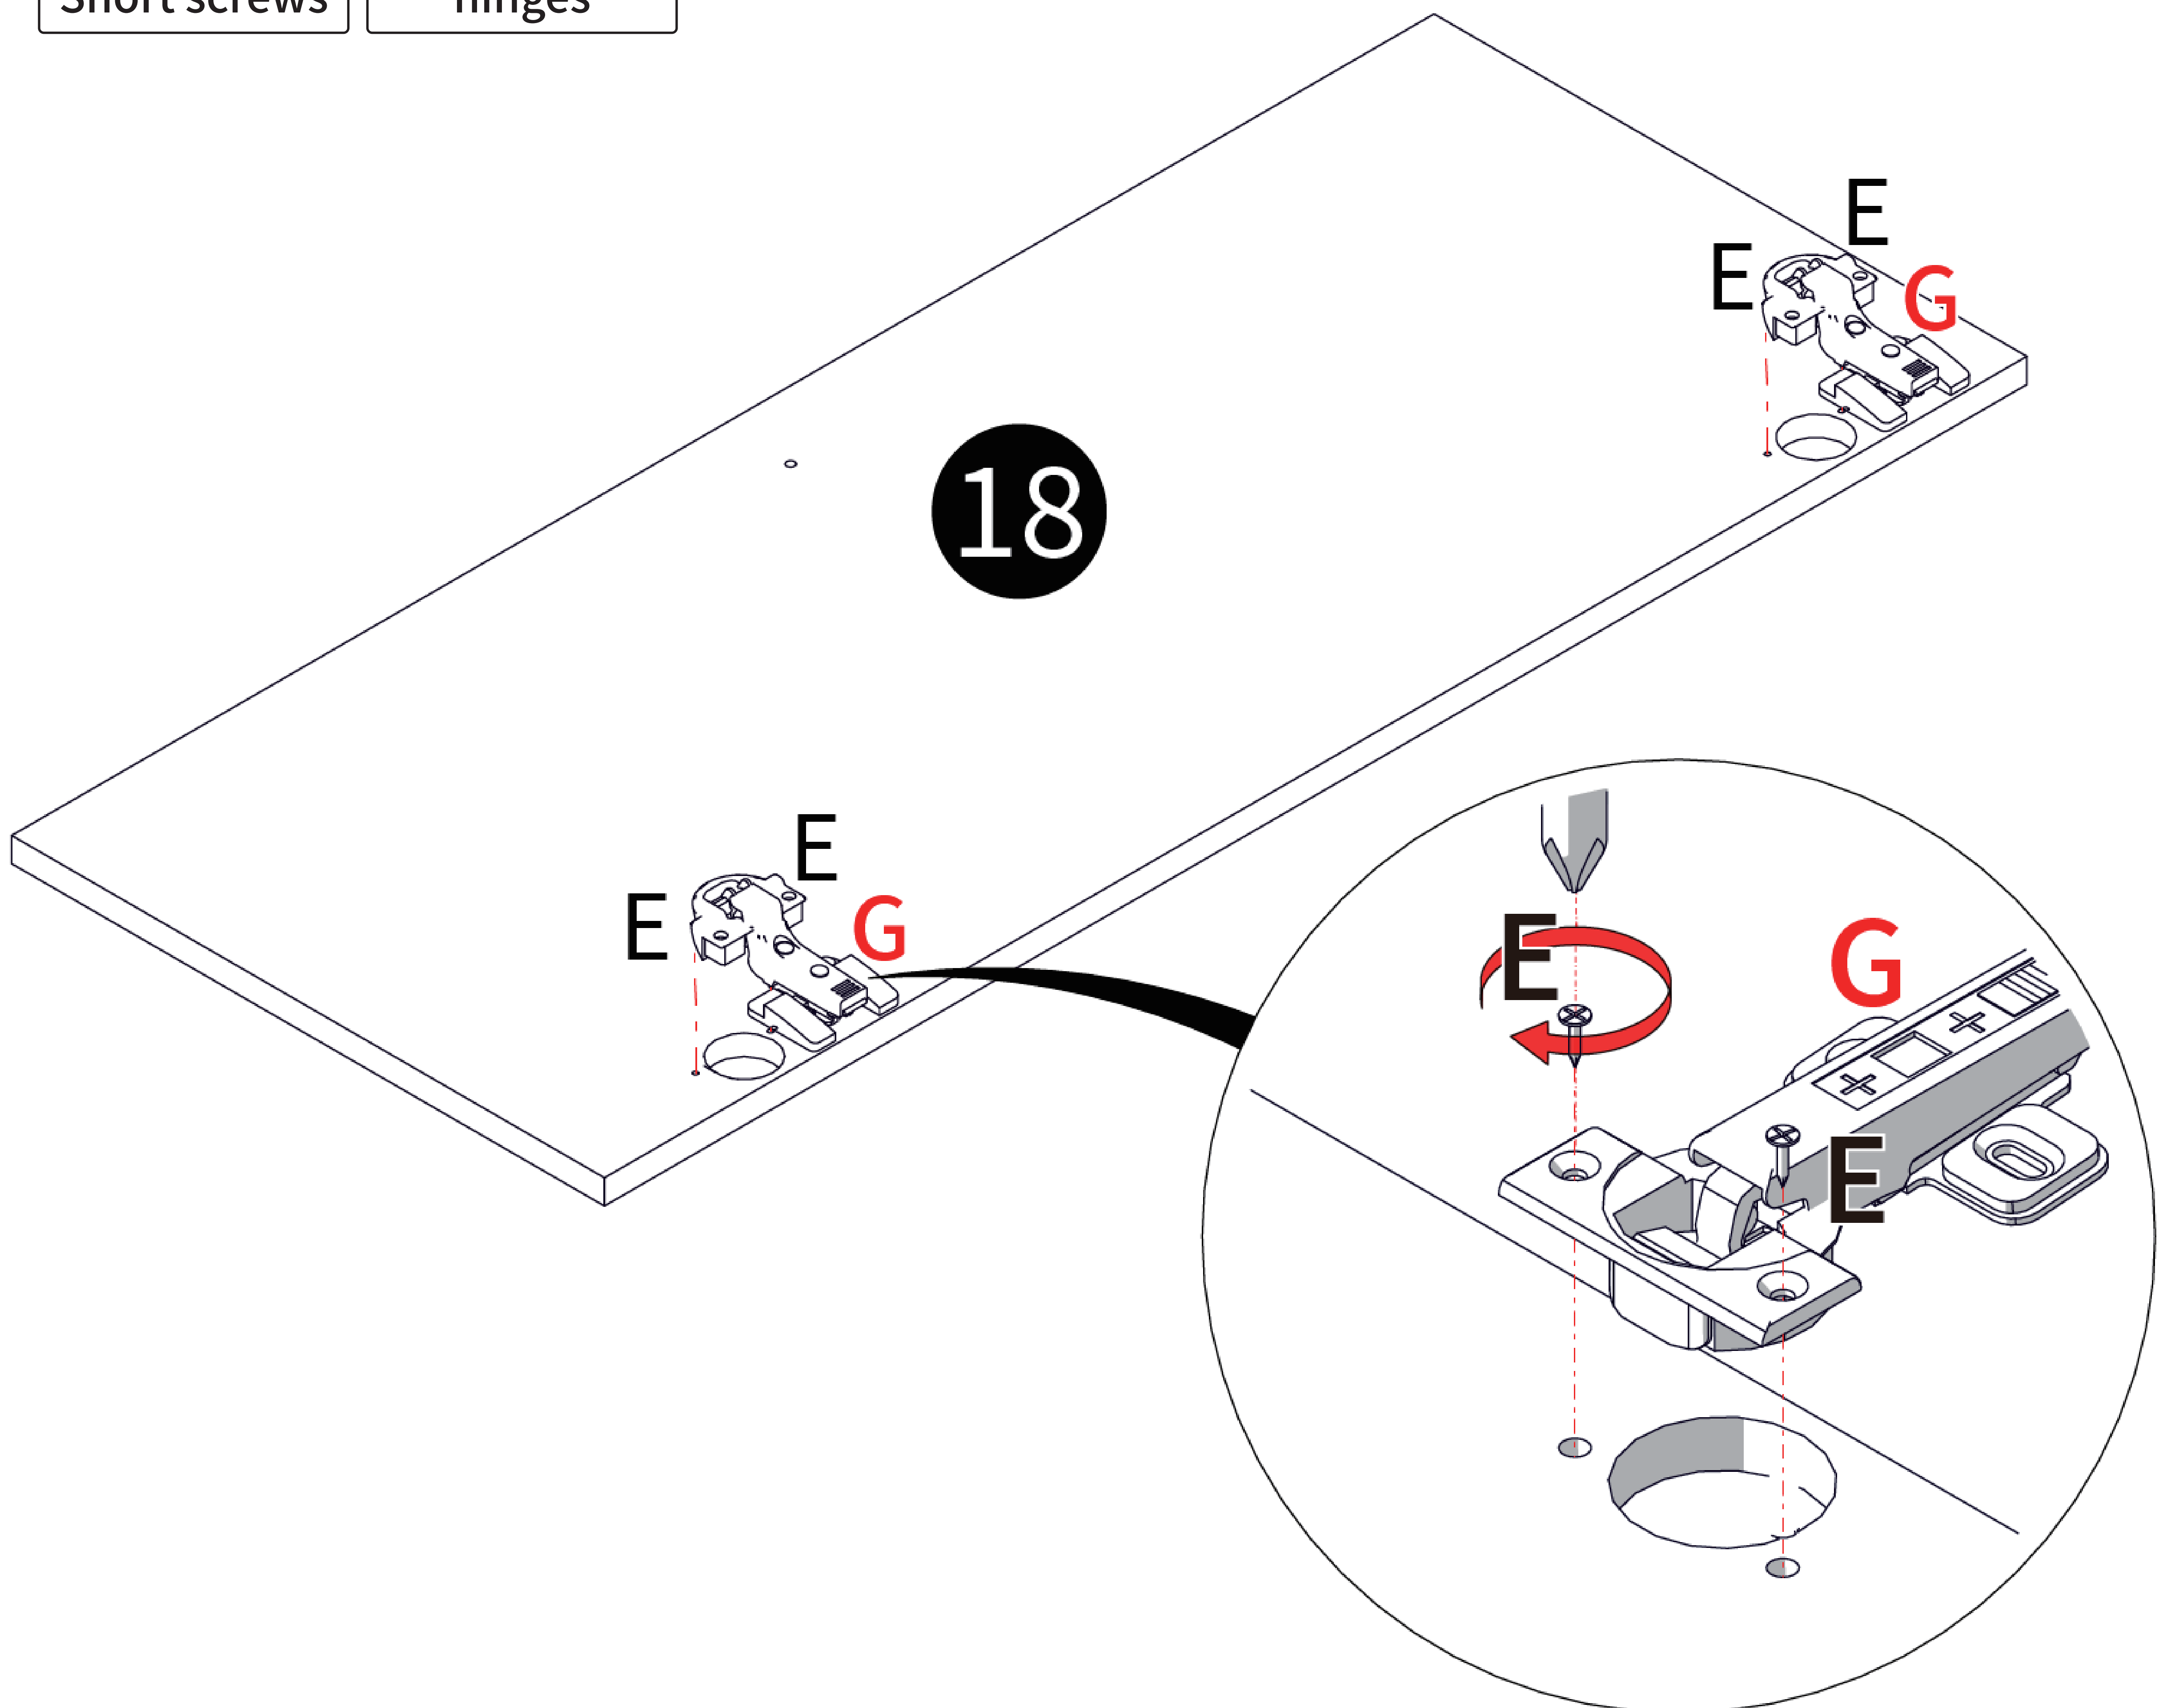 

 
Hinge Adjustment Method
Adjust if needed.

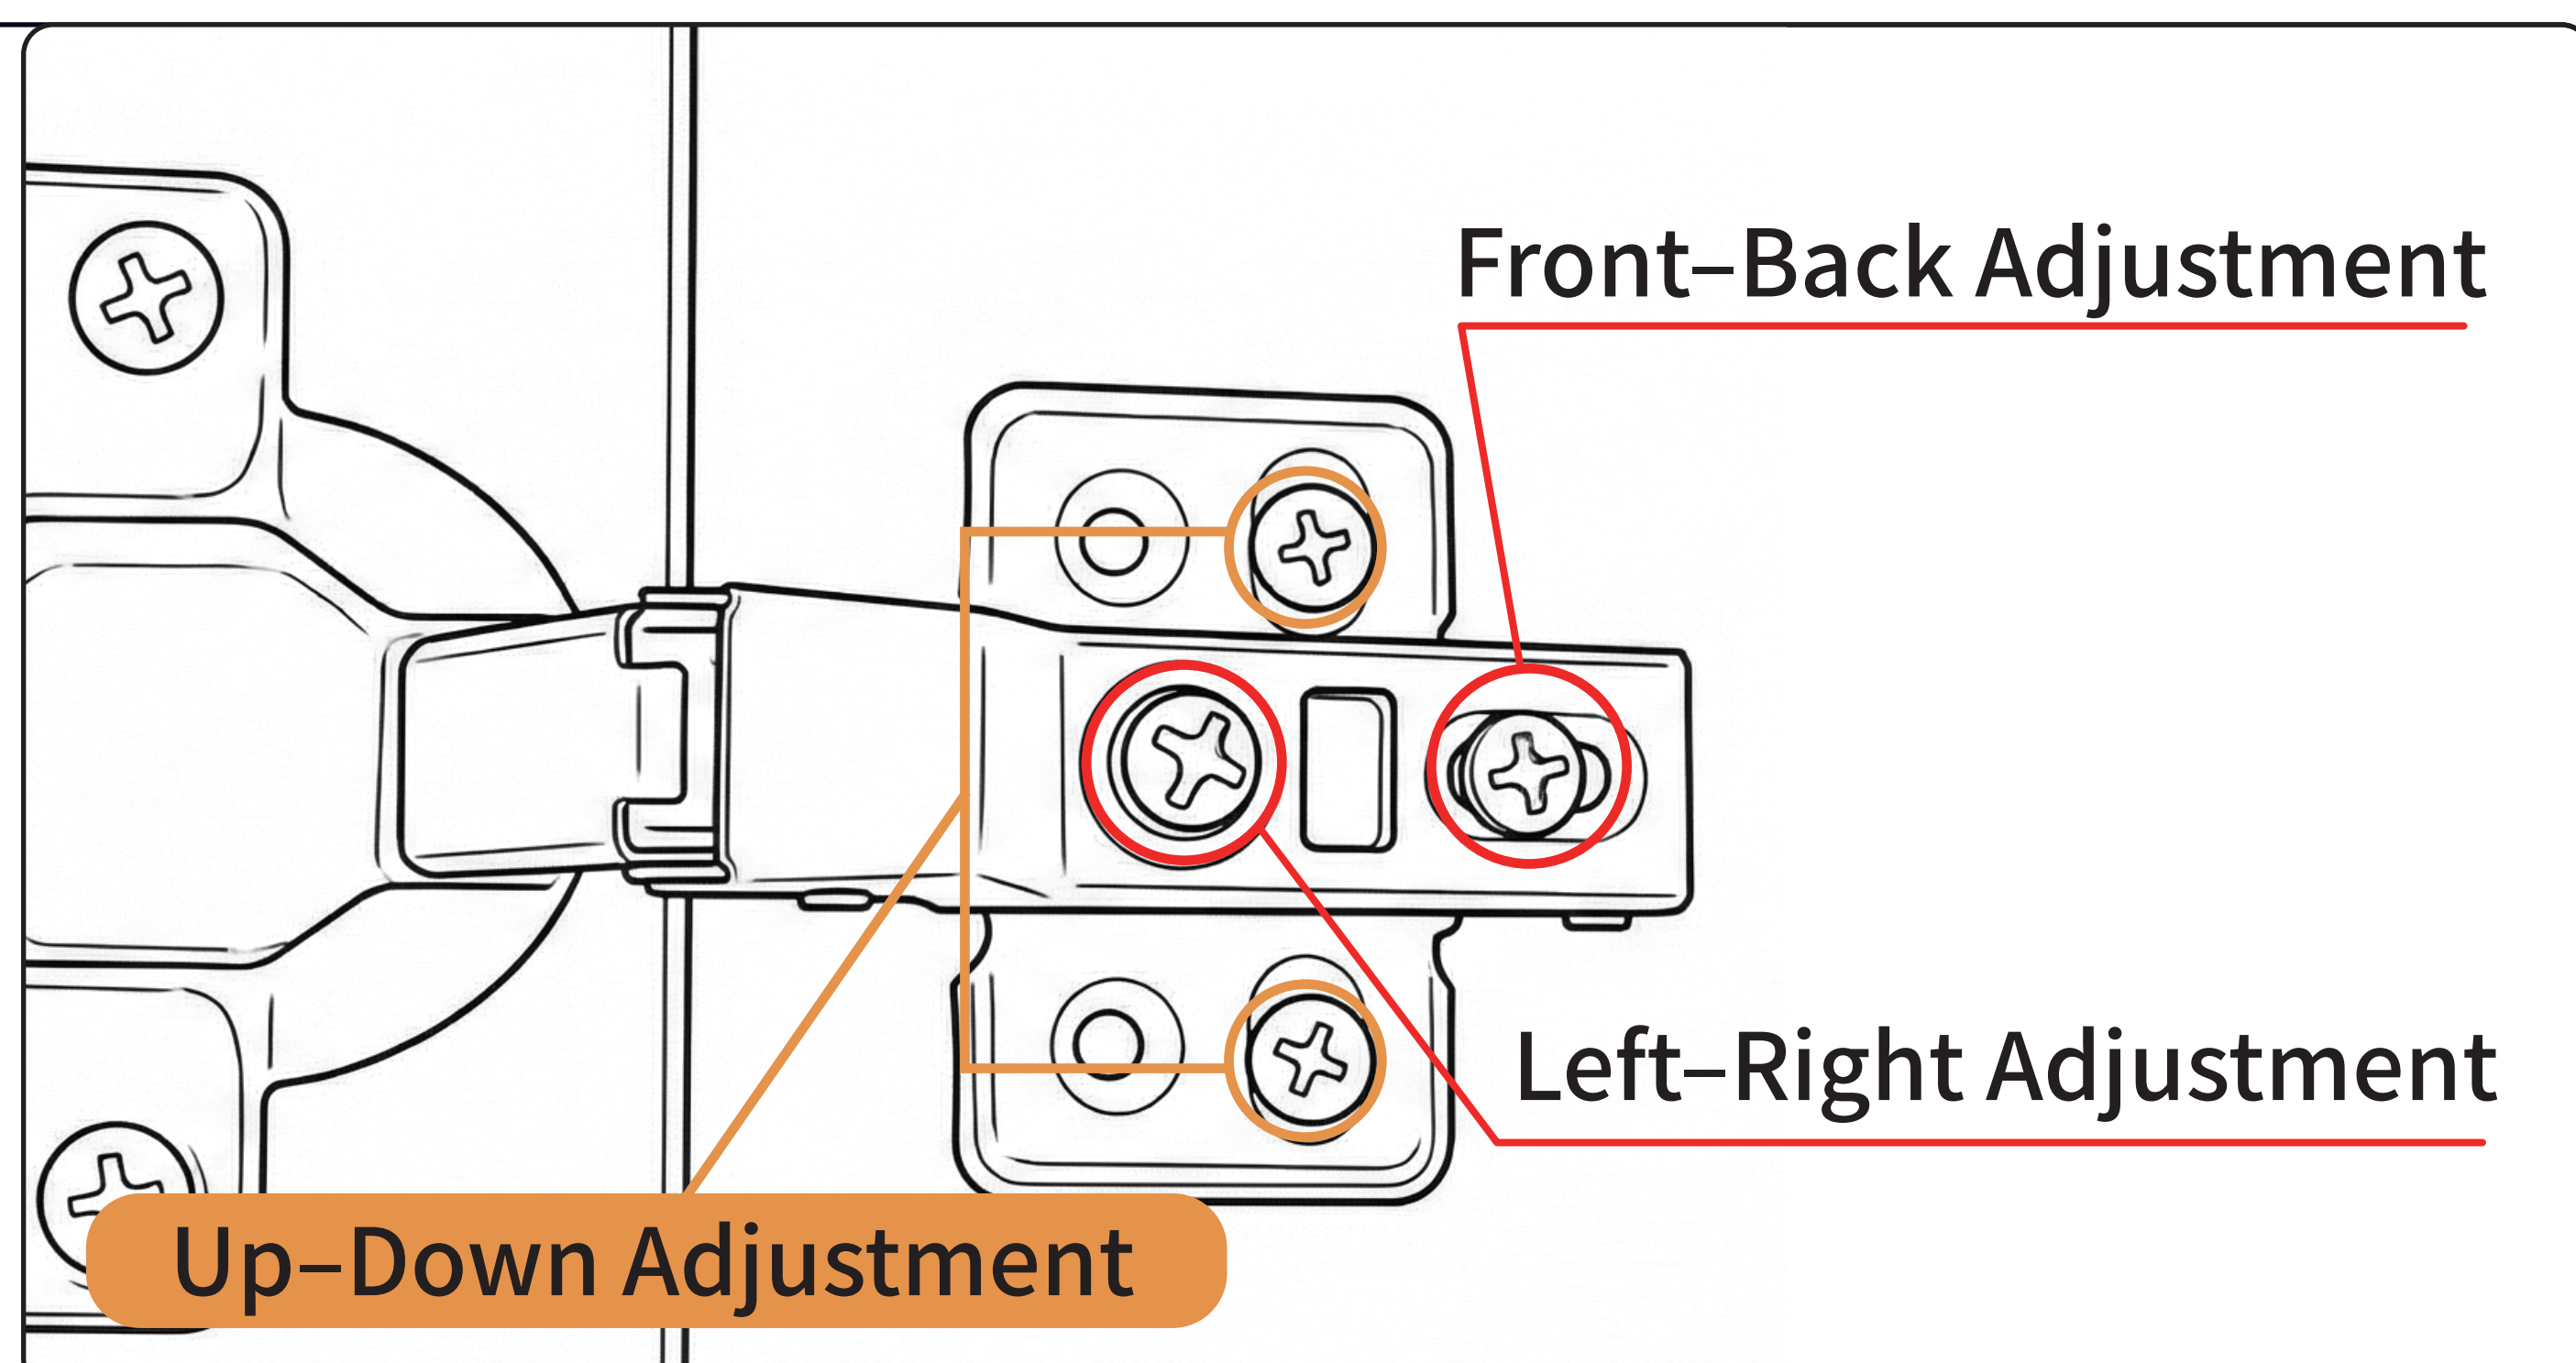

24

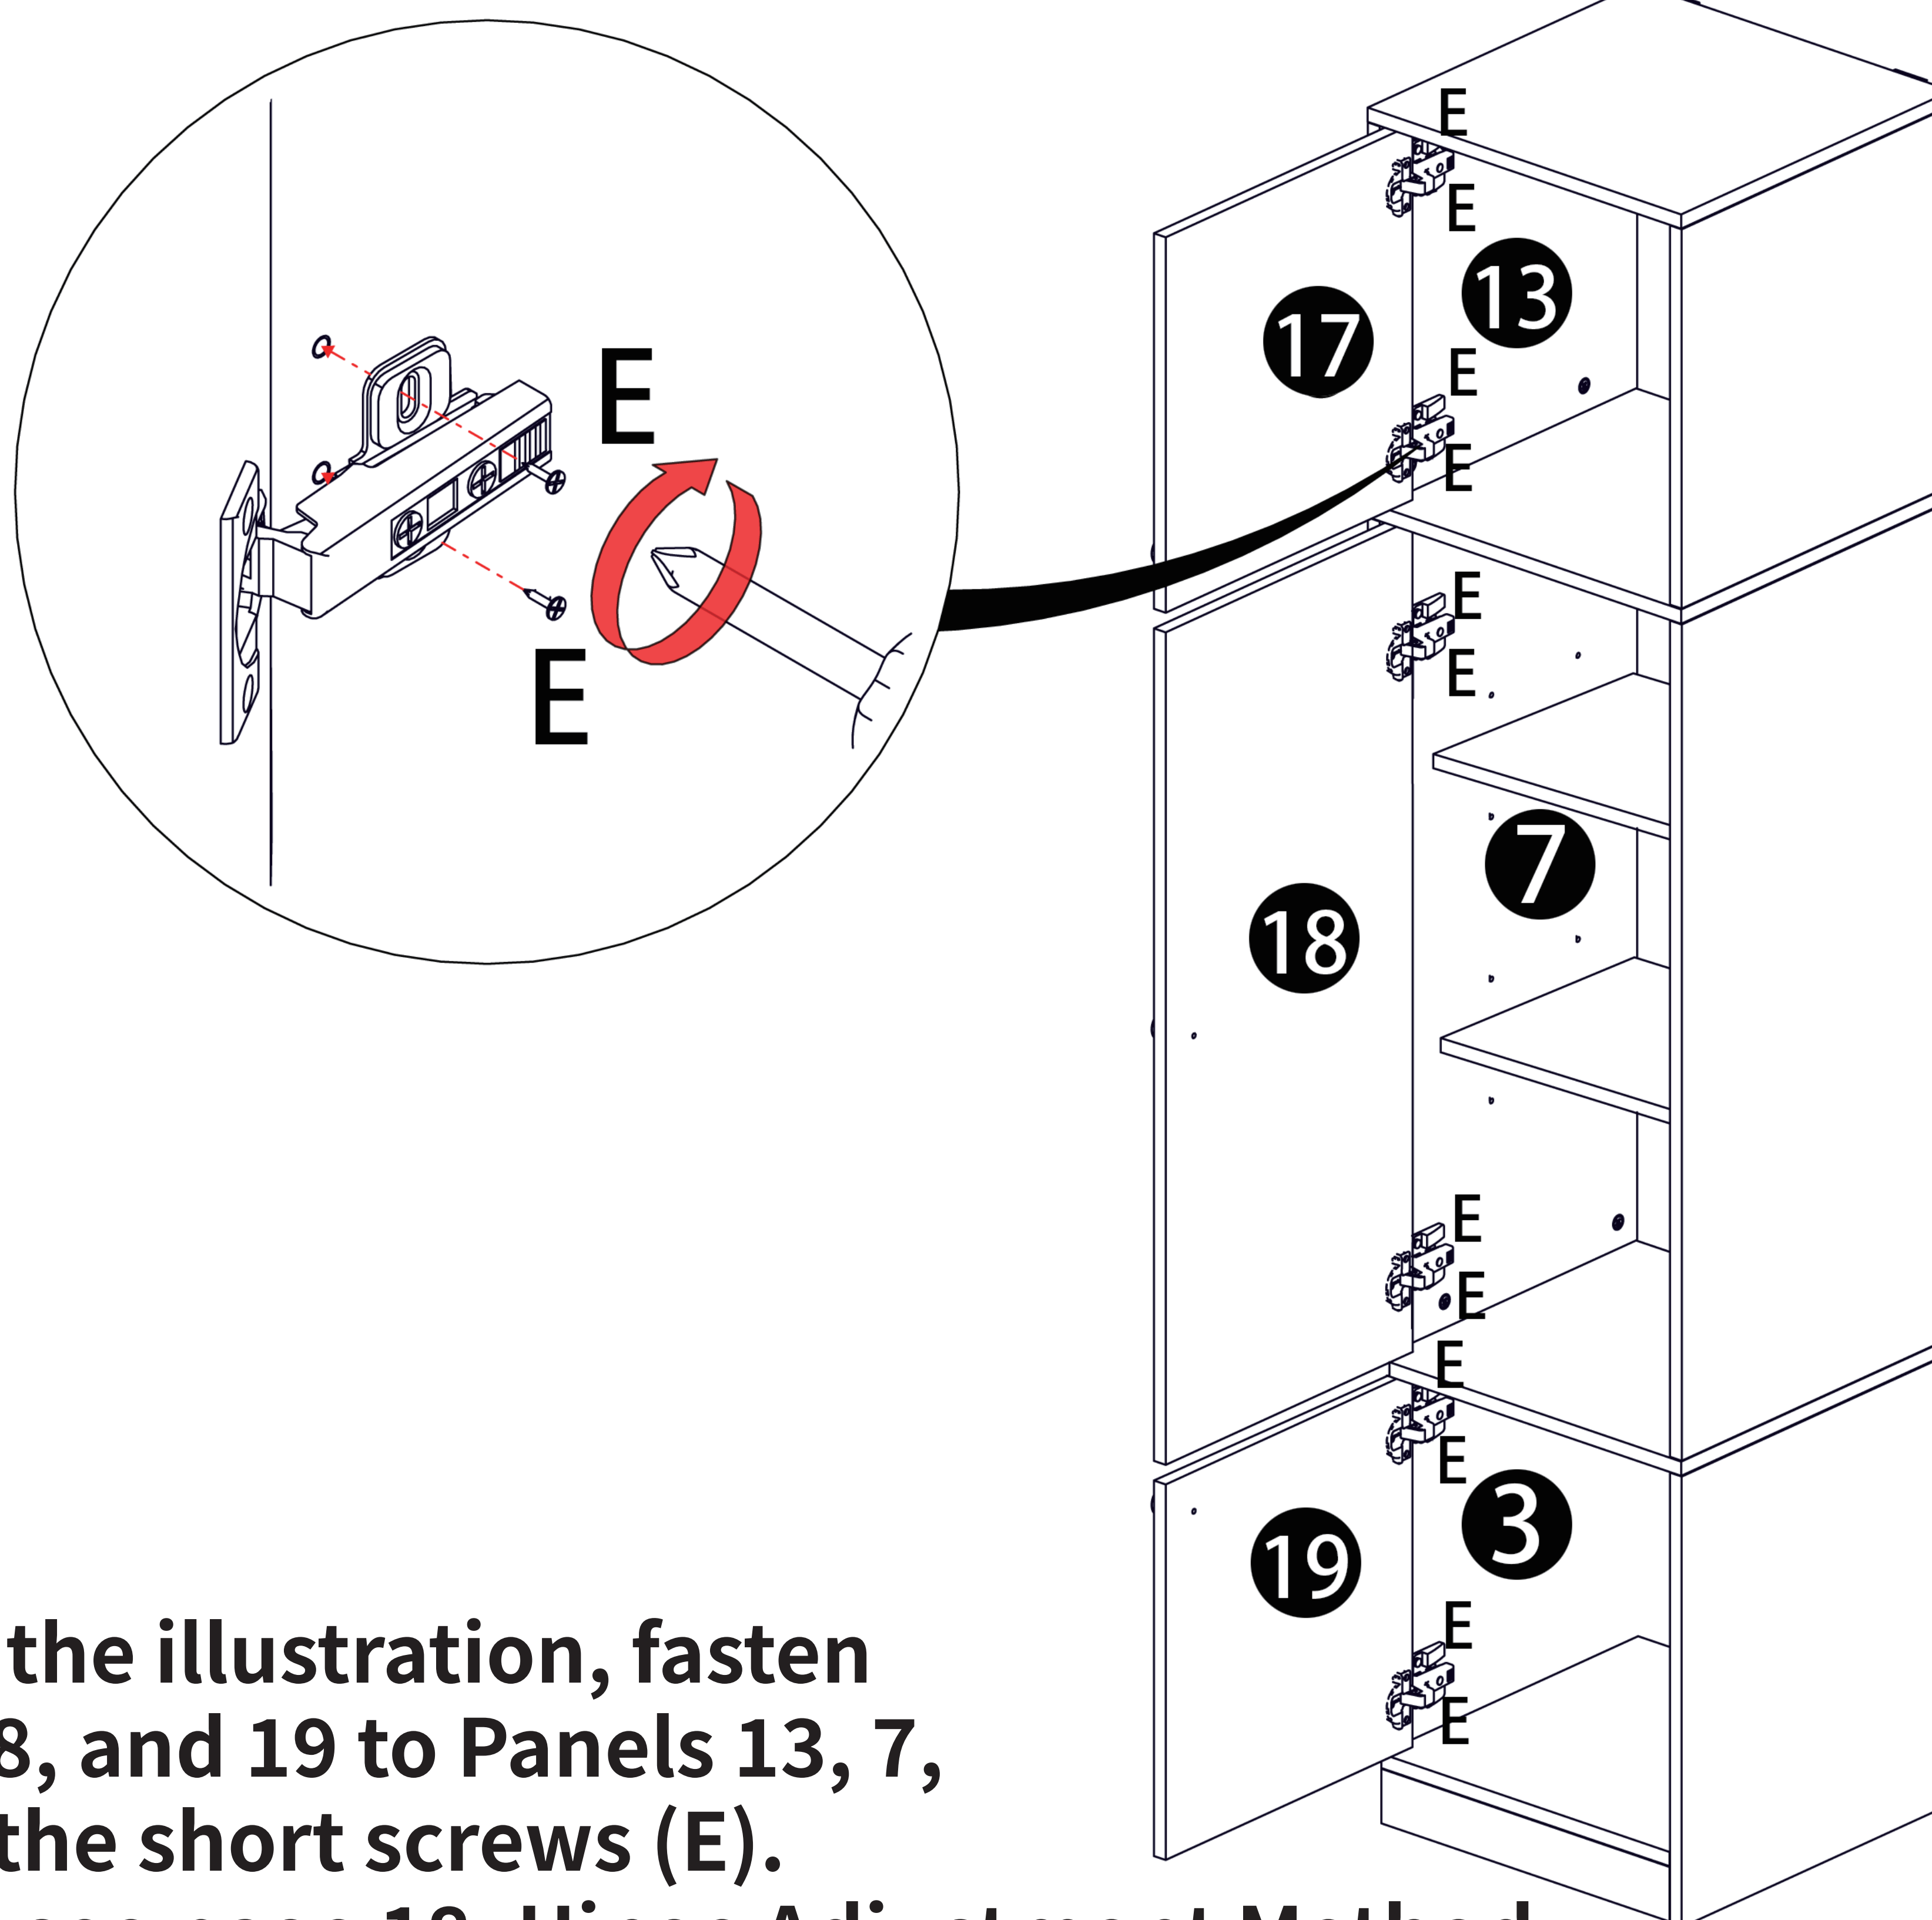 

E*12

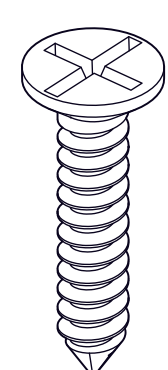 


Short screws


As shown in the illustration, fasten Panels 17, 18, and 19 to Panels 13, 7, and 3 using the short screws (E).

*For details, see page 18: Hinge Adjustment Method.

 25

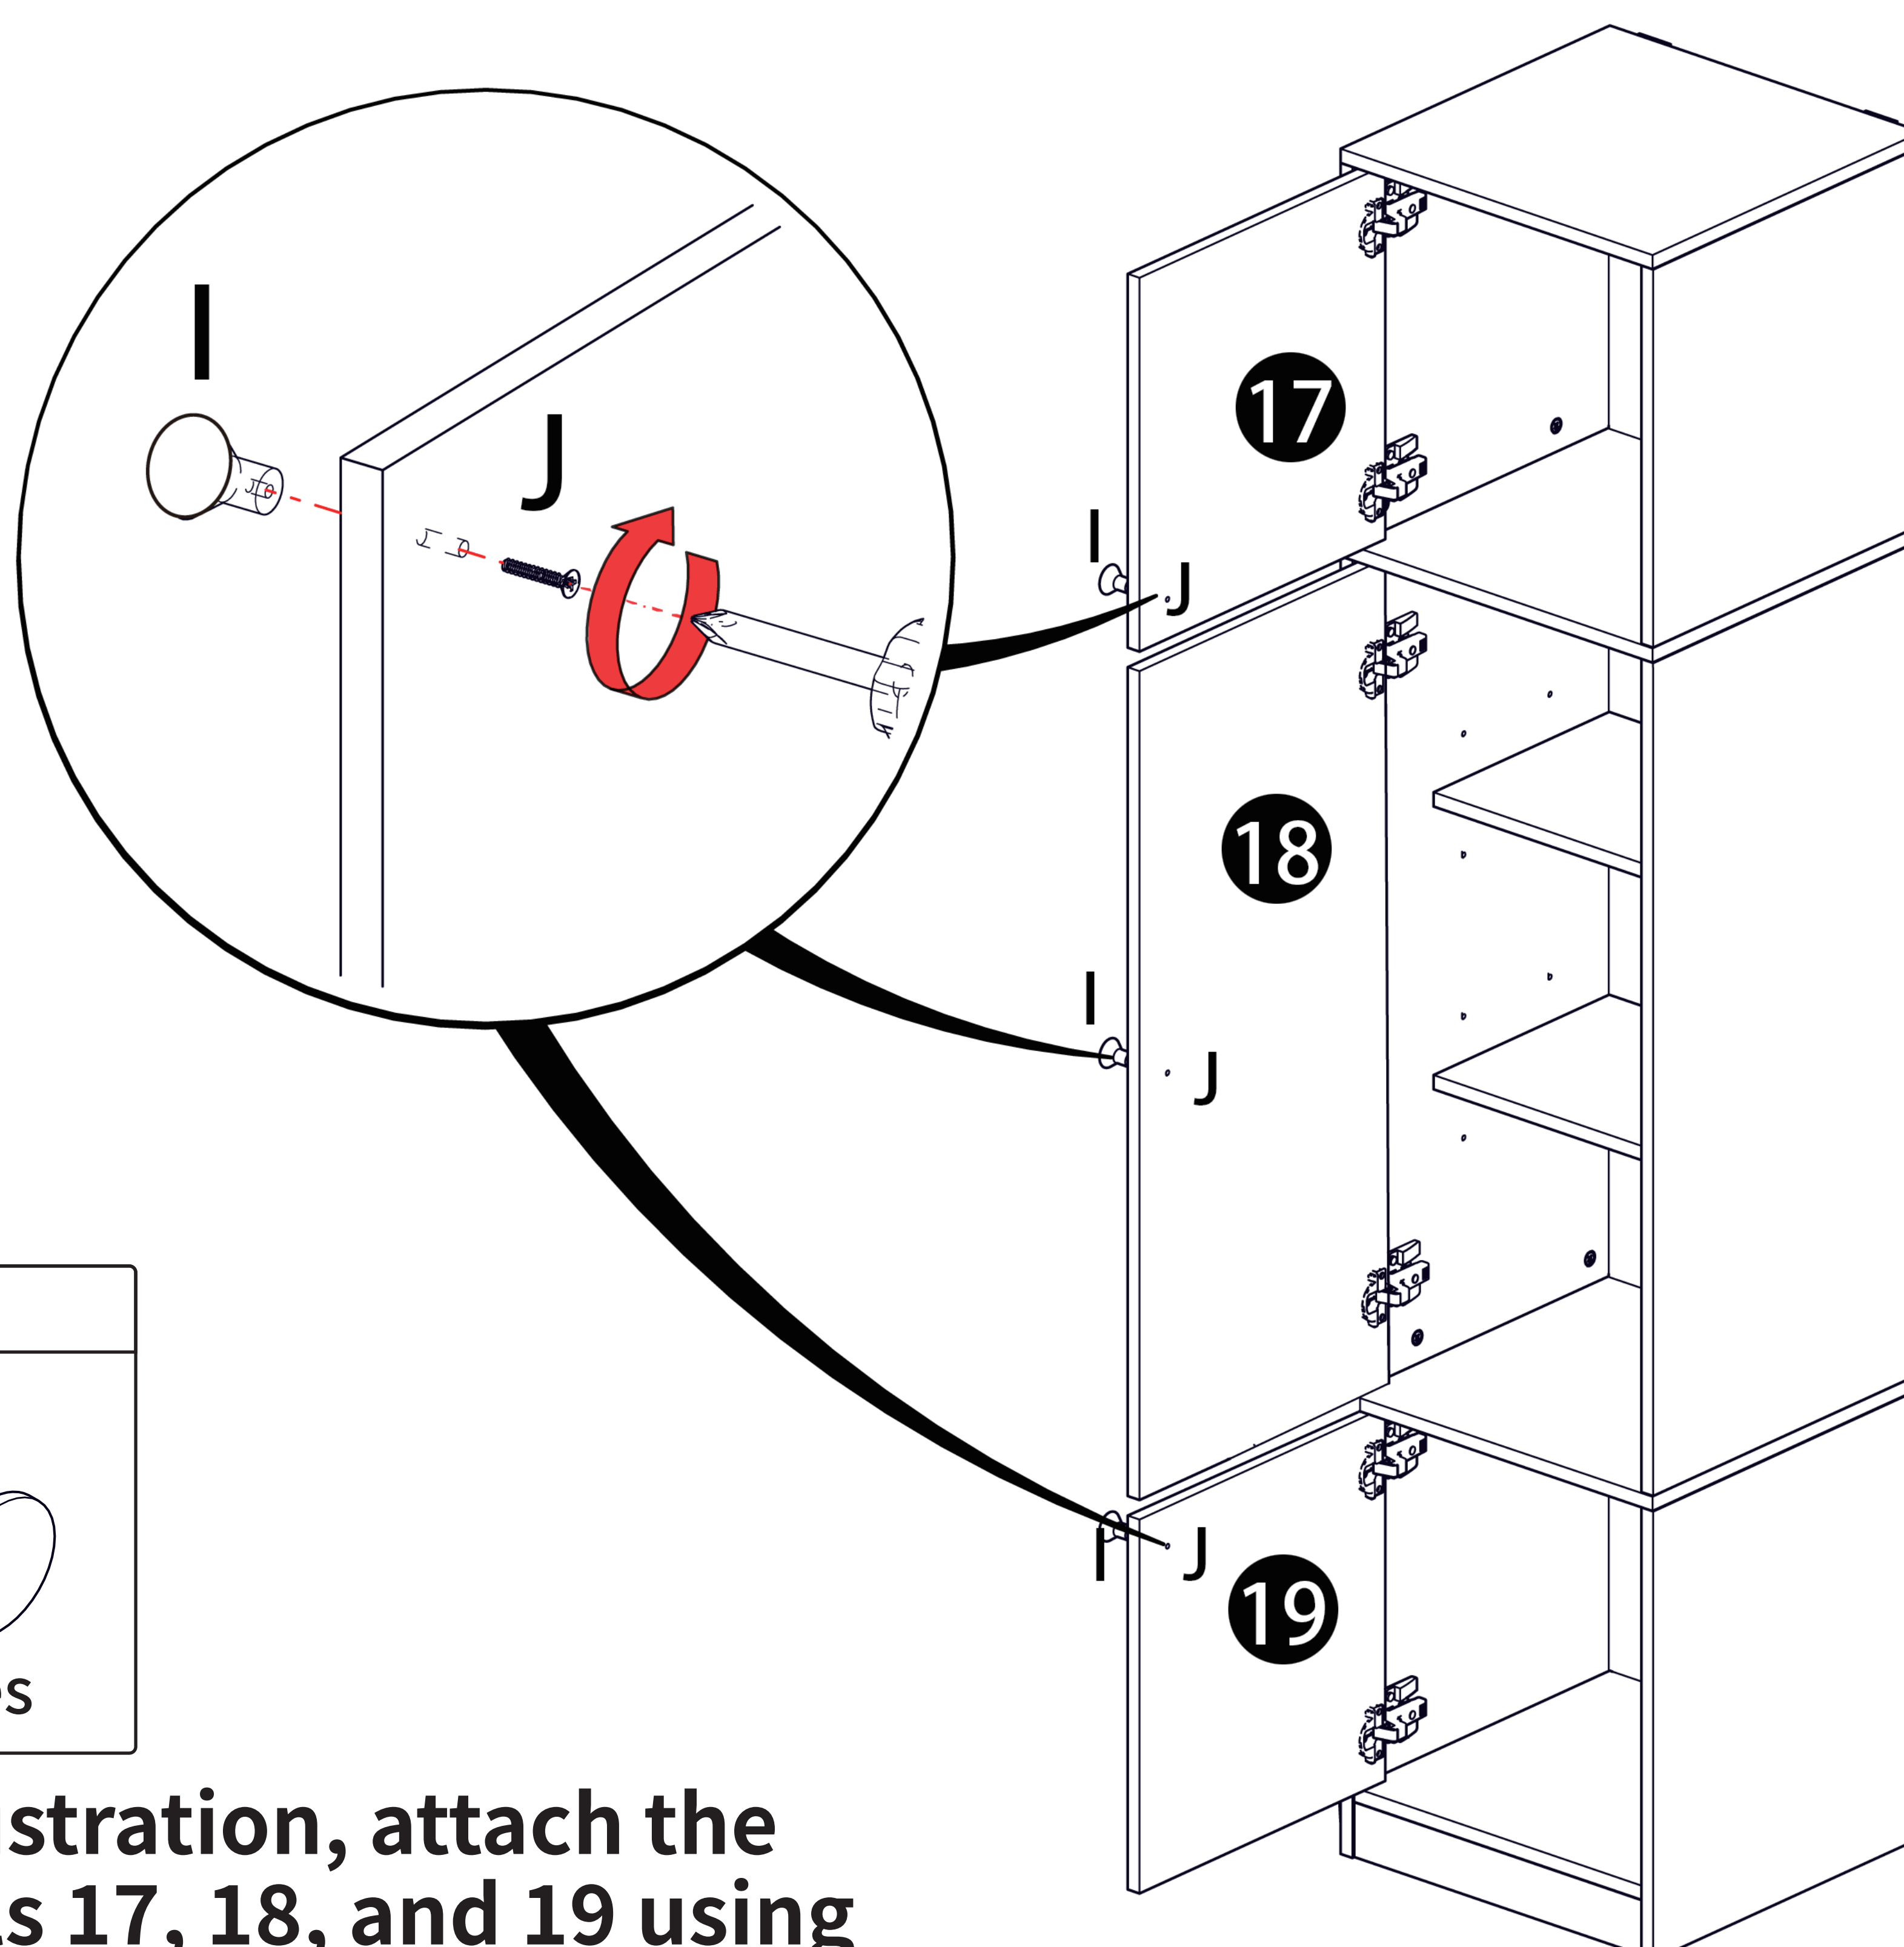


J*3

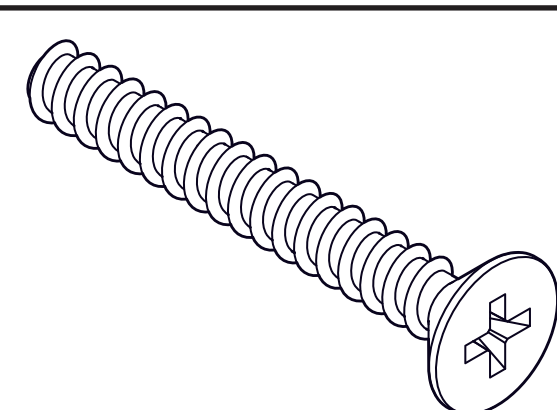 

Flat-head screws




 
I*3

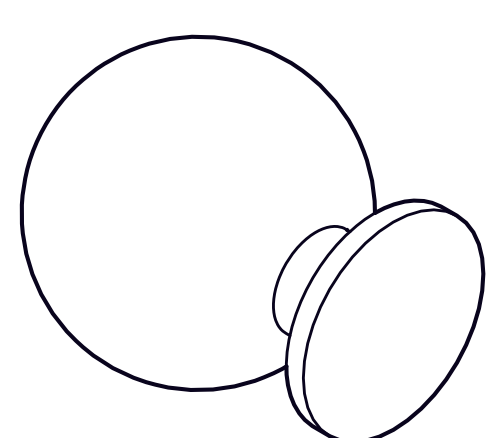

handles




As shown in the illustration, attach the handles (I) to Panels 17, 18, and 19 using the flat-head screws (J).

    26

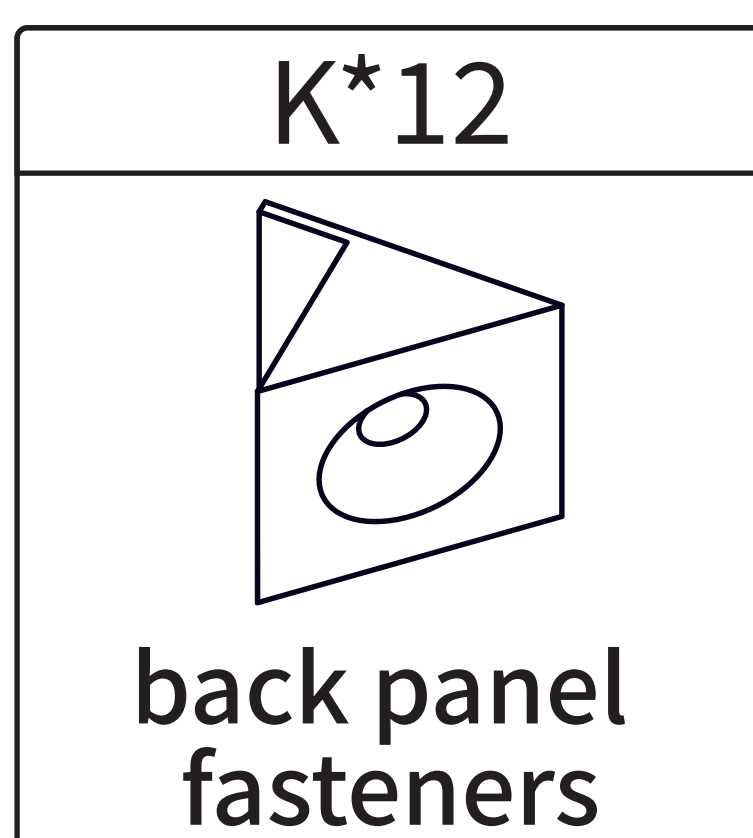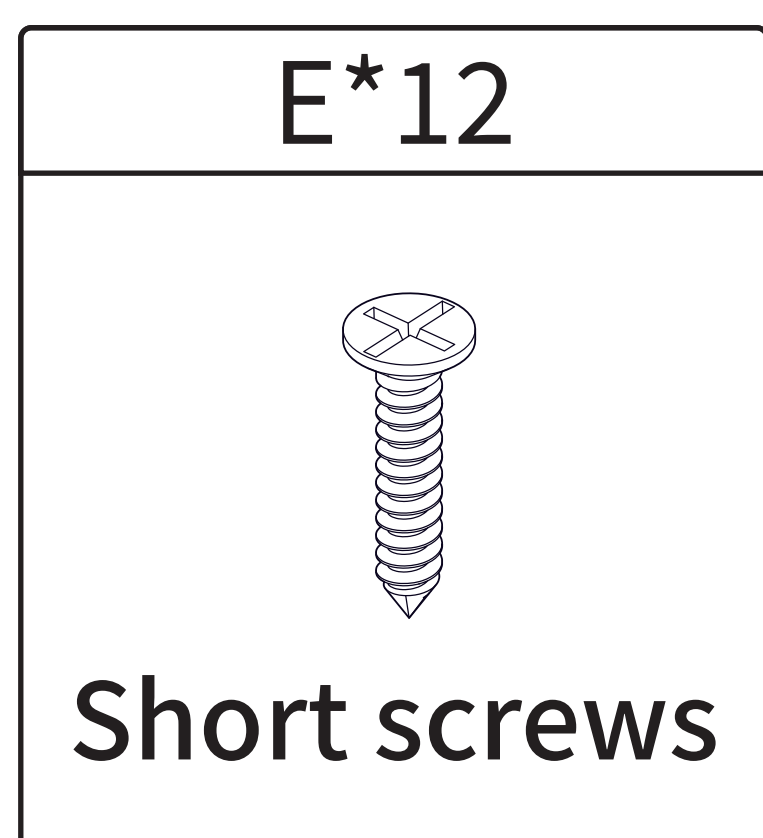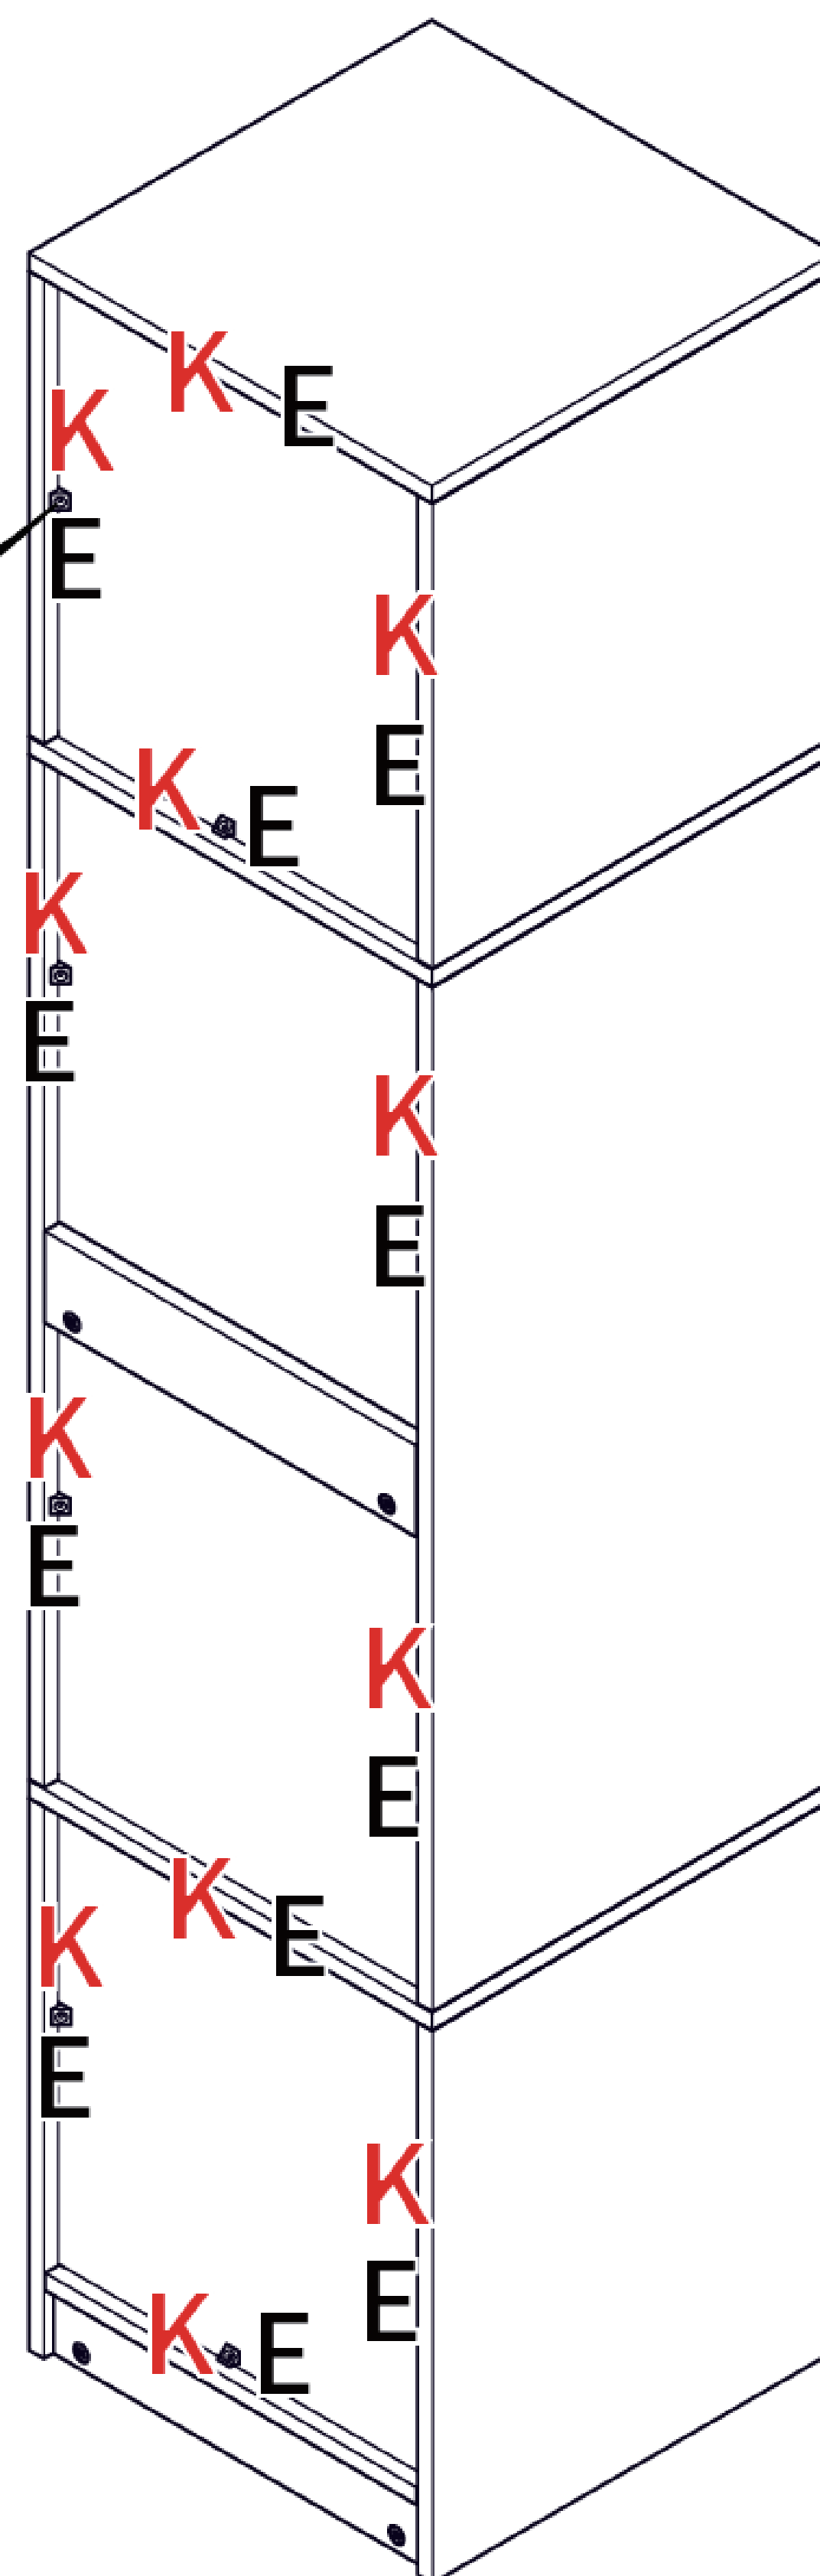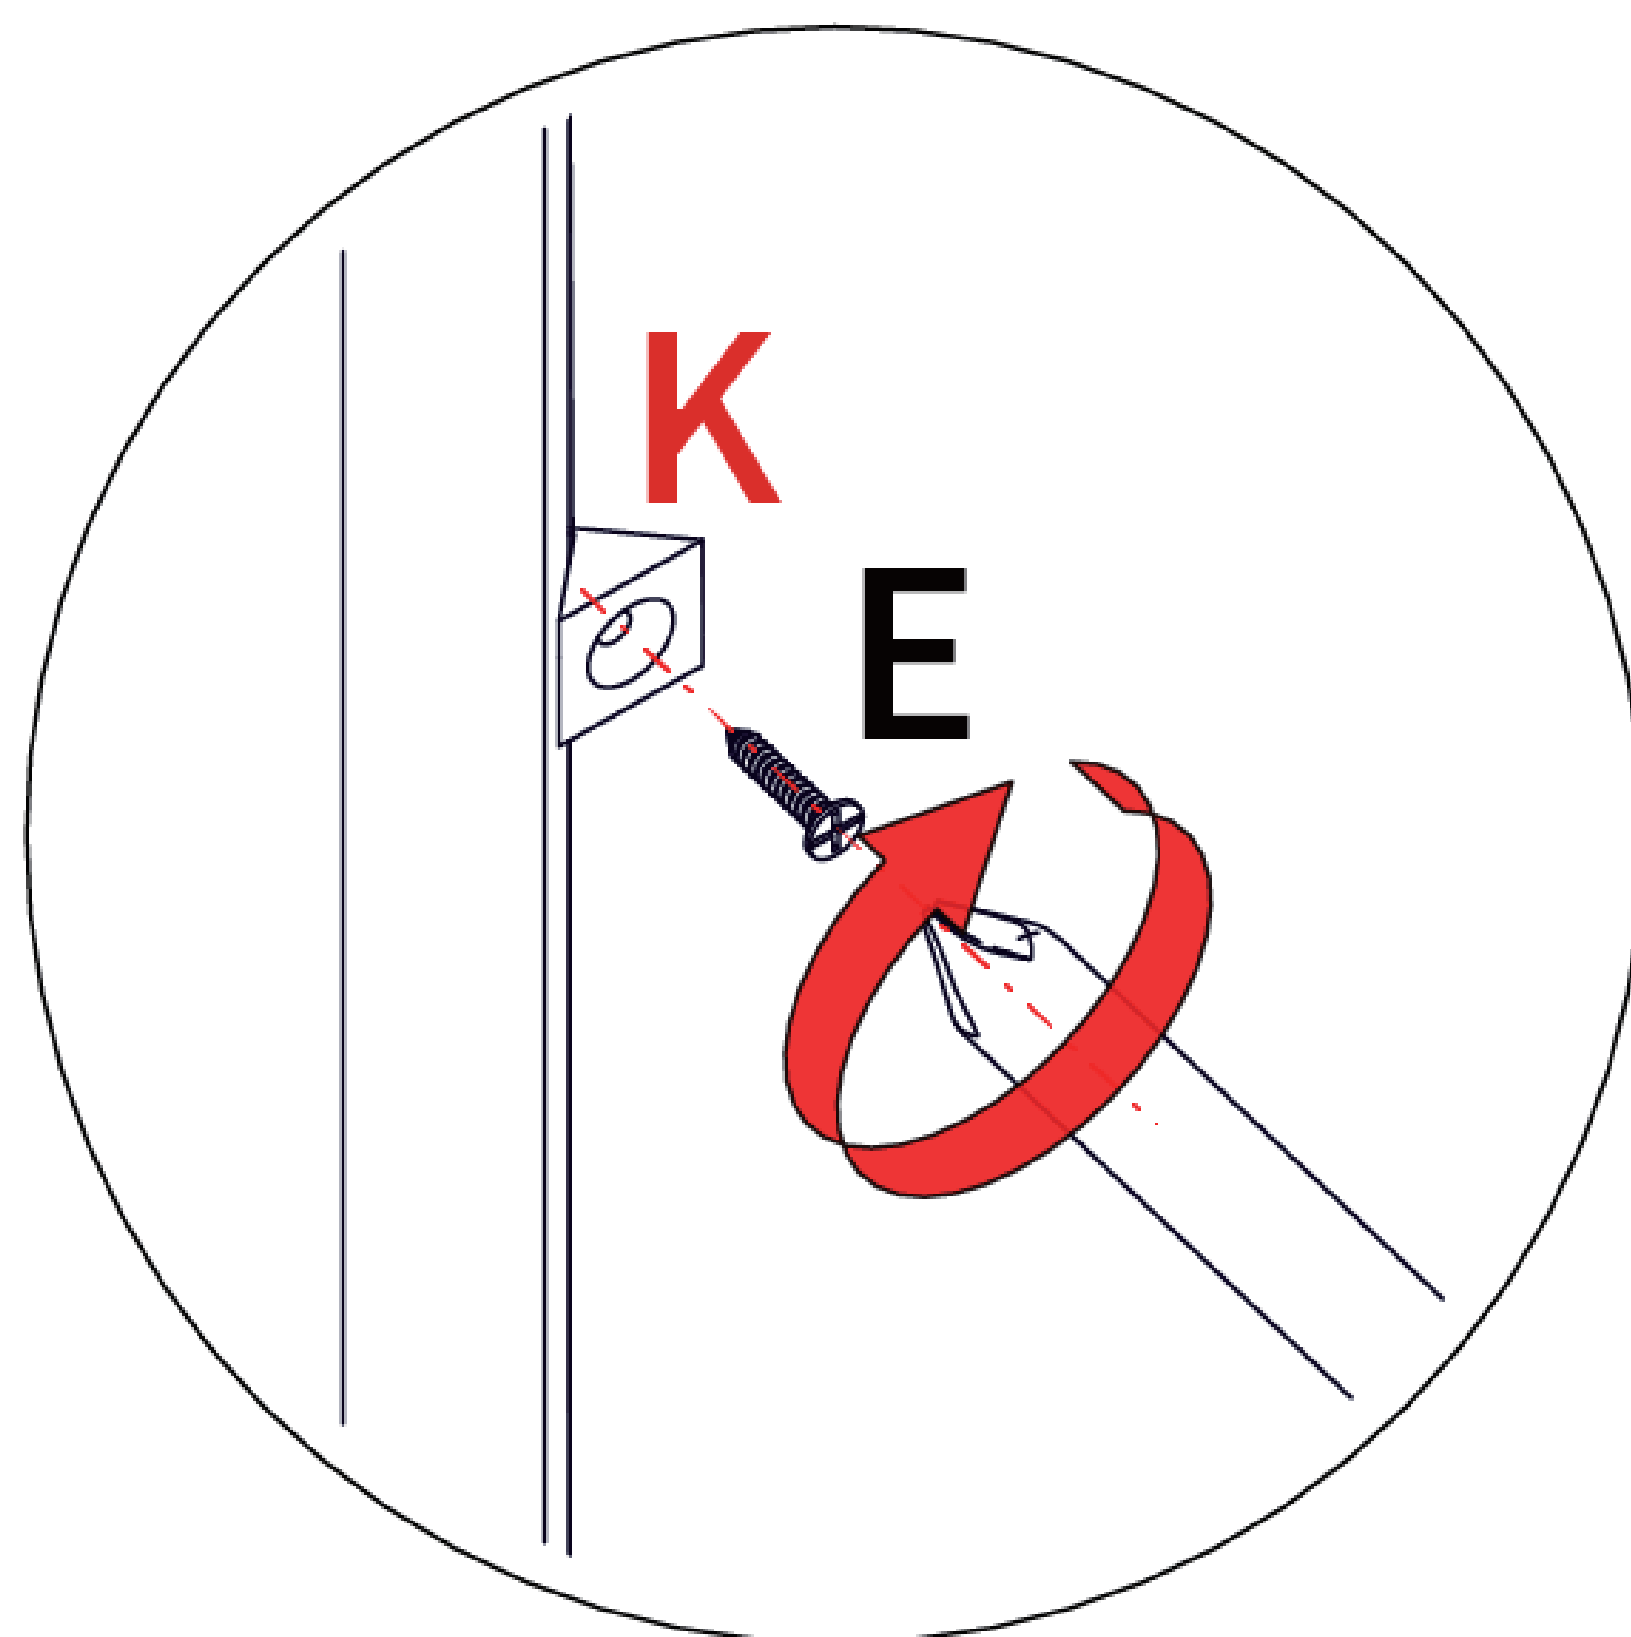

As shown in the illustration, use the short screws (E) to install the back panel fasteners (K) onto Back Panels 5, 10, and 15.

   
27

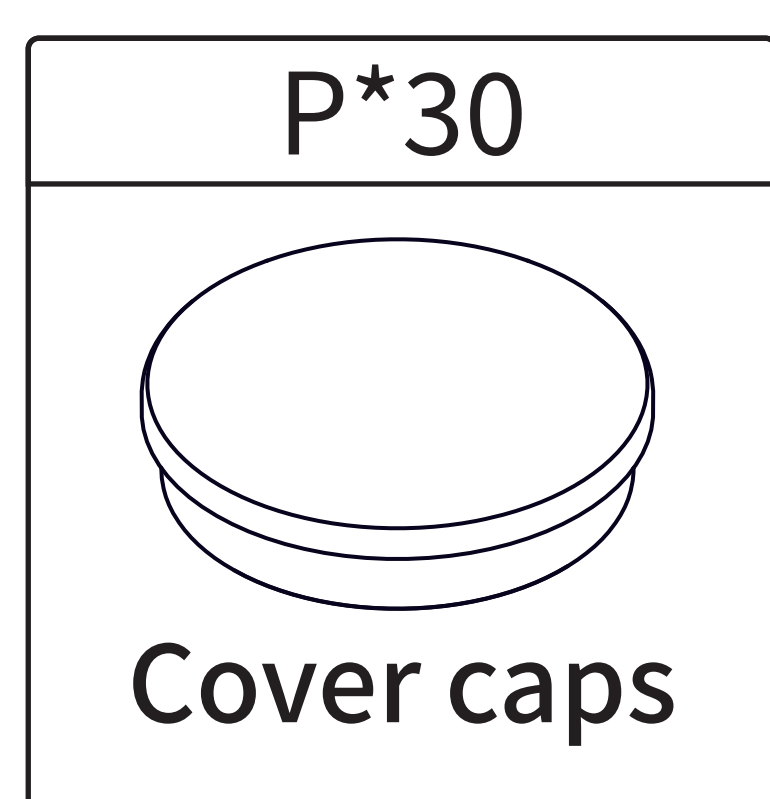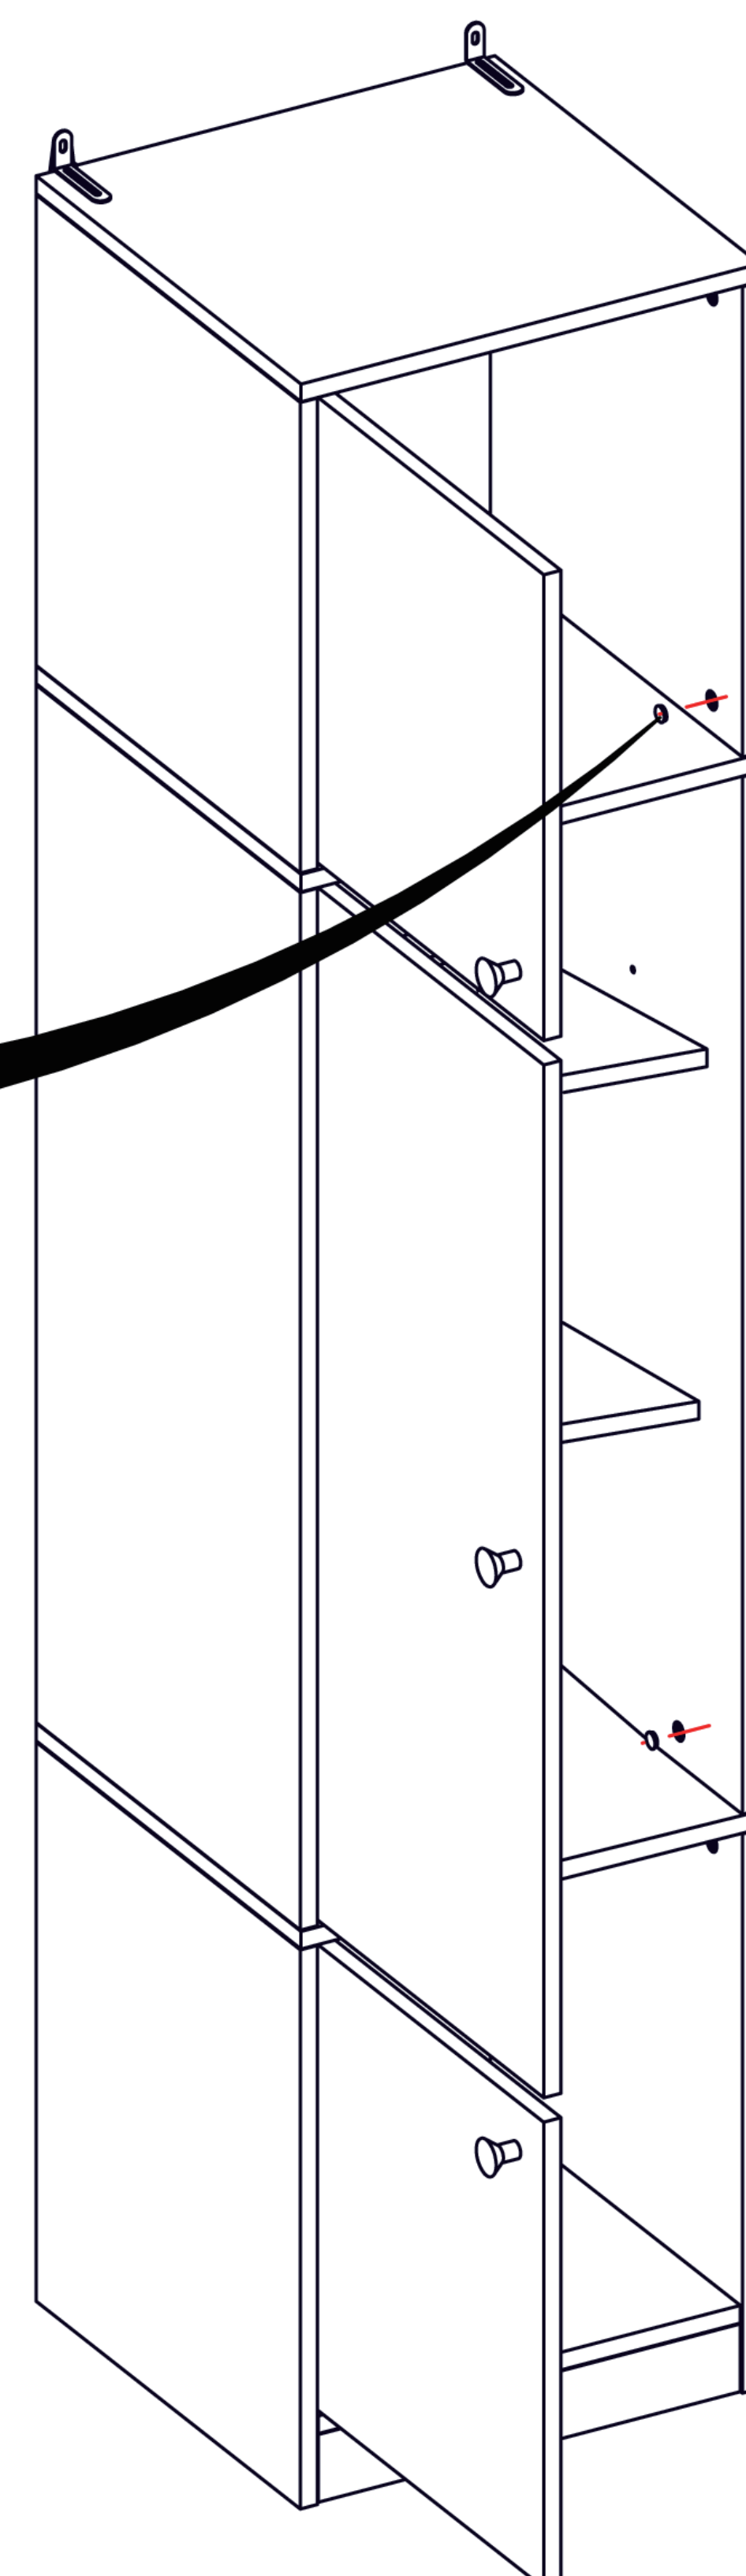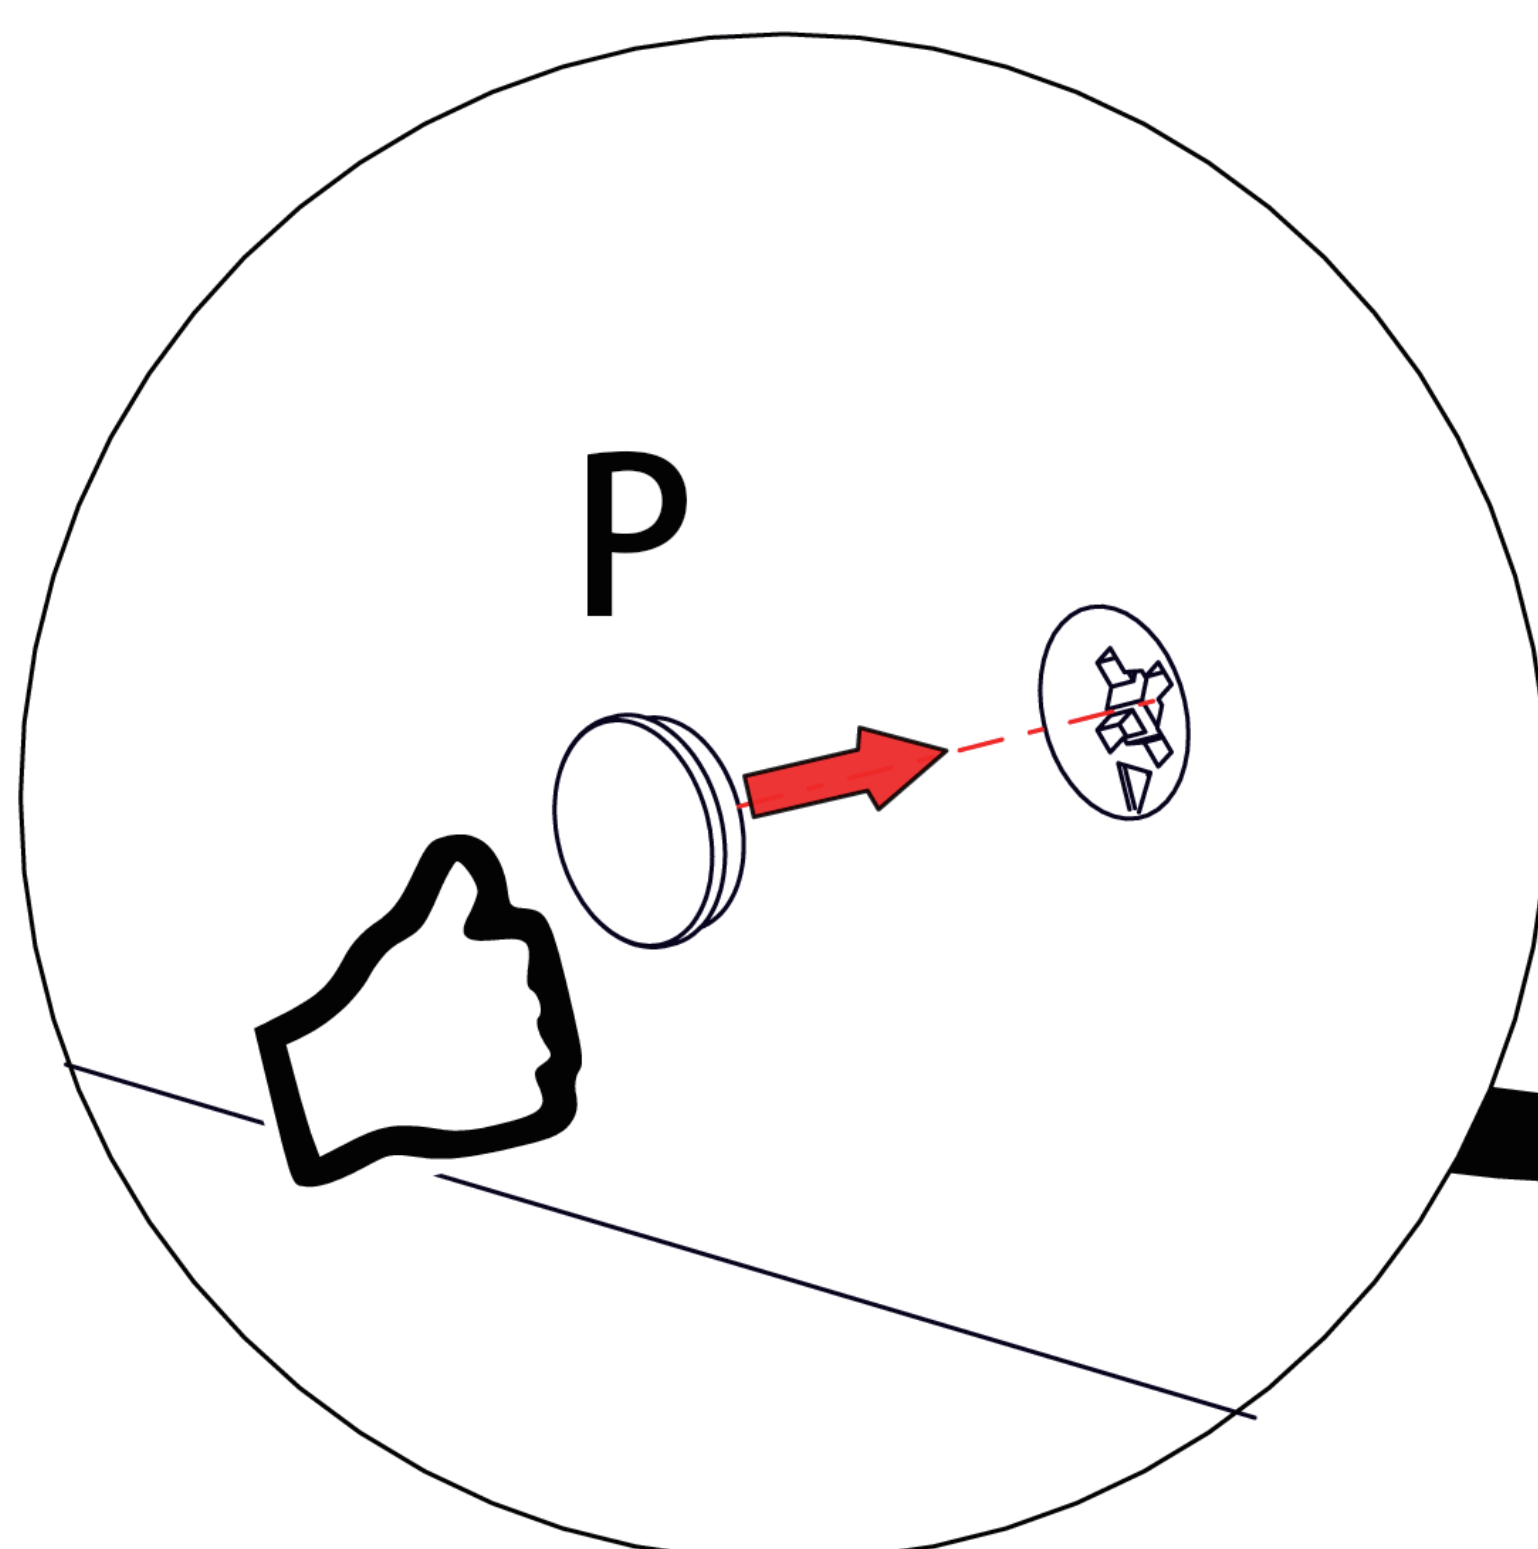

As shown in the illustration, attach the cover cap (P) onto the cam wheels (A).


As shown in the illustration, install the anti-tip device

 1. Drill holes in the wall: The hole depth should match the length of the bolt.
2. Insert the wall plug: Insert the wall plug (M) into the drilled holes, ensuring they are fully embedded in the wall.
3. Fasten the long screw: Pass the long screw (N) through the anti-tip device (L) and screw it into the wall plug (M). Do not overtighten.
4. Secure the furniture: Use the short screw (E) to fasten the bracket to the furniture panel. Do not overtighten.
5. Ensure stability: Make sure the mounting plates are firmly secured to both the wall and the furniture.

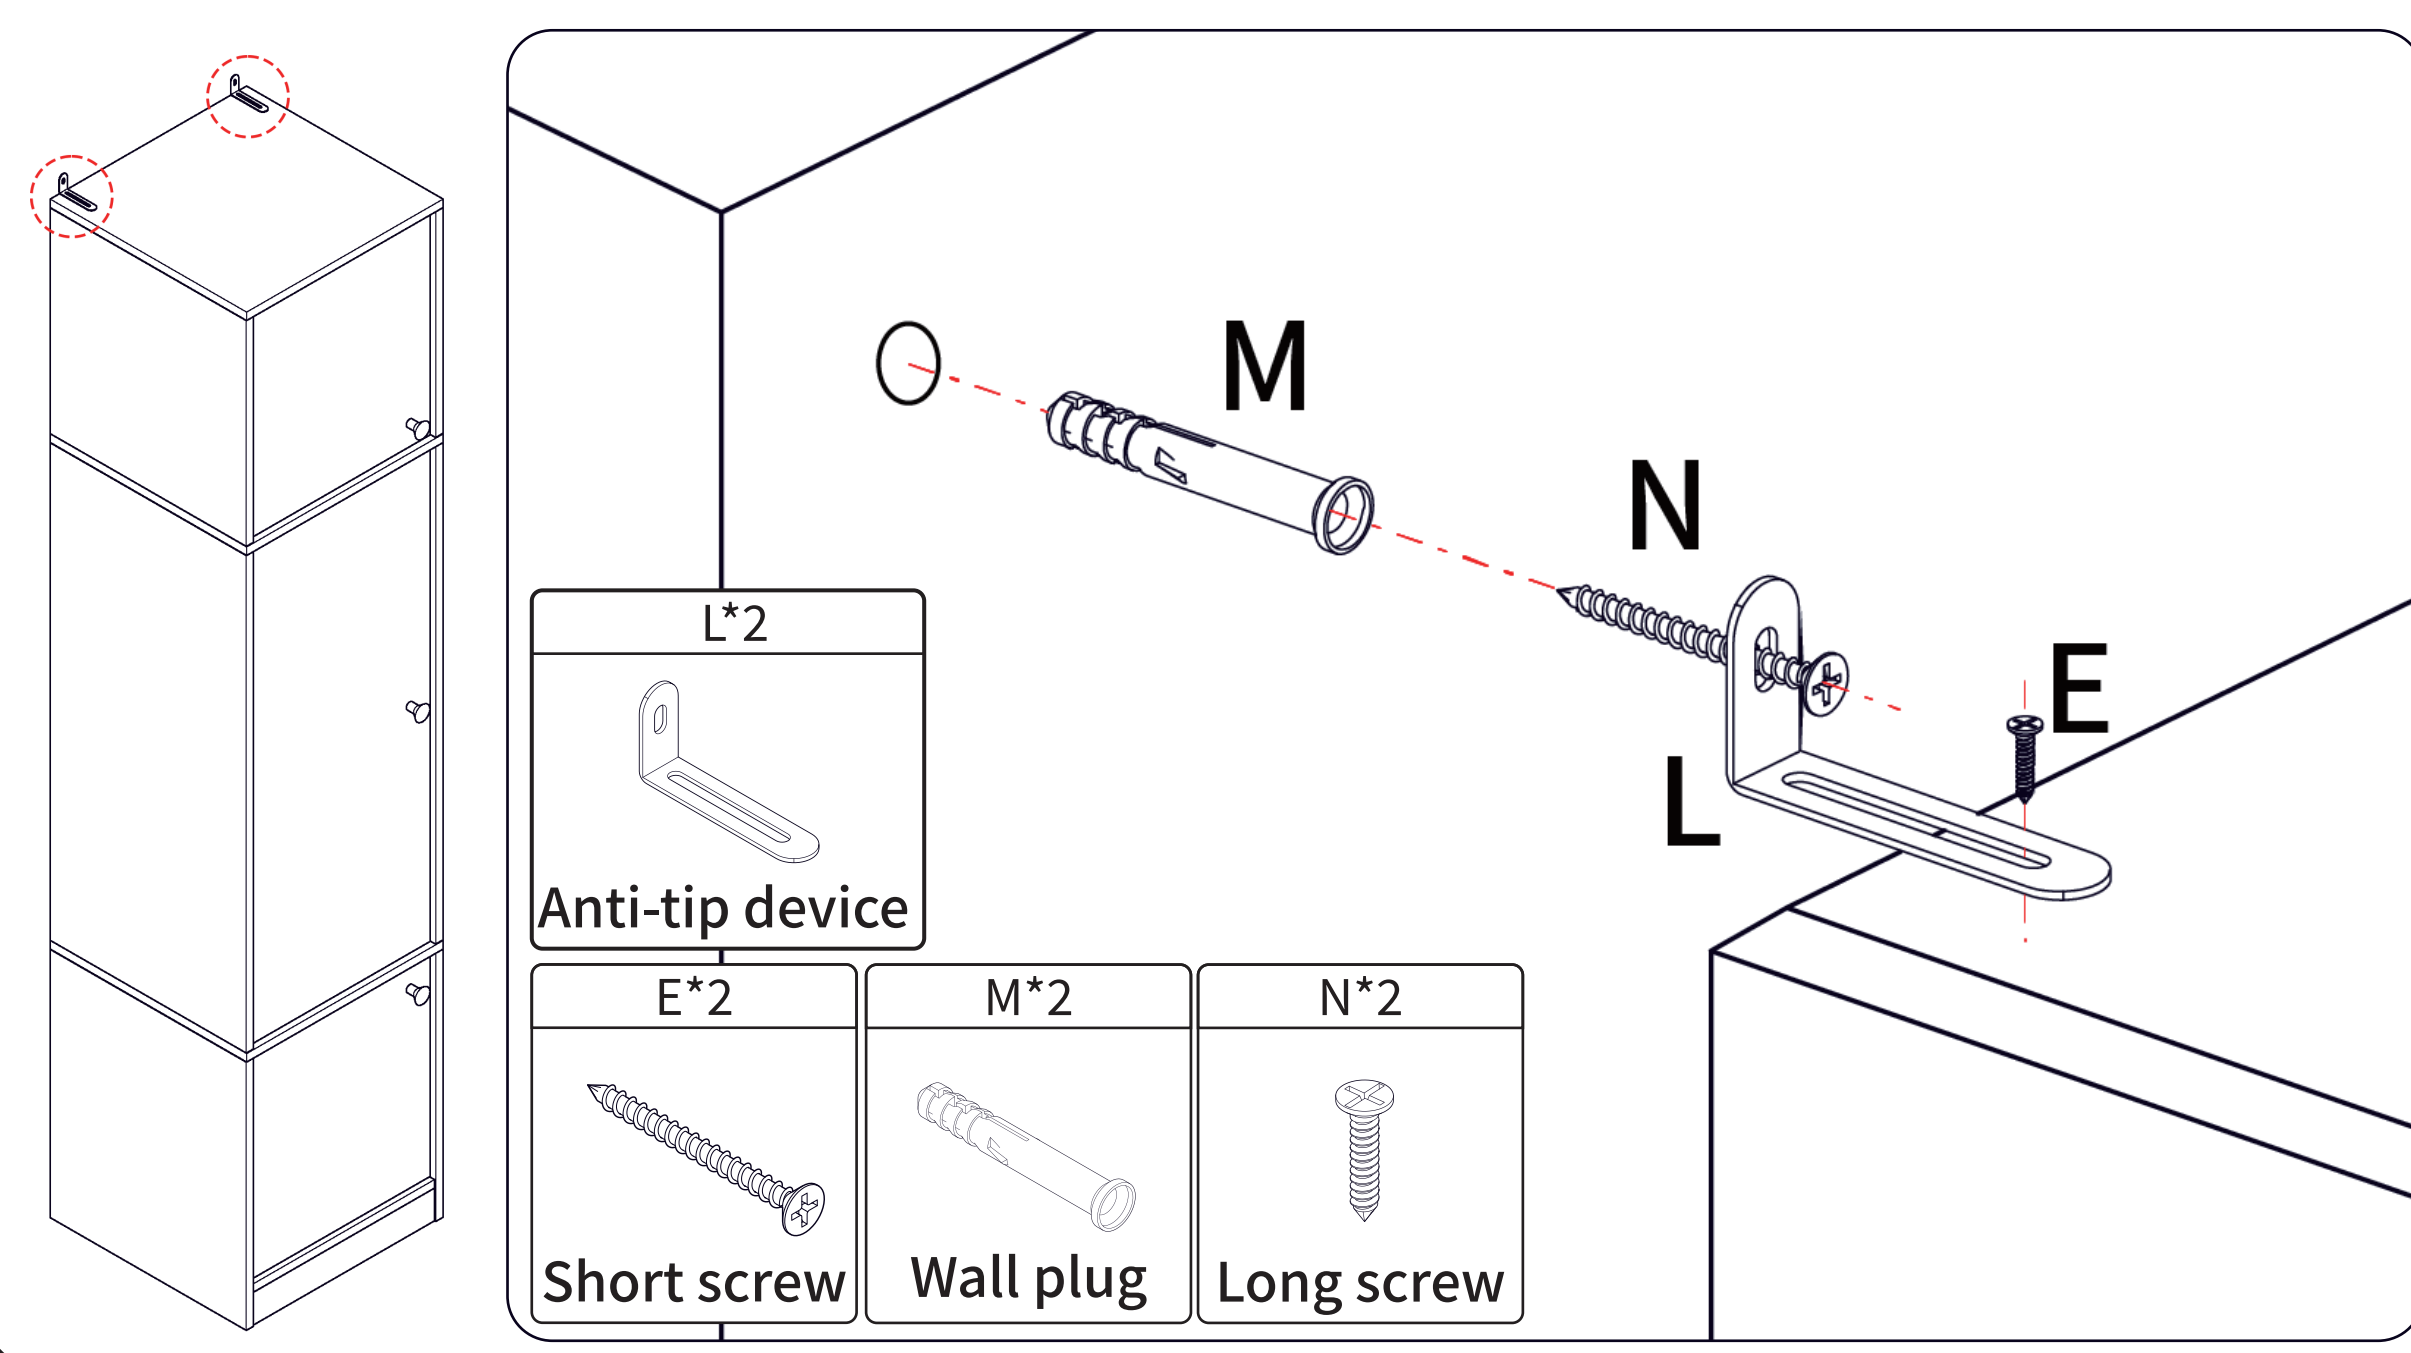


Hinge Adjustment Method

 If any misalignment occurs after installation, adjust the screws to achieve the optimal position.

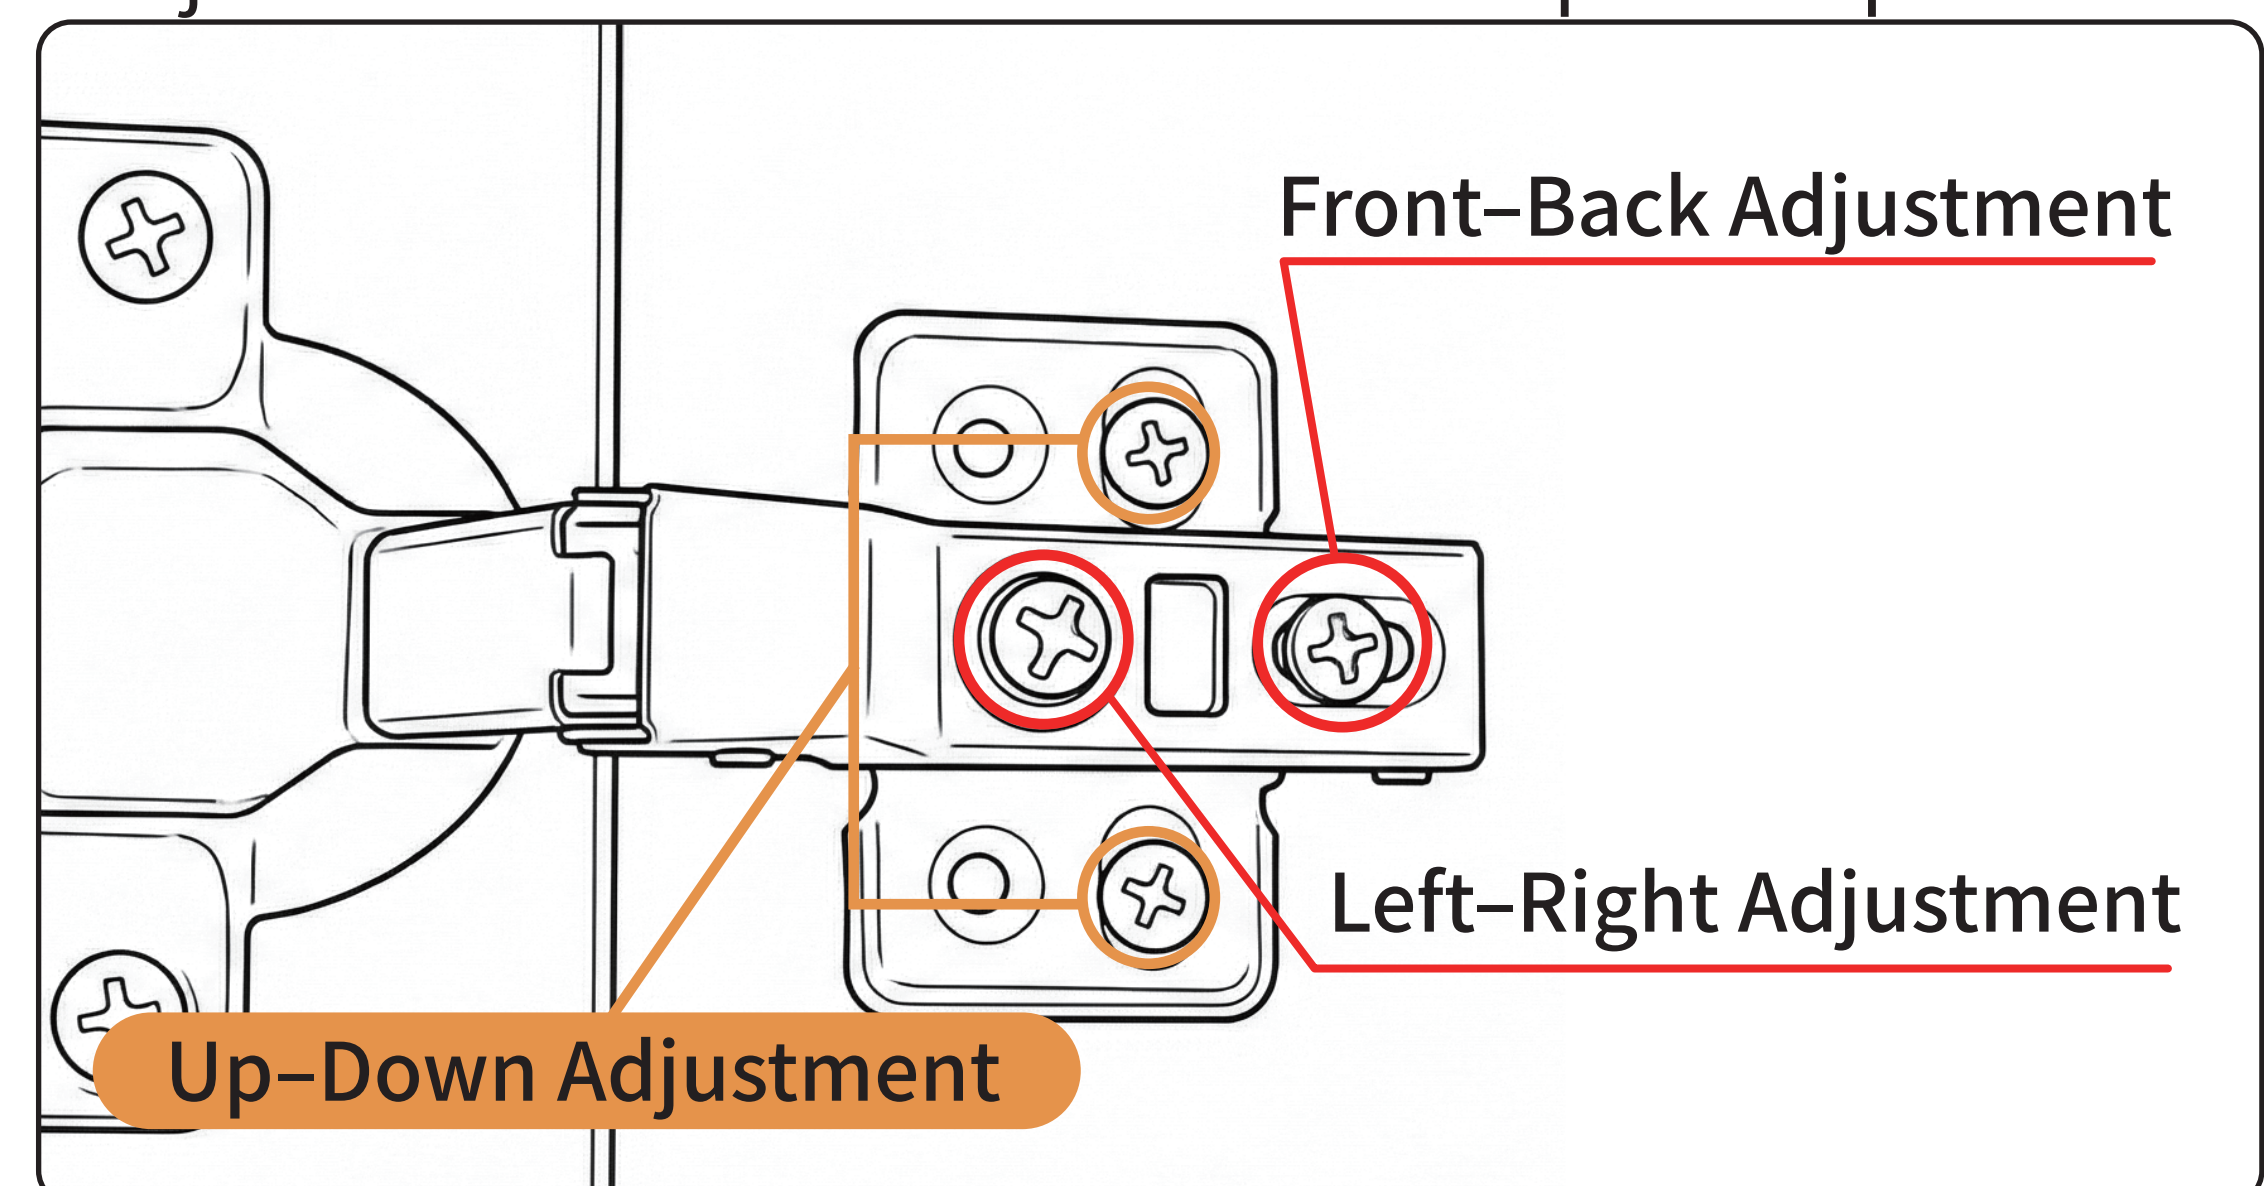


You can simply adjust the screws to change the overlay of the door panel relative to the side panel.

 
1. Loosen the fixing screw.

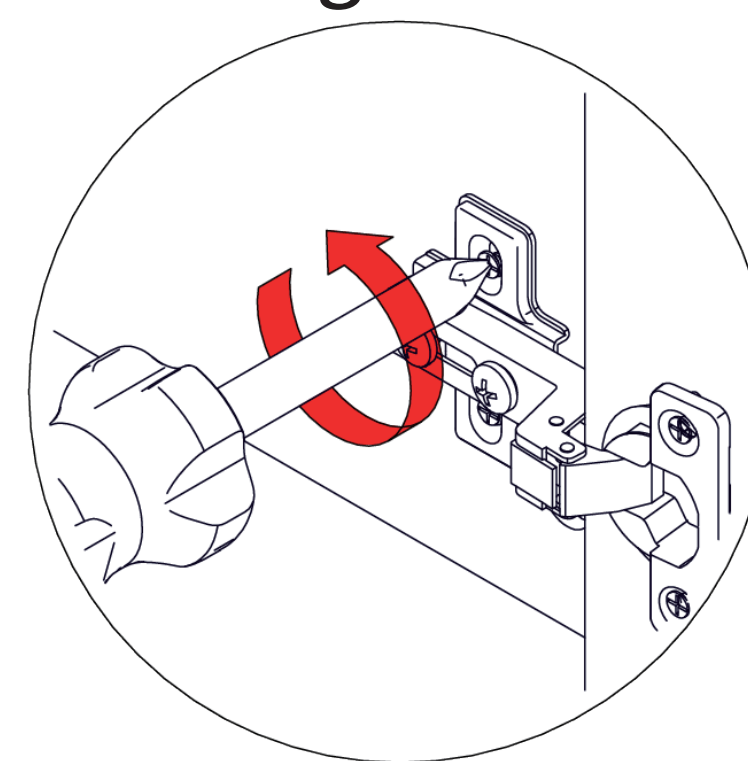

 2. Adjust the corresponding screw position as needed.

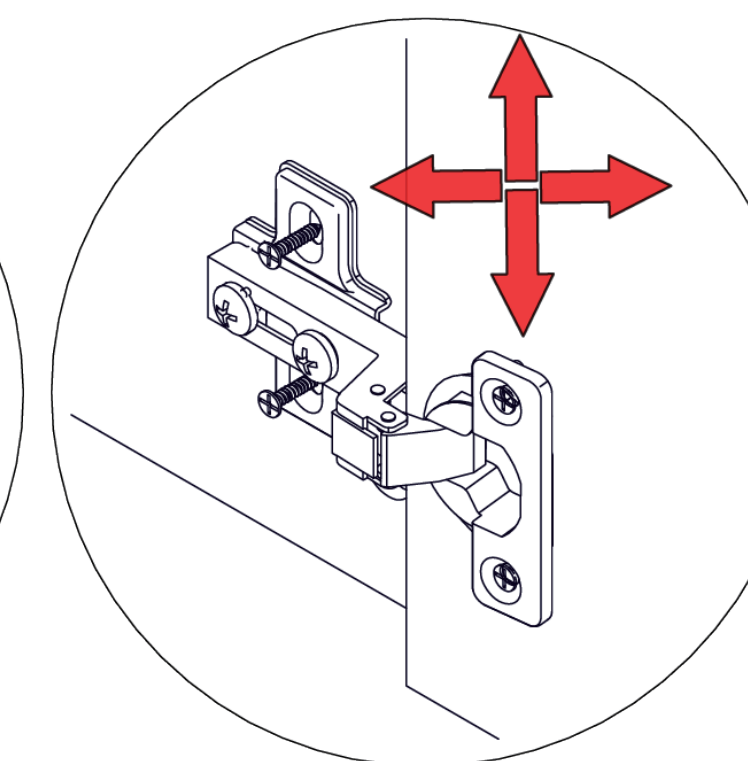

 3. After adjustment, tighten the short screw to secure it.

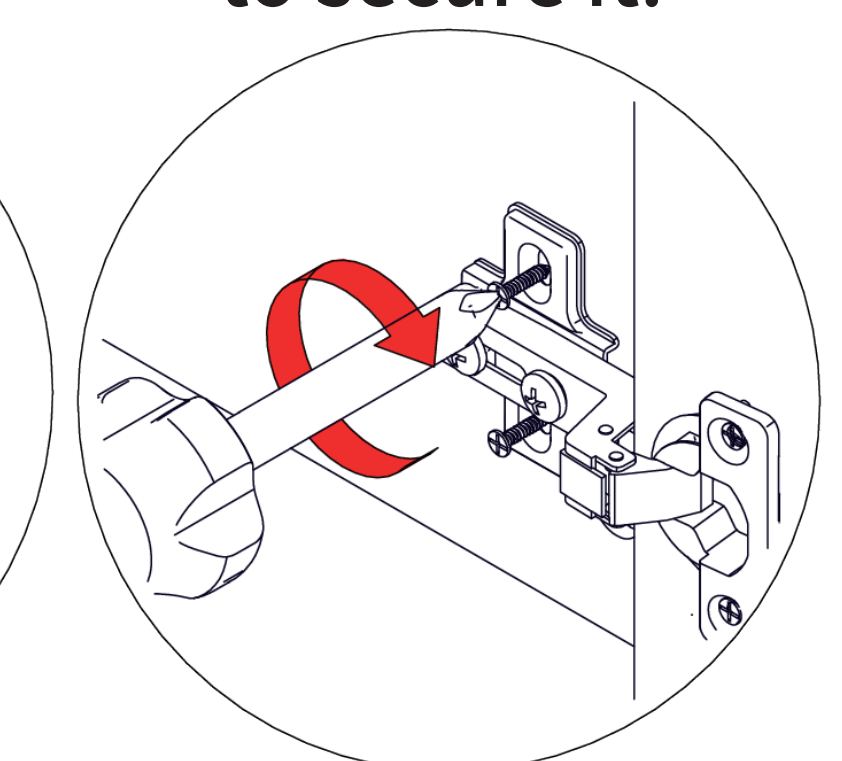


After-sales service

⚠ If you have any questions after receiving the product, please scan the QR code immediately to contact us so we can help you resolve the issue.


✉ Email: cs-omc@outlook.com

 ☎ WhatsApp: +86 18688756013

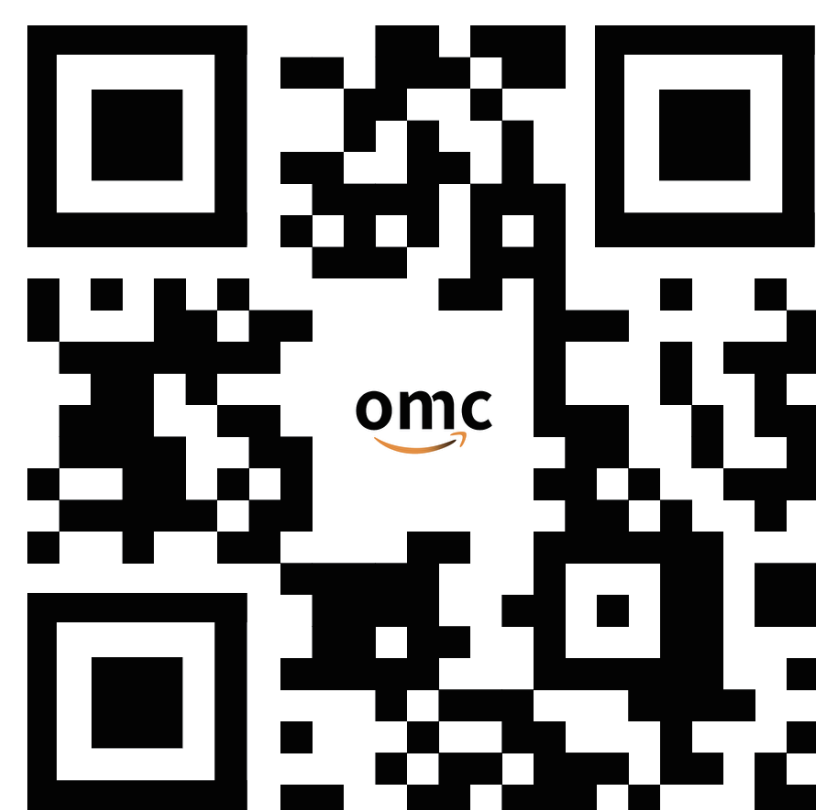

After-sales QR code

 Return Guidelines

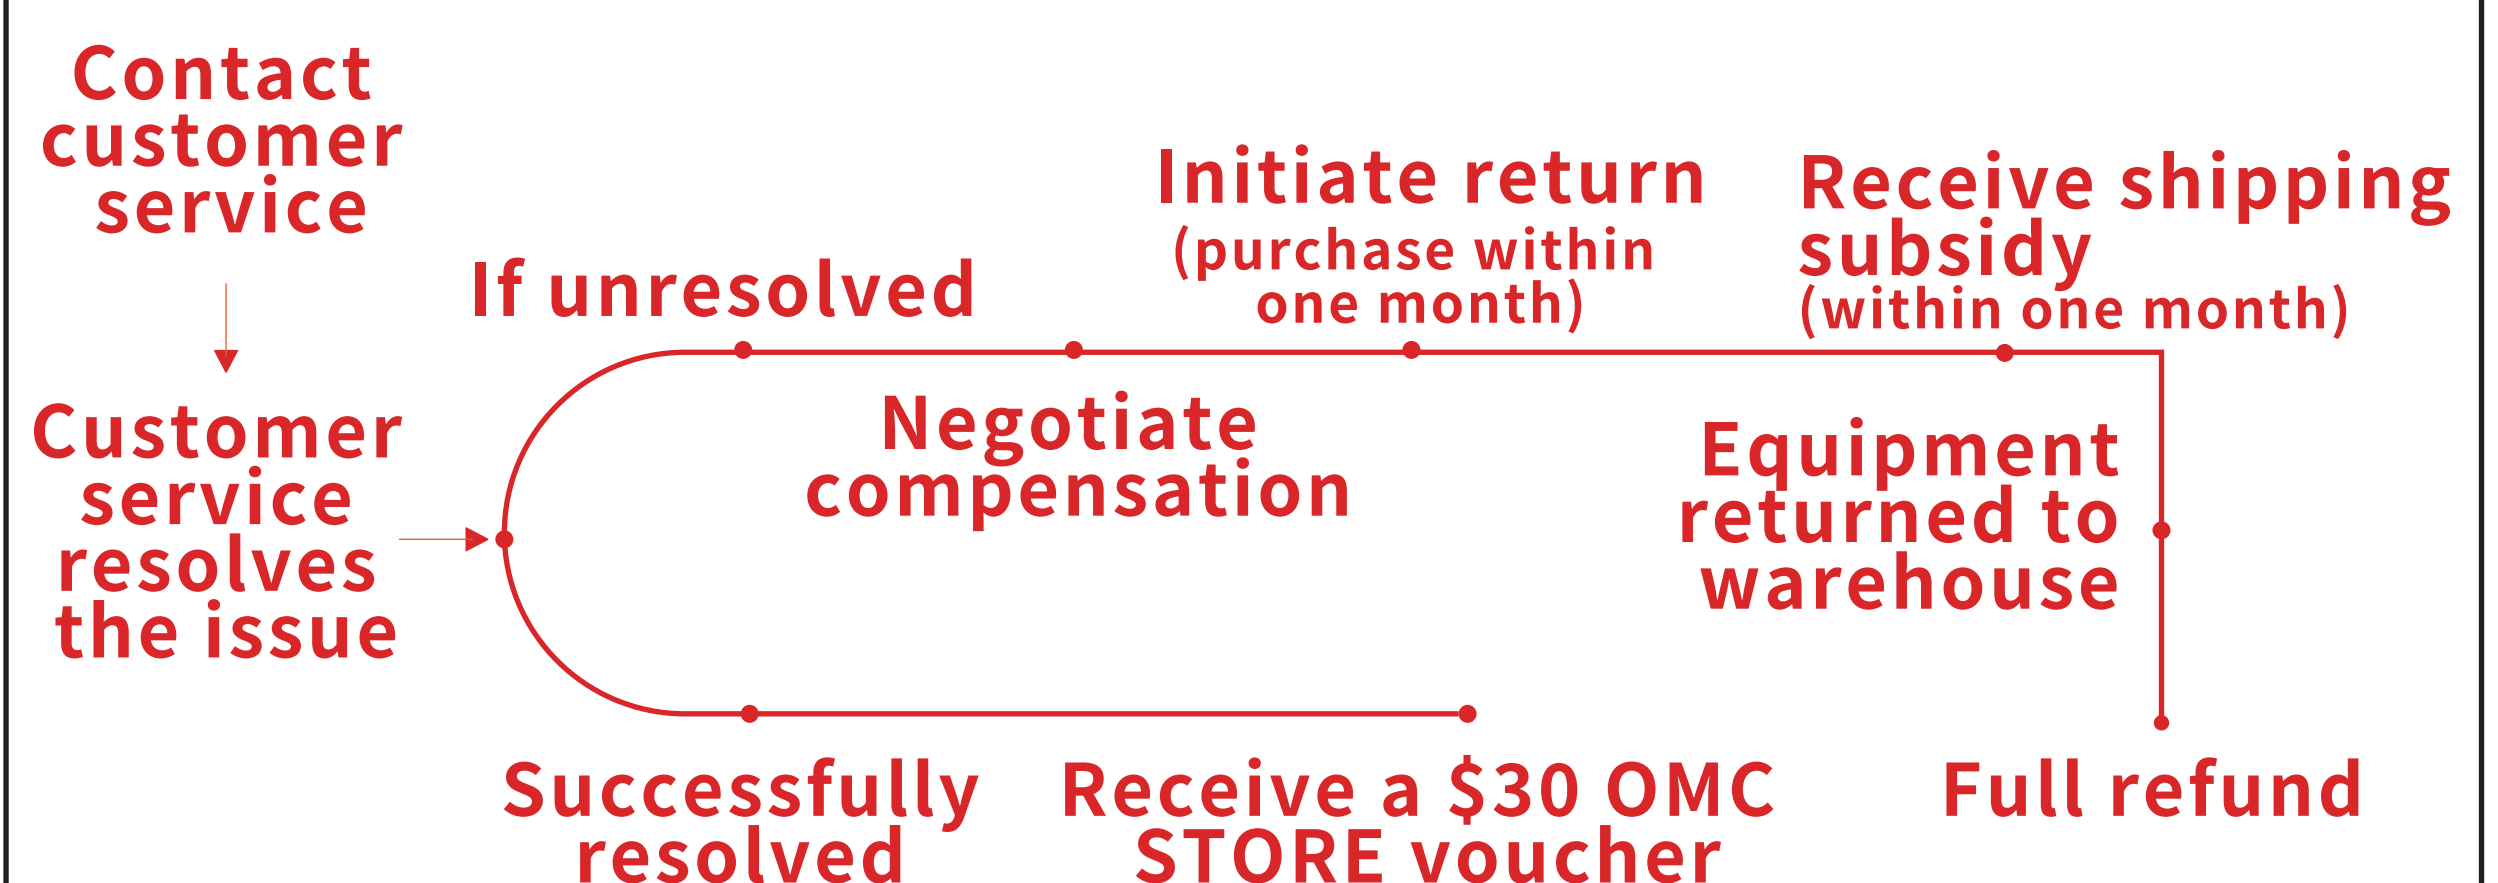


Return and Warranty Policy

1. If any parts are damaged or missing during installation, please contact us for replacement.
2. If you encounter any product problems during use, please contact us immediately.

Important Reminders:

 1. Please be sure to keep the original product packaging for at least 30 days.
2. If you need to return the item, please disassemble all the accessories completely and send us photos for confirmation.
3. After taking photos, please pack all accessories completely and return them. You must contact us before returning the items.

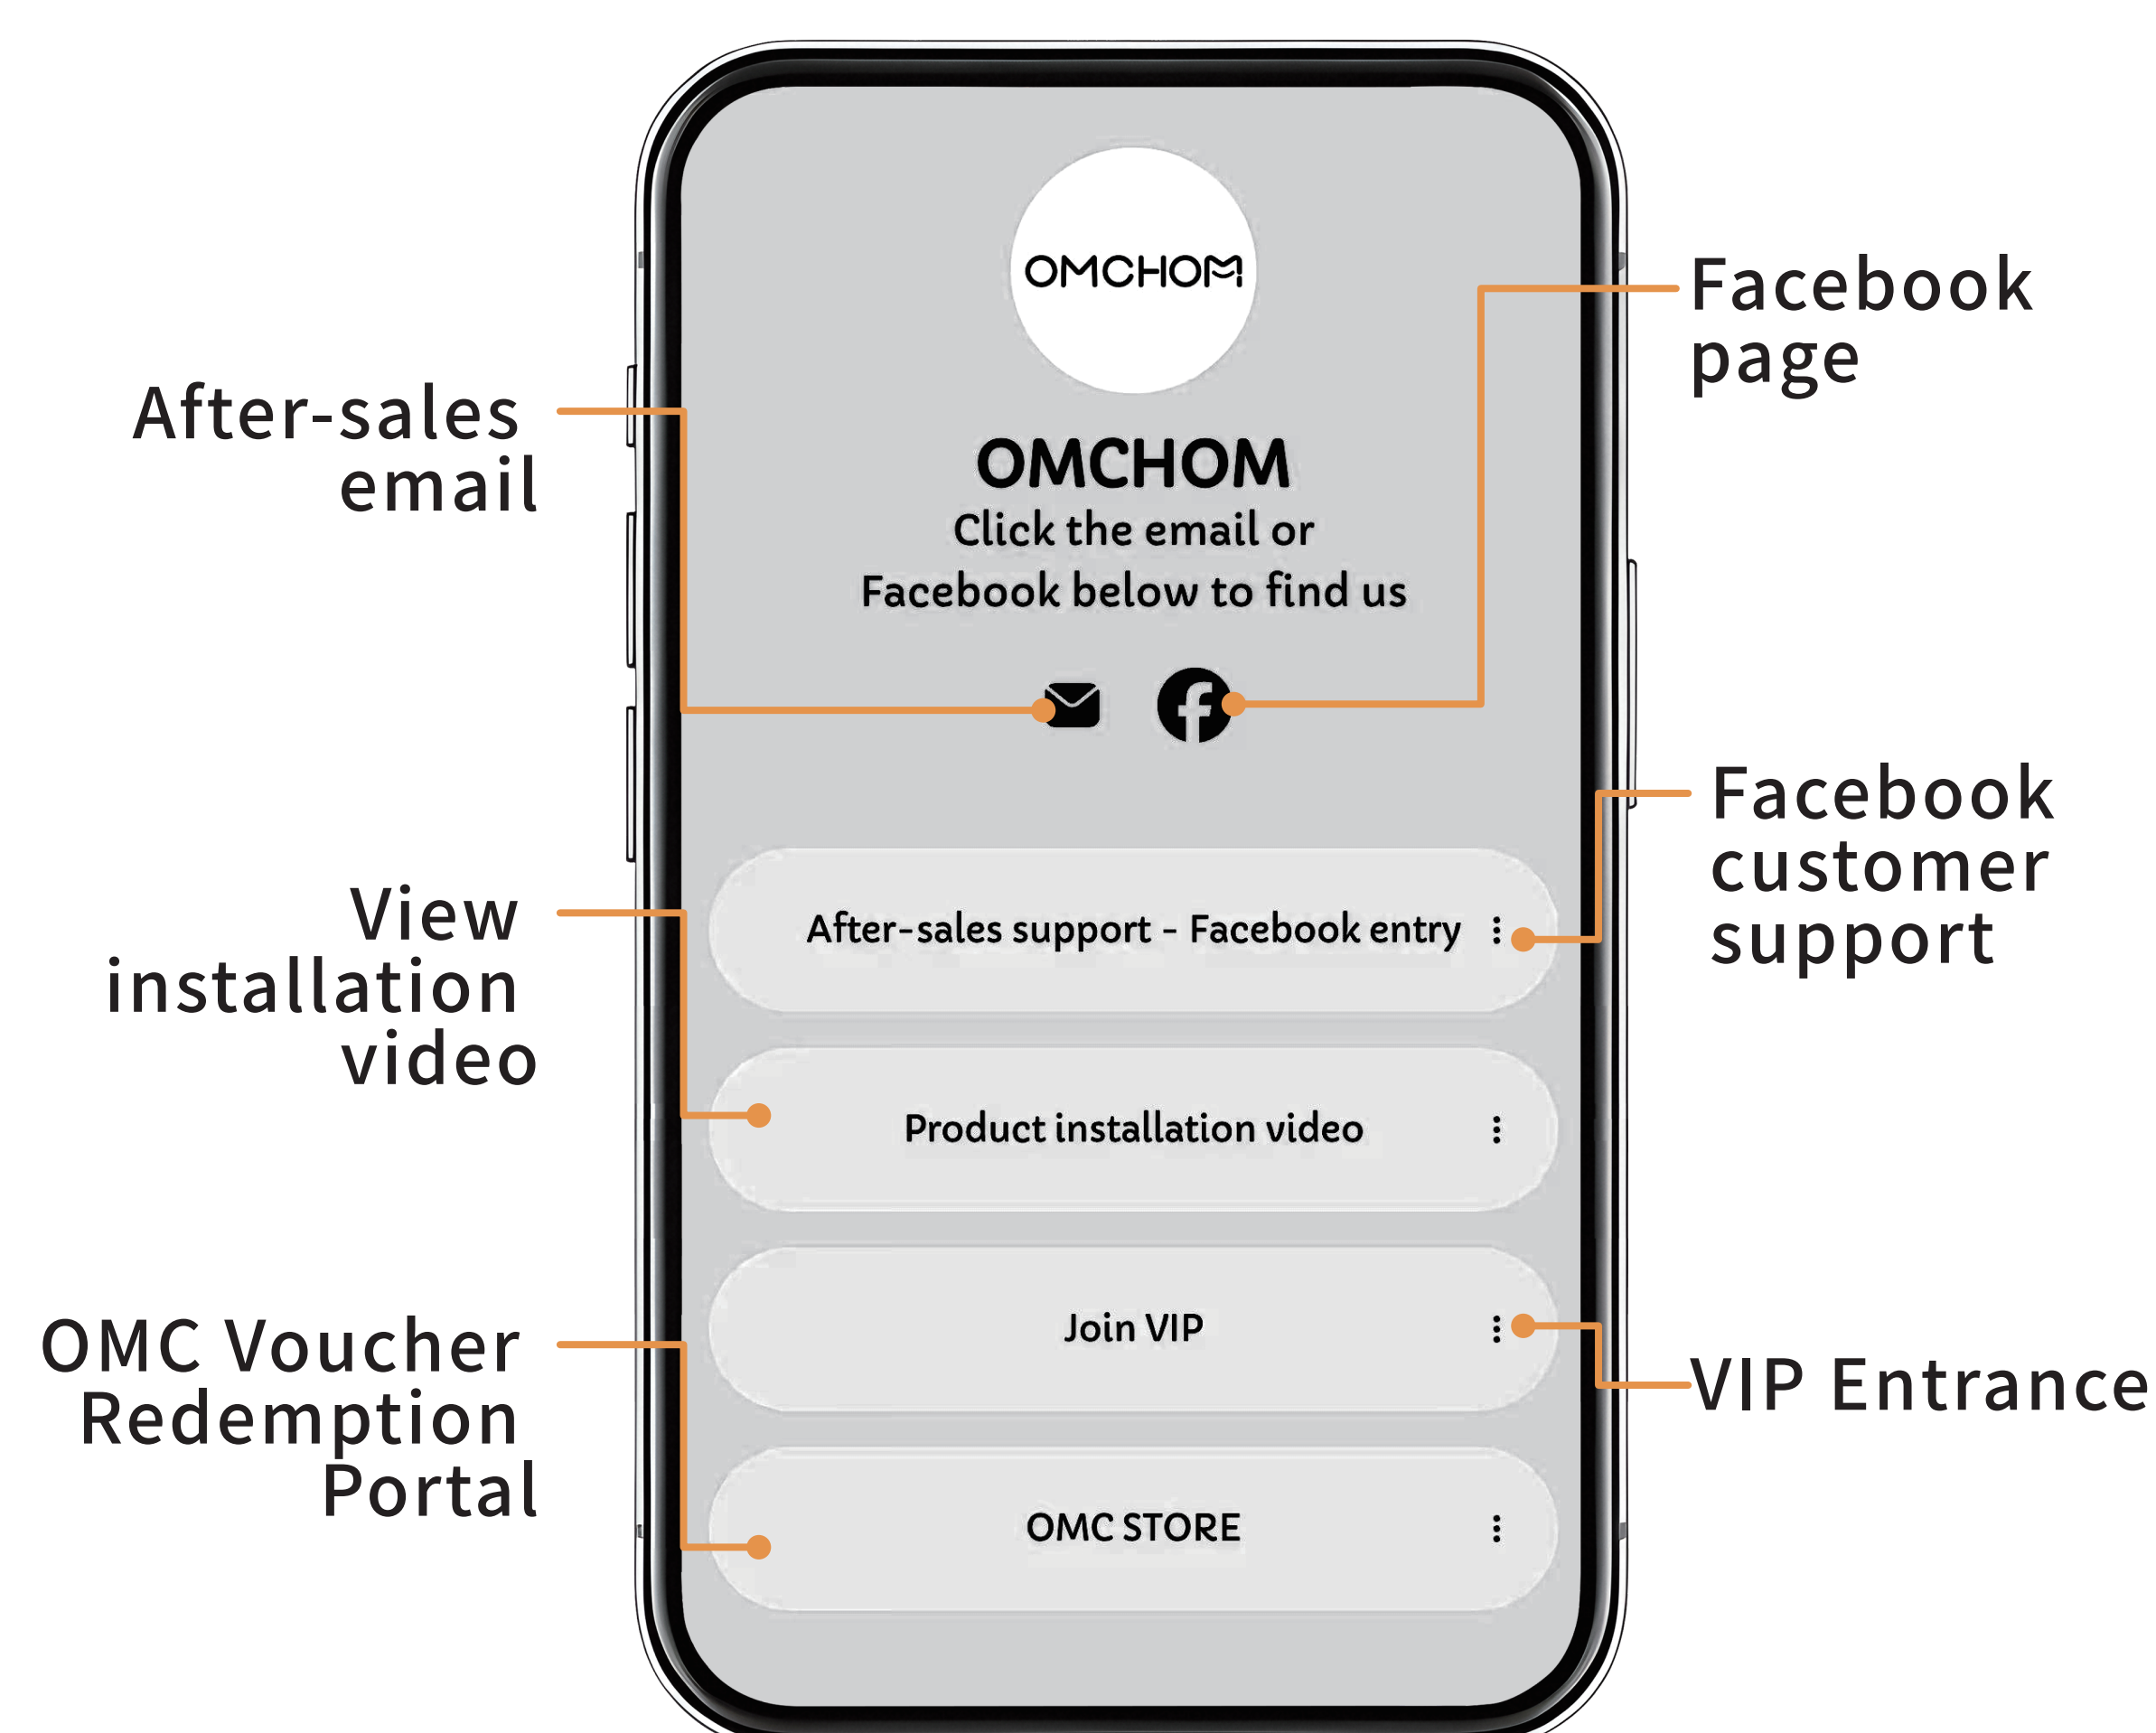



Global Operator for Brand Expansion



OMCHOM

After-sales QR code

 Email: cs-omc@outlook.com

 WhatsApp: +86 18688756013