

Purchased your product online?

We would really appreciate it if you can share your experience with others by reviewing our product on the website from which you purchased.

Owner's Manual

Fiery Metal Kinetic Dual Spinning Garden Stake



LIMITED WARRANTY INFORMATION

Thank you for choosing our product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

- **Water Damage**

The products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage, is considered negligence, and will not be covered under this warranty. The use of "hard water," and/or caustic cleaners, can affect the painted or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility

- **Paint & Color (Retention and/or Loss)**

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading, within the first year from date of purchase, with the above exclusion.

- **Procedure/Service**

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. You must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. **Item is covered under one year limited warranty from the date of purchase. If your purchase was after our 30-day grace period, payment information will be requested for shipping charges.**

- **Not Covered Under Warranty**

The limited warranty will NOT cover cases of damages due to:

1. Inadequate care and/or neglect
2. Environmental and/or natural elements
3. Immersion in water, unless specified
4. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with

CONTENTS

Contents.....	1
What's Included.....	2
Features.....	3
Specifications.....	3
Assembling & Using Your Product.....	4
Warranty.....	8

 
WHAT'S INCLUDED



Rear Spinner
x1



Front Spinner
x1

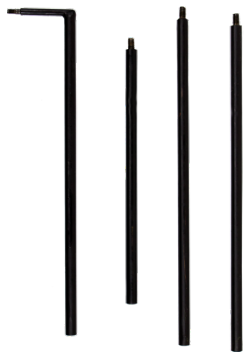

Stake
x4



Base Stake
x1



Connector
x1



Cap Nut
x1



Spacer Tube
x2



Hex Nut
x2



Spin Cap
x2

11. Congratulations, your Spinner Stake is now complete. Select a location with regular breezes and push into the ground until the horizontal arms of the Base Stake are against the ground.



CAUTION:

- To avoid damaging the spinner stake when inserting it into the ground, select a spot in soft, rock-free, "garden-ready" soil.
- Never push directly against the spinner or tail.

 
NOTE:

- If blades hit each other when spinning, they may have moved slightly in shipping. Gently bend each blade outward to resolve
- The Windmill Spinner may become loose over time. Please check it periodically and tighten as needed.
- Our spinners are designed to function smoothly without the aid of lubricants.


ALSO AVAILABLE FROM ALPINE

- Americana® UV Acrylic SealerRRR106
Provides protective clear coating for all painted surfaces.

9. Slide the Front Spinner over the threaded Connector, then repeat Steps 5 through 7.

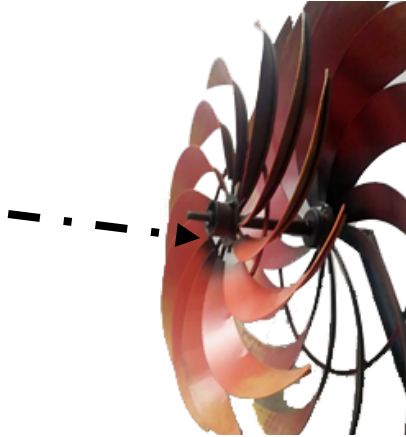

 10. Screw the Cap Nut onto the threaded Connector and tighten it securely.

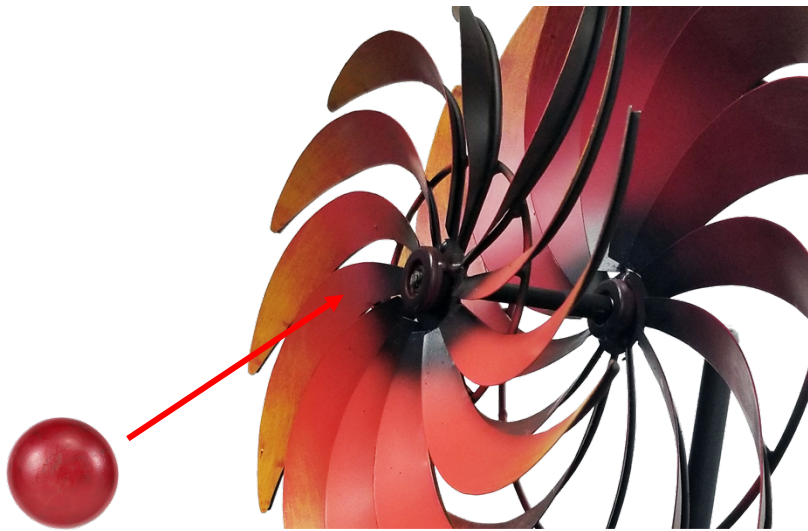

11. Rotate the inner pair of prongs of the Base Stake so that it forms a cross.

FEATURES

- **Stunning Moving Colors**



- **Beautiful Color Finish**

- **Durable Metal Construction**

 
SPECIFICATIONS

Dimensions.....15"L x 7"W x 75"H

ASSEMBLING & USING YOUR PRODUCT

Unpack all components carefully. Check the packaging to ensure that you have removed all the parts.

1. Screw the 4 Stakes together with the “L” shaped stake on top. (The stakes are labeled alphabetically, as shown).
2. Screw the Base Stake into the bottom of Stake E.

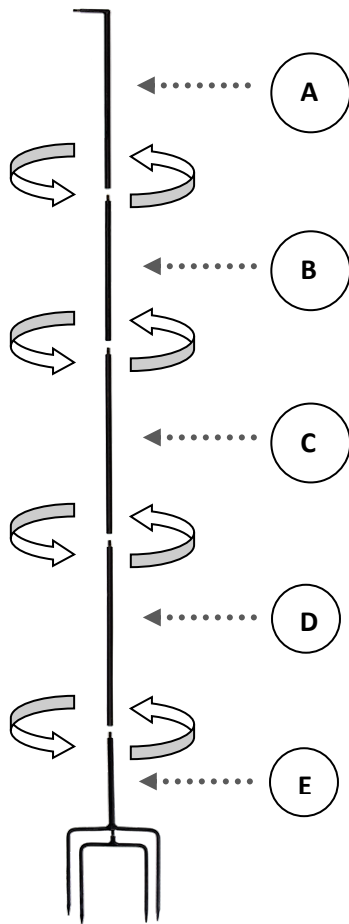

3. Slide the Rear Spinner over the threaded arm of stake A.
4. Slide a Spacer Tube over the threaded arm so that it rests against the hub of the spinner.



5. Slide a Spin Cap down the threaded arm, onto the hub of the spinner.
6. Place a Hex Nut on the threaded arm and tighten it firmly against the Spin Cap.
Note: A loose nut may work loose and allow a spinner to wobble.
7. Screw the Connector onto the threaded arm very tightly.

