




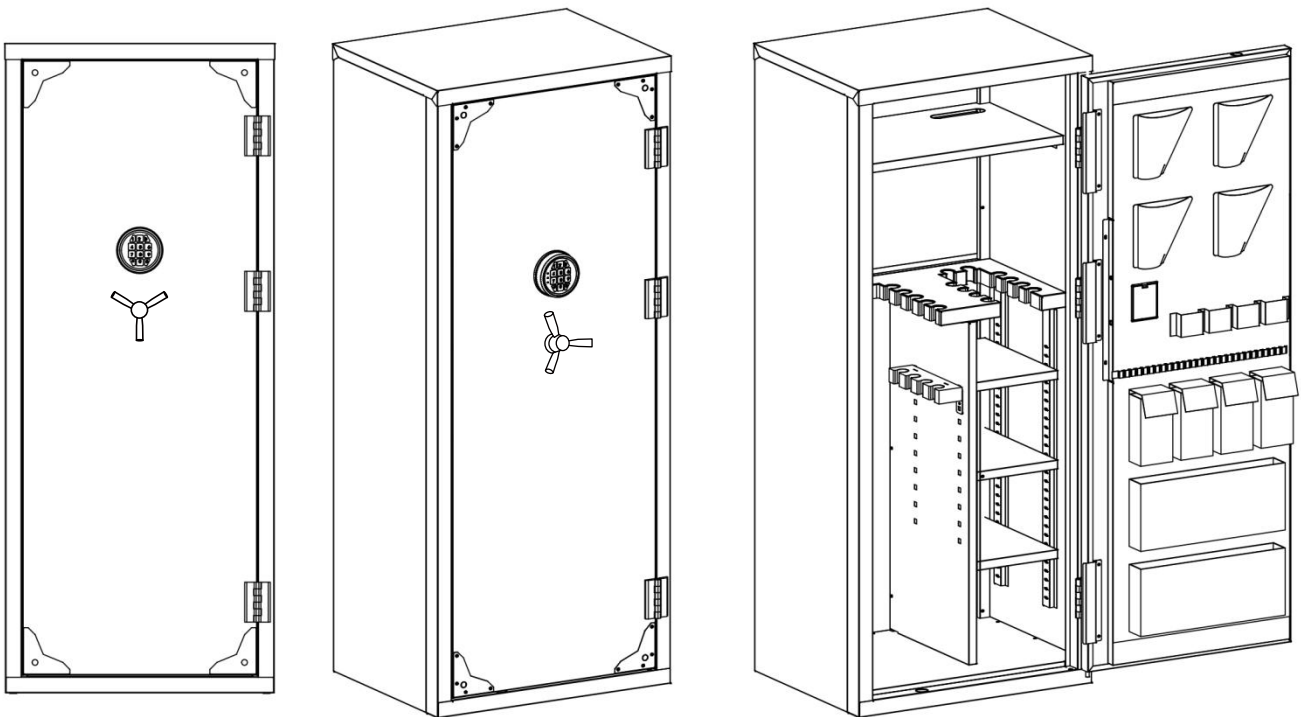


 
 
 
 
 

 
 
 


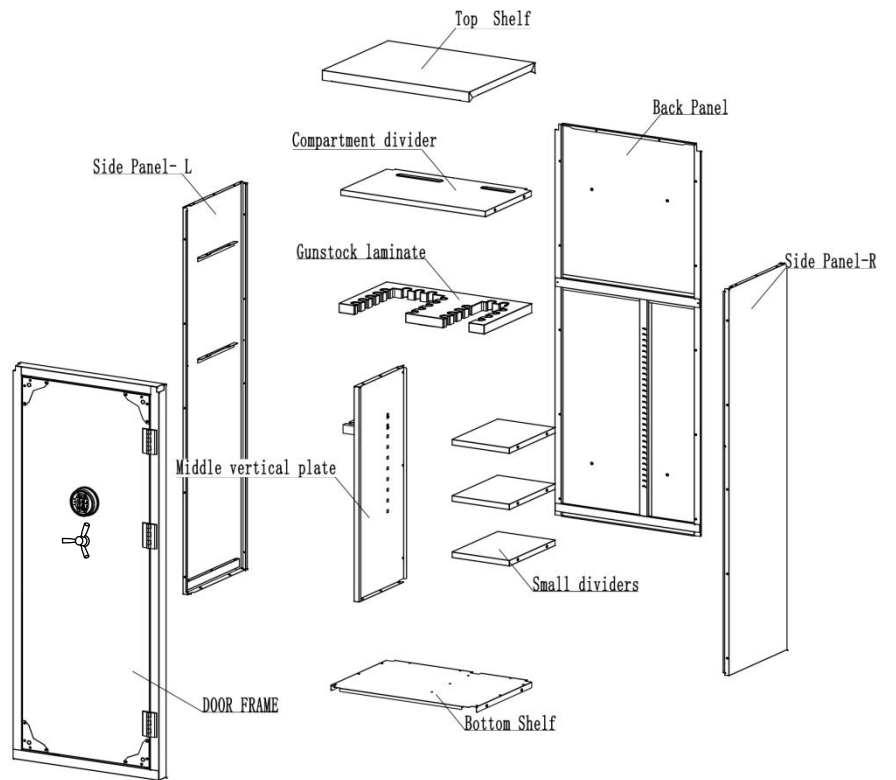





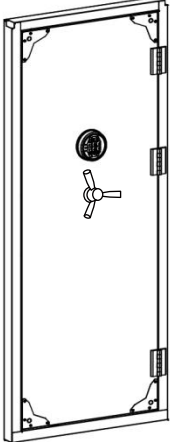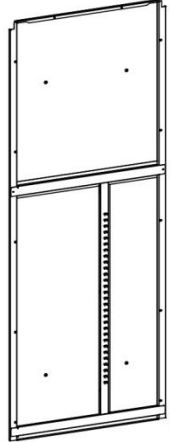

# THE OPERATING MANUAL OF LARGE RIFLE SAFE

**Tip: Please take a few minutes to read the installation instructions and do not keep the emergency keys in the gun cabinet!**



1. Please read the complete installation instructions carefully before assembling the gun cabinet.
2. Check the materials to make sure they are normal and not damaged.
3. Refer to the illustrations to identify the parts and accessories of the gun cabinet.




<p>Door Frame 1 Pcs</p>  <p>A</p>	<p>Back Panel 1 Pcs</p>  <p>B</p>	<p>Side Panel-L 1 Pcs</p>  <p>C</p>	<p>Side Panel-R 1 Pcs</p>  <p>D</p>	<p>Middle vertical plate 1 Pcs</p>  <p>E</p>
<p>Top Shelf 1 Pcs</p>  <p>G</p>	<p>Compartment divider 1 Pcs</p>  <p>H</p>	<p>Bottom Shelf 1 Pcs</p>  <p>I</p>	<p>Gunstock laminate 1 Pcs</p>  <p>J</p>	<p>Small dividers 3 Pcs</p>  <p>F</p>
<p>Buttstock 1 Pcs</p> 	<p>Gun bracket 1 Pcs</p> 	<p>Front frame fixing screws 10PCS</p> 	<p>Screws 44PCS</p> 	<p>Screwdriver 1 PCS</p> 
<p>Gloves 1 PCS</p> 	<p>Expansion bolt</p> 	<p>Key</p> 	<p>External power supply box</p> 	<p>Support foot 4PCS</p> 
<p>sensor light</p> 	<p>Rotatable handle</p> 	<p>Fixed Buckle 4PCS</p> 		

## Installation instructions




### Safety warning

Without safety reinforcement prior to installation, tipping can cause serious injury to children and adults.  
Children should not play near gun cabinets.

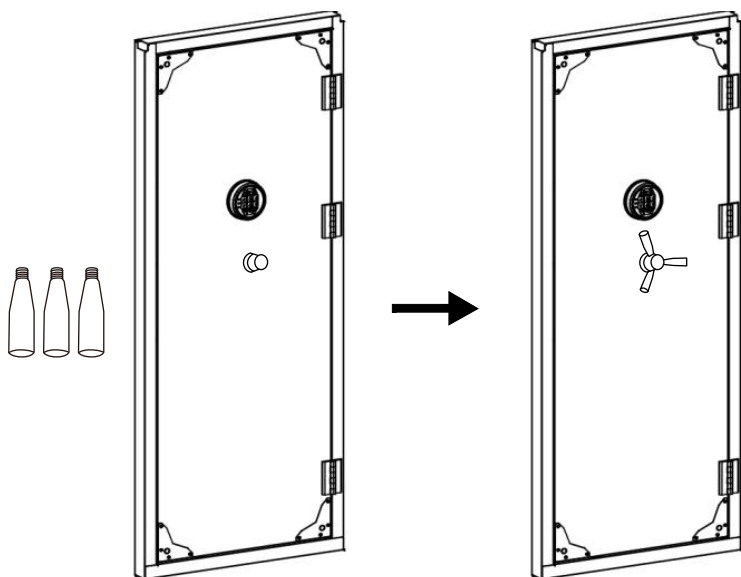


Rotate the handle once to secure it. Connect

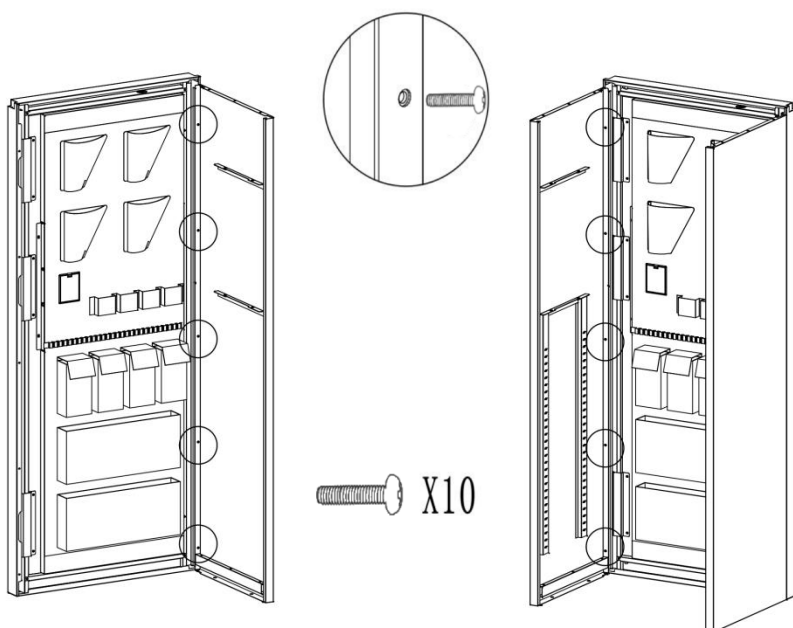


### Step 1

Connect the left and right side panels to the door frame with 10 self-tapping screws.

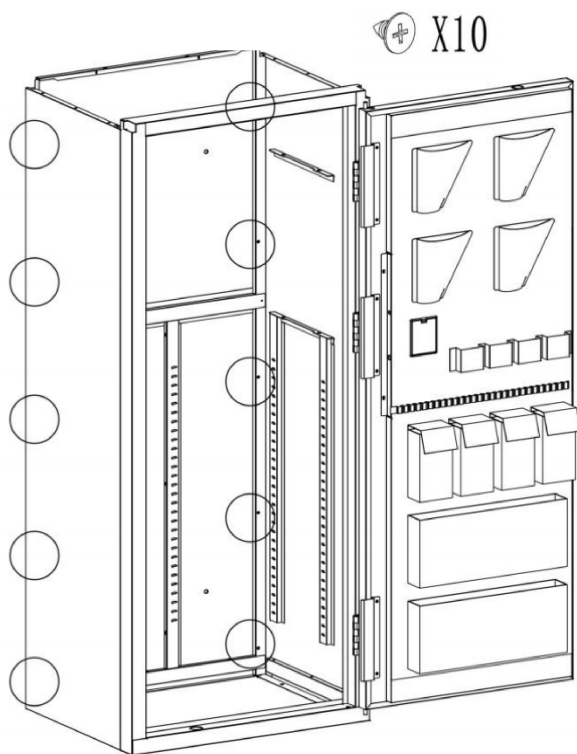


### Step 2

Install the back panel with 10 self-tapping screws.

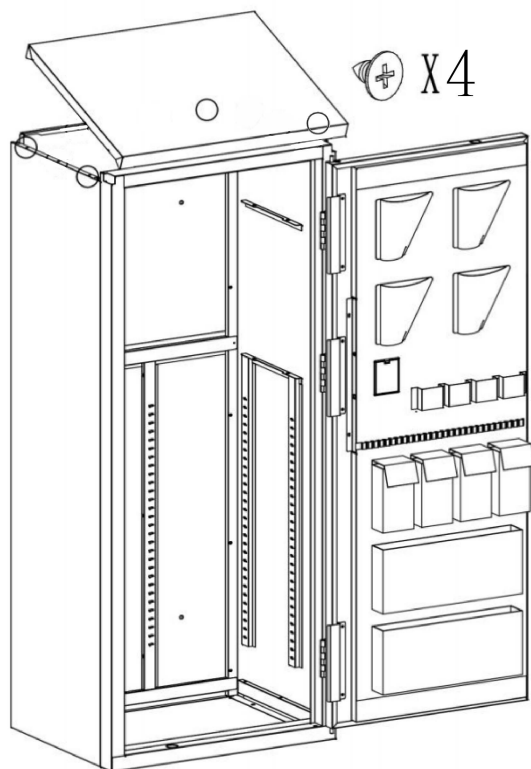

### Step 3


Install the top shelf by inserting it from front to back and secure with 4 self-tapping screws.

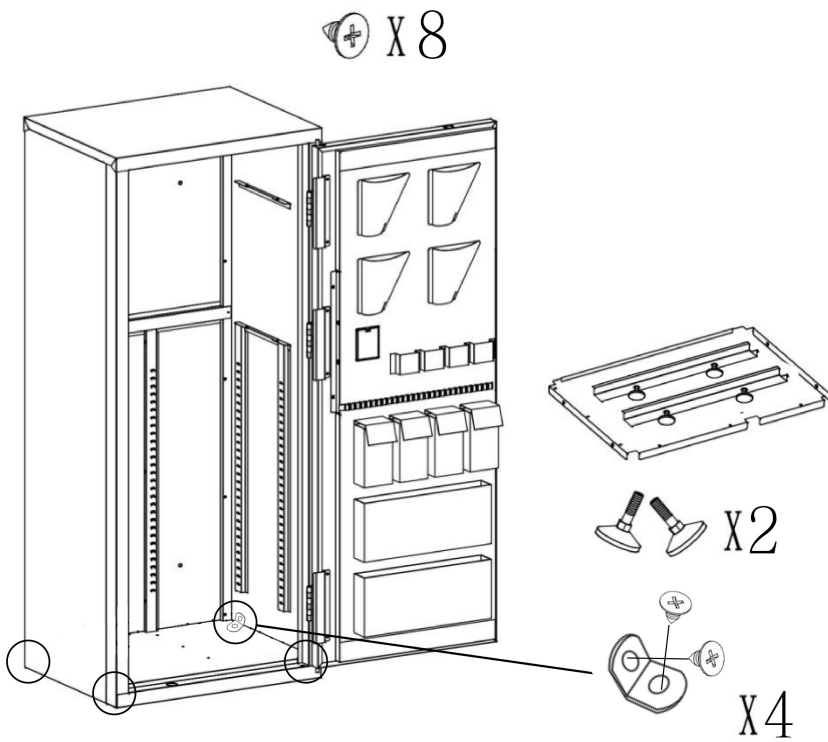

#### Step 4

Install the bottom shelf, the front edge of the bottom plate hooks the front frame, and the remaining three sides are clamped into the sides and back. It is fastened with 4 E-type metal parts and 8 screws.


The support feet are installed in the four holes at the base of the bottom shelf.

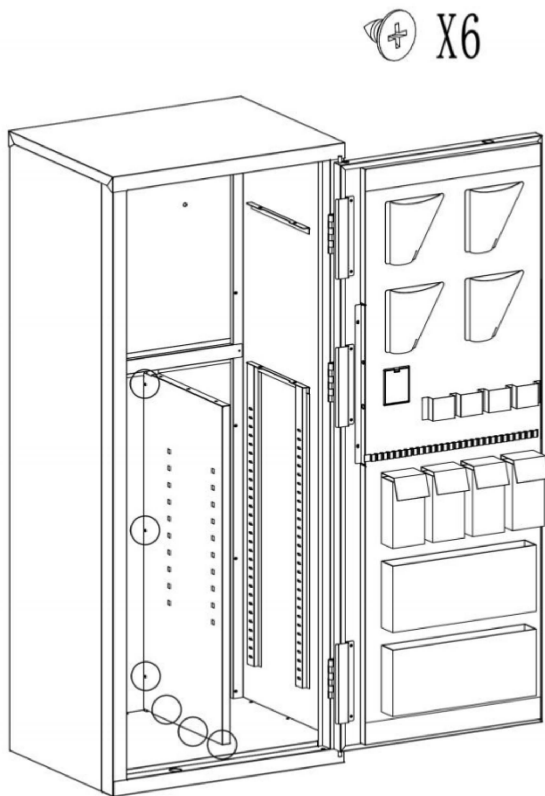

#### Step 5

Install middle vertical plate, stuck in the back and bottom with 6 self-tapping screws.


 X7

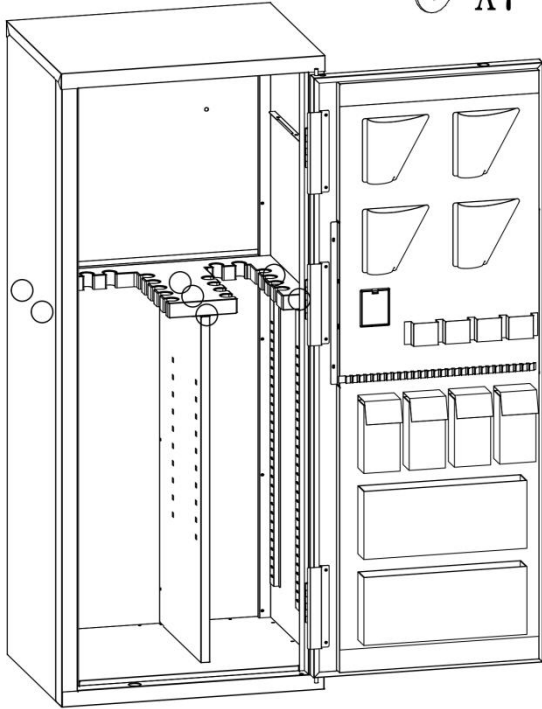

### Step 6

Install gunstock laminate, connect the two sides and center vertical plate with 7 self-tapping screws.

 X4

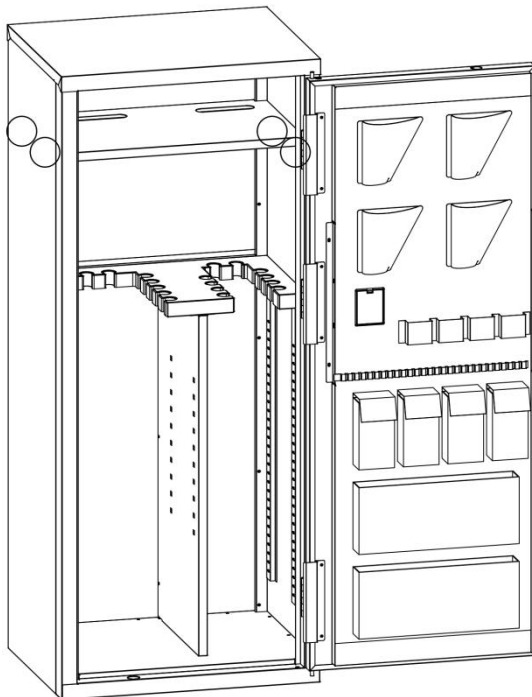

### Step 7

Install the compartment divider with 4 self-tapping screws.

## First opening

1. Flip the switch on the bottom housing of the electronic lock and turn the housing counterclockwise to open.
2. Insert the emergency key into the key hole and turn it clockwise.
3. Turn the handle clockwise to open the gun cabinet.
4. Insert 4 AA alkaline batteries.

### CAUTION:

1. Please do not use rechargeable batteries.
2. Please do not use different brands of batteries, the current is different, which may burn the panel.
3. If the panel is not powered after installing the battery, please check if the battery is low.

## Set the user code

With the door open, press the setting button inside the door hinge. The yellow light will illuminate; within 10 seconds, input the new user password.

Input a new user password of 3-8 digits, then press "#" to confirm. The lock will emit a beep, and the yellow light will turn off.

**CAUTION:** The original factory password is "159".

## Set the master code

With the door open, press "0" twice, then press the setting button inside the door hinge. The yellow light will illuminate; within 10 seconds, input the new master password.

Input a new master password of 3-8 digits, then press "#" to confirm. The lock will emit a beep, and the yellow light will turn off.

**CAUTION:** For security and confidentiality, do not set the user code and the master code to be the same.

## Open the safe

1. Input the password you've set using the keypad, press "#" to confirm. The buzzer will sound twice, the green light will illuminate, indicating the correct password input. The electromagnet will engage, allowing the door to be opened for 5 seconds before automatically closing.

2. If the yellow light blinks and the buzzer sounds four times, it means the password input is incorrect; please re-enter.

### CAUTION:

1. The green light serves as a numeric input indicator and an indicator for an unlocked door.
2. The red light indicates low battery voltage.
3. The yellow light functions as a setup indicator and an error indicator.
4. The \* key is the delete key, pressing it once clears the entire inputted password.
5. The # key serves as the confirmation key.

## **Auto-Lock on Incorrect Password**

1. If an incorrect password is entered consecutively three times, the system will automatically lock for 20 seconds.
2. If three more incorrect attempts are made during the 5-minute lock period, the system will lock for an additional 5 minutes.
3. During the lock period, all operations are invalid. After the lock time expires, the safe can be opened with the correct password. In case of emergency, you can use the emergency key to open the safe during the lock period.

## **Silent Mode**


Enter "11#",the buzzer makes a long sound, indicating that all sounds are successfully enabled or disabled.Reinstall the battery or restore the factory settings to turn on the sound.

## **Other**

1. The control board uses four 1.5V alkaline batteries. If the battery is insufficient, it will remind "drip, drip, beep" twice after opening the door, and the red light is on, please replace the battery in time.
2. If the battery voltage is insufficient, the external power supply box or emergency key can be used to operate.
3. Hold down the setting key for 5 seconds, the buzzer plays a piece of music, and the system restores the initial Settings.

## **Security and compliance**

1. In order to reduce the risk, the gun cabinet is best installed on the wall to ensure safety.
2. Please keep the emergency keys carefully. Do not put the key in the gun cabinet, otherwise when the battery is exhausted, the emergency key will not be able to open the safe.
3. In order to ensure the safety of your property, you need to change the original factory password.
4. Do not place the product on unsafe elevated racks to avoid falling, damaging the product or injuring people.
5. Do not spill liquid on the control panel, otherwise it may cause electric shock to the internal electronic components and affect its normal operation.
6. Do not disassemble the product by yourself. Unguided disassembly and improper assembly of the gun cabinet may damage the circuit and affect its performance.
7. All pictures in the manual are subject to the actual object.

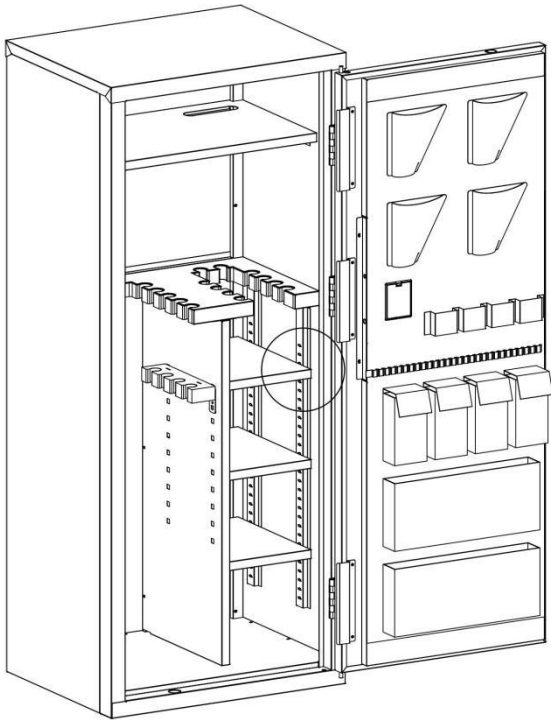

**Step 8**  
The buttstock and small dividers is shown in the figure.

