 


Assembly Instructions

For more information contact our team: service.ec@foagroup.com

SM

General Sofa/Loveseat/Chair Leg Installment Guide
(Product with No Pre-drilled Holes)

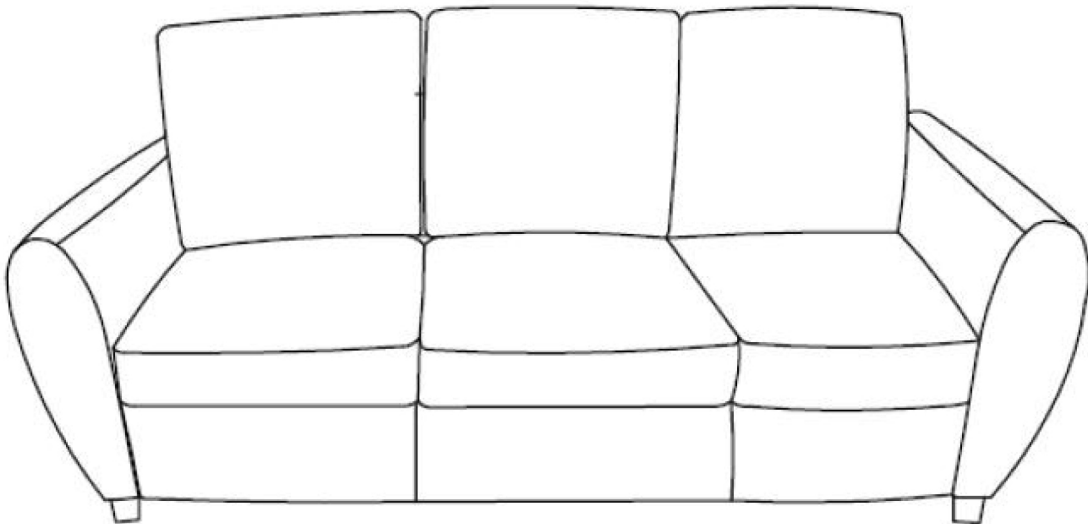

(Sample image. Image may not match your particular item.)

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Power tool
(Not included)



Phillips Screwdriver
(not included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

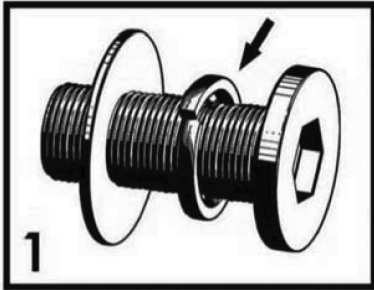

 
1
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

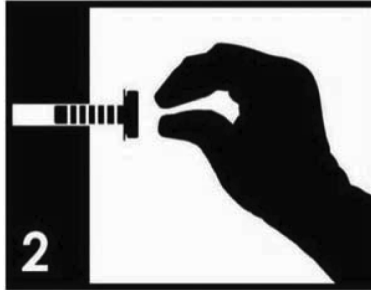

 
2
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

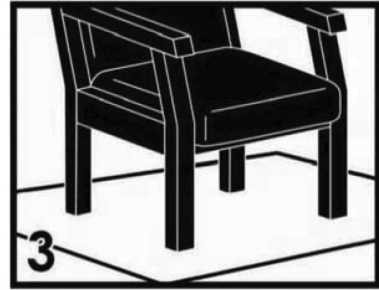

 
3
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

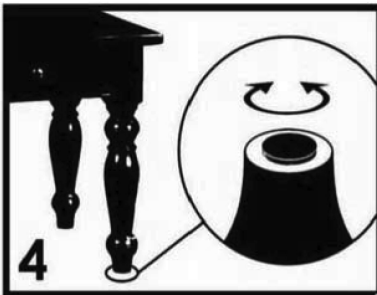

 4
Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

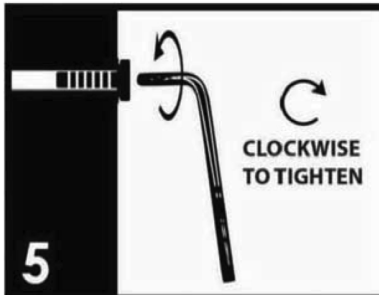

 5
Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

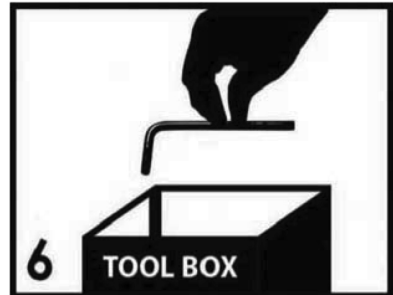

6
Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

PARTS LIST

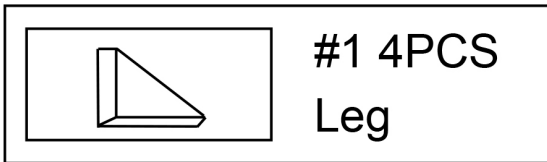

#1 4PCS
Leg

(Legs may be triangles or squares)

HARDWARE LIST

 


#A 8PCS
Screw


The amount of legs and screws that have no-predilled holes to align to may vary depending on unit.




- I. Carefully place the seat face down onto a protected surface.
- II. Remove the wooden blocks from each corner of the seat.

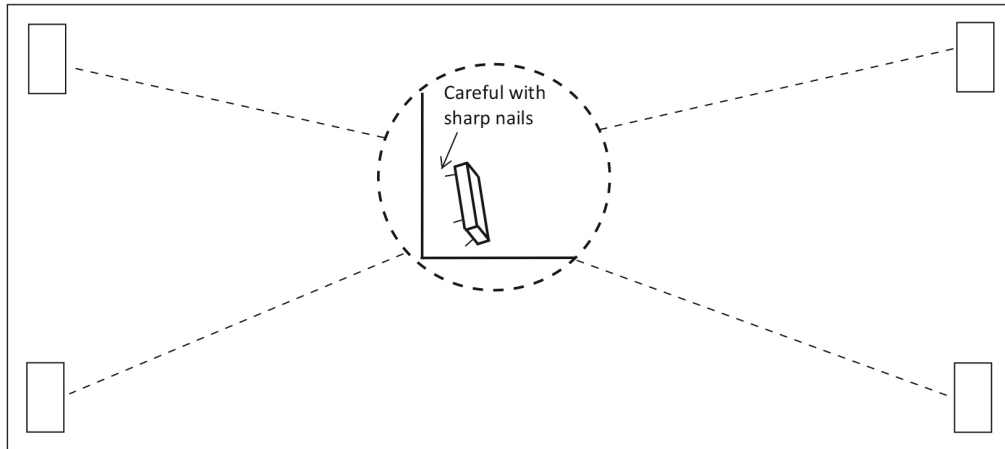


 → If there are no wooden blocks on each corner of the seat, then move on to step 2.

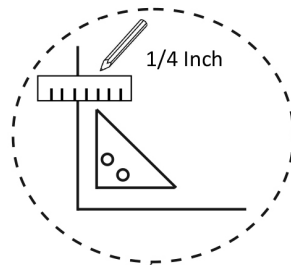


  Place the legs (#1) onto each corner of the seat and measure 1/4 inch on each side of the leg.

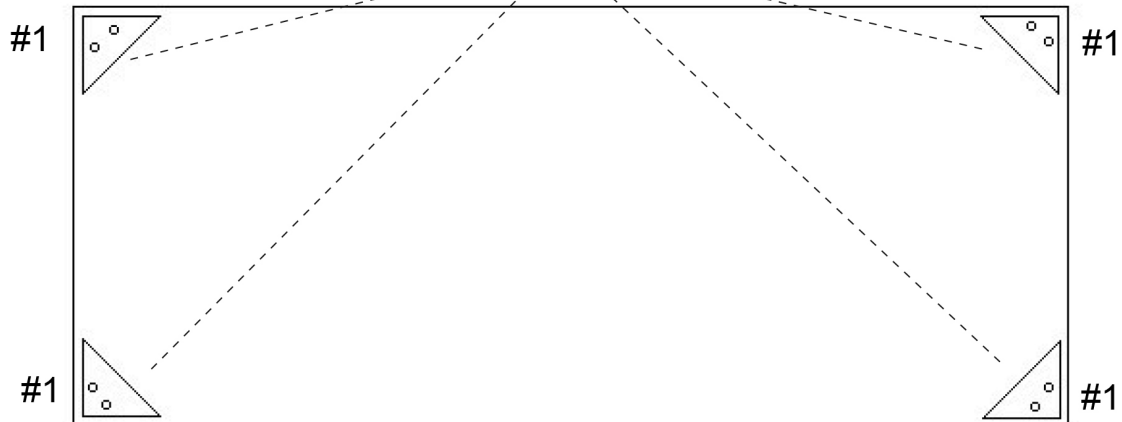


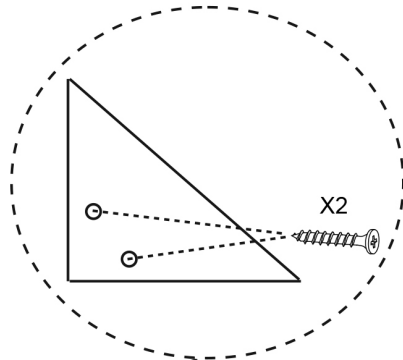

 
Insert 2 screws (#A) into each leg (#1).

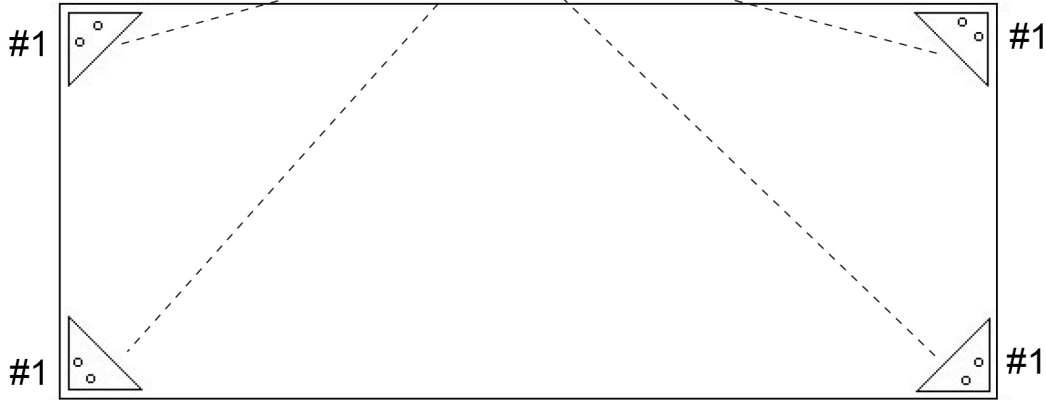

If using power tool.

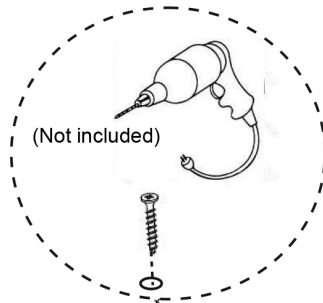 

 Prepare power tool. Choose the appropriate type Phillip head for the screw. Use the power tool and align the screw perpendicular to the surface. Gently pull trigger and then accelerate until secured.

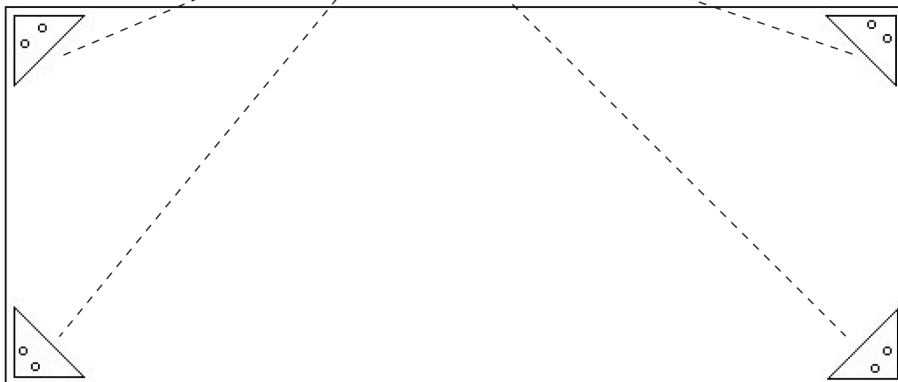


Carefully turn the completed seat upright. Make sure the seat is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tightened.


ASSEMBLY IS COMPLETED



 If using screwdriver.

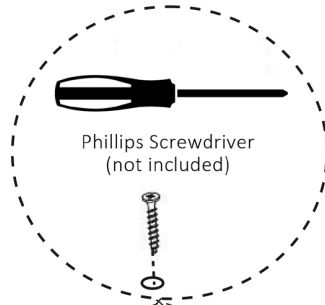

 Choose the appropriate type of Phillips screw driver to the screw. Use the screwdriver and align the screw perpendicular to the surface. Secure the legs onto seat by applying pressure on the screwdriver with screw into the seat frame. This will require great force. Do not continue when hands or arms ache.

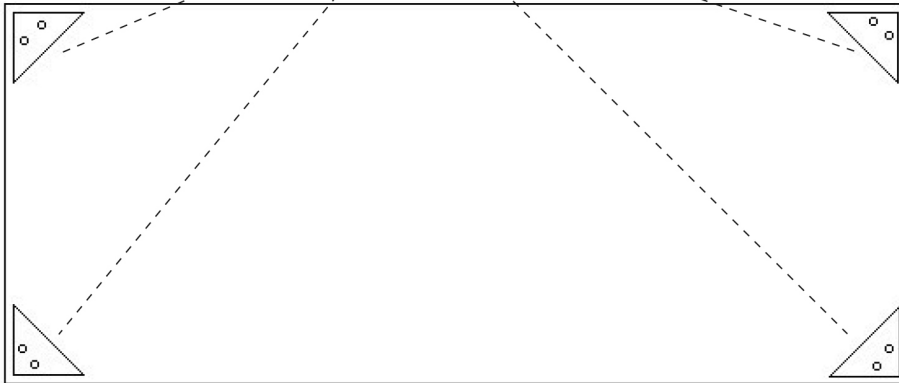

Carefully turn the completed seat upright. Make sure the seat is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tightened.

ASSEMBLY IS COMPLETED