
INSTALLATION Product Manual

Version: 590007US-01-25A-NY



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

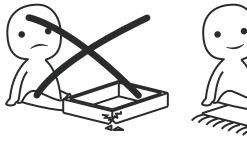



AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY!

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.







ANTI-TOPPLE WARNING!


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT!

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

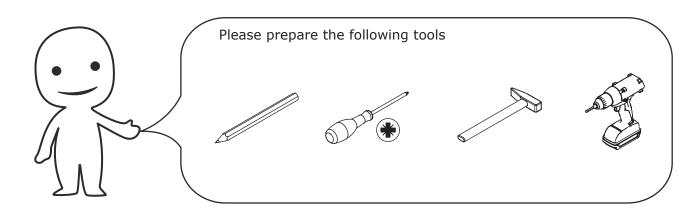









When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size




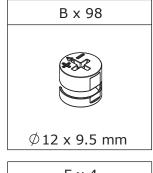


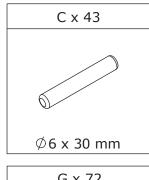


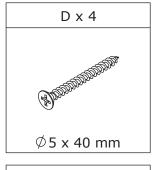


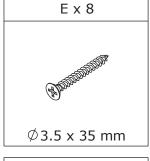


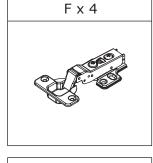


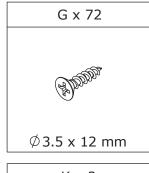


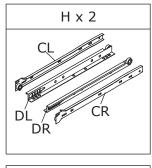


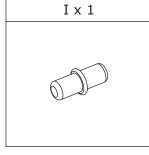


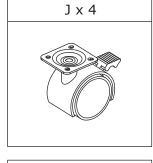


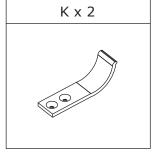

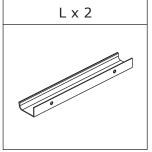

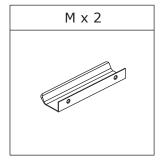

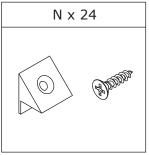

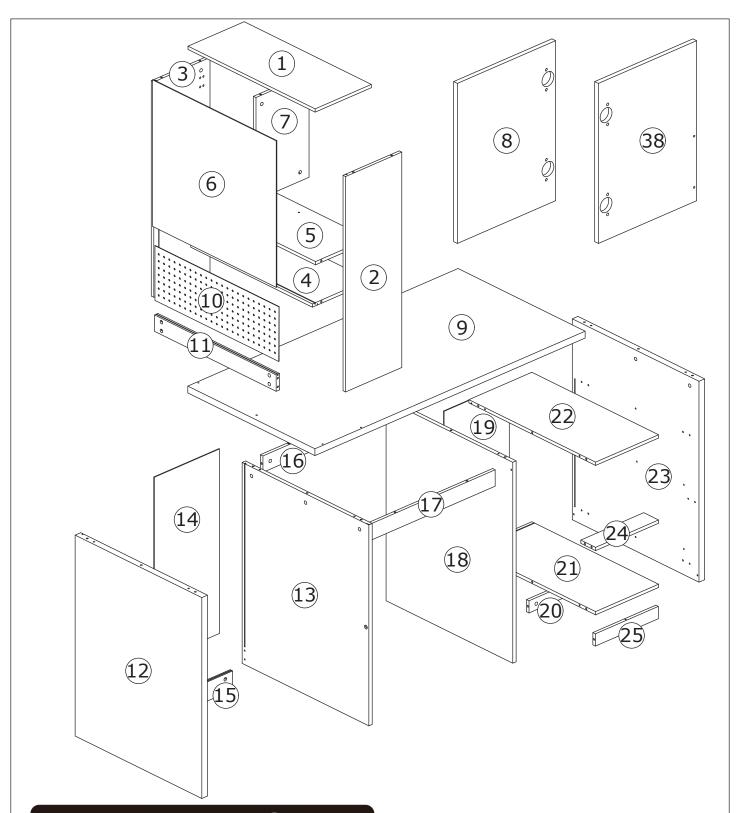

AWARNING




Children have died from furniture tipover.To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device NEVER put a TV on this product.
 NEVER allow children to stand,climb


- or hang on drawers,doors,or shelves.

 NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

 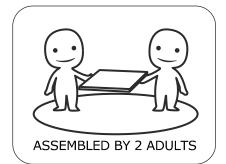


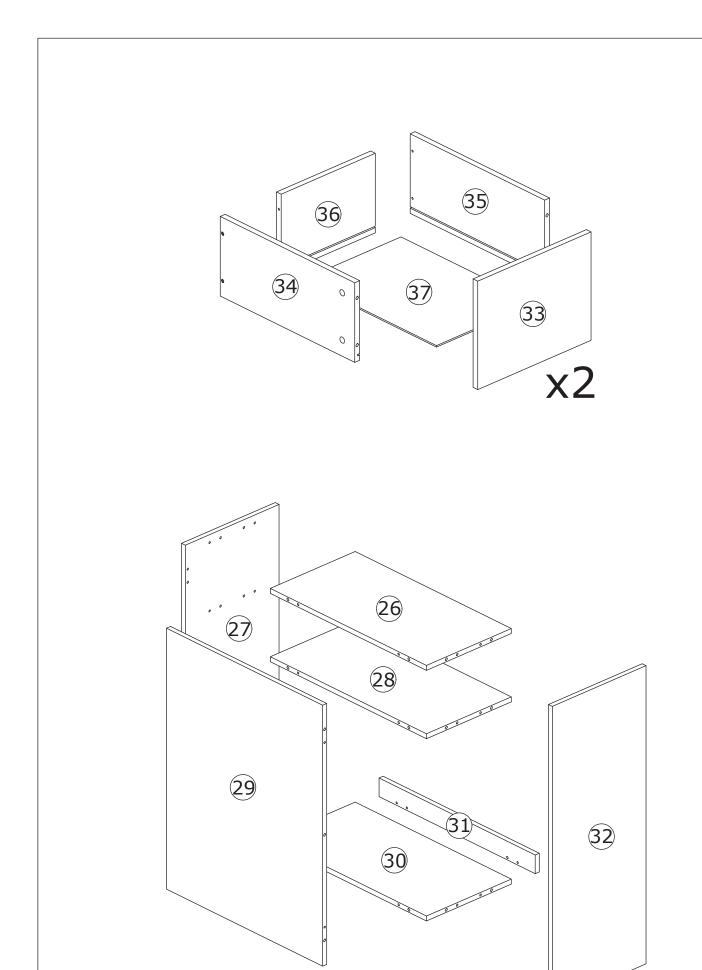

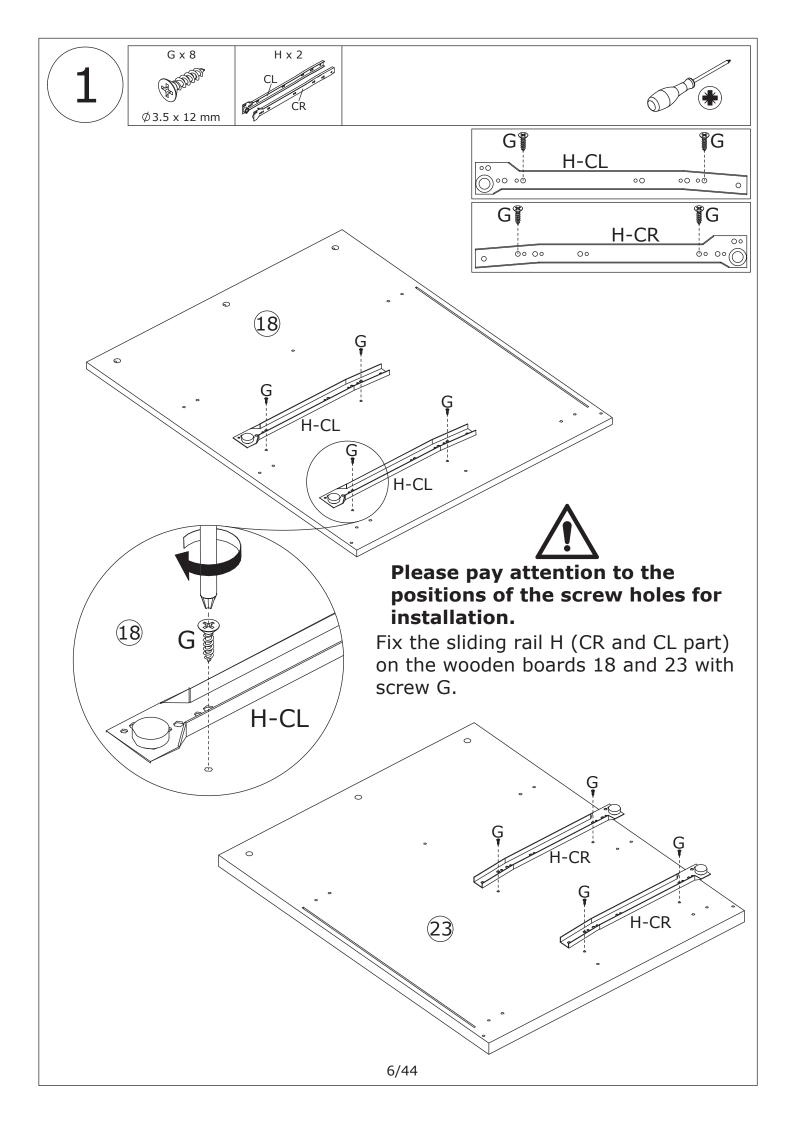











Connect the wooden boards 20 and 25 to the wooden board 21 with dowel C.

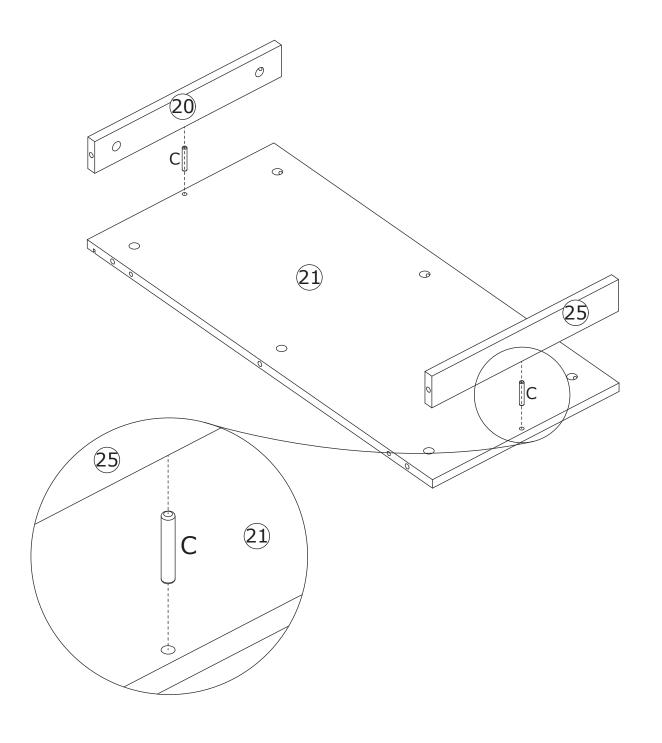


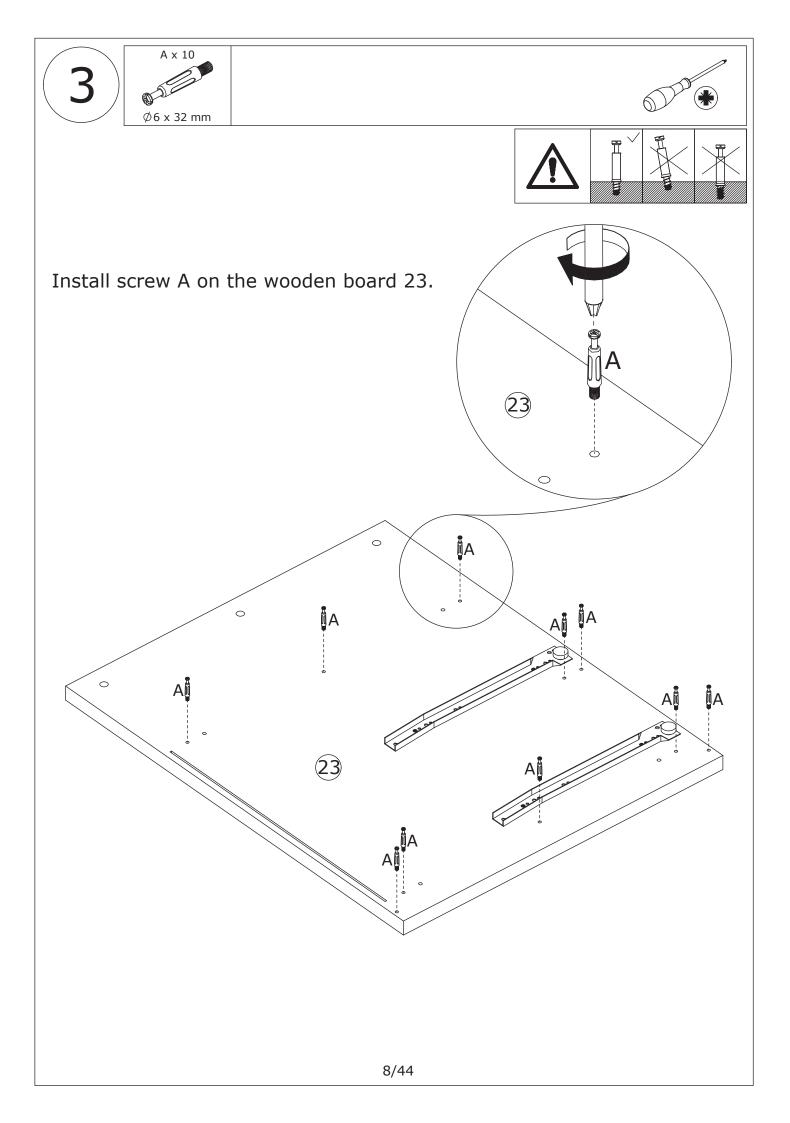


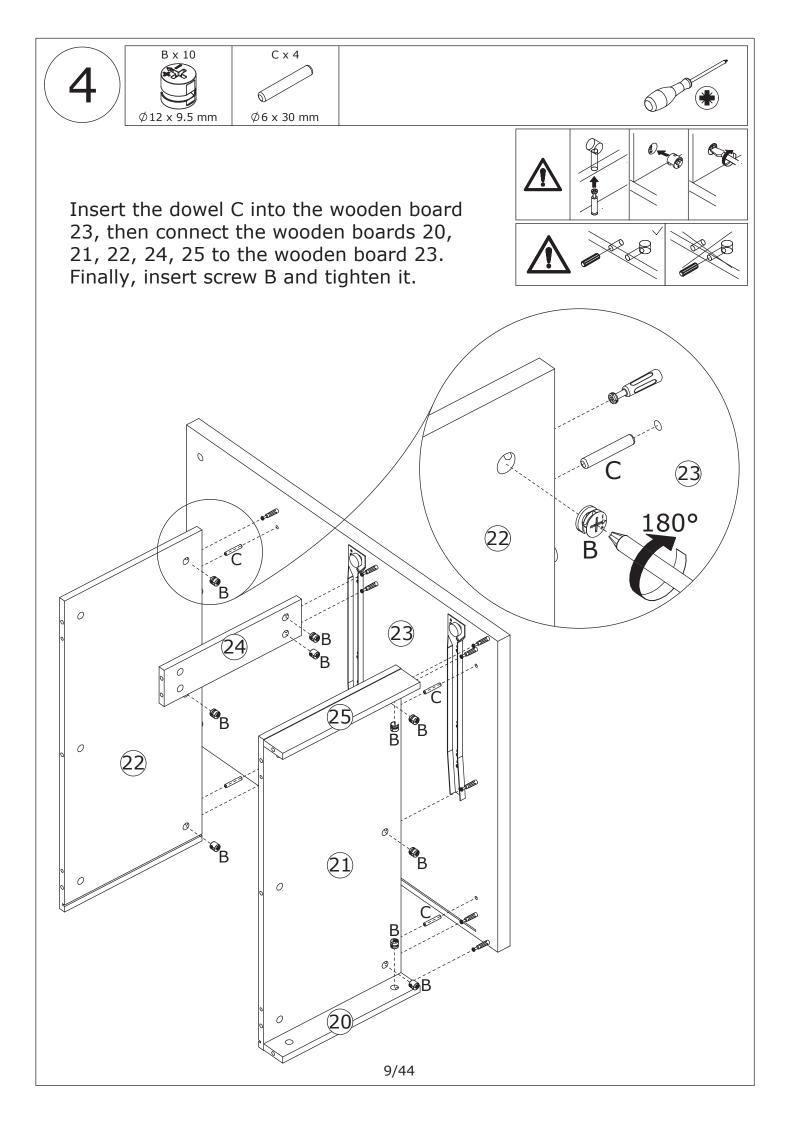



Insert the wooden board 19 into the grooves of the wooden boards 21, 22 and 23.

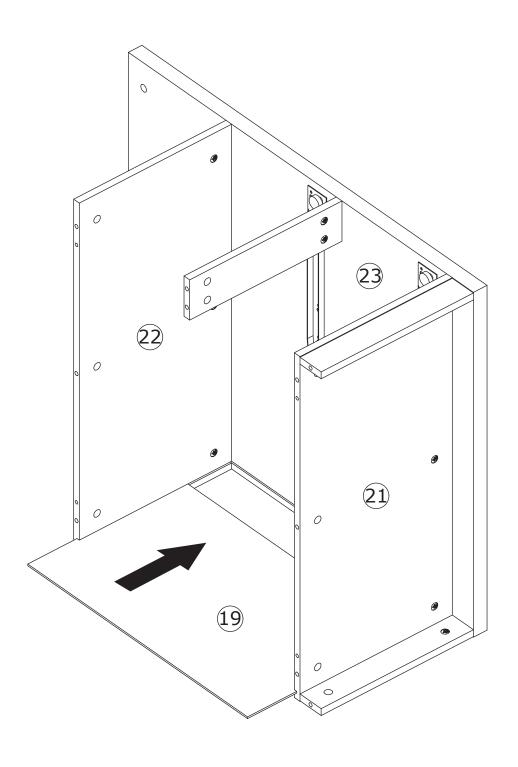

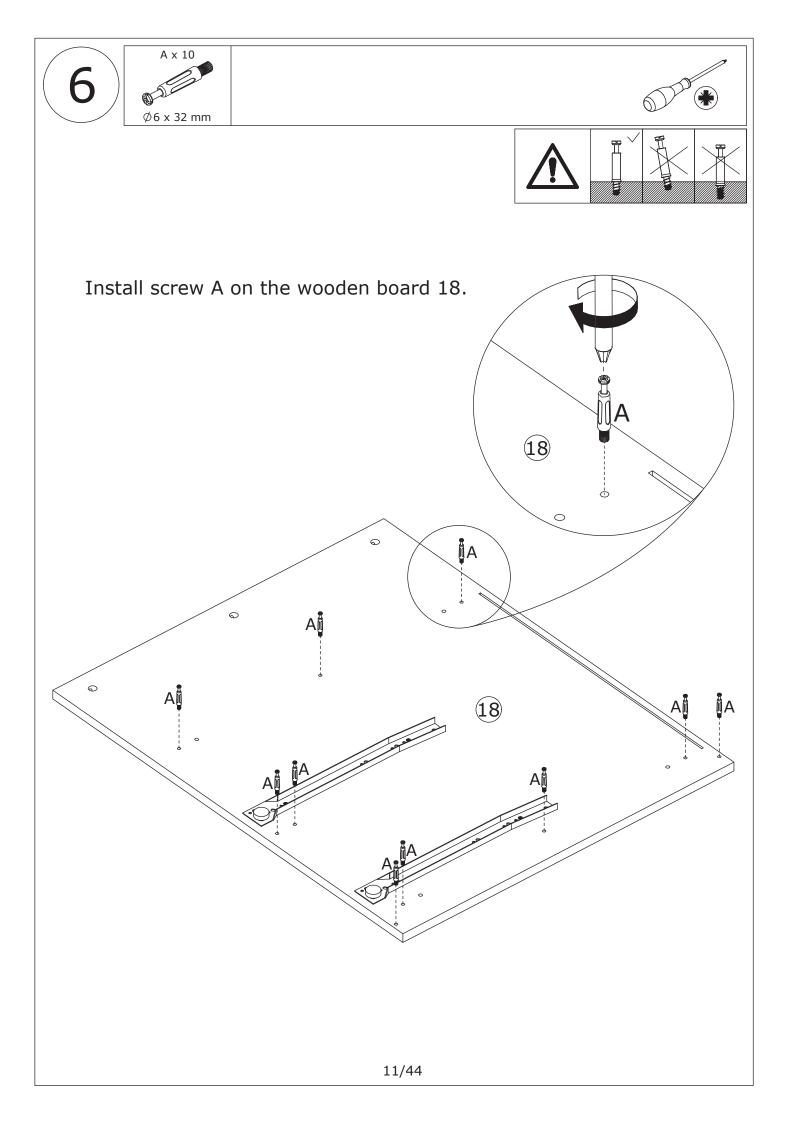


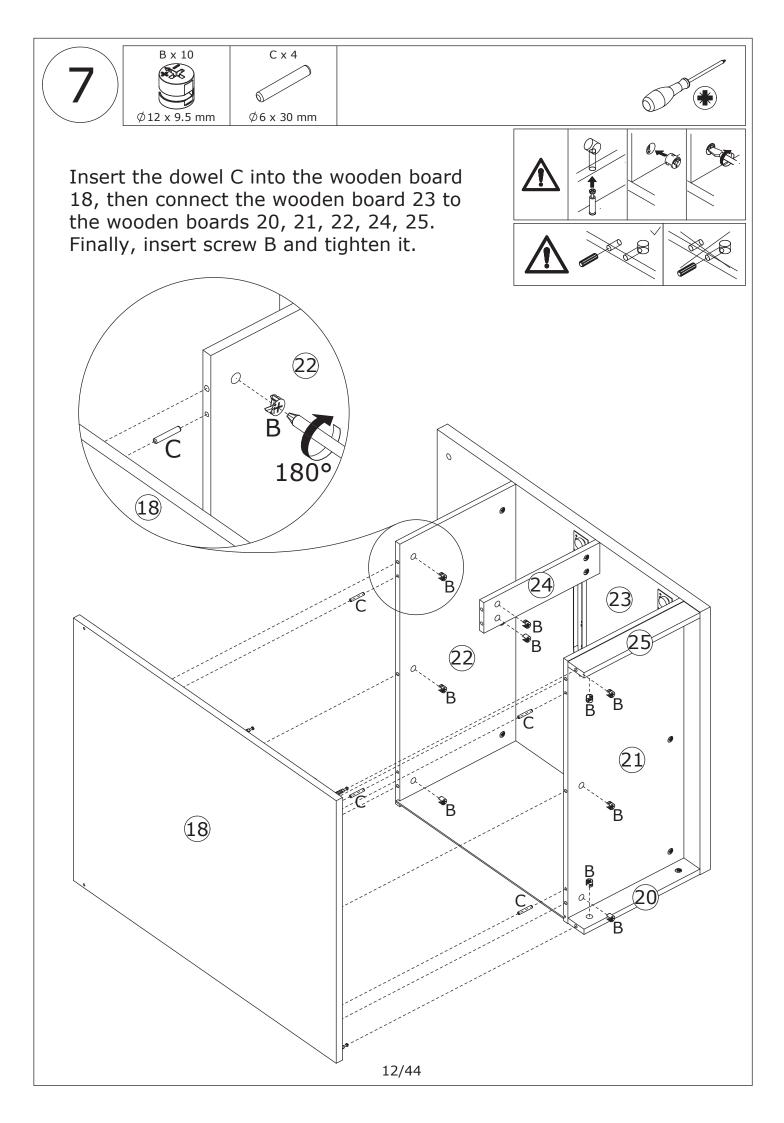


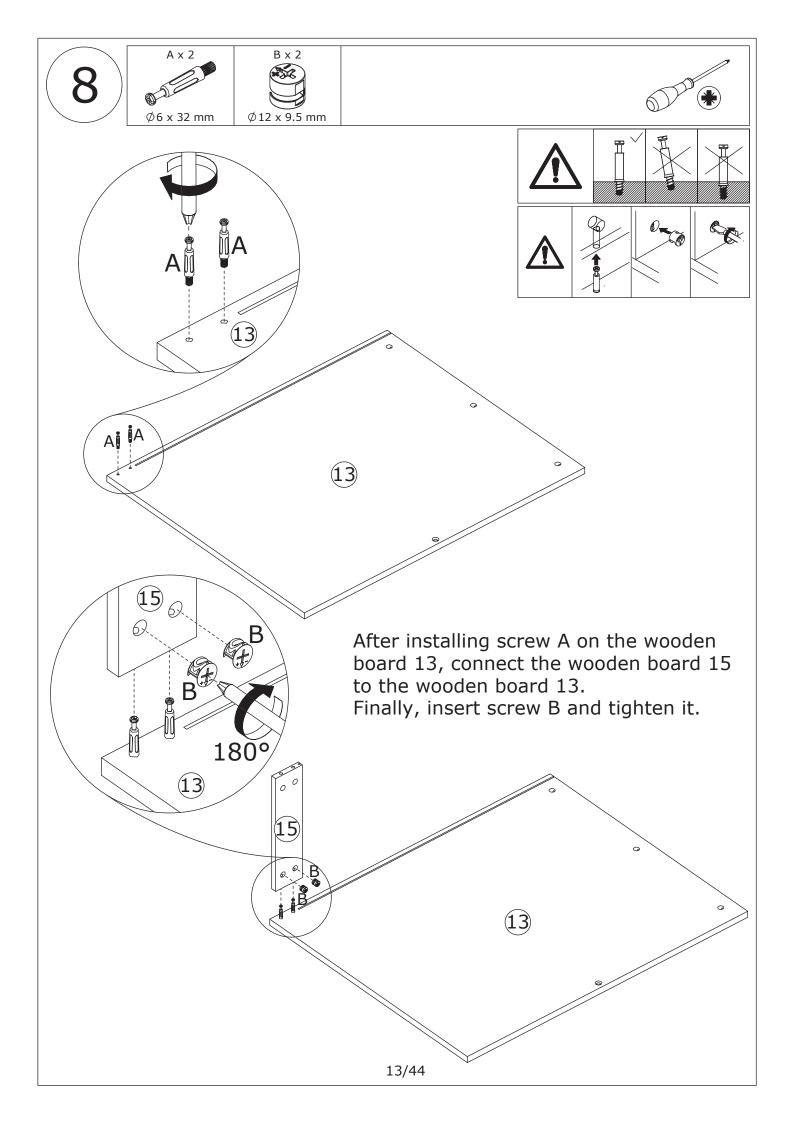

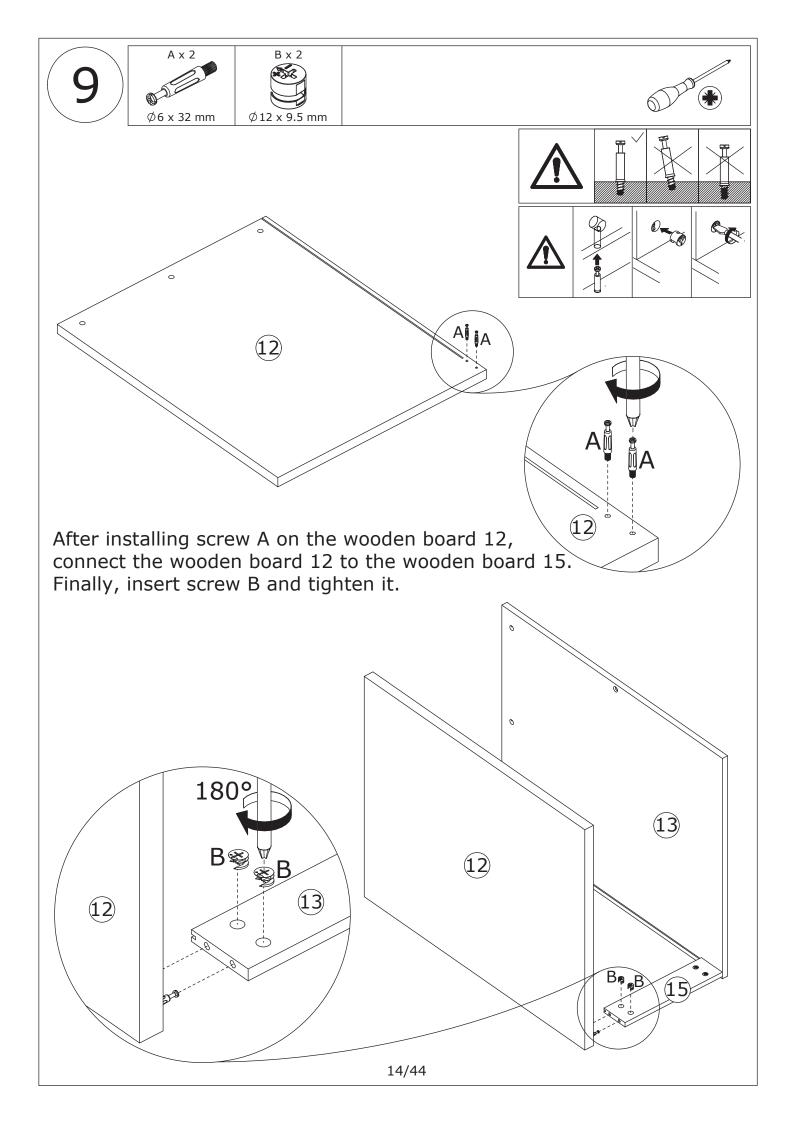

Insert the wooden board 14 into the grooves of the wooden boards 12, 13 and 15.

 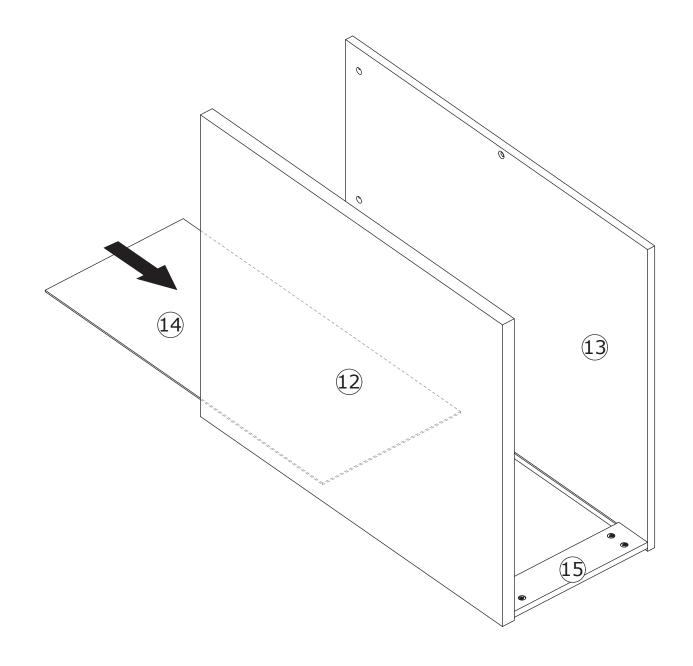


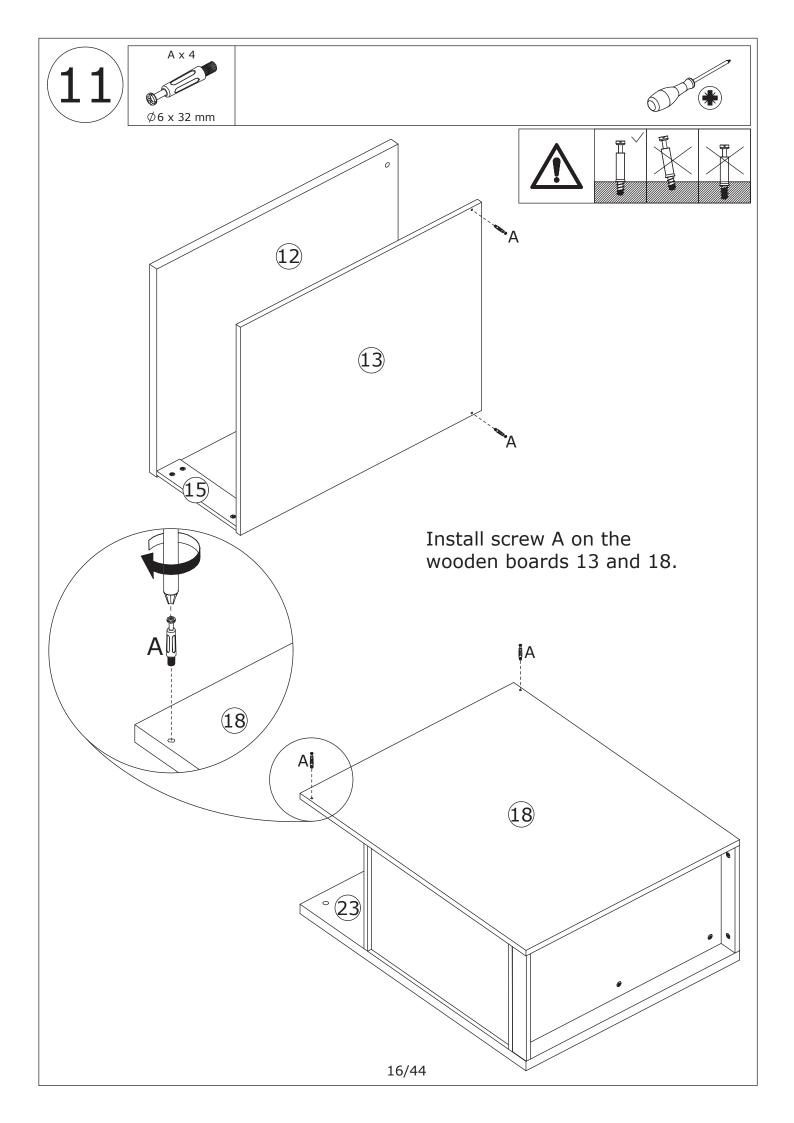














Connect the wooden boards 13, 16, 17 and 18, then insert screw B and tighten it.

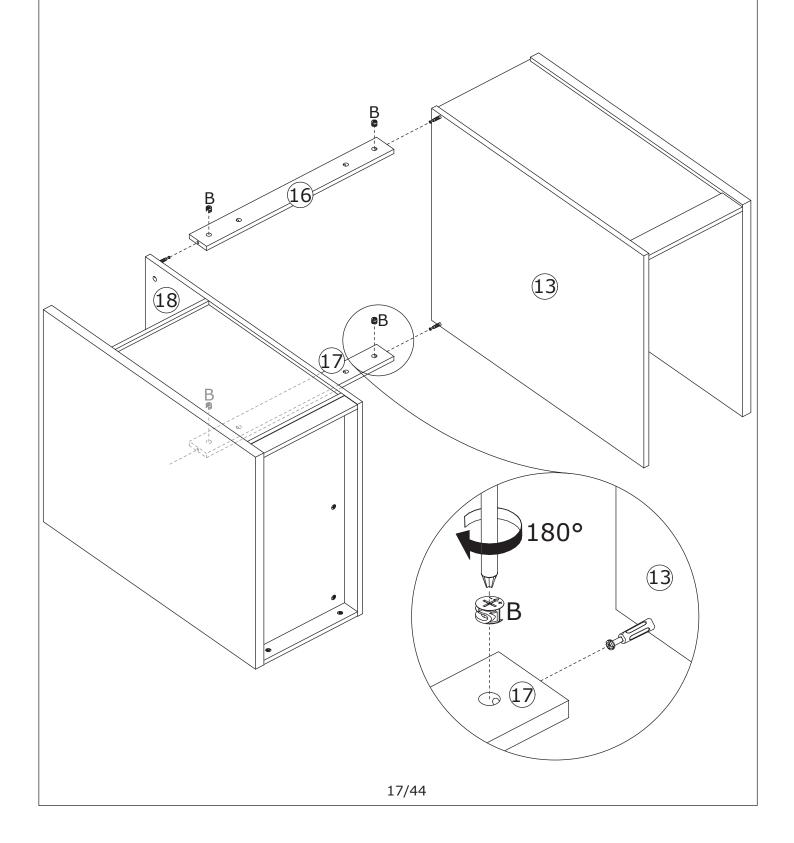


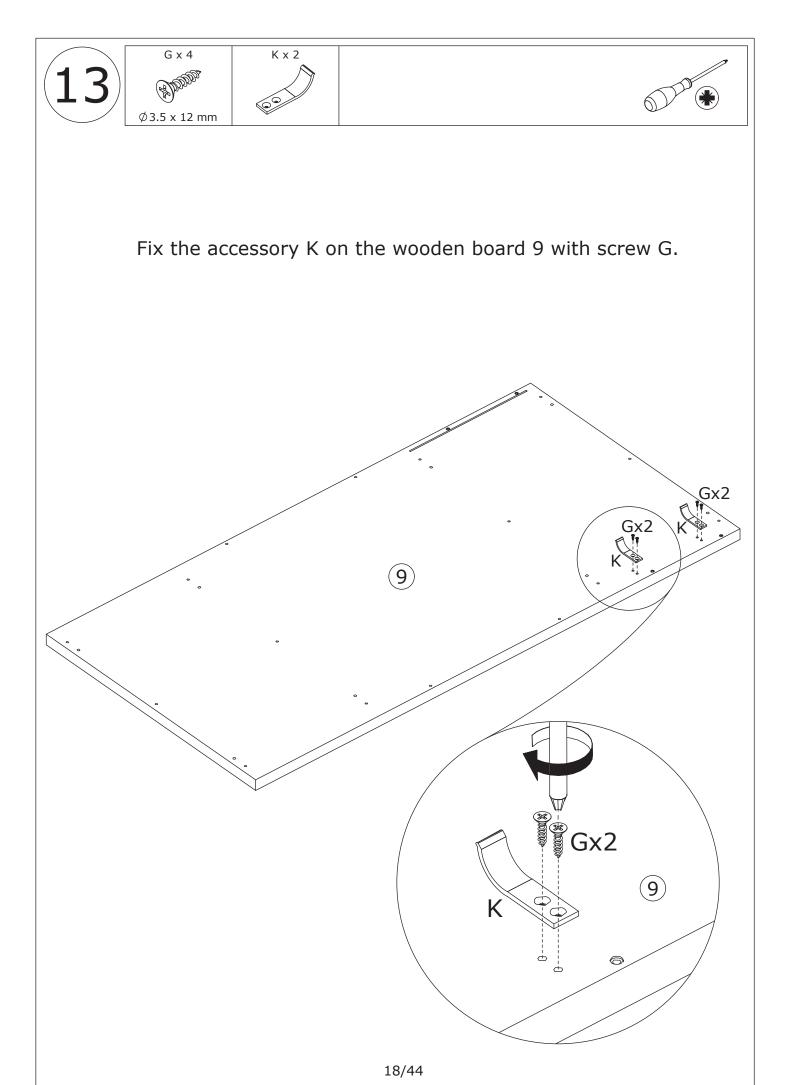

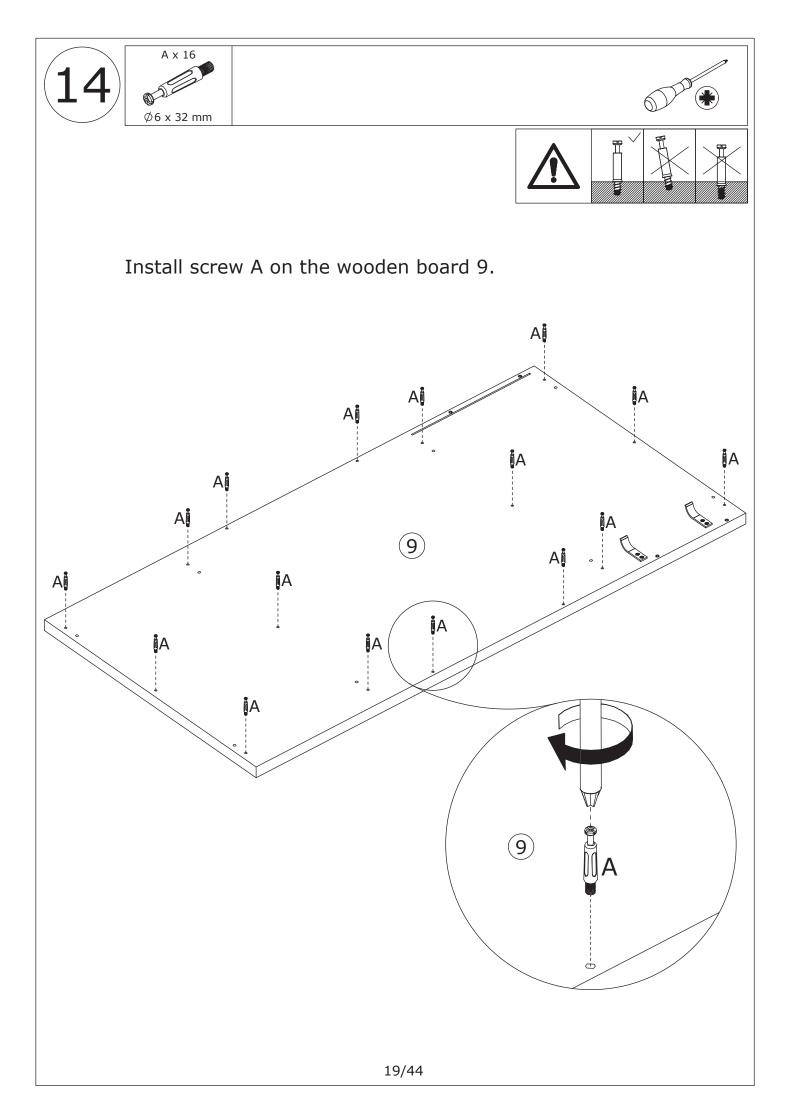


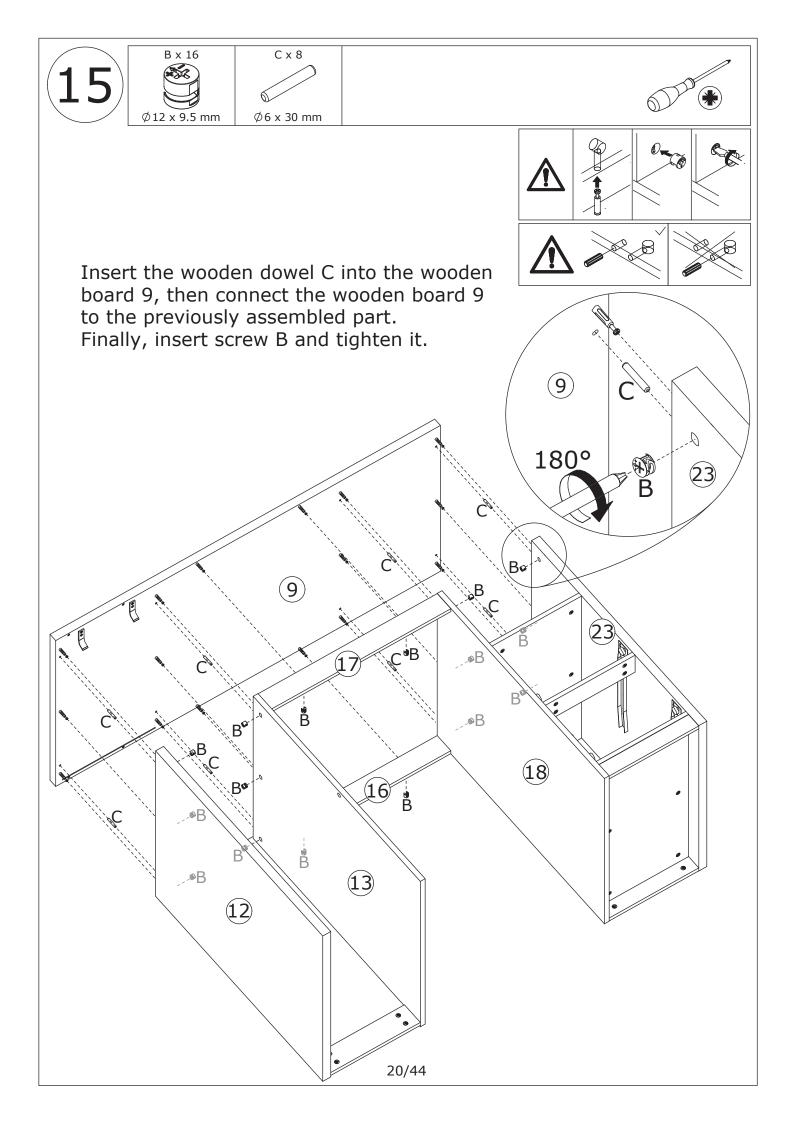


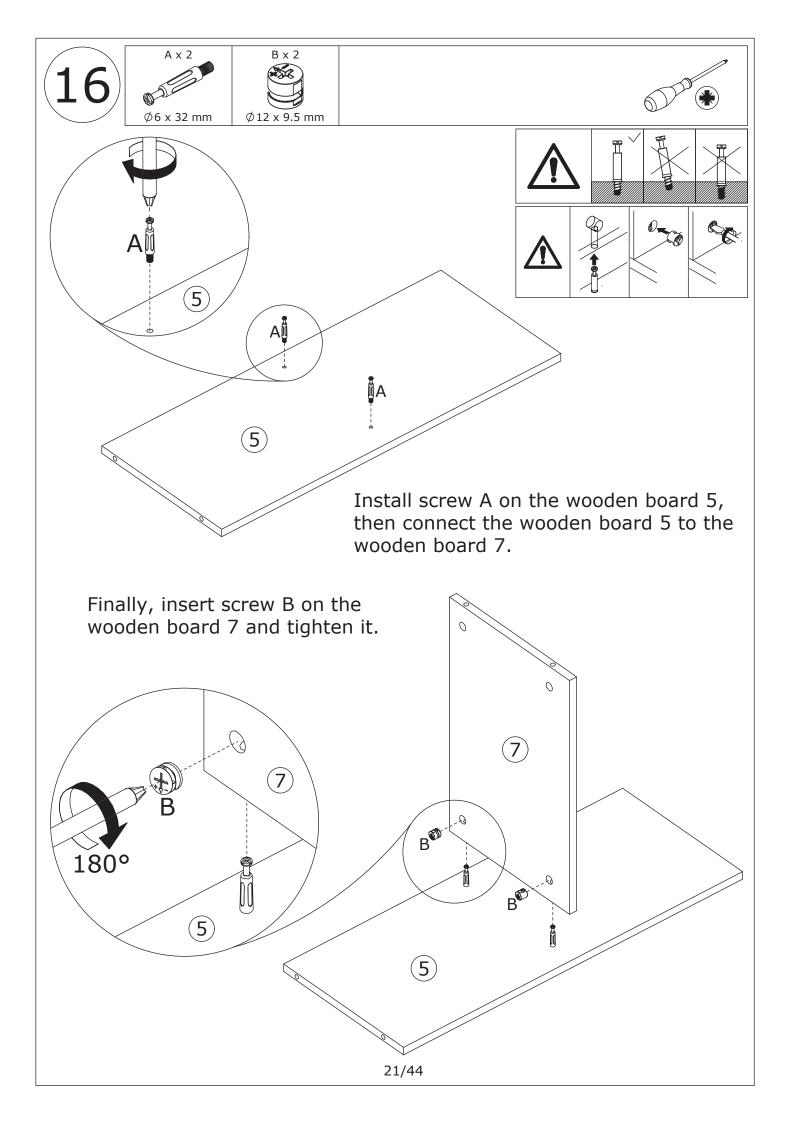

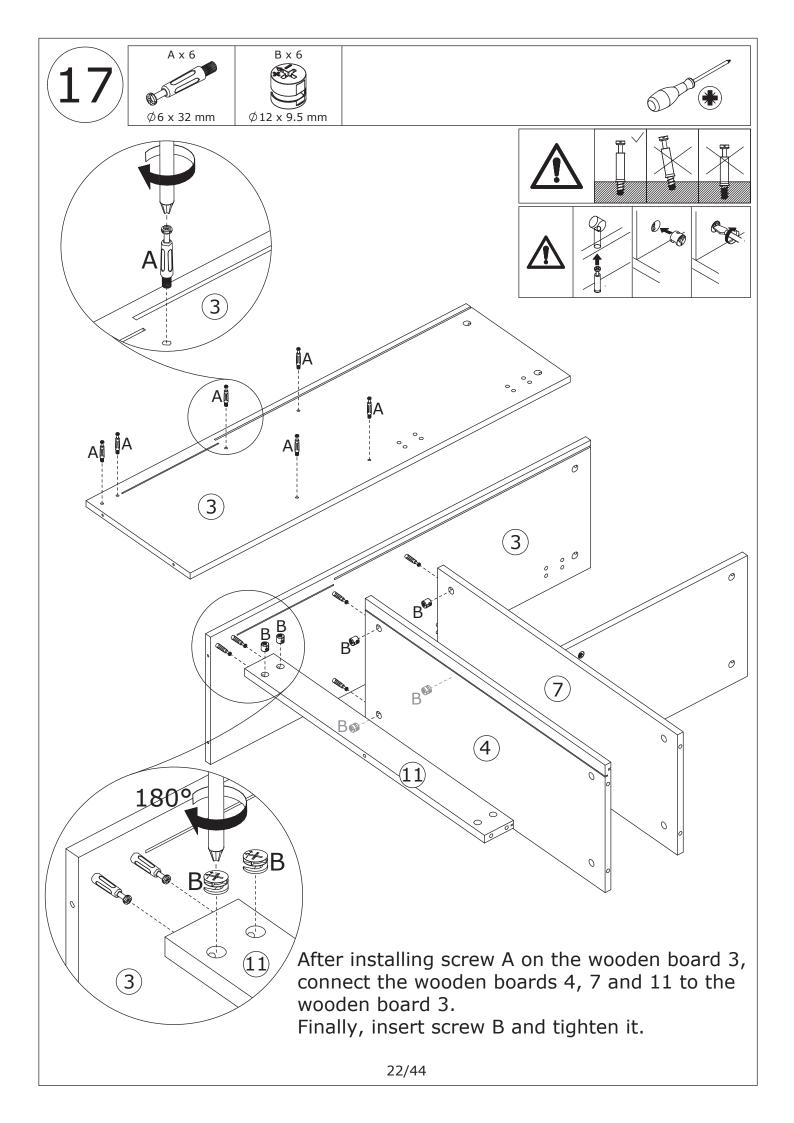



Insert the pegboard 10 into the grooves of the wooden boards 3, 4 and 11.

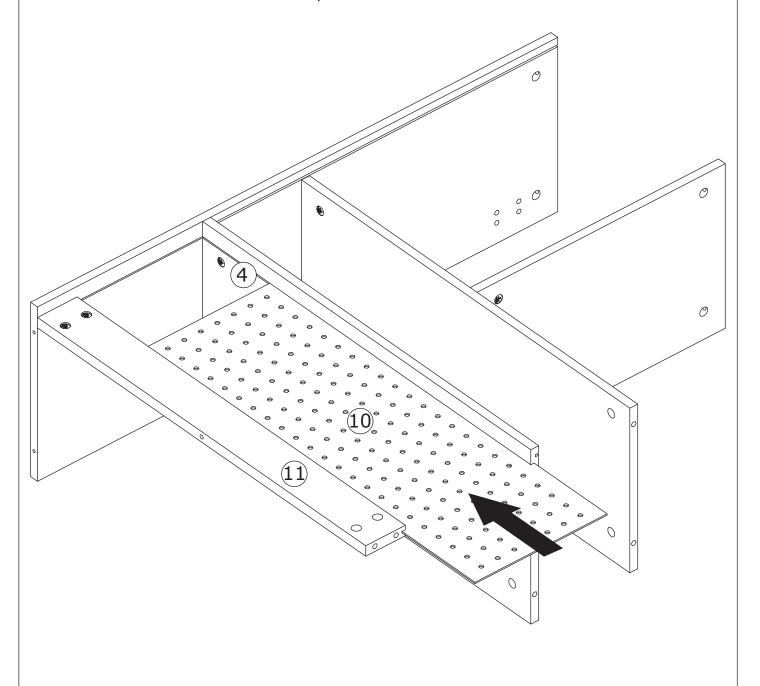


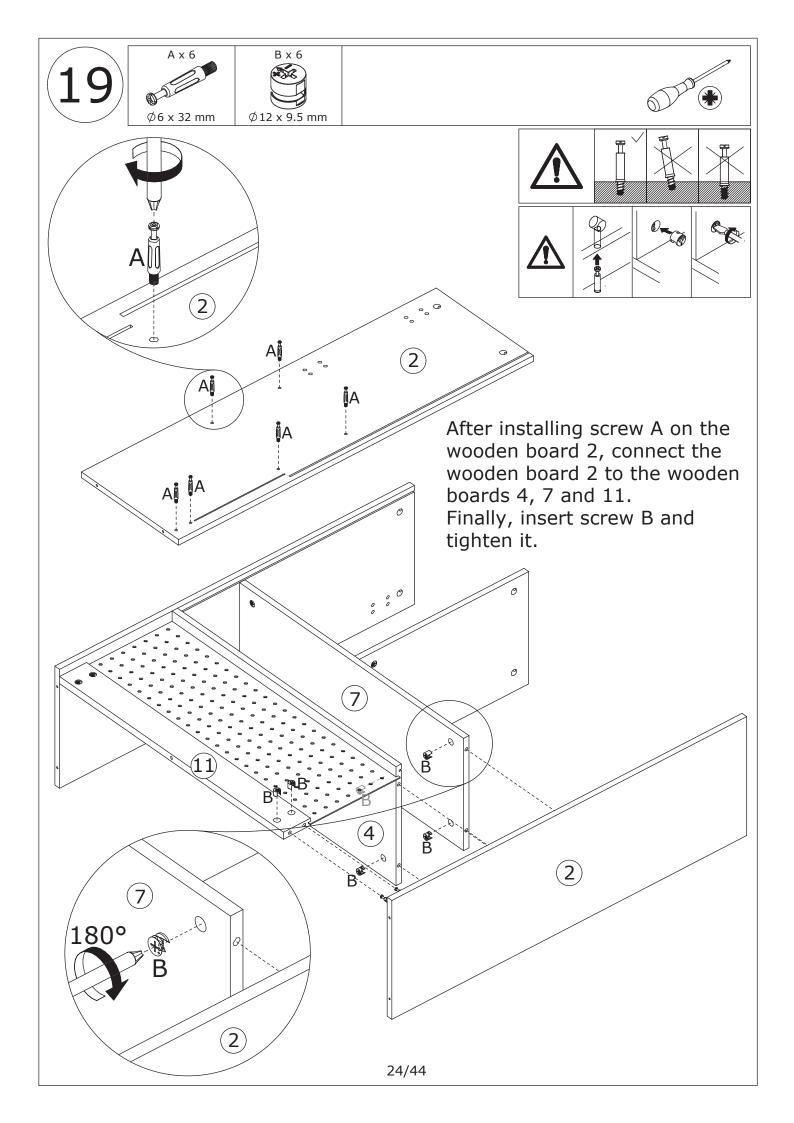



Insert the wooden board 6 into the grooves of the wooden boards 2, 3 and 4.

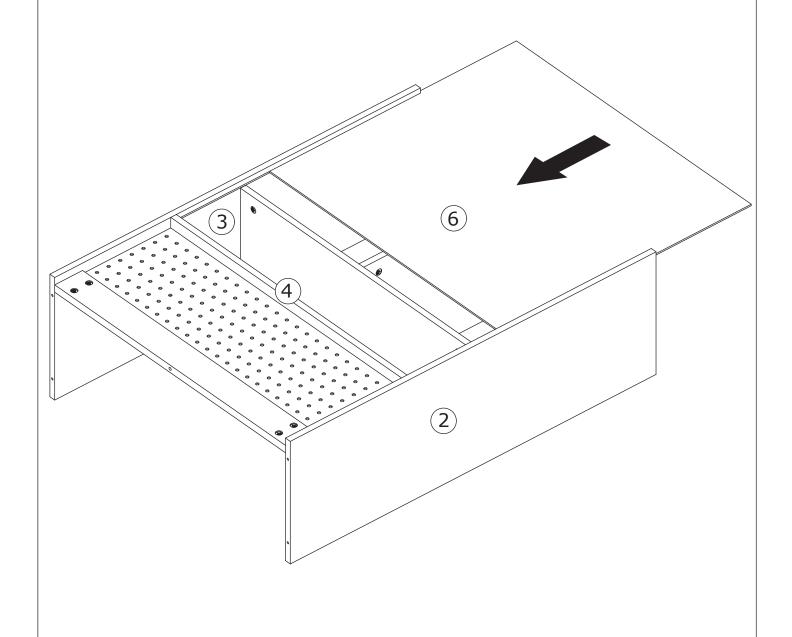


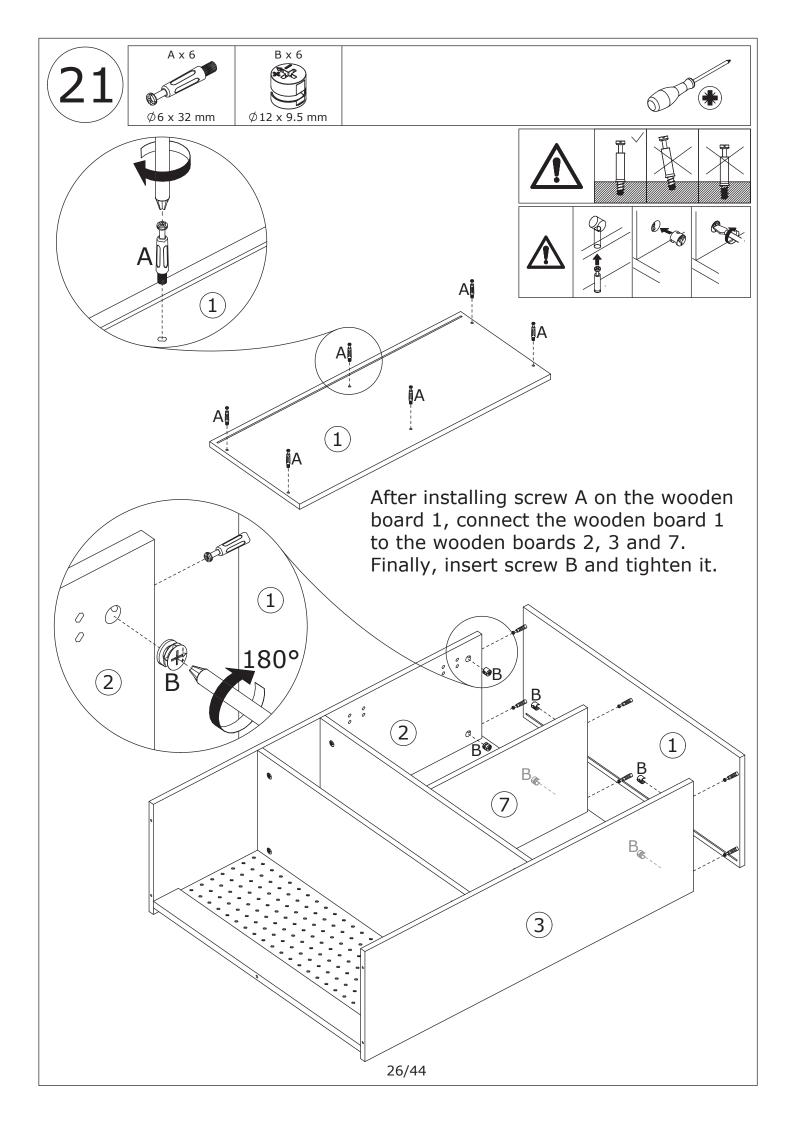

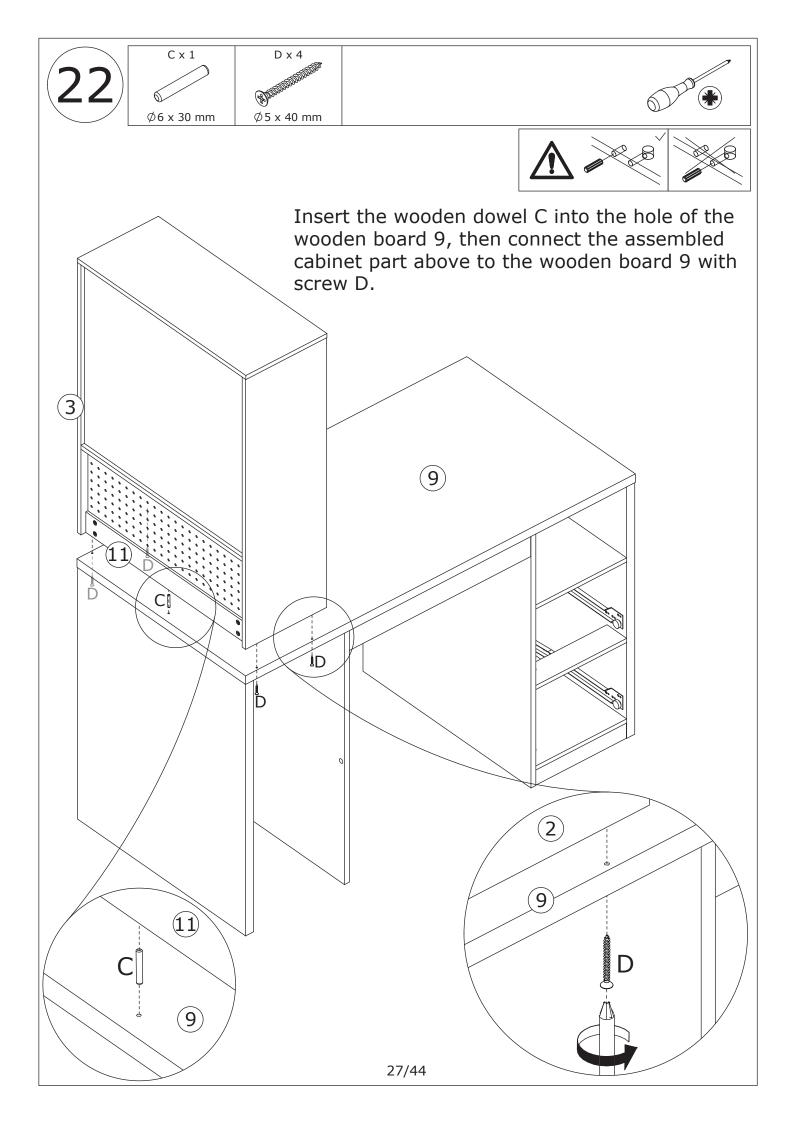

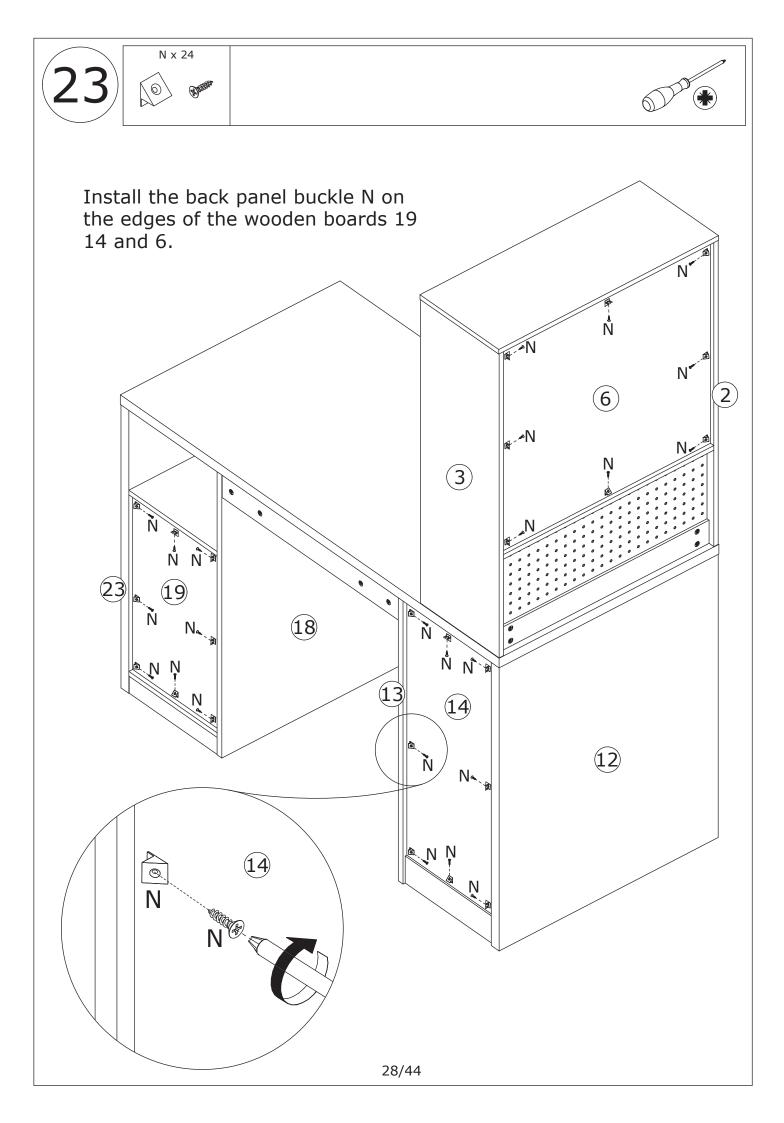

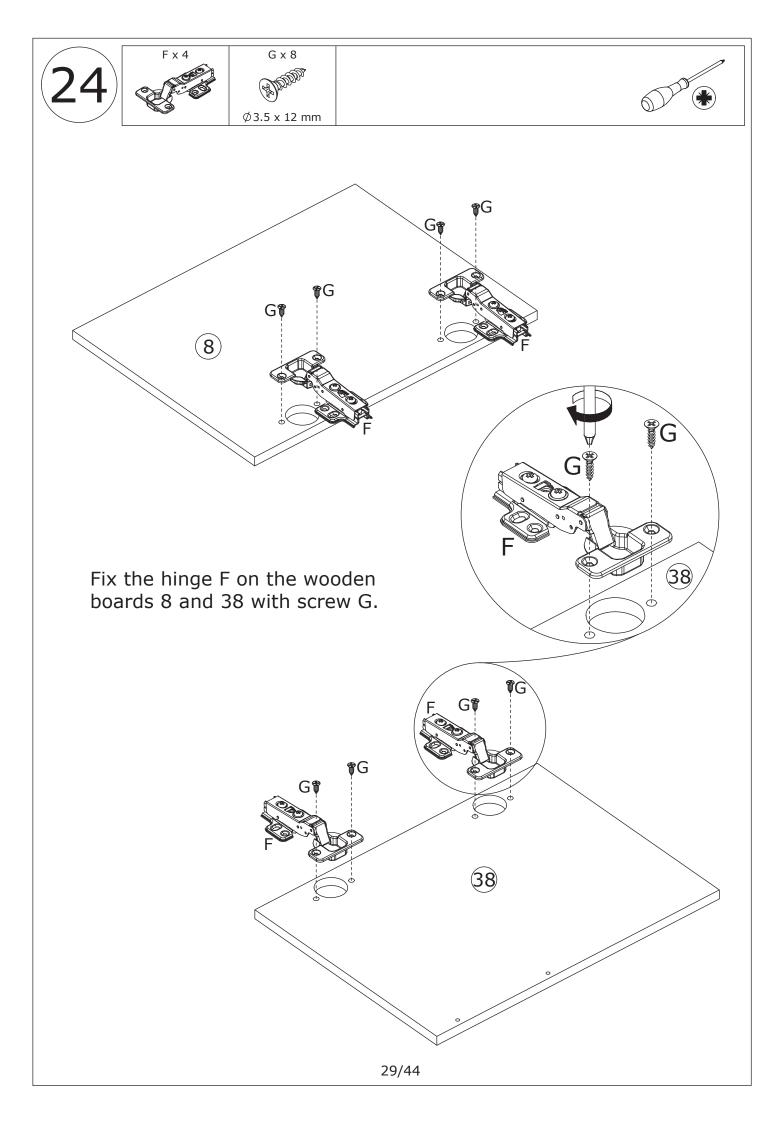

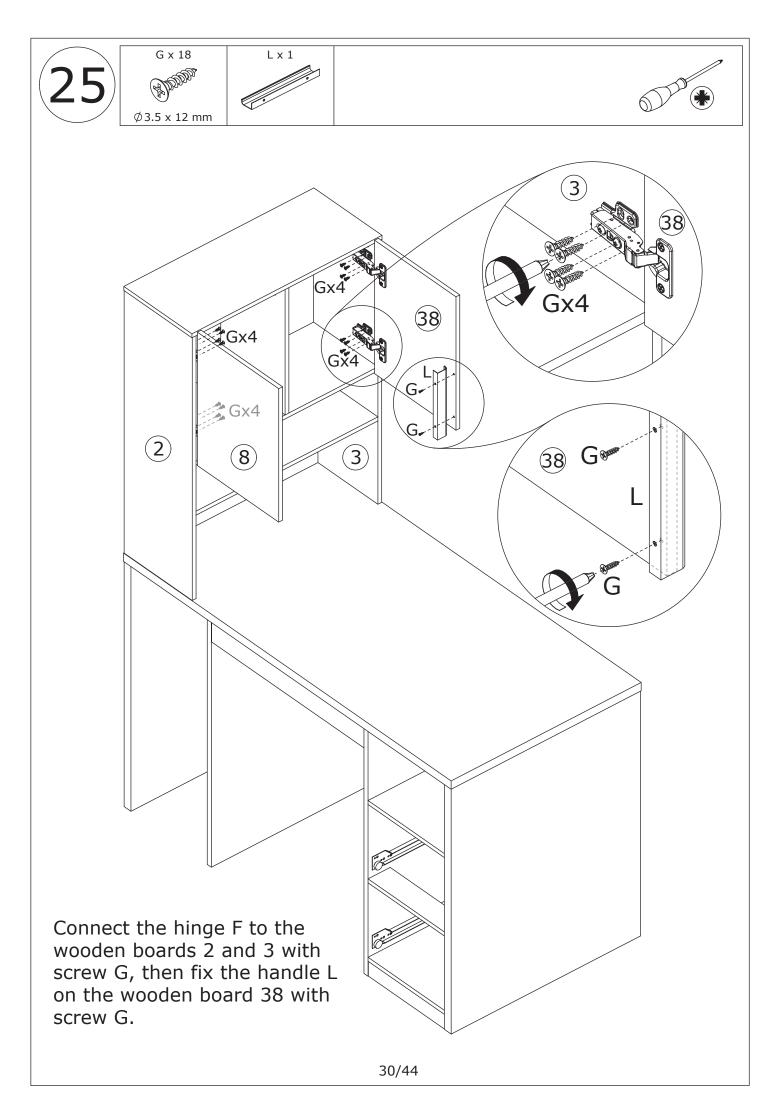














Fix the caster J to the wooden board 30 with screw G.

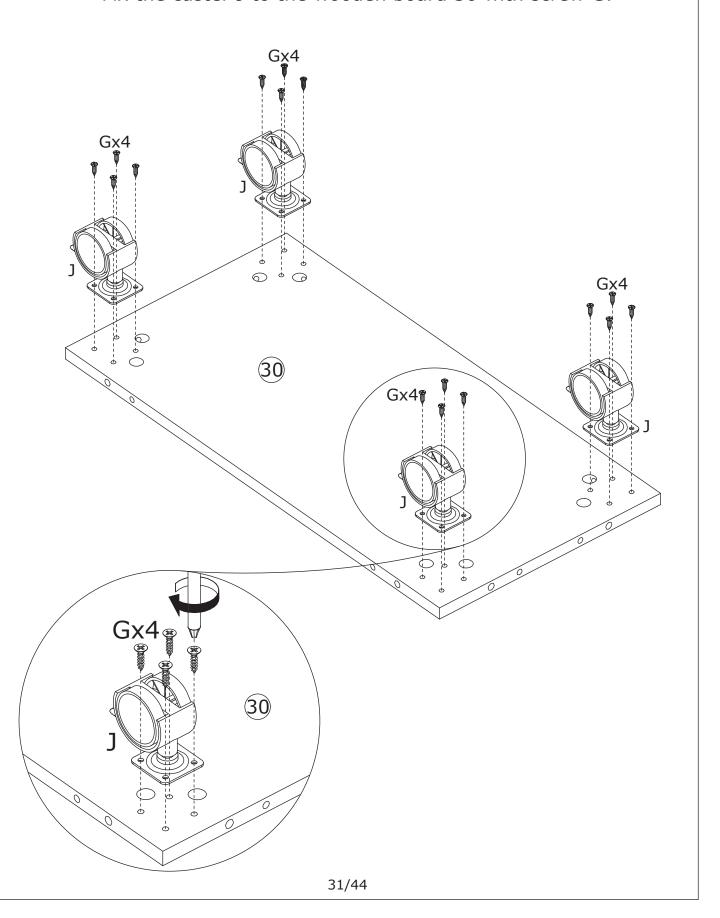


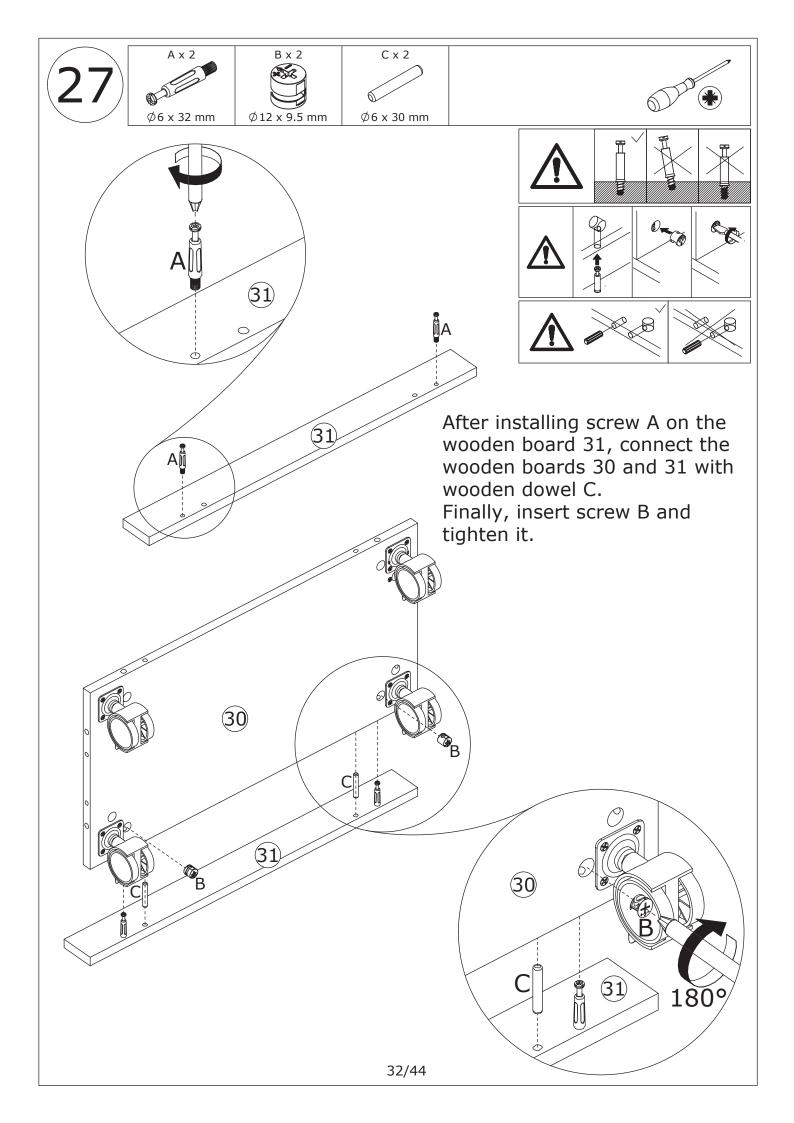


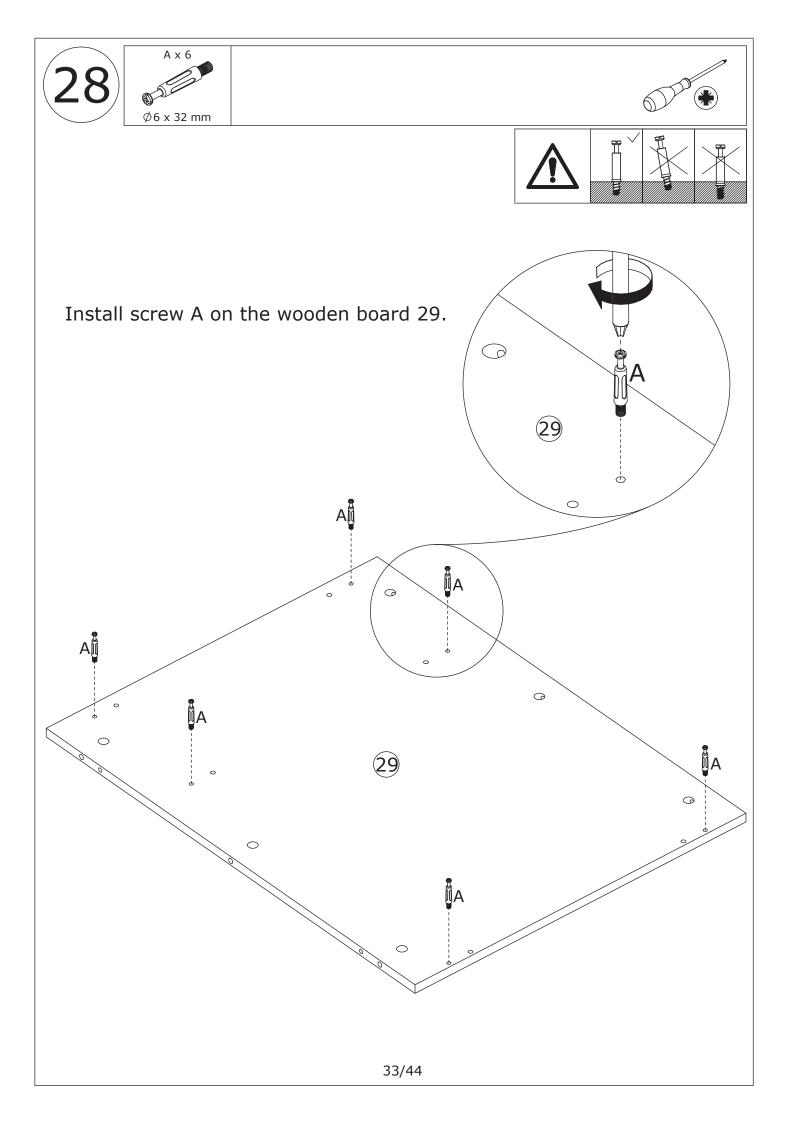


 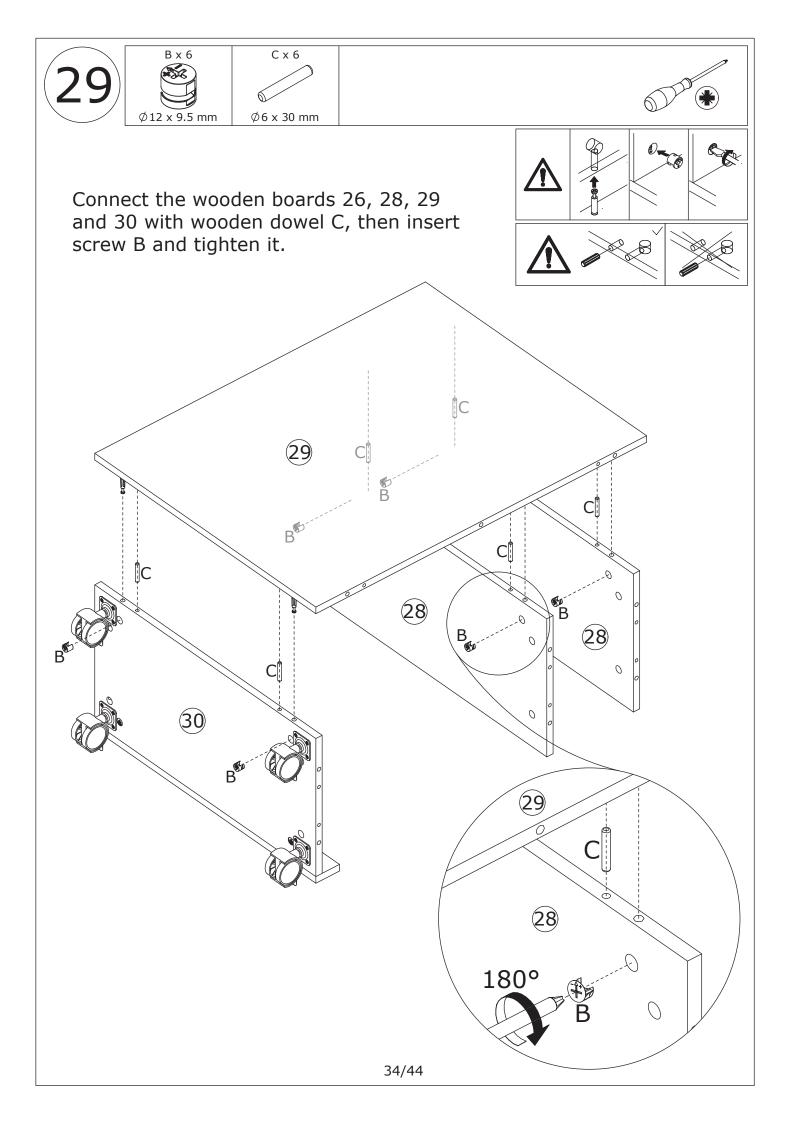


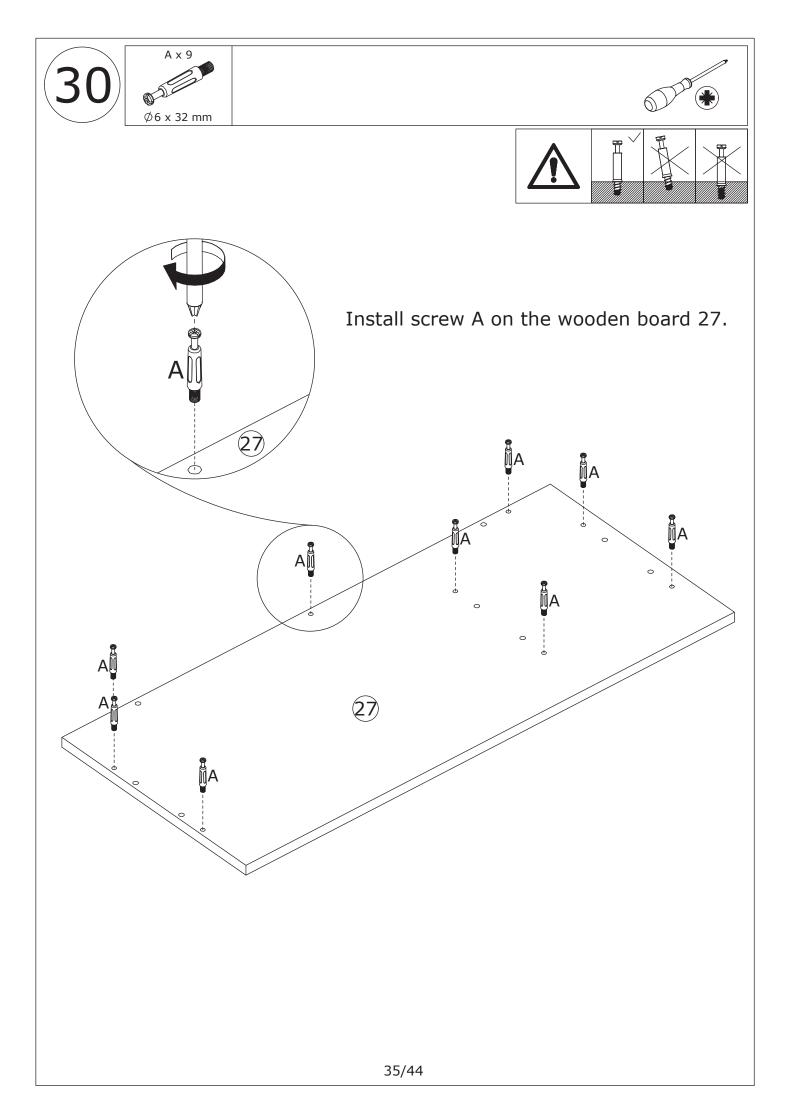

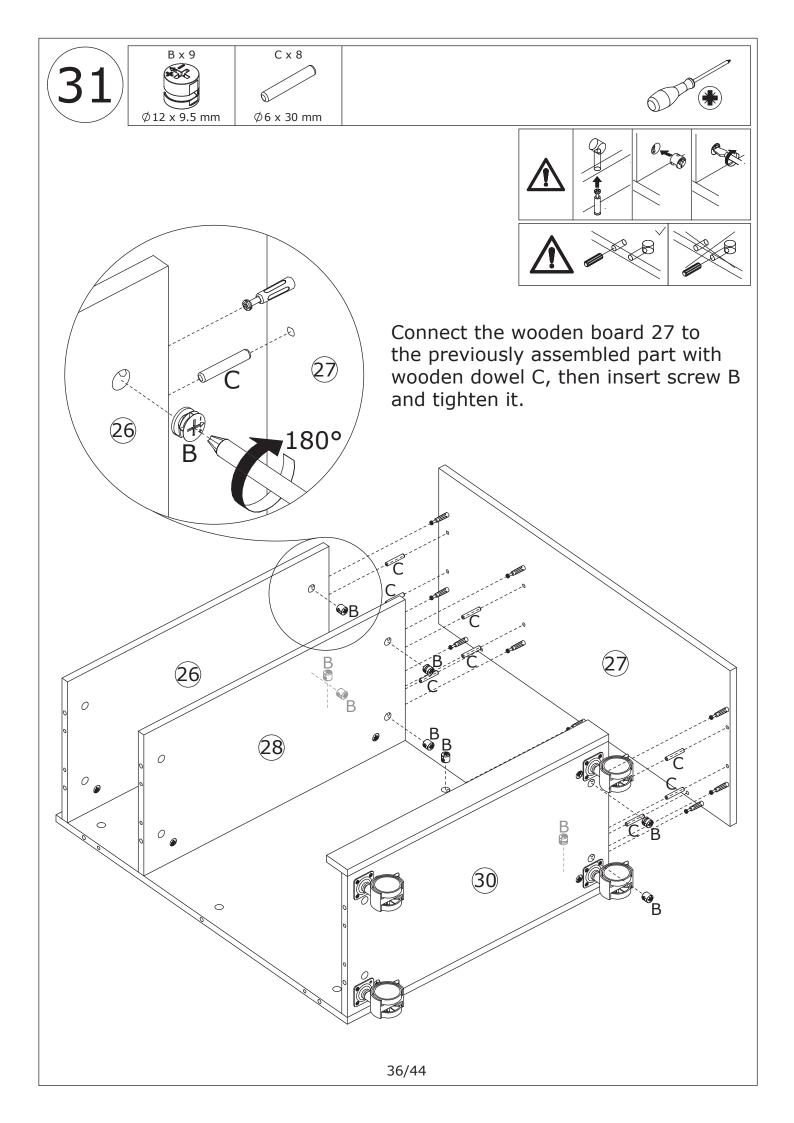


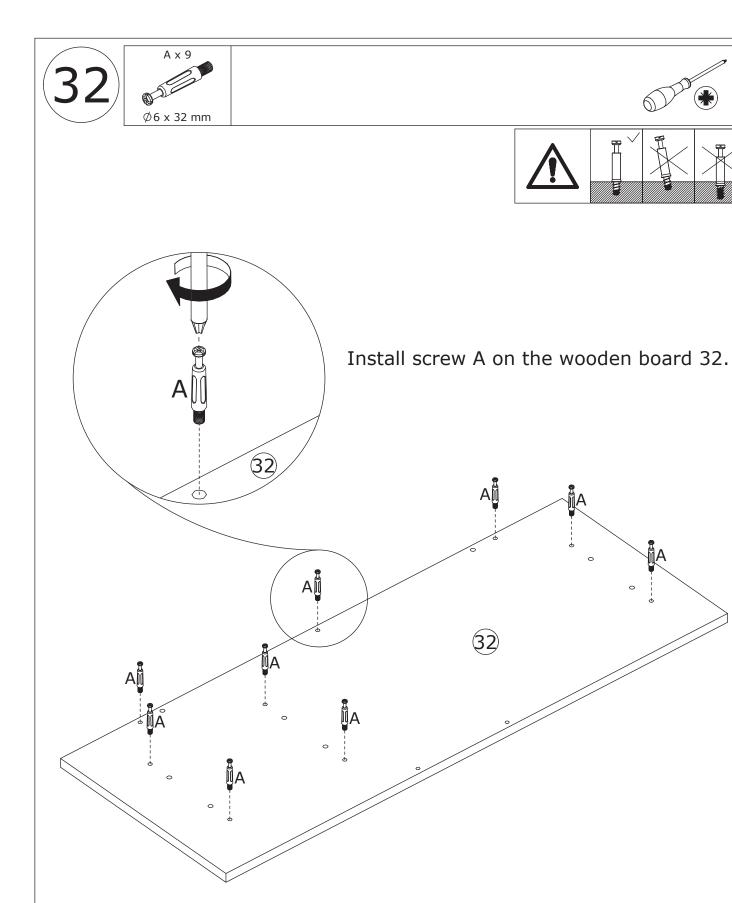

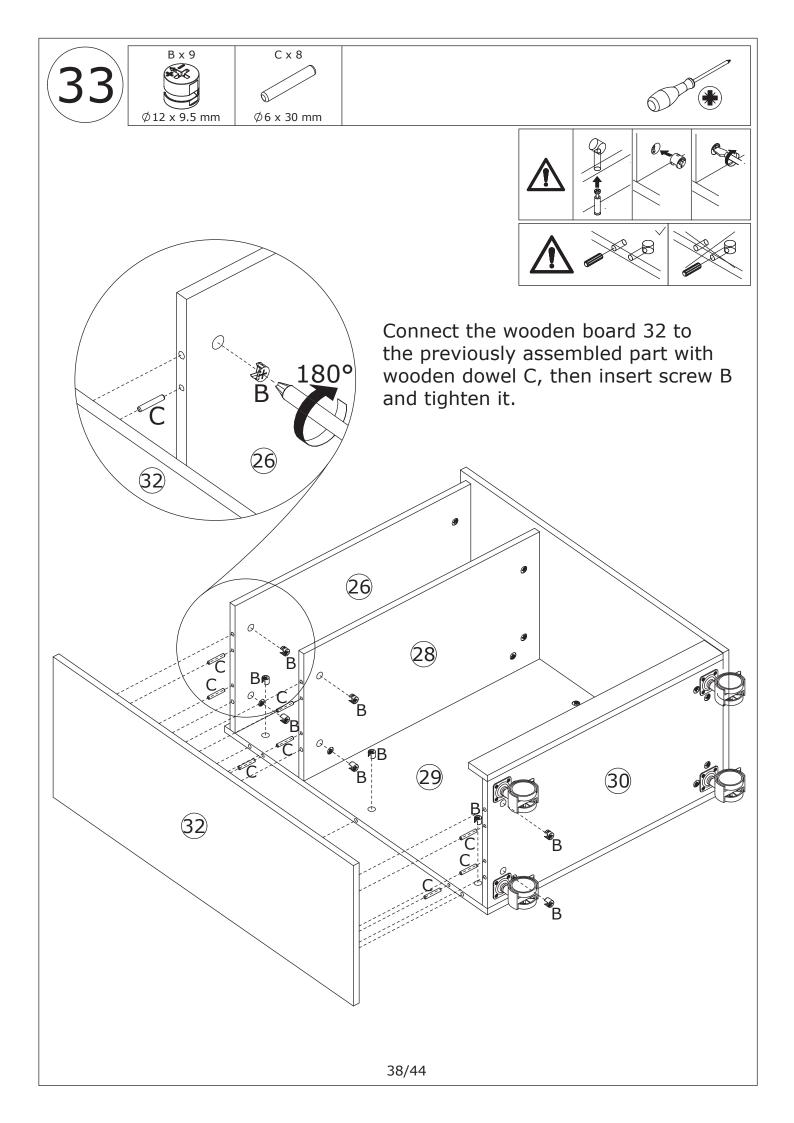




Fix the handle L to the wooden board 32 with screw G.

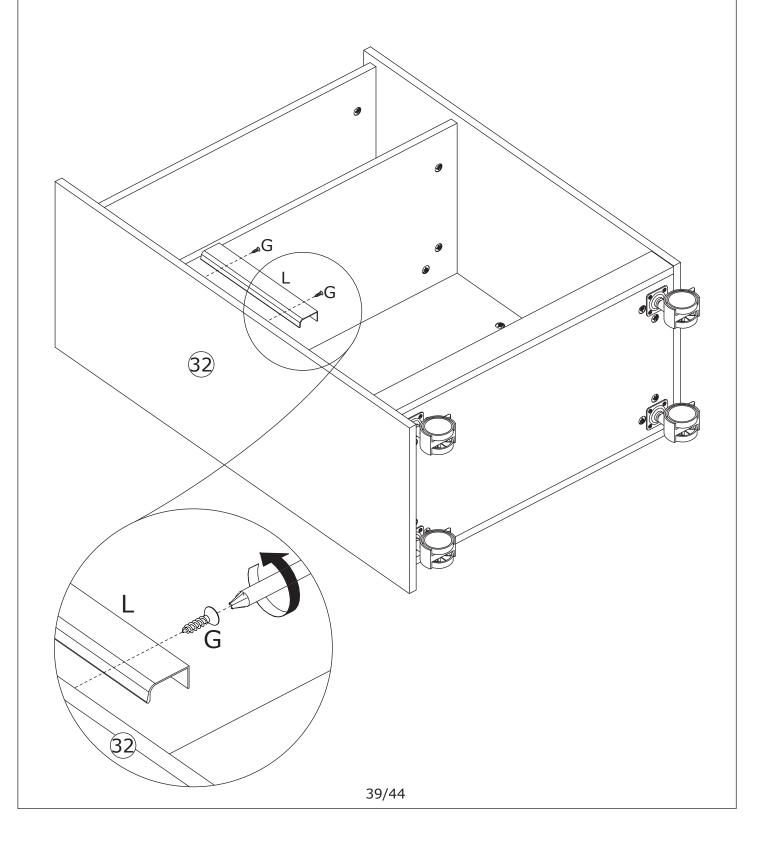







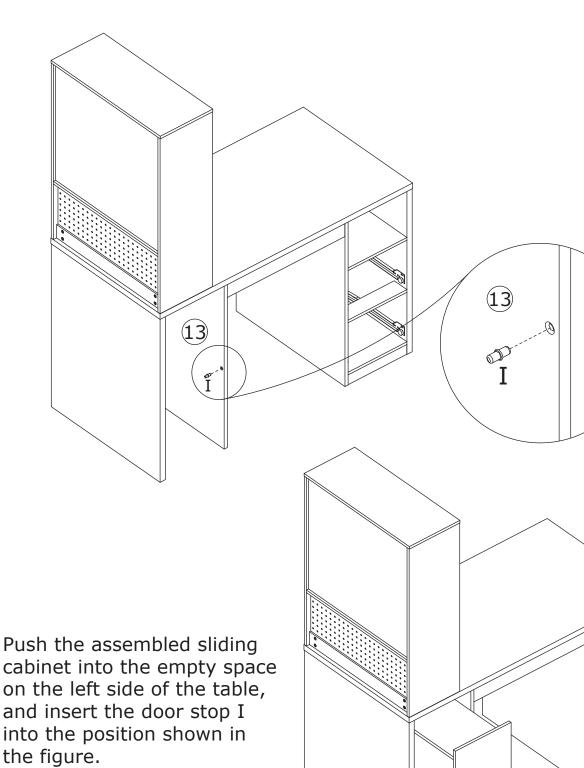

32

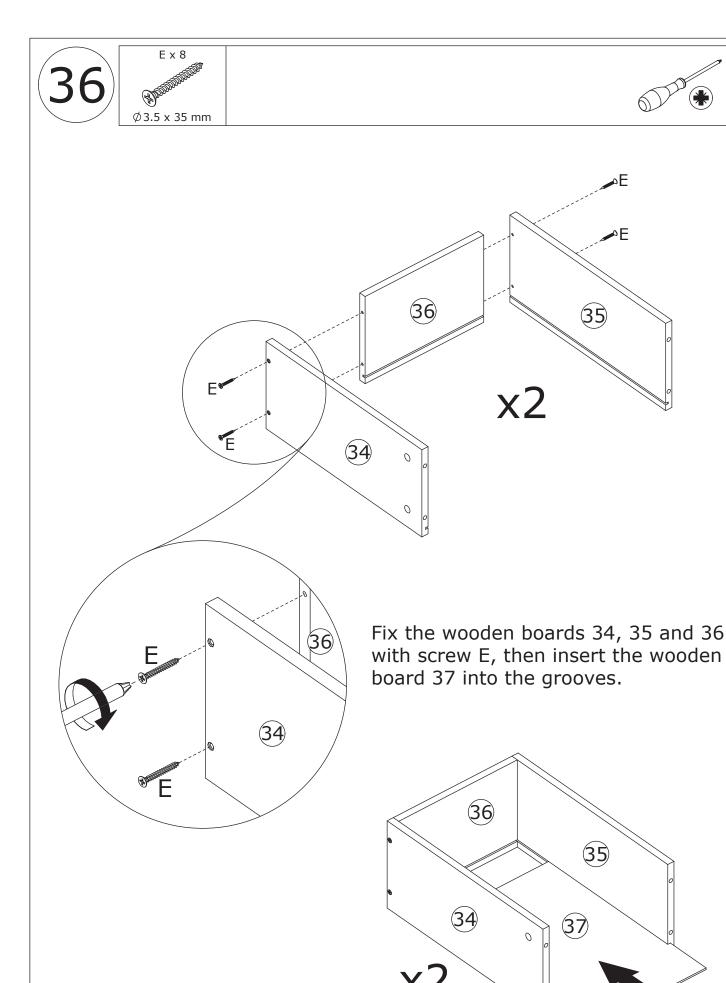


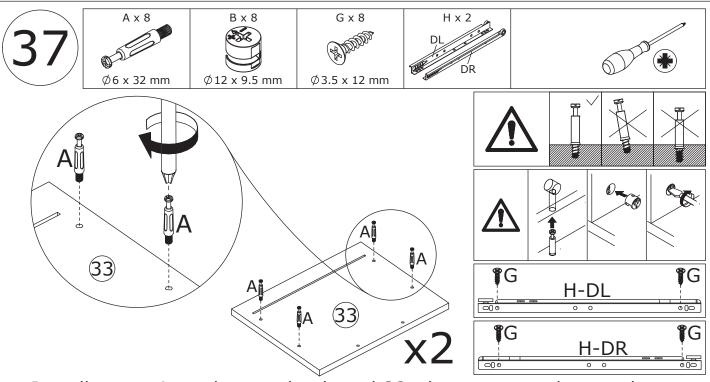

Install screw A on the wooden board 33, then connect the wooden board 33 to the wooden boards 34 and 35.

Then insert screw B and tighten it.

Finally, turn the drawer over and install the sliding rail H (DR, DL

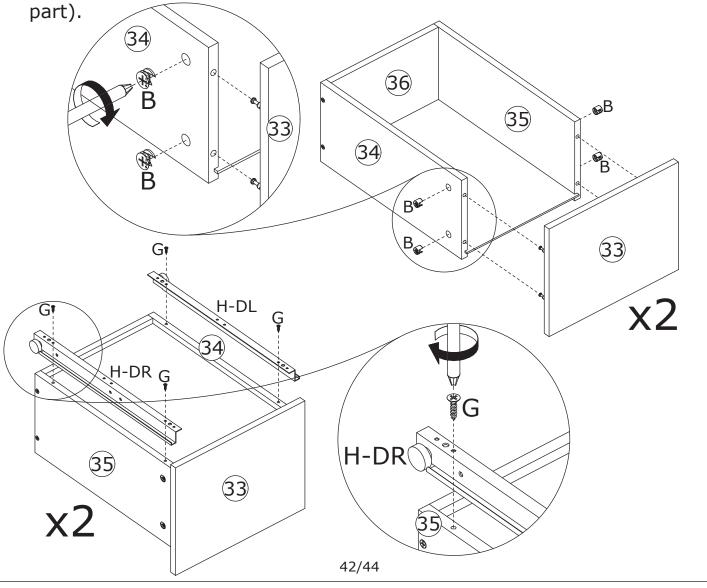










Fix the handle M to the wooden board 33 with screw G.

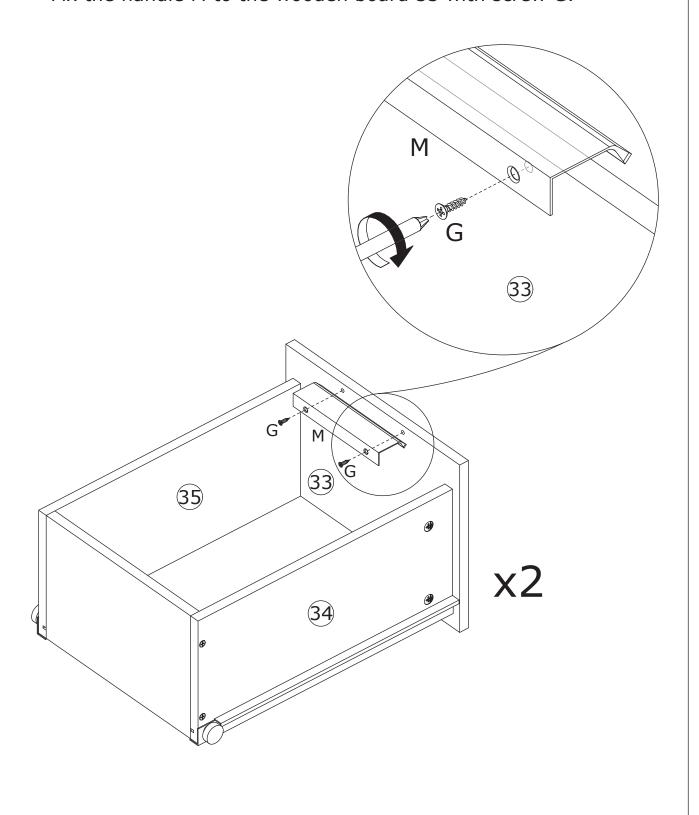








Insert the bottom sliding rails of the two installed drawers into the sliding rail H (DL and DR part) on the right side of the table

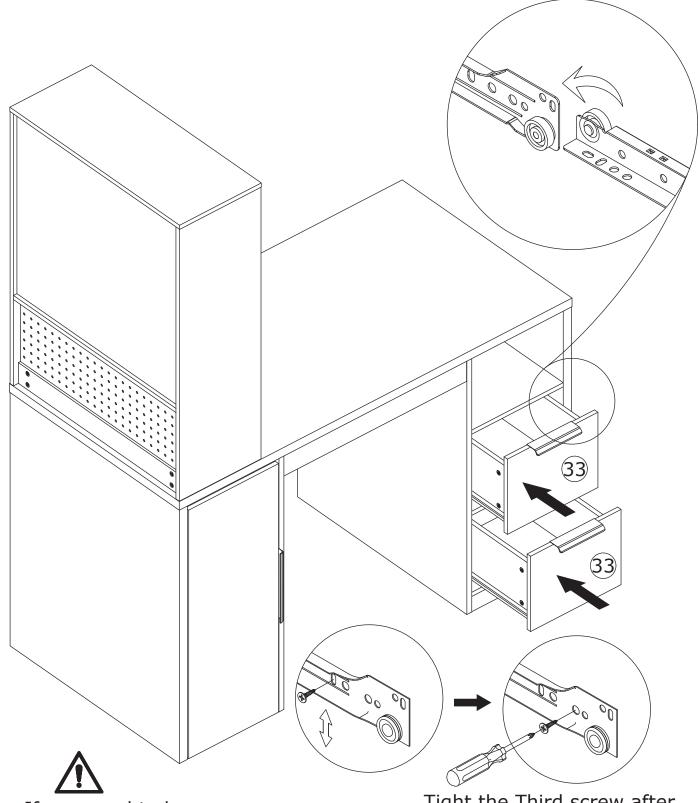

If you need to be more secure, you can choose whether to install screws or not.

Tight the Third screw after drawer adjusted in a Suitable location

WARRANTY

WARRANTY CLAIMS

- •There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- •Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- •The product must be used in accordance with the instructions provided. For health reasons.
- •For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- •Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- •Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- •After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- •Sheet parts: 1 month from the date of purchase.
- •Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068