



## CHILDREN TENT

# SAFETY & WARNINGS

## Warning

- Check you have all the components and tools listed on page 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Set up on a soft or smooth surface only.
- Avoid sharp objects while playing with the tent.
- Do not use tent near an open flame or fireplace.
- The tent may be set up outdoors, but is not waterproof or weatherproof.
- It should not be exposed to moisture and should be stored indoors overnight.
- To prolong the life of this product and prevent color fade store indoors out of direct sunlight.


## Safety Tips

- This tent is not fire proof. If left in open flame the tent will burn.
- Never use any fuel-burning or oxygen- consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.
- Warning: Never leave children unattended. Ages 3 and up recommended.

# INSTALLATION


## Step 1

Connect the upper pole to the lower pole through plastic connectors as shown in the picture.

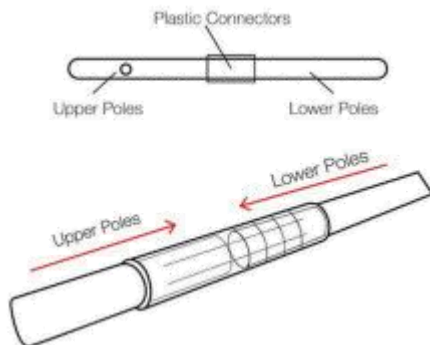


## Step 2

Slide the connected poles through tent seams.

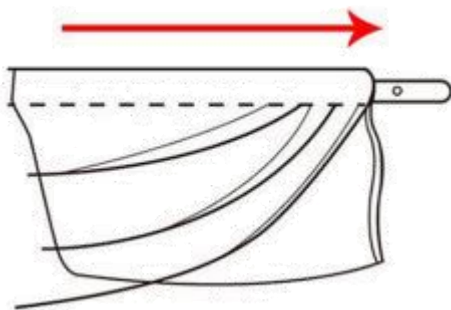


### Step 3

Lace the poles by successively threading the cotton string through the upper holes of all 5 combined poles.

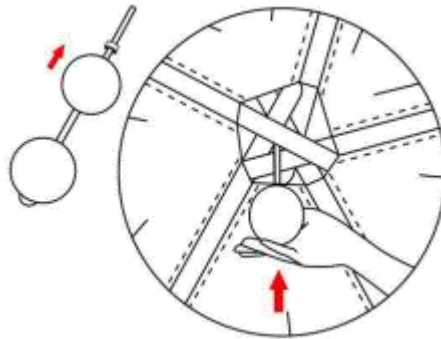

### Step 4

Spread out the poles to the full extent, and then the tent is stably installed.

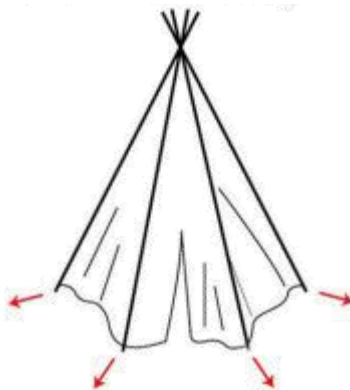

# CLEANING & CARE

- When not in use, always store the product clean and dry at room temperature.
- Clean with a soft cloth or sponge, cool water & mild liquid soap. Never use hot water or place tent in the dryer.
- Dispose of the product and the packaging materials in accordance with current local regulations.
- Packaging materials such as foil bags are not suitable to be given to children. Keep the packaging materials out of the reach of children.
- Dispose of the products and the packaging in an environmentally friendly manner.