


TVS0044

Isaure Oak TV Stand 175

TOP0029

Isaure Top Ais 214 Stand 175

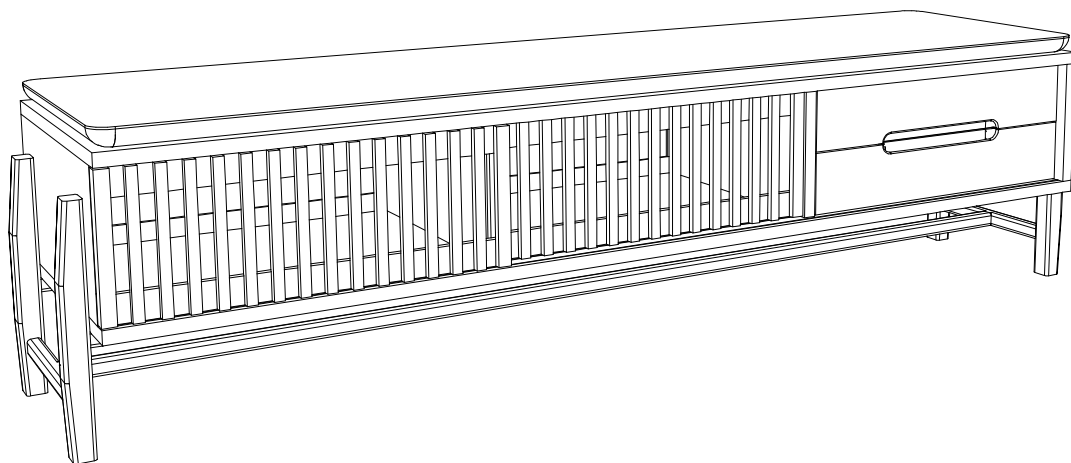

 
**(FR) Notice de Montage -
Utilisation - Entretien**

**(IT) Istruzioni per il Montaggio,
l'Uso e la Manutenzione**


**(DE) Montage - Verwendung -
Wartungshandbuch**


**(ES) Instrucciones de Montaje,
Utilización y Mantenimiento**


**(EN) Assembly - Use -
Maintenance Manual**




Screw installation





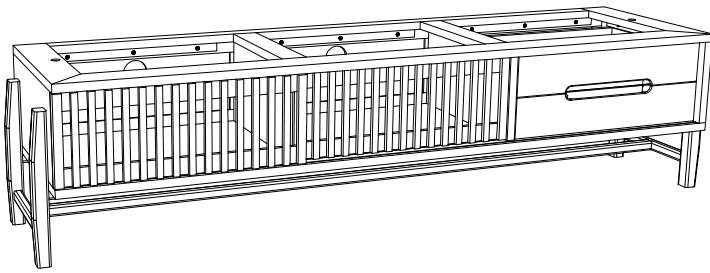


A x2  ± 10

 
B x2  ± 18

 C x2  ± 28

 D x1 

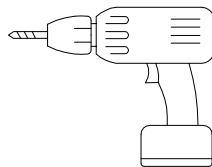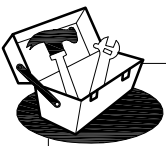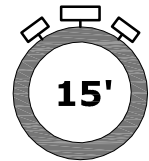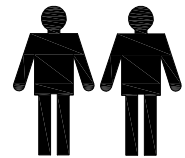


**NOT INCLUDED
NON FOURNIS**

 

+





 (E) x 4



(F) x 4

 1

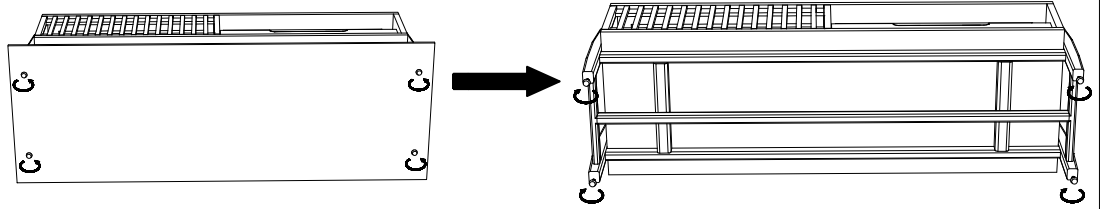


A x 2



B x 2



 C x 2



D x 1

2

