



3 Tier Heater Aired BXAR0005GB

Dear Customer,
Thank you for choosing to purchase a
BLACK+DECKER branded product.

Safety instructions

- ◆  Read this manual before using this appliance.
- ◆  **Warning!** Read all safety warnings and instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or injury.
- ◆ The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.
- ◆ Always check the mains voltage corresponds to the voltage on the rating plate.
- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ◆ Extreme caution is necessary when tower aired is used by or near children or when used by persons with restricted physical functions.
- ◆ Always unplug tower aired when not in use. When not in use always store in a dry place.
- ◆ Do not operate any tower aired with a damaged cord or plug. Return tower aired to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
- ◆ Do not use outdoors.
- ◆ Never locate the tower aired in a bathroom or washroom.
- ◆ To disconnect tower aired, remove plug from the mains outlet never use the power cable to disconnect the plug from the mains outlet.
- ◆ Do not insert or allow foreign objects to enter any ventilation or opening as this may cause an electric shock, fire or damage the tower aired.
- ◆ Do not use it in area where gasoline, paints, or flammable liquids are stored.
- ◆ Do not load more than 5kg of clothing on each tier of the clothes dryer.
- ◆ Not suitable for large quilt covers which cover the whole surface area as this may lead to overheating of the appliance.

- ◆ The appliance must be placed on a level, dry surface at least 1.5 metres away from any heat or water source.
- ◆ This appliance is intended for drying domestic use and for drying textiles washed in water. Do not use for any other purpose.
- ◆ This appliance should only be operated in an upright position.
- ◆ Ensure the appliance has cooled before storing away.
- ◆ This clothes dryer is intended for the use in the home.
- ◆ The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- ◆ Read the instructions carefully before operating and retain for future reference.

Specifications

Voltage: AC220-240V
 Frequency: 50Hz
 Rated power: 300W
 Product size: 1440 x 730 x 680mm approx.

Features

1. On/Off switch

Assembly instructions

Please follow this process when setting up/closing down the tower ailer:

- ◆ To set up open the bottom layer first followed by the middle layer and finally the top layer (See Diagram 1).
- ◆ To close down close the top layer first followed by the middle layer and finally the bottom layer (See Diagram 3).

This procedure if followed will protect the hinge from damage.

Note: When the shelves open they find intended horizontal position naturally (See Diagram 3).

IMPORTANT: If you force the shelf to rotate more than 90° degrees you will break the unit and may invalidate any warranty in place.

Operating instructions

- ◆ Please read the installation instructions carefully to understand how to set up your electric tower ailer.
- ◆ Before setting up your ailer ensure it is switched off and not connected to the mains (See Diagram 2).
- ◆ Once your ailer is set up connect to the mains by inserting the plug into an electrical mains outlet which corresponds with the voltage indicated on the appliance rating plate.
- ◆ Press the power switch to on. The power light indicator on the appliance will light up and your appliance will begin to heat up.
- ◆ To switch the appliance off press the switch to off and the power indicator light will go off (See Diagram 2). Your appliance will begin to cool down.

Plug

- ◆ This appliance has been fitted with a BS UK compliant molded plug which should not be replaced or removed.
- ◆ The plug is fitted with BS compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
- ◆ If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
- ◆ If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
- ◆ This appliance is earthed.



Please Note: This appliance is intended for indoor use only.

Protecting the environment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Guarantee

BLACK+DECKER® and the BLACK+DECKER® Logo are trademarks of The Black & Decker Corporation and are used under license. Imported by Benross Marketing Limited, Liverpool, L24 9HJ, UK. Benross Marketing Ltd, italelei 1 - 2000, Antwerp, Belgium.

Benross Marketing are confident of the quality of this product and offer to consumers a 24 month guarantee from the date of purchase.

This guarantee does not impact on your statutory rights. Please retain your receipt or other proof of purchase to claim under the terms of this guarantee, you must be able to produce a proof of purchase to the seller.

For further details visit www.blackanddecker.co.uk or contact the customer service line +44(0)1753511234



Customer Service Inquiries:

**United Kingdom &
Republic Of Ireland**
www.blackanddecker.co.uk
emeaservice@sbdinc.com

Black & Decker
210 Bath Road
Slough, Berkshire SL1 3YD

Tel. 01753 511234
Fax 01753 512365
